


User's Manual

GPS – G5003

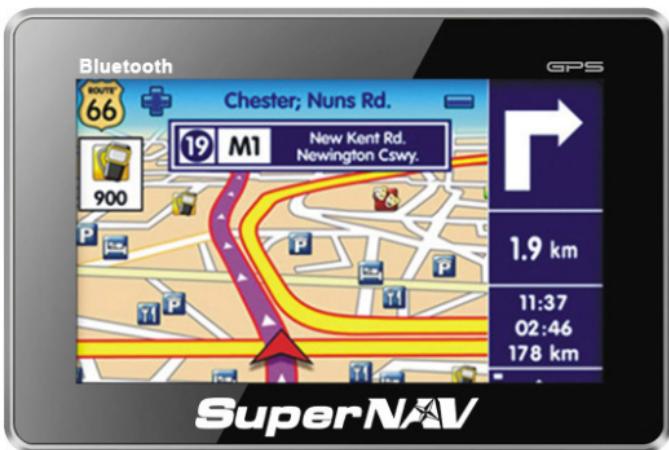

GPS + entertainment functions, to make your life and work easier and more enjoyable

1. Starting up	1
2. Power saving.....	2
3. Main Functions	2
3.1 GPS	4
3.2 Music	4
3.2.1 Music Play.....	5
3.2.2 Music List.....	7
3.2.3 Equalizer	8
3.3 Movie.....	9
3.3.1 Video.....	9
3.3.2 Video list.....	11
3.4 Photo	11
3.4.1 Photo	12
3.4.2 Photo list.....	13
3.4.3 Full screen.....	13
3.5 Ebook.....	14
3.5.1 Ebook.....	15
3.5.2 Ebook List.....	16
3.5.3 Font Setting	17
3.5.4 Color Setting	17
3.5.5 Bookmark	18


3.5.6 Bookmark list	19
3.6 Flash.....	20
3.6.1 Flash List	21
3.7 Bluetooth (Optional).....	21
3.7.1 Dial.....	23
3.7.2 Dial Record.....	24
3.7.3 Pair.....	25
3.7.4 Setting.....	26
3.7.5 Pair Devices	27
3.7.6 Outgoing call.....	29
3.7.7 Call fail	29
3.7.8 Incoming call.....	30
3.7.9 Active call.....	30
3.8 Games.....	31
3.8.1 Memory	32
3.8.2 Linlink	32
3.8.3 Russia Block	33
3.8.4 JawBreaker	34
3.8.5 BoxMan.....	34
3.8.6 BreakOut.....	35
3.8.7 Snake	35

3.9 Tools.....	36
3.9.1 Calculator.....	37
3.9.2 Unit	38
3.10 Setting.....	38
3.10.1 Volume.....	40
3.10.2 Backlight	42
3.10.3 Language.....	43
3.10.4 FM Transmitter (Optional).....	43
3.10.5 DateTime	45
3.10.6 Calibration	48
3.10.7 System Info	48
3.10.8 USB	50
3.10.9 Factory Reset	51
3.10.10 Nav Path	51
3.11 GPS Info	52

Main function introduction

1. Starting up

Insert the supplied SD card into the slot at the bottom of the device.

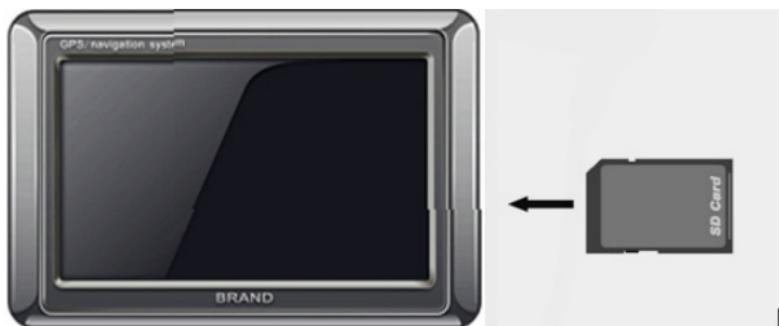

Starting up then enter into the main function operation screen as below.



2. Power saving



Press the power button  on the top of your device to turn off your device. The device actually enters a suspend state and the system stops operation. Once you turn on the system again, it resumes.

3. Main Functions

Press the power button to turn on the GPS unit. The Main Menu screen will be displayed as below:



Tap the icon or to choose a function, for example;



3.1 GPS

Double tap the "GPS" icon  or  to start program.



3.2 Music

Tap the "Music" icon on the main menu to enter the following interface.



3.2.1 Music Play

Tap the “Music” icon or on the main menu again to enter the following interface.



: return to the main menu



: minimize



: order of play: random, repeat, single, play all,
repeat all



: equalizer



: previous



: speed bar



: pause/play



: next



: stop




: music list



: volume control

3.2.2 Music List

Tap the “Music List” icon to enter the following interface.

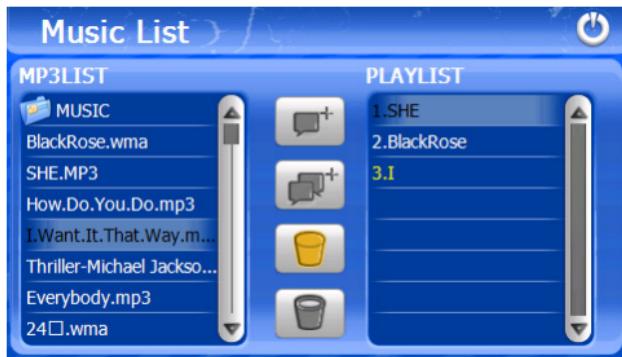

: previous

: increase single

: increase all


: delete single



: delete all

3.2.3 Equalizer

Tap the “Equalizer” icon to enter the following interface.

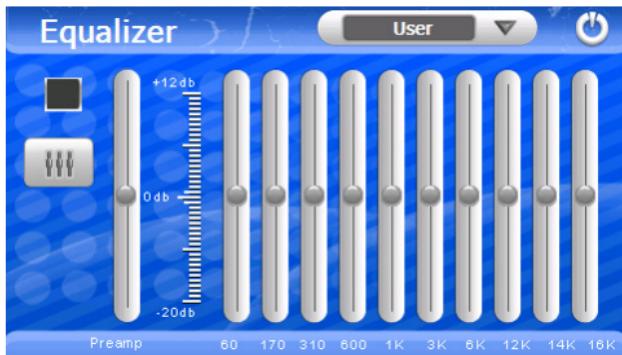

: previous



: tap to select play style as blue
interface




: tap to use the equalizer



: reset the

equalizer

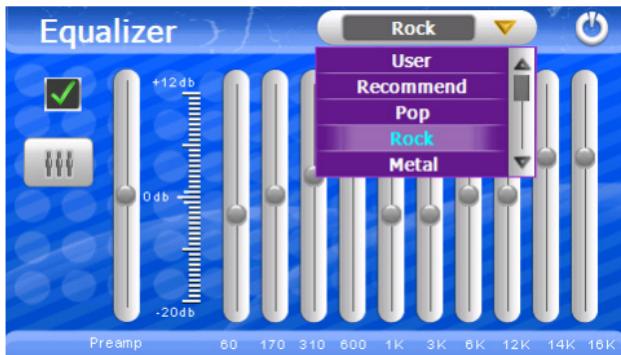

3.3 Movie

Tap the "Video" icon on the main menu to enter the following interface.




3.3.1 Video

Tap the "Video" icon or on the main



menu again to enter the following interface.

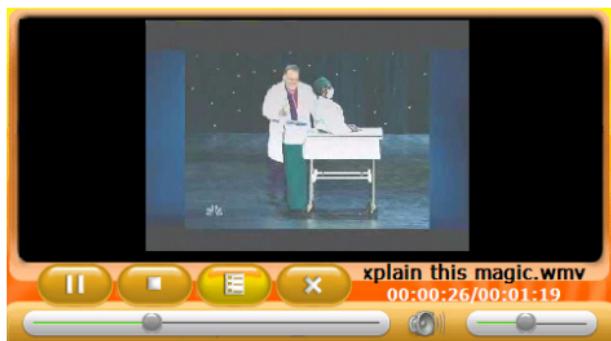

 : pause/play

 : speed bar

 : stop

 : video list

 : return to the main menu

 : volume control

3.3.2 Video list

Tap the  icon to enter the following interface.



3.4 Photo

Tap the "Photo" icon on the main menu to enter the following interface.



3.4.1 Photo



Tap the “Photo” icon or on the main menu again to enter the following interface.



: previous



: next



: zoom in



: zoom out



: rotate



: full screen



: photo list



: return to the
main menu

3.4.2 Photo list



Tap the icon to enter the following interface.



3.4.3 Full screen

Tap the “photo list” icon to enter the full screen, then tap the screen again to enter the following interface.



1s 10s 8s : set time for

playing picture, 1s~10s.

Previous: tap the screen once more


3.5 Ebook

Tap the "Ebook" icon on the main menu to enter the following interface.



3.5.1 Ebook

Tap the icon  or  on the main menu again to enter the following interface.

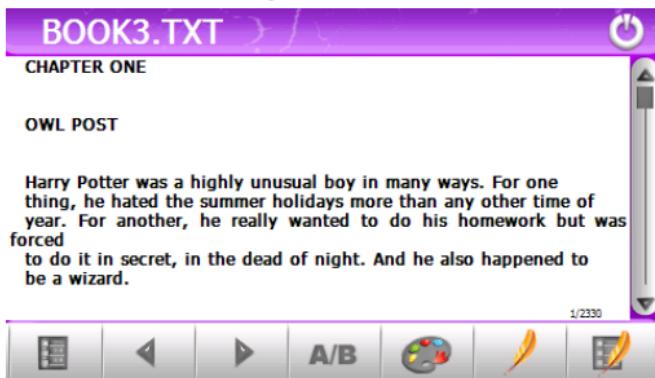

BOOK3.TXT
CHAPTER ONE

OWL POST

Harry Potter was a highly unusual boy in many ways. For one thing, he hated the summer holidays more than any other time of year. For another, he really wanted to do his homework but was forced to do it in secret, in the dead of night. And he also happened to be a wizard.

1/2330

: return to the main menu

 : previous

 : next

 : font setting

 : color setting


 : bookmark

 : bookmark list

 : ebook list

3.5.2 Ebook List

Tap the "Ebook list" icon to enter the following interface.

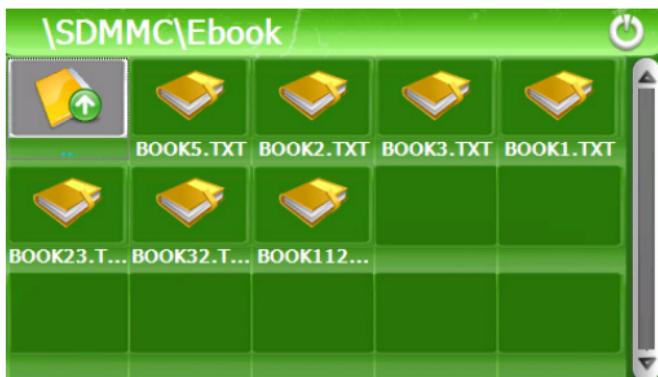

3.5.3 Font Setting

Tap the "Font Setting" icon to enter the following interface.




: previous



: saving

3.5.4 Color Setting

Tap the "Color Setting" icon to enter the following interface.

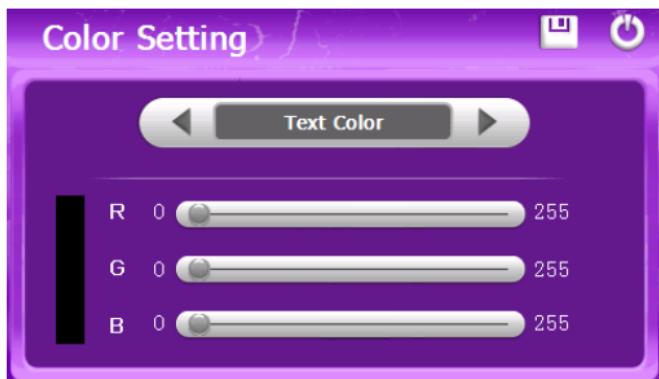

: previous



: saving

3.5.5 Bookmark

To add a Bookmark to the text, click on the icon, and enter the following interface. Choose “OK” or

A screenshot of a bookmarking interface for the file "BOOK3.TXT". The title bar shows "CHAPTER ONE". The main area displays the text "OWL POST" followed by a paragraph about Harry Potter. At the bottom is a message box with "OK" and "Cancel" buttons. A vertical toolbar on the right contains icons for text, arrows, and other functions. The status bar at the bottom right shows "1/2330".

3.5.6 Bookmark list

Tap the "Bookmark List" icon to enter the following interface.



: previous

: enter into bookmark

: delete

bookmark

 
3.6 Flash

Tap the "Flash" icon on the main menu to enter the following interface.



Tap the icon or on the main menu again to enter the following interface.





: pause/play



: stop



: flash

list



: speed bar



: volume control



: return to main

menu

3.6.1 Flash List

Tap the "Flash List" icon to enter the following interface.




3.7 Bluetooth (Optional)

Tap the "Bluetooth" icon on the main menu to enter

the following interface.



Tap the icon A or B or C on the main menu again to enter the following interface.

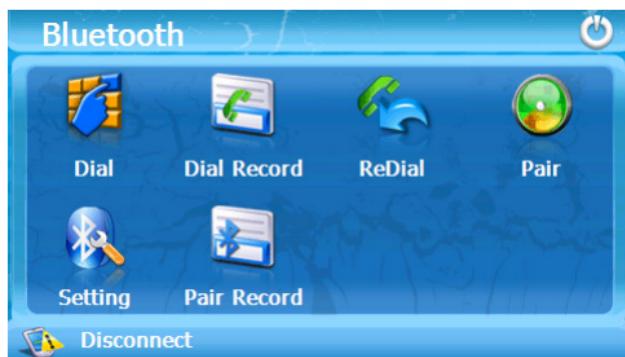

3.7.1 Dial



Tap the icon  on the Bluetooth menu to enter the following interface.



: return to the Bluetooth menu



: backspace



: pair and connect with the mobile you want




: call Record

3.7.2 Dial Record



Tap the icon **Dial Record** on the Bluetooth menu to enter the following interface.

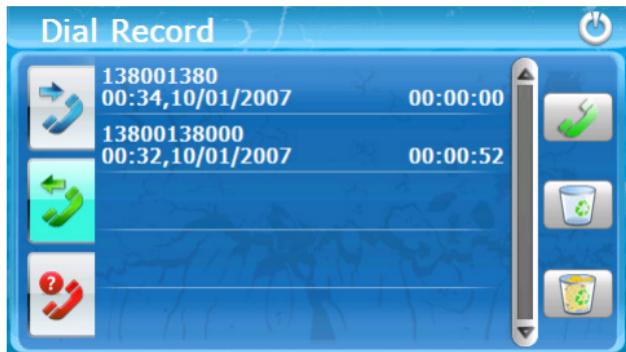

: return to the Bluetooth menu



: connect with the mobile you want



: delete the recorded number you chose



: delete all the call records



: incoming call record



: outgoing call record



: missed call record



: previous




: next

3.7.3 Pair



Tap the icon  on the Bluetooth menu to enter the following interface.

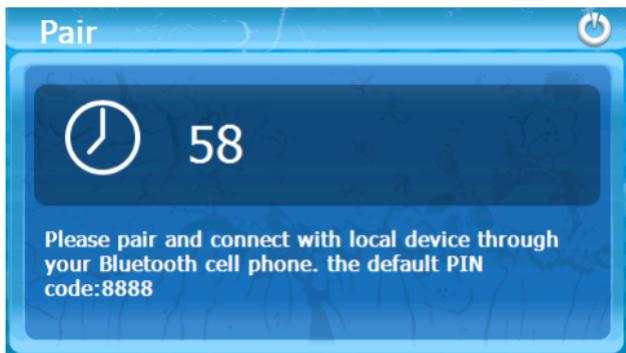

3.7.4 Setting


Tap the icon  on the Bluetooth menu to enter the following interface.



: PIN setting



Tap “PIN setting” button to enter the following interface.

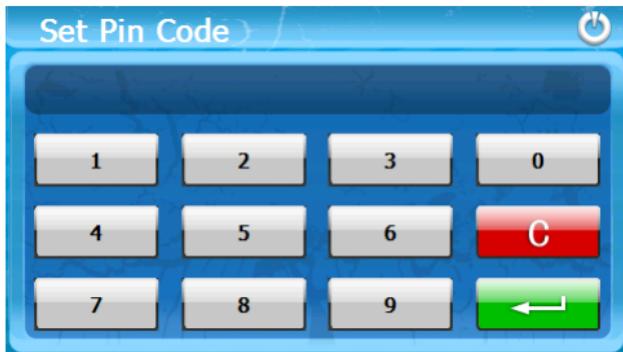

3.7.5 Pair Devices



Tap the icon  on the Bluetooth menu to enter the following interface.




 : return to the Bluetooth menu

 : connect the Devices you chose


 : disconnect the Devices you chose

 : delete all the Devices information


3.7.6 Outgoing call

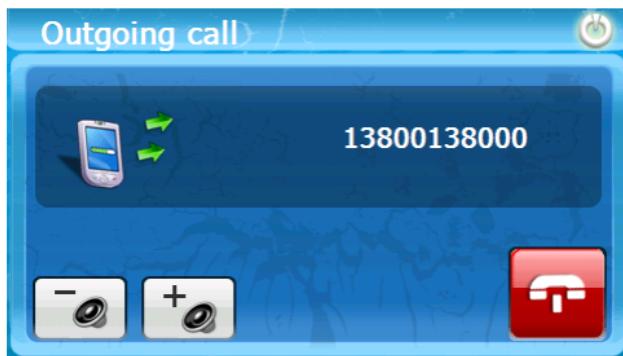


3.7.7 Call fail

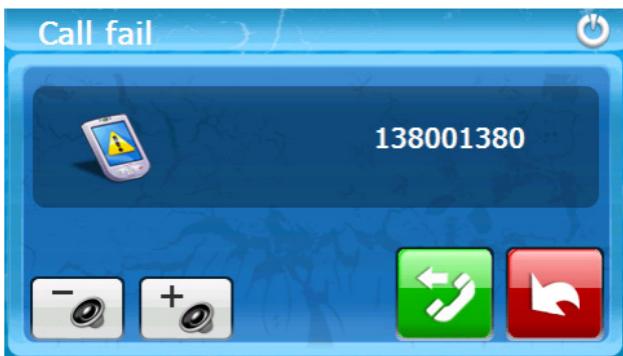

3.7.8 Incoming call

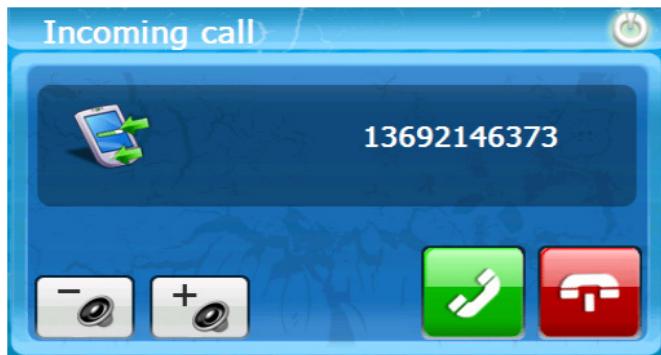


3.7.9 Active call

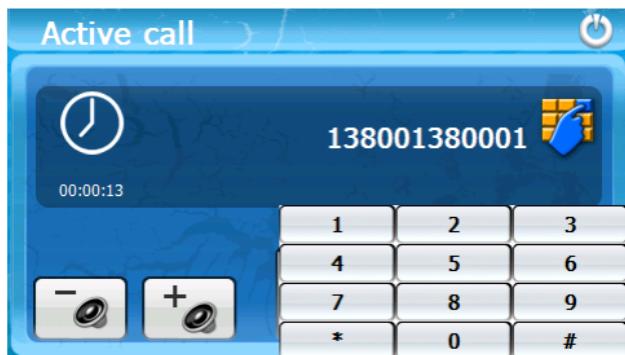

3.8 Games

Tap the icon "Games" on the main menu to enter the following interface.

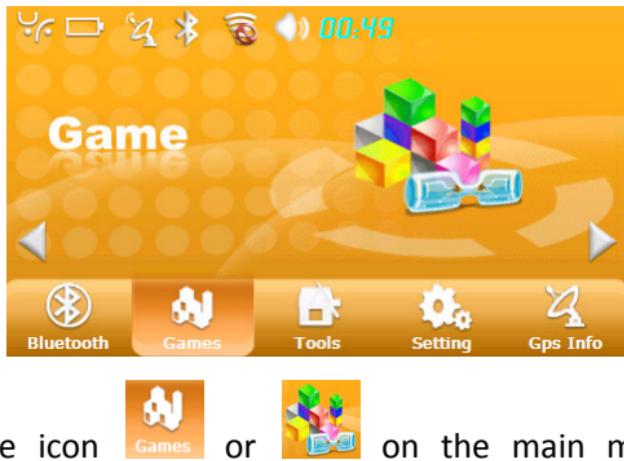

Tap the icon  or  on the main menu again to enter the following interface.



3.8.1 Memory

Tap the icon  to enter the following interface.




3.8.2 Linlink

Tap the icon  to enter the following interface.



3.8.3 Russia Block

Tap the icon  to enter the following interface.

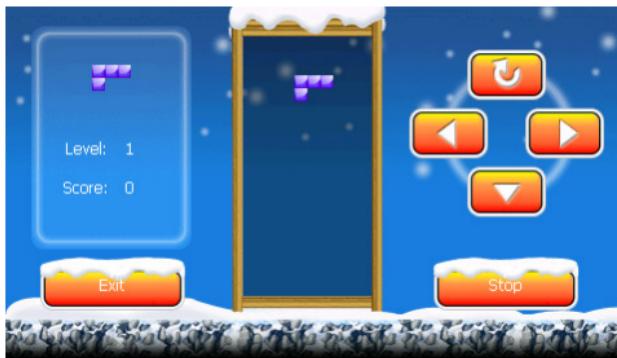

3.8.4 JawBreaker




Tap the icon to enter the following interface.



3.8.5 BoxMan



Tap the icon to enter the following interface.

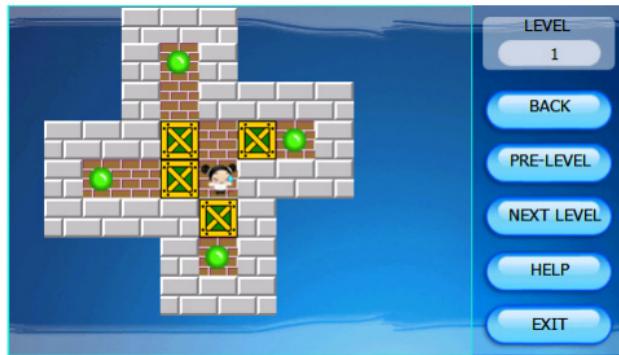

3.8.6 BreakOut




Tap the icon to enter the following interface.



3.8.7 Snake




Tap the icon to enter the following interface.

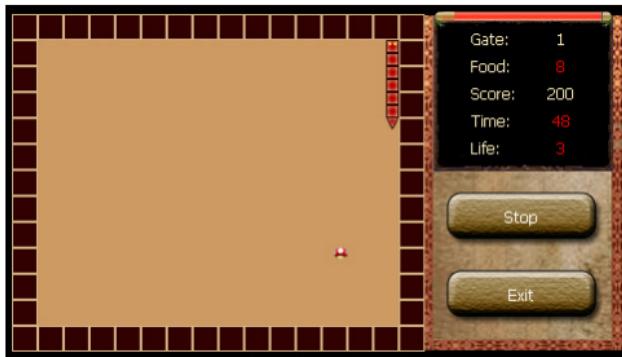


3.9 Tools

Tap the "Tools" icon on the main menu to enter the following interface.

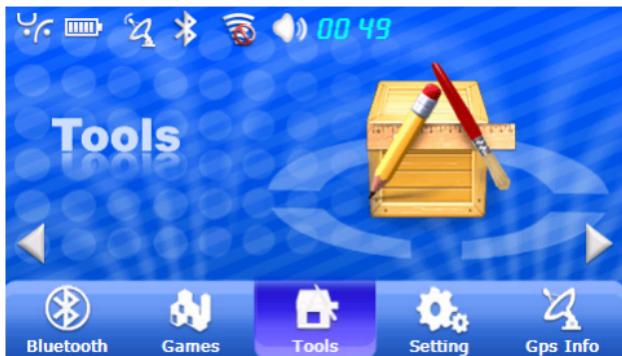


Tap the icon or on the main menu

again to enter the following interface.

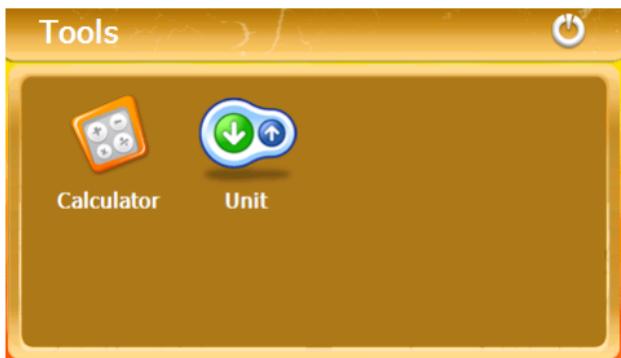

3.9.1 Calculator

Tap the icon  to enter the following interface.

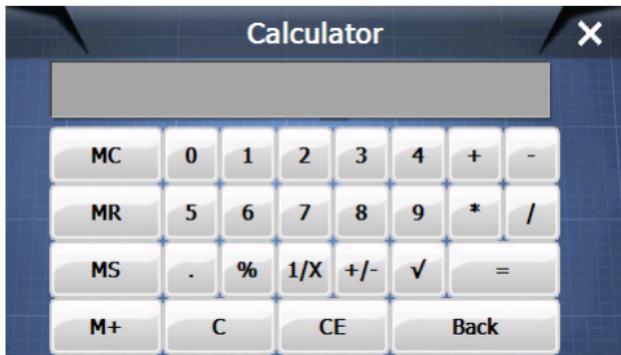


3.9.2 Unit



Tap the icon  to enter the following interface.

Unit:Length, Weight Mass, Cubic Capacity, Square Area, Circular Angular, Power, Pressure, Speed, Temperature

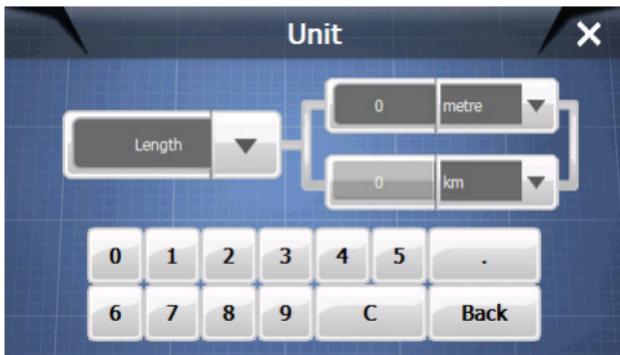


3.10 Setting

Tap the icon "Setting" on the main menu to enter the following interface.



Tap the icon  or  on the main again menu to enter the following interface.

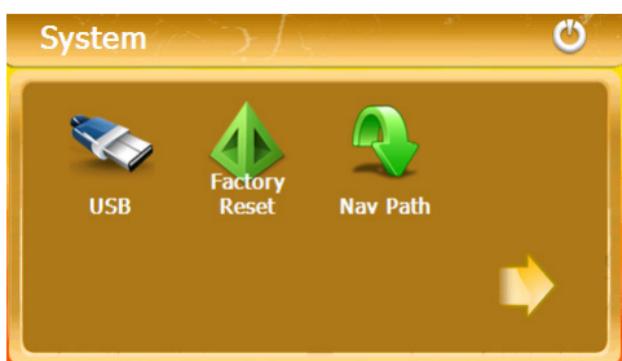


3.10.1 Volume

Tap the icon A on the main menu or B on the system as below



To enter the following interface.

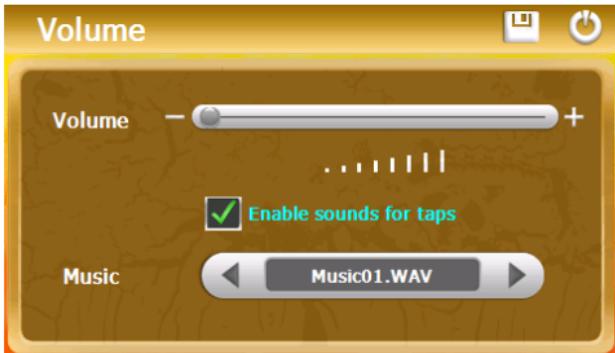


: previous

: saving

: volume control

 
Enable sounds for taps: can select "Enable sounds for taps" or not



3.10.2 Backlight



Tap the icon  on the system menu to enter the following interface.

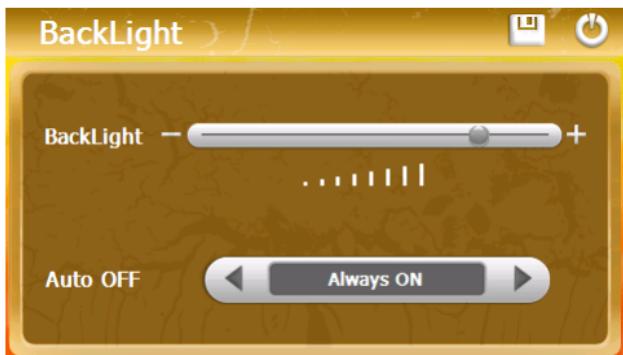


: previous

: saving

 : backlight

 control




time

3.10.3 Language



Tap the icon  on the system menu to enter the following interface.

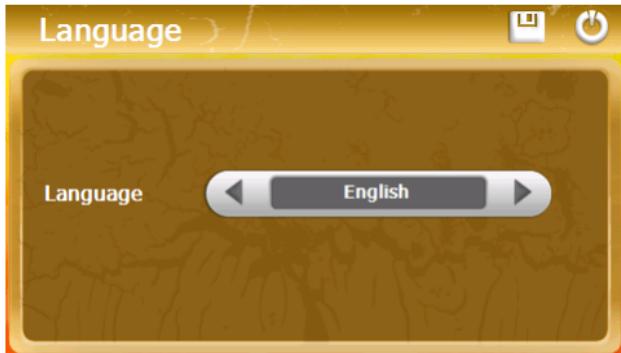


3.10.4 FM Transmitter (Optional)

Tap the icon A on the main menu or B on the system menu as below



To enter the following interface.

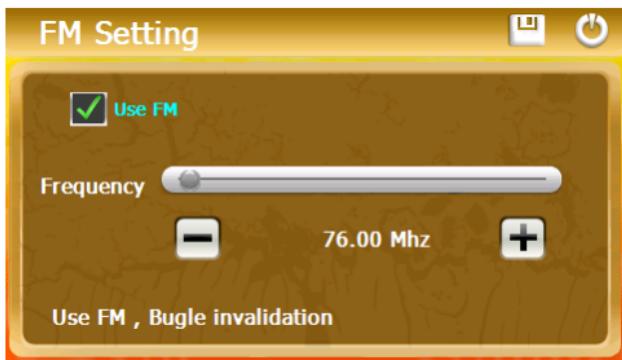

: previous

: saving

Use FM: select use FM

Frequency : select
emissive frequency of FM

76.00 Mhz : tap "+" or "-" icon to increase or decrease the emissive frequency of FM


3.10.5 Date Time

Tap the icon A on the main menu or B on the system

menu as below



To enter the following interface.

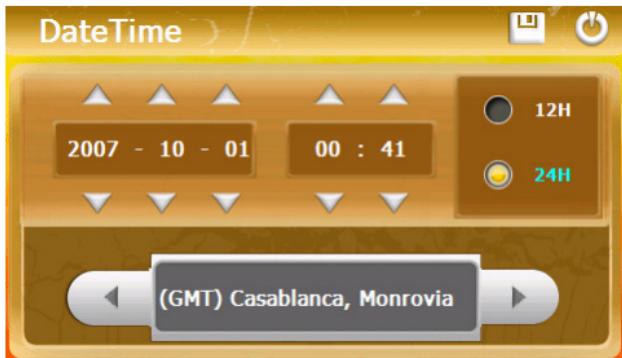

: previous

: saving


: tap or icon to adjust the time

: tap or icon to adjust the date

: tap “<” or “>” icon to
adjust the time zone.

3.10.6 Calibration

Tap the icon  on the system menu to enter the following interface.

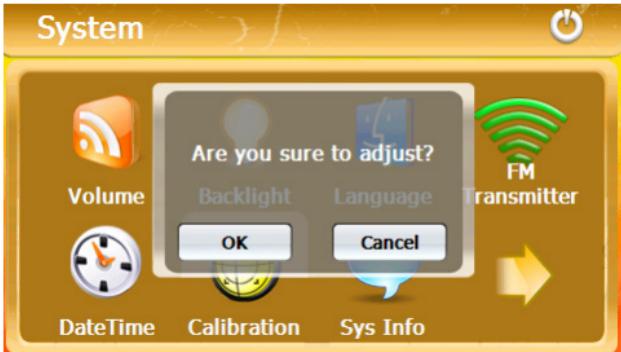

3.10.7 System Info

Tap the icon A on the main menu or icon B on the System menu as below



To enter the following display



3.10.8 USB

Tap the icon  on the System menu to set the USB working mode.



3.10.9 Factory Reset



Tap the icon on the System menu to enter the following interface.



3.10.10 Nav Path



Tap the icon on the System menu to enter the following interface.



3.11 GPS Info


Tap the icon "GPS Info" on the main menu to enter the following interface.



Tap the icon A or B or C on the main menu as below



To enter the following interface

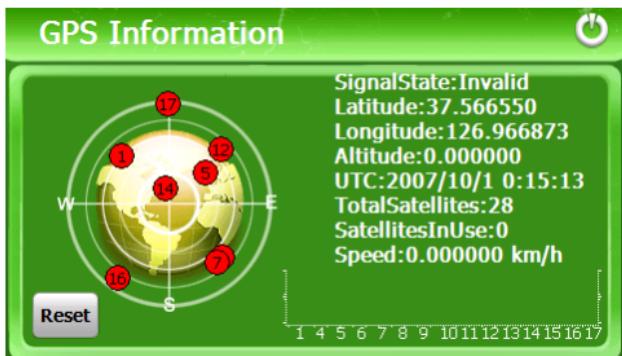

NOTE: This document is for guidance only and does not form part of any contract, and may be subject to change without notice.

مرحبا بك كمستخدم للنظام العالمي لتحديد المواقع (GPS) - هذا الجهاز مخصص في الأساس للملاحة ولكن يمكن استخدامه أيضاً لعرض الفيديو وتشغيل الوسائط المتعددة من فقط MP3- MP4 والصور والكتب الالكترونية (E-Book) او مجرد شاشة لجهاز DVD في ("5&7")

جهاز ملاحة متظور

واجهة استخدام بسيطة لتشغيل MP4 - MP3 - GPS من على كارت SD

نمط ذكي لاستخدام الطاقة للعمل لساعات طويلة بلا انقطاع

سهولة نقل البيانات عن طريق كابل USB و برنامج Microsoft ActiveSync

مستقبل GPS متظور به 20 قناة استقبال لأعطاء دقة عالية في تحديد المكان

المحتويات

تأكد من وجود هذه المحتويات داخل صندوق المنتج



جهاز GPS



شاحن سيارة

كابل USB



تعليمات التشغيل



كارت برنامج



الملاحة

حامل

استخدام هذا الدليل

للأستخدام الأمثل راجع هذا الدليل بعناية

هذا الدليل للجهاز فقط اما عن برنامج الملاحة والخرائط راجع دليل استخدام البرنامج

هذا الدليل مختصر لمزيد من المعلومات راجع الدليل الانجليزى او الدعم الفنى

ملحوظة - قد تختلف الصور باختلاف جهازك (3.5 - 5 - 7 بوصة) وال

firmware المرفق فلا تقلق جميع الوظائف ثابتة وان اختلف شكل البرنامج

بعض الاحتياطات للمحافظة على عمر جهازك

-1 لا تضغط بقوة على الشاشة وتذكر انها حساسة للمس وليس

الضغط

-2 نظفه بقطعة قماش ناعمة جافة ولا ترشه بالمنظفات

-3 لا تتركه بالسيارة لفترات طويلة في حرارة الشمس المباشرة

وصف المنتج

- شاشة 3.5 بوصة بشدة ووضوح 320*240 - 272*480 فى ("5&"7")

- مخرج ستريو هدفون - سماعة داخلية

- شاشة حساسة للمس

- GPS مدمج بتقنية SiRF STAR III

- هوانى مدمج لل GPS

- يدعم كروت SD

BMP,JPG,PNG,GIF

ملفات

تشغيل

-

mp3,wav,mid,ASF,avi,mp4,wmv

- بطارية ليثيوم 3.7V

مواصفات الجهاز

مواصفات بيئية			
الحجم	90.5 مم x 78 مم x 22 مم		
- التشغيل	حرارة	45% ~ 80%RH	-10°C ~ +70°C
	الرطوبة		
- التخزين	حرارة	30% ~ 90%RH	-40°C ~ +80°C
	الرطوبة		
الضغط الجوى		860MBar ~ 1060Mbar	

معلومات النظام	
MCU المعالج	SAMSUNG S3C2440A-40 400MHZ
SDRAM	64MB
NAND FLASH	64MB (Up tp 4GB)
نظام التشغيل	WinCE 4.2 NET
Compiler type	ARMV4

معلومات عامة	
حجم الشاشة	3.5" - 5" - 7"
شدة الوضوح	320*240 – 480*272

الصوت	ستريو هدفون – سماعة داخلية
شدة الصوت	ستريو هدفون 0.25W للقناة، قناة احادية 80mW/W
متوسط القدرة	1.5W
Idle	<20mW
مدخل تيار ثابت	9-30V
البطارية	لithium 3.7V
عمر البطارية	حتى 3.5 ساعة و 250 ساعة في وضع الاستعداد

GPS	
الرقاقة	SiRF Star III
التردد	L1/1.575GHZ
C/A CODE	1.023 MHZ chip rate
القنوات	20 قناة
حساسية التتبع	-159dBm
الدقة	10m, 2D RMS 5m, 2D RMS, WAAS enable
المعدل	0.1m/s
تحديث البيانات	1HZ
زمن الطلب	متوسط 0.1 ث

زمن التشغيل الساخن	متوسط 1 ث سماء مفتوحة
زمن التشغيل الدافئ	متوسط 38 ث سماء مفتوحة
زمن التشغيل البارد	متوسط 42 ث سماء مفتوحة
الحد الأقصى للأرتفاع	18,000 متر
السرعة القصوى	515 متر / ث
التسارع	< 4g
الهوائى الداخلى	هوائى مدمج نشط
gain	27dB
الجهد	3.3V±5%
شدة التيار	15mA
نوع الهوائى الخارجى (بيان منفرد)	MMCX
الجهد	3.3V±5%
gain	27dB
شدة التيار	15mA

شرح مكونات الجهاز



A	مدخل كارت SD	G	مفتاح التشغيل
B	مخرج ستريو هدفون	H	مدمج GPS
C	reset	I	مفتاح الصوت
D	USB	J	مفتاح الغلق والفتح
E	شاشة 3.5 بوصة	K	مدخل الشاحن
F	Menu		

الشحن

برجاء شحن الجهاز شحناً كاملاً قبل الاستخدام للمرة الأولى

يمكنك شحن الجهاز عن طريق الشاحن او عن طريق التوصيل ب **USB**



علامة []

في الجانب اليمين علويًا تعنى ان الجهاز يستخدم البطارية

الداخلية في حالة عدم الشحن



اما علامة []

الجهاز يعمل على الطاقة الخارجية طالما متصل بمصدر طاقة

يعتمد زمن التشغيل على طريقة استخدامك للجهاز حيث ان بعض الخواص كتشغيل الوسانط

المتعددة تستهلك البطارية اسرع



انداء الشحن تغير الاشارة بلون احمر وعندما يكتمل الشحن تتحول للاخضر

برجاء وضع الجهاز في شاحن السيارة بعد تشغيل السيارة حتى لا يتعرض للأضرار

لتشغيل الجهاز اضغط على زر التشغيل كما هو موضح بالشكل

في بعض الاحوال عندما تشعر بعدم استجابة يتطلب عمل reset اضغط بالقلم كما هو

موضح

قد تتأثر قدرة الجهاز على استقبال اشارة ال GPS بالاجواء المحيطة من رطوبة وابنية

عالية

يمكنك استخدام اصبعك او القلم على الشاشة ويمكنك النقر مرة واحدة لل اختيار او نقرة

مزدوجة لتنفيذ امر او الشد ل تحريك الاشياء راجع الالعاب للتمرين

يمكنك التوصيل بالكمبيوتر عن طريق الكابل الملحق وبرنامج Active Sync او وضع ال

SD فى قارئ كروت وتوصيلها بالUSB

فى القسم التالى سوف نقوم بعمل شرح مختصر لبعض الوظائف الاساسية فى الجهاز

القائمة الرئيسية



وبها يمكنك الوصول الى جميع الوظائف بالجهاز

1- الملاحة (GPS) راجع دليل البرنامج الملحق

2- الموسيقى

يمكن لمشغل الموسيقى تشغيل ملفات من الانواع **WMA9, MP3 ,WAV**

انقل ملفاتك الى مجلد على الكارت وليكن **Music**

اضغط على **Music** من القائمة الرئيسية ثم اختار ملف الموسيقى

("3.5") او اضغط زر اختيار الموسيقى ("5&"7")



٧٦



07:57

Media



GPS



وسائل



ألعاب



أدوات



الوضع






ملحوظة يمكنك اختيار ملف او اكثر بمعنى عمل قائمة لملفات يتم تشغيلها بالتتابع ("7 &"5)

في (3.5") يتم تشغيل الملفات بالتتابع او بصورة عشوائية


يمكنك التحكم بالايكولايزر في ("7 &"5)

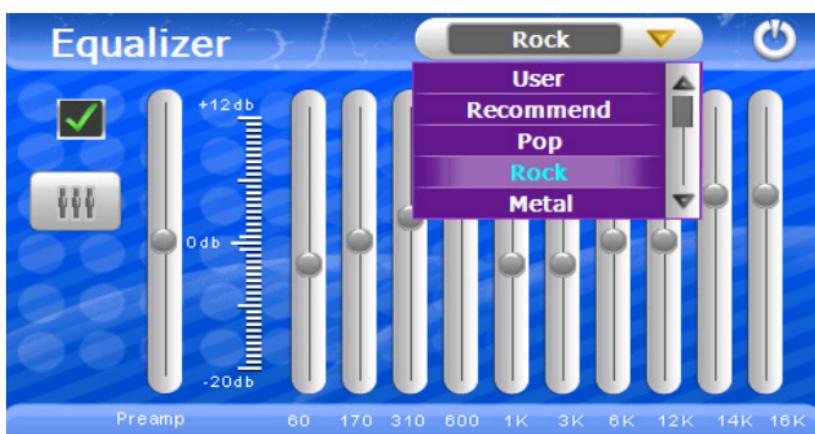

3- الفيديو

يمكن لبرنامج الفيديو تشغيل ملفات من الانواع **wmv, asf, avi** (يدعم اغلب انواع

الضغط
(divx,xvid

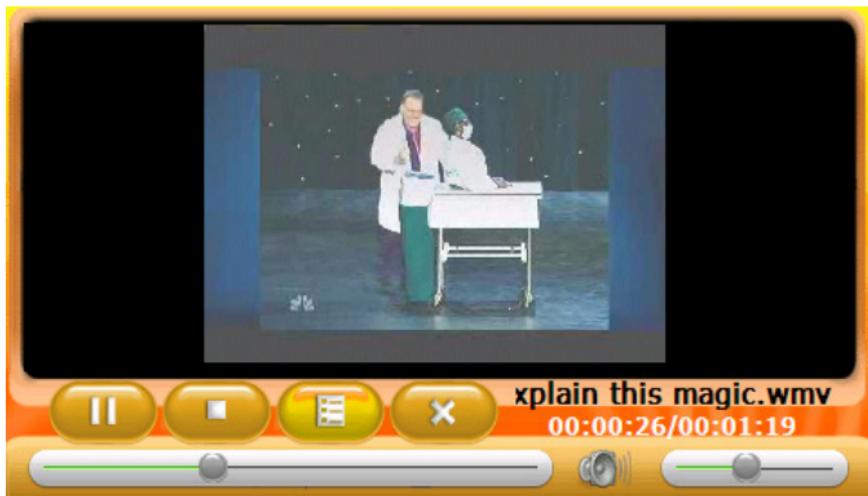


ملحوظة : يفضل تحويل افلامك الى حجم مناسب لشاشة الجهاز للحصول على اداء

افضل و حجم اصغر

4- الصور

يمكن لبرنامج الصور تشغيل ملفات من الانواع JPG, GIF, BMP,PNG

يمكنك عمل تكبير وتصغير او عرض متتابع

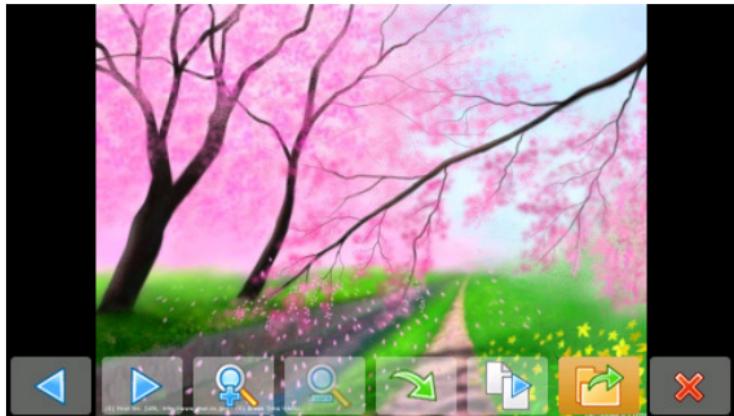



ملحوظة : يفضل تصغير الصور الى حجم الشاشة للحصول على افضل واسرع اداء

5- الاعدادات

لتعديل اعدادات الجهاز من تاريخ وصوت ولغة وشدة اضاءة الشاشة الى اخره

