

Lenco

BTT-2

SPEAKER TOWER WITH BLUETOOTH®, FM RADIO, USB AND SD CARD READER



User Manual

www.lenco.com

20130103 v1.0

IMPORTANT INFORMATION:

Checking the model number

Before you get started, please make sure the right user manual is included and it belongs to your device. This user manual is only intended for the Lenco BTT-2. You can find the model number on the packaging or on the specification plate on the back of the device.

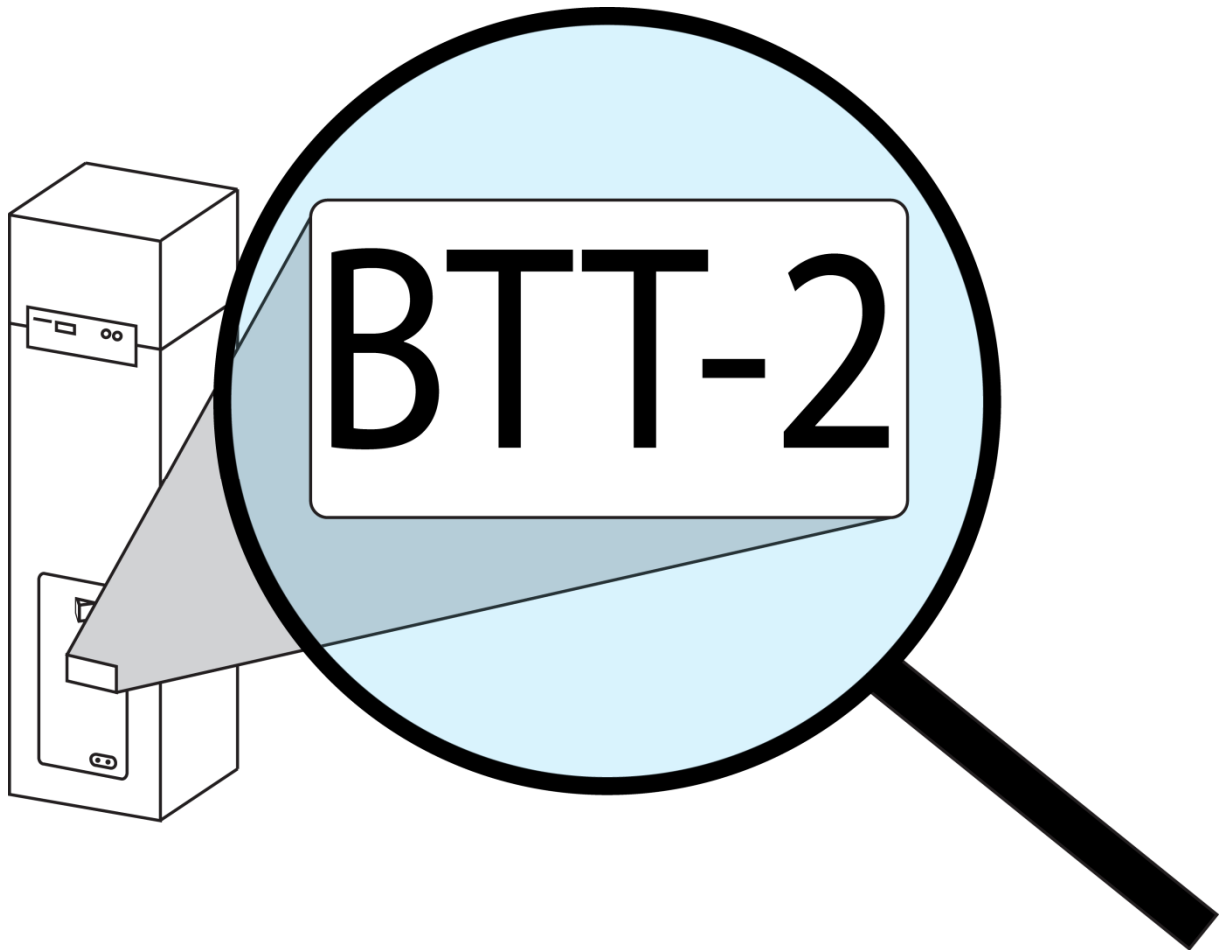 


Table of contents

Checking the model number	2
Table of contents	3
What's in the box?	6
Explanation of the symbols.....	6
Important information before using the device	7
Unpacking the device	8
What to do with the packaging material.....	8
Mounting the base	9
Exploring the device	10
Exploring the remote control.....	12
Where to install.....	13
Mounting the FM wire antenna	14
Connecting the device to a power supply	15
Stopping the device in an emergency	15
Connecting the device to the mains	16
General information about the energy saving mode	17
Basic control	17
General operation	17
Turning the power on or off on the device	17
Turning the device on from standby mode	17
Putting the device in standby mode.....	17
Adjusting the speaker volume.....	17
Muting the speakers.....	17
Selecting the input source	17
Bluetooth® mode	18
Connecting with a Bluetooth® device	18
Playing an audio file.....	18
Pausing playback.....	18
Skipping to the next track	18
Searching forward.....	18
Skipping to the previous track.....	18
Searching backward	18
Stop playback	18
AUX Mode	19

Connecting an AUX device	19
FM Radio mode	19
Manual tuning	19
Automatic tuning	19
Searching for a radio station by program type.....	20
Saving a radio frequency	20
Recalling a preset station	20
Switching between mono and stereo.....	20
SD Card mode	20
Pausing playback.....	21
Skipping to the next track	21
Searching forward.....	21
Skipping to the previous track.....	21
Searching backward	21
Stopping playback.....	21
Playing the content on the storage media in random order.....	21
Repeating the content on the storage media.....	21
USB Mode	22
Pausing playback.....	22
Skipping to the next track	22
Searching forward.....	22
Skipping to the previous track.....	22
Searching forward.....	22
Stopping playback.....	23
Playing the content on the storage media in random order.....	23
Repeating the content on the storage media.....	23
Advanced.....	23
Display information	23
Sleep timer	23
Adjusting the audio settings	24
Resetting the device	24
Maintenance	24
Breaking down the device.....	25
Storing and transporting the device	28
Reorder accessories.....	29
Glossary	29

Bluetooth®	29
Open standard	29
LED	29
Sensor	29
LCD	29
USB stick	29
USB port	30
Flash memory	30
SD Card	30
AUX in	30
Fail situation	30
Mono	30
Stereo	30
Troubleshooting.....	31
Specifications.....	32
Safety Precautions.....	33
Notice, statements and information.....	35
Declaration of Conformity.....	Fout! Bladwijzer niet gedefinieerd.
Service and support.....	36
Do not distribute copyrighted material.....	37
Trademarks.....	37
Disclaimer.....	38

Dear customer,

This device allows you to listen to radio, stream Bluetooth® audio to this device and playback audio from a USB storage device, SD card or via the AUX input.

Thank you for choosing for Lenco. At Lenco, we are convinced that everyone should enjoy life as much as possible. Our products are meant to support, improve and create joyful moments for everyone. For this reason, we offer user-friendly, high-quality and well-designed consumer electronics for an excellent price. This user manual is designed to help you with the features of this device. Please keep this manual for future reference.

This user manual was written during the development of the product, based on the factory settings. If the product would need improvement, priority is given to the product and therefore, in these cases, the quick start guide, user manual, illustrations in the user manual and/or packaging may differ from the actual product.

What's in the box?

The content of the box is assembled with the utmost care. In the unfortunate case that anything is missing, please contact your dealer.

Content of the box:

1	Speaker tower	1	Base
1	Remote control	4	Mounting screws
1	Power cord	1	Quick start guide
1	Aux in cable (for RCA)	1	User manual

Explanation of the symbols :



This symbol indicates that there are important operating maintenance instructions in the user manual accompanying the device.



This symbol indicates that dangerous voltage is present within this device, constituting a risk of electronic shock or personal injury.



This symbol indicates that the action in question may not be performed by a child because there is a risk of personal injury.

Important information before using the device



Use the device only as described in the user manual.



Read the safety precautions carefully before use. The safety precautions can be found in the back of the user manual.



If certain functions or instructions are unclear, always contact our helpdesk or the dealer where the device was bought. Information about our helpdesk can be found in the back of the manual.



This device is only intended for private use. Information about the use and warranty can be found at the safety precautions and the information about service and support.



Never use this device in an explosive atmosphere.

 
Unpacking the device




The operations in this chapter should not be performed by children.

Get ready: a knife* or a pair of scissors *


1 Cut the tape

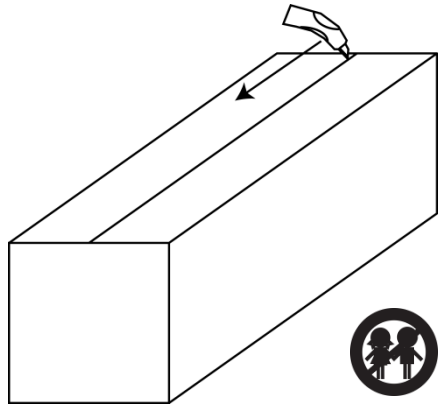

2 Open the box

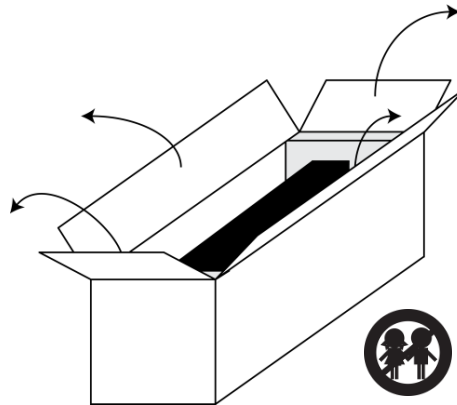 

 3 Lift the device from the box and remove the foam

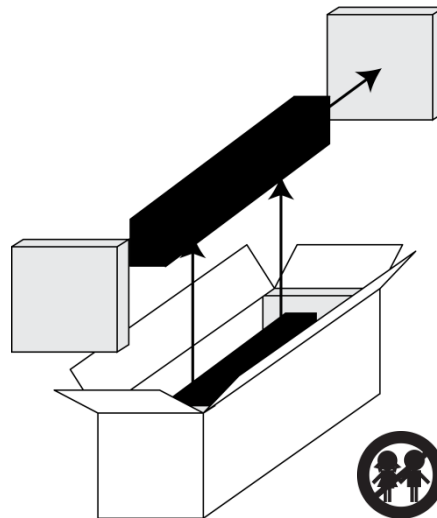

What to do with the packaging material

Lenco recommends to keep the box and foam in case the product needs transporting in the future or to store the device when it's not being used for a long time. The other packaging materials can be disposed of according to the local regulations. Please contact your local authorities.

Legend:

* = not included

 
Mounting the base



The operations in this chapter should not be performed by children.

Get ready: Phillips screwdriver*

Put the device on a flat, stable surface that is slightly elevated (for instance on a table) so that the base can easily be mounted. Place the base against the bottom of the device and secure it with the 4 included screws.

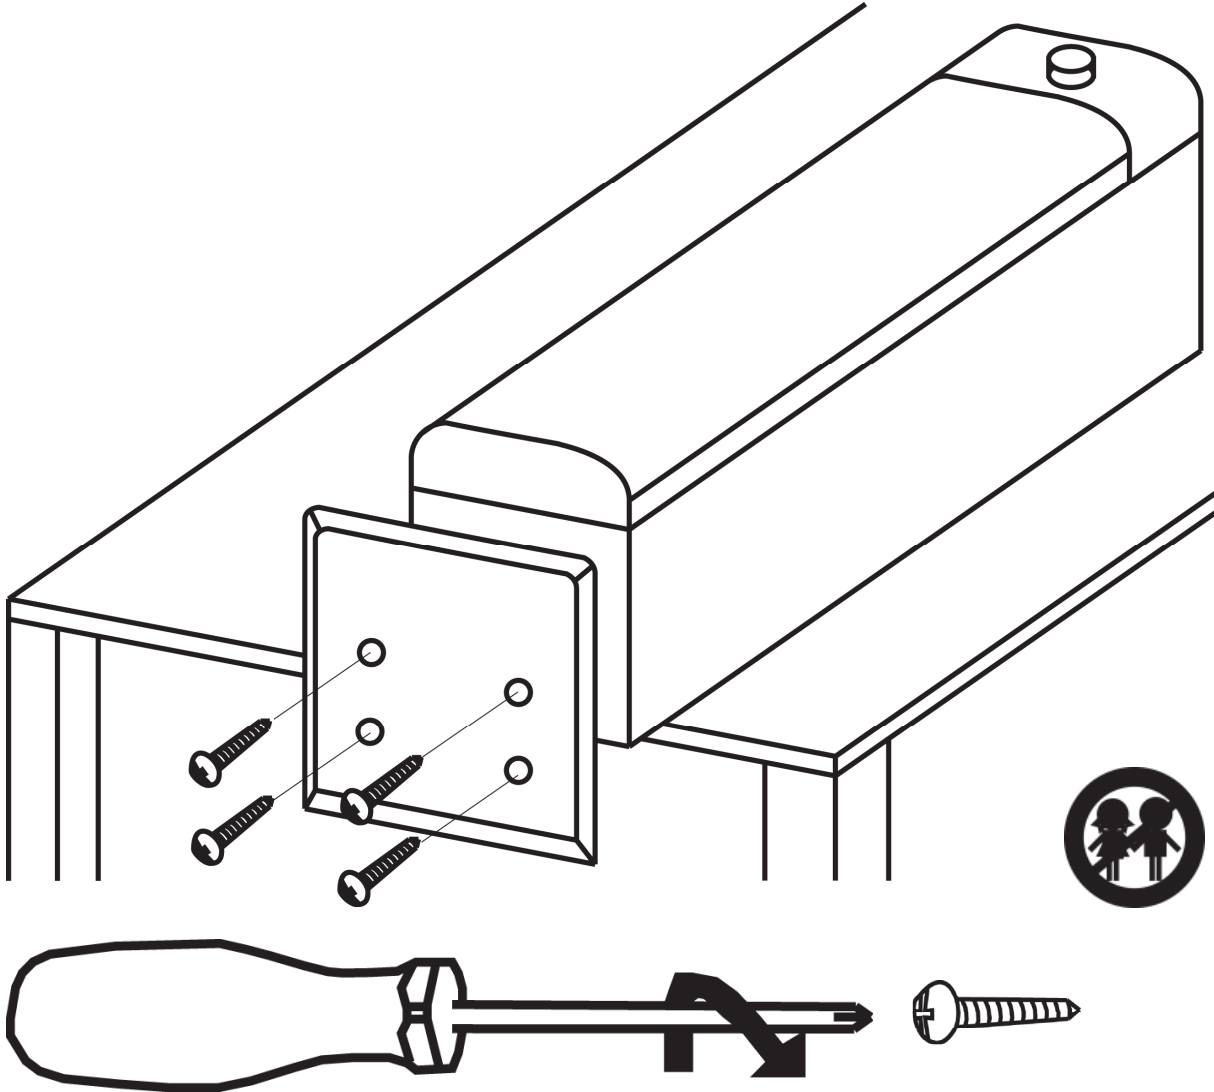


Legend:
* = not included

Exploring the device

The instructions below will briefly explain the functionality of the buttons and controls. A detailed instruction can be found in the various chapters of this manual.

 1. **Play / pause button**, press this button to pause or resume playback.
2. **Previous / rewind button**, press this button to skip to the previous song, hold the button to search backward in the track.
3. **Next / fast forward button**, press this button to skip to the next track or, hold the button to search forward in the track.
4. **Bluetooth® status LED**, this LED will flash when the device is trying to setup a Bluetooth® connection. If a Bluetooth® connection is active, the LED is lit continuously. If no Bluetooth® connection is active, the LED will not be lit.
5. **Remote control sensor**, this sensor receives remote control signals.
6. **Stop button**, press this button to stop playback.
7. **Volume knob**, turn this knob clockwise to increase the volume or counterclockwise to decrease the volume.
8. **LCD display**, the LCD display displays the most important information.
9. **Mode button**, press this button to switch between the Bluetooth®, AUX, FM, SD and USB mode.
10. **Standby button**, press this button to turn the device on or press the button to switch to standby mode.
11. **Pair button**, when the device is in Bluetooth® mode, press this button to reconnect with another device.
12. **Mute button**, press this button to mute the speakers. Press this button again to unmute the speakers.
13. **SD card slot**, insert an SD card in this slot.

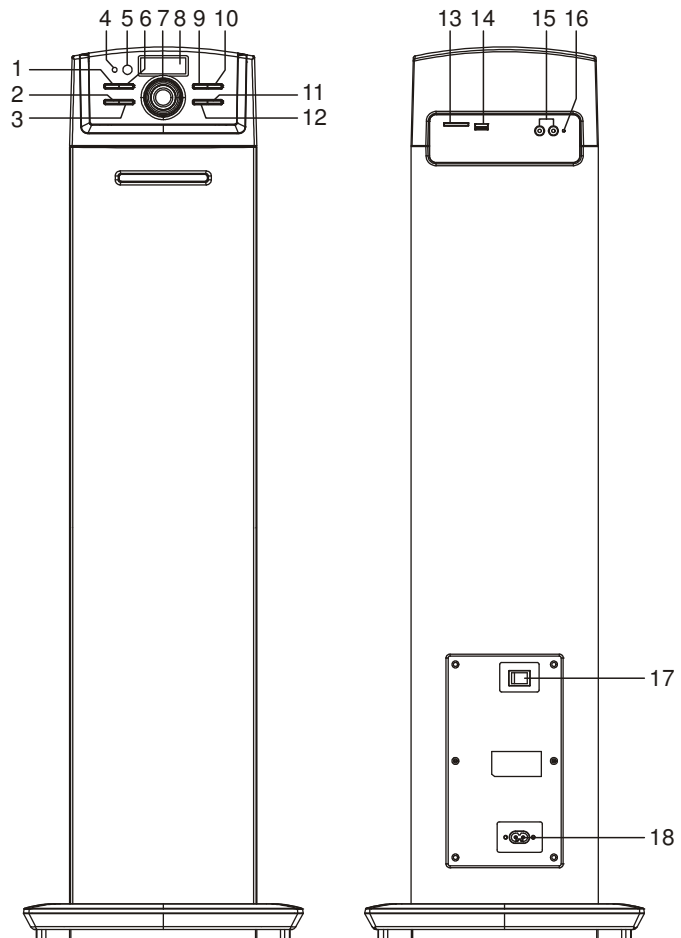

14. **USB port**, insert a USB storage device in this port.



 
WARNING: Do not use a USB extension cable to connect a USB device. The use of a USB extension cable can cause malfunction or loss of data.

15. **AUX INPUT**, connect a device that is equipped with an AUX output or headphones output to this input.

16. **Wire antenna**, the antenna receives the FM radio signals.


17. **Power on / off switch**, set the switch in the OFF position to switch off the device. Set the switch in the ON position to put the device in standby mode.

18. **AC connection**, connect the power cord to this connection.

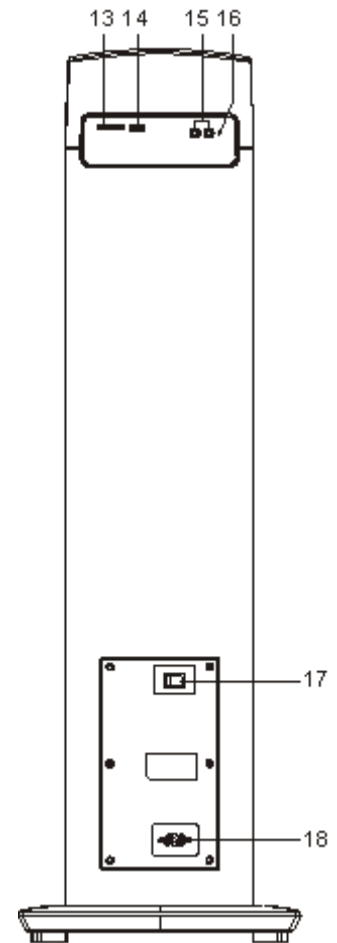


Exploring the remote control

 1. **Function button**, press this button to switch between the Bluetooth®, AUX, FM, SD and USB mode.
2. **Info button**, in the FM mode RDS information is shown on the display. Press this button to show the frequency and PTY information on the display.
3. **Sleep button**, press this button to display sleep timer information, set the sleep timer or turn off the sleep timer.
4. **Previous / rewind button**, press this button to skip to the previous song, hold the button to search backward in the track.
5. **Next / fast forward button**, press this button to skip to the next track or, hold the button to search forward in the track.
6. **M+ button**, only works in radio mode. Use this button to select a preset station or recall a preset station.
7. **Tune- button**, only works in radio mode. Use this button to change the radio frequency.
8. **Store button**, only works in radio mode. Use this button to save a station.
9. **Numeric buttons**, use these buttons to input digits.
10. **Repeat button**, only works in SD & USB mode. Press this button to repeat a track, folder or all tracks on the media.
11. **Volume- button**, press this button to decrease the volume.
12. **Standby button**, press this button to turn on the device or put the device in standby mode.
13. **Mute button**, press this button to mute the speakers. Press this button again to unmute the speakers.
14. **Play / pause button**, press this button to pause or resume playback.
15. **Stop button**, press this button to stop playback.
16. **Tune+ button**, only works in radio mode. Use this button to change the radio frequency.
17. **M- button**, only works in radio mode. Use this button to select a preset station or recall a preset station.
18. **Pair button**, if the device is in Bluetooth® mode, press this button to reconnect to another device.

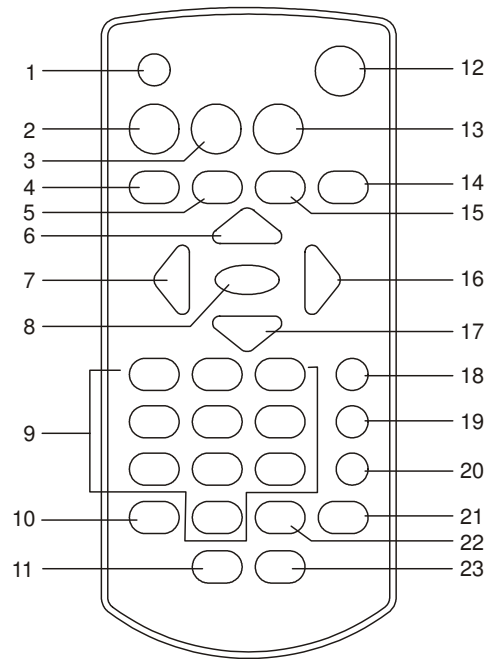

 19. **PTY button**, only works in radio mode.
Press this button to select the desired program type.
20. **Ran button**, only works in SD & USB mode.
Press this button to play tracks in a random order.
21. **MO / ST button**, only works in radio mode.
Press this button to switch between FM mono and stereo audio.
22. **Tone button**, press this button to adjust the high and low tones.
23. **Volume+ button**, press this button to increase the volume.

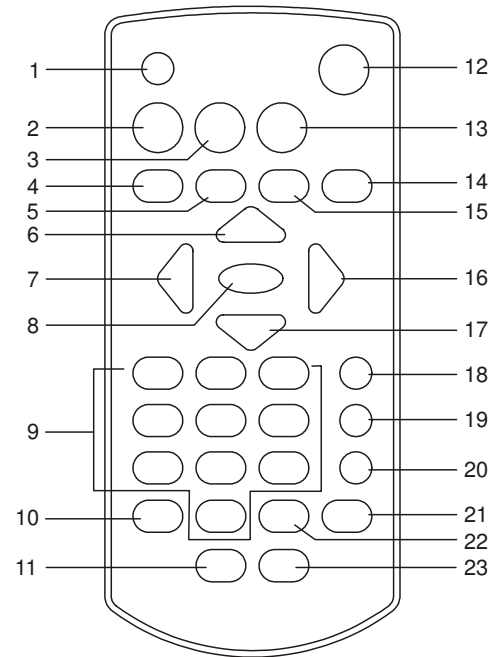

Where to install

 
Never place the device in direct sunlight. Place it on a sturdy platform of which the surface should be flat and steady, so the product can't fall or hit by any objects. Make sure the product is placed in such a manner that nothing can fall on top of it, as pressure will damage or break the product. Prevent insertion of objects into the ventilation slots, or openings in the cabinet at all time.

Mounting the FM wire antenna



The operations in this chapter should not be performed by children.

The wire antenna can be found on the back of the device. If you cannot find the wire antenna, please check the section Exploring the device (number 16) to see where the wire antenna can be found exactly. Extend the wire antenna, for the best results we recommend hanging the wire antenna as high and as close as possible near a window.

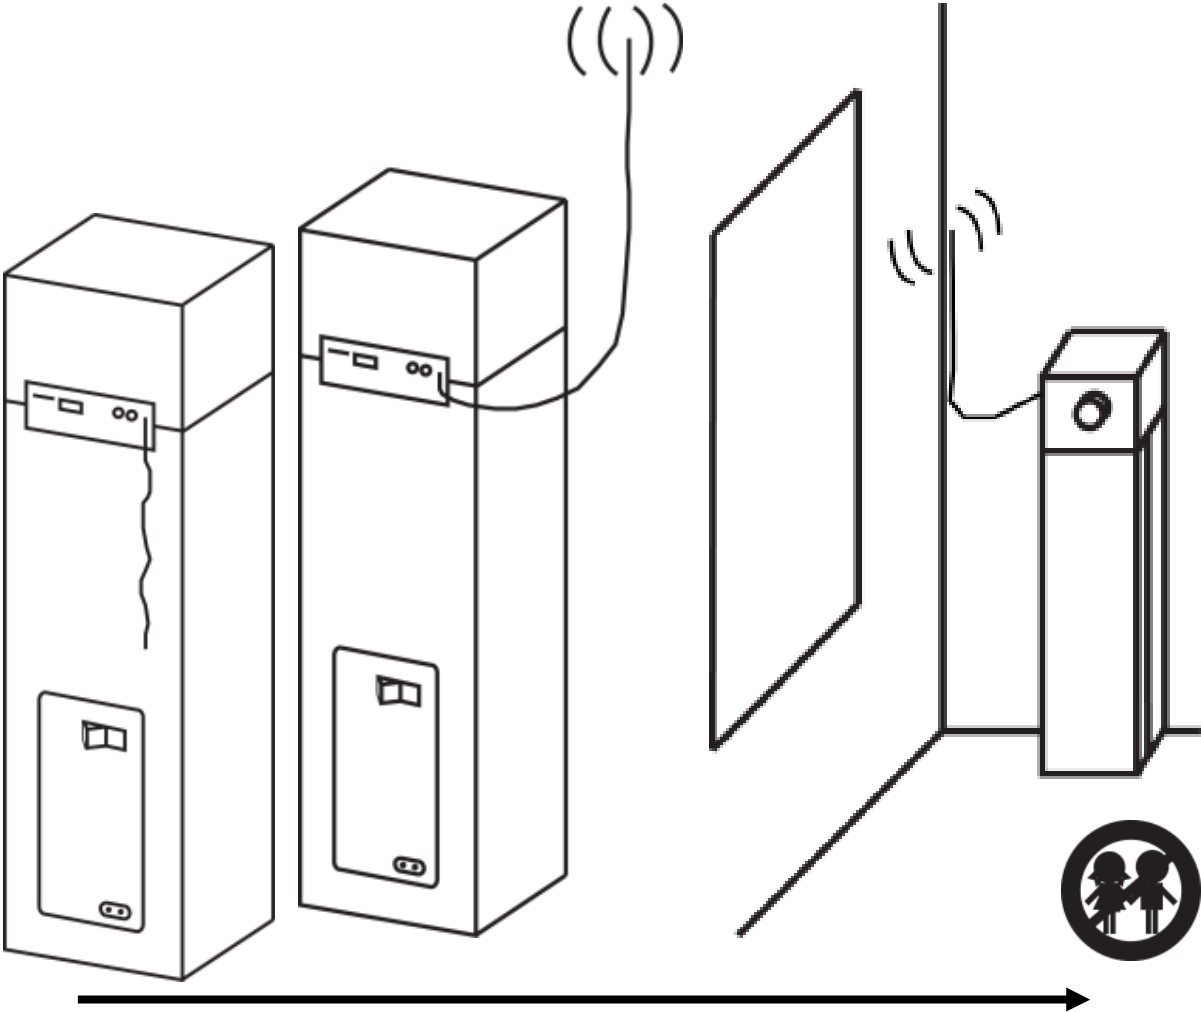

Connecting the device to a power supply



The operations in this chapter should not be performed by children.



Before connecting the device to the mains, make sure that the mains voltage corresponds to the voltage that is suitable for the device. The information about a suitable mains voltage can be found in the specification table. If you are unsure about the mains voltage at your current location, please contact the utility company.



Make sure the outlet to which the device is connected is easily accessible.



Before connecting the device, please make sure that the main power switch on the back of the device is in the OFF position. If you cannot find the switch, please check the section Exploring the device (number 17) to see where this switch can be found.



 
Do not touch the metal parts of the power cable, because there is a risk of shocks with personal injury.

Stopping the device in an emergency



In “fail situations” it might be needed to have the device make an emergency stop. For instance when smoke or a strange smell is coming out of the device, when the device is making a strange noise, etc. You can stop the device in emergencies by:


- Disconnecting the power cord from the outlet. Always pull the plug of the power cord, never the cord itself.
- If the outlet is not accessible, go to the meter cupboard and switch off the corresponding group or the ground fault circuit breaker.

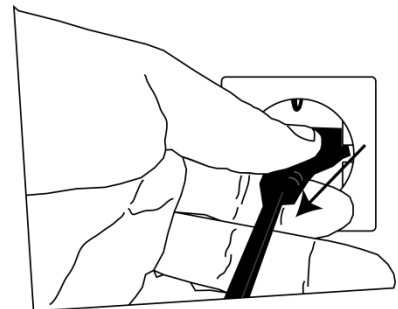

When a fail situation has occurred, make sure to contact your dealer or the Lenco helpdesk before using the device again. Explain to the employee what happened, the employee will then advise you whether it's wise to start using the device again.

Connecting the device to the mains

 
Fully extend the power cord and connect the narrow end to the back of the device and connect the wide end of the power cord to the power outlet.

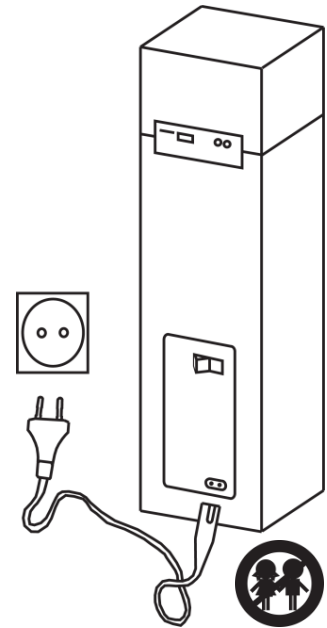

Preparing the remote control

Remove the battery cover and insert 2 A-brand AAA UM4 1,5V batteries. **Make sure** that the batteries are placed in the right direction into the remote control (the + and the - side). After the batteries are placed, place the battery cover back.

 Please remove the batteries from the remote control when it's not being used for a long time.

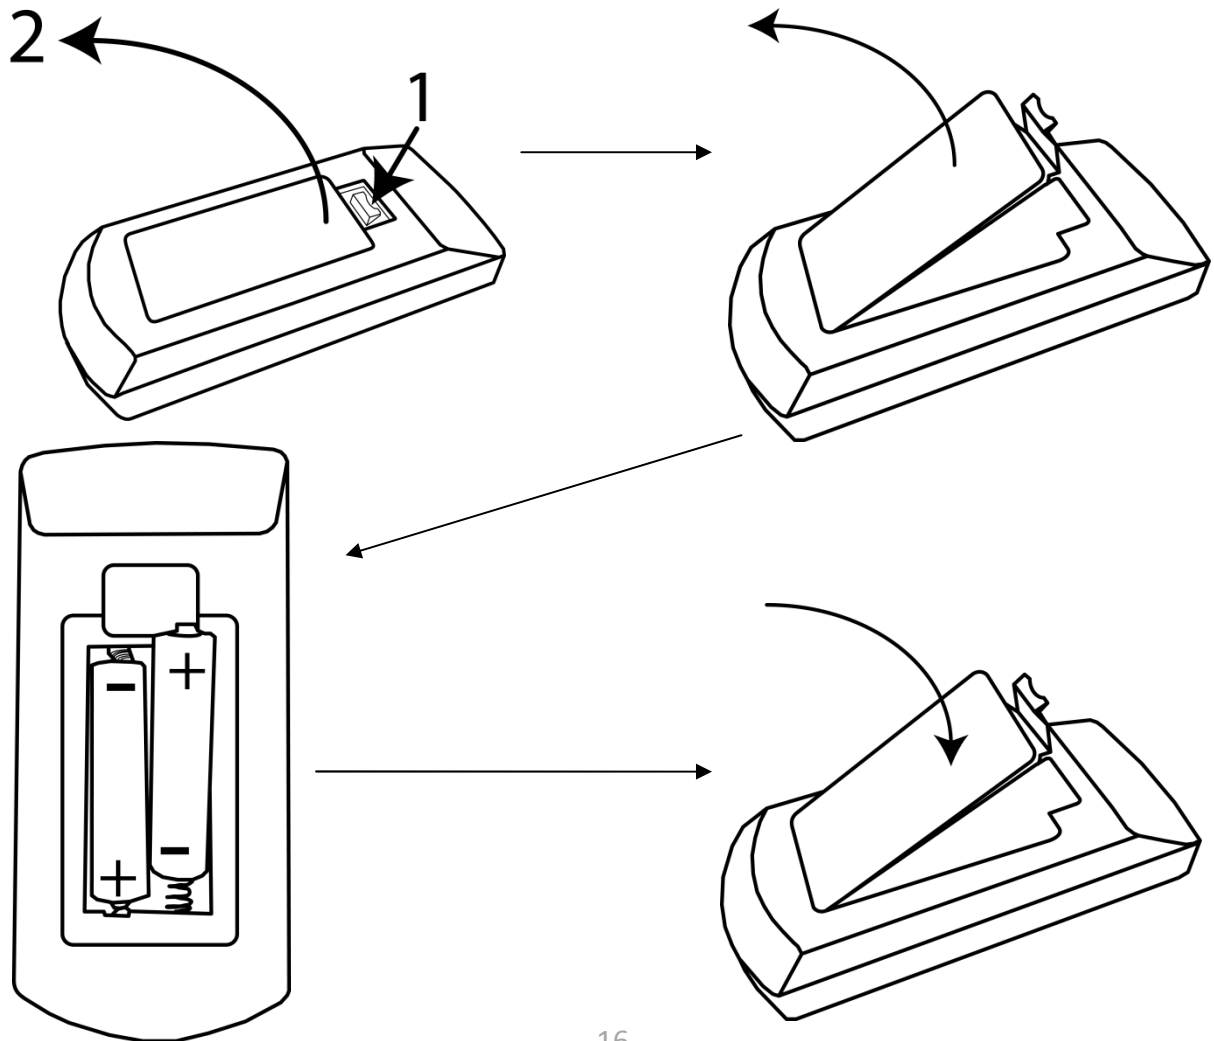

General information about the energy saving mode

This device is equipped with an energy saving mode. During playback, if not any operation in about 4 hours, the unit will switch to standby mode automatically.

Basic operation

General operation

Turning the power on or off on the device

To power the device, put the switch on the back of the device in the ON position. The device will now switch to the standby mode.

To turn off the power, put the switch on the back of the device in the OFF position.

Turning the device on from standby mode

When the device is in standby mode, press the standby button on the device or the remote control to turn the device on.

 
Putting the device in standby mode

When the device is turned on, press the standby button on the device or the remote control to put the device in the standby mode.

Adjusting the speaker volume

Turn the volume knob to adjust the speaker volume. Turn counterclockwise to decrease the speaker volume or turn clockwise to increase the speaker volume.

When using the remote control, press the VOL- button to decrease the speaker volume or press VOL+ to increase the speaker volume.

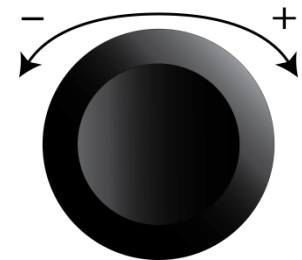

Muting the speakers

Press the mute button on the device or the remote control to mute the speakers. Press the mute button again to unmute the speakers. MUTE will appear on the display when the speakers are muted.

Selecting the input source

Press the mode button on the device or the function button on the remote control to select the desired input source. The order of the input sources is: Bluetooth®, AUX, FM Radio, SD Card & USB.

Bluetooth® mode

Connecting with a Bluetooth® device



Put the device in Bluetooth® mode. If the device is in Bluetooth® mode, press the pair button on the device or remote control. When the device is ready to pair with an external Bluetooth® device, the Bluetooth® LED will flash. Find "BTT-2" on the external device and connect with it. Thanks to Pair & Play™ there is no need to enter a password. Pair & Play™ allows you to pair a Bluetooth® device with a single press of a button and enjoy your favorite music right away.

Important note: Depending on the external Bluetooth® device, the instructions below might not work or might not work correctly. This is not a malfunction of the Lenco device or the external Bluetooth® device.

Playing an audio file

Choose your favorite audio file on the external Bluetooth® device and play it on the device. You can press play on the device or the remote control to start playback of the audio file.

Pausing playback

During playback, press the play / pause button on the device or the remote control to pause playback, press the button again to resume playback.

Skipping to the next track

During playback of an audio file, press the next button on the device or the remote control to skip to the next track.

Searching forward

During the playback of an audio file, hold the next button on the device or the remote control. The device will search forward in the track until the button is released.

Skipping to the previous track

During playback of an audio file, press the previous button on the device or the remote control to skip to the previous track.

Searching backward

During the playback of an audio file, hold the previous button on the device or the remote control. The device will search backward in the track until the button is released.

Stop playback

 
Press the stop button on the device or the remote control to stop playback.

AUX Mode

Put the device in AUX mode. When the device is in the AUX mode, the volume can only be controlled via the tower speaker. All other controls should be used on the external device.

Connecting an AUX device

The AUX input allows you to connect any device that is equipped with an AUX output or a headphones output. The AUX IN cable (for RCA) that is required to connect the external devices is included with this product. The AUX input can be found on the back of the device.

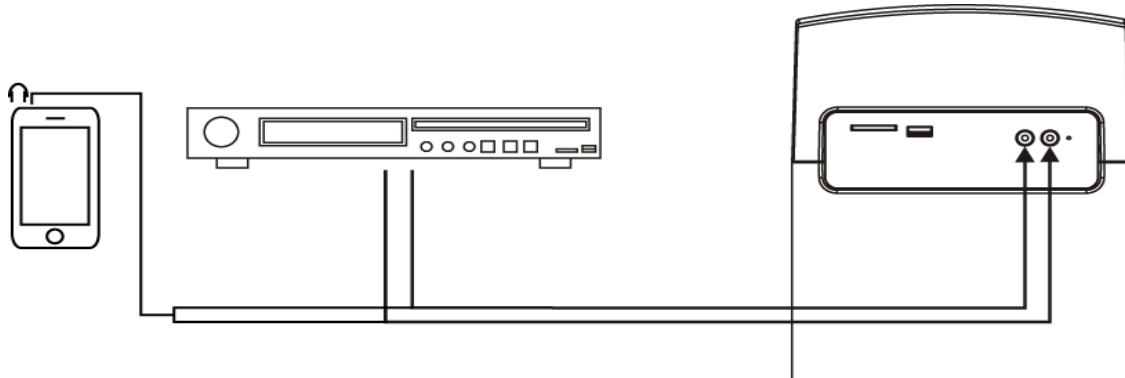

FM Radio mode

Put the device in radio mode.

Manual tuning

The display shows the current frequency. You can search for the desired frequency in 2 ways:

1. Increase the frequency with steps of 0.05 MHz by pressing the next button on the device or the tune+ on the remote control.
2. Lower the frequency with steps of 0.05 MHz by pressing the previous button on the device or the tune- on the remote control.

Automatic tuning

The display shows the current frequency. When the device finds a station with sufficient signal strength, the device will automatically stop searching. You can automatically search for a station in 2 ways:

1. Search for stations with a higher frequency by holding the next button on the device or the tune+ on the remote control for 3 seconds.
2. Search for stations with a lower frequency by holding the previous button on the device or the tune- on the remote control for 3 seconds.

If needed, manual tuning can be used to fine tune to a station.

Searching for a radio station by program type

The Program Type function (abbreviated PTY function) allows you to search for a station that is broadcasting a specific genre, for instance classical music. When the PTY function is activated, the search function will stop only at stations that belong to the set category of the PTY function. If, for instance, classical music has been set, then the search function will not stop at a station that only plays rock music. Activate the PTY function by holding the PTY button on the remote control until a genre appears on the display. Then repeatedly press the PTY button until the desired genre is shown on the display. Then press the tune+ button on the remote control to search for this genre. If needed, manual tuning can be used to fine tune to a station.

Saving a radio frequency

You can save up to 20 preset stations in the memory of this device. Tune to the frequency that you would like to save and follow the steps below to save the frequency:

1. Press the store button on the remote control, the preset number appears on the display.
2. The preset number can be increased by pressing M+ on the remote control and decreased by pressing M- on the remote control.
3. Press the store button on the remote control to save the frequency.

Recalling a preset station

 
Press the M+ and M- buttons on the remote control to tune to a desired preset station. Alternatively, you can also enter the number by using the numeric buttons on the remote control.

Switching between mono and stereo

Press the MO/ST button to switch between mono and stereo FM reception. If the station being listened to has a weak signal, some hiss may be audible. It is possible to reduce this hiss by forcing the radio to play the station in mono rather than stereo.

SD Card mode

Put the device in SD Card mode and insert the SD memory card.

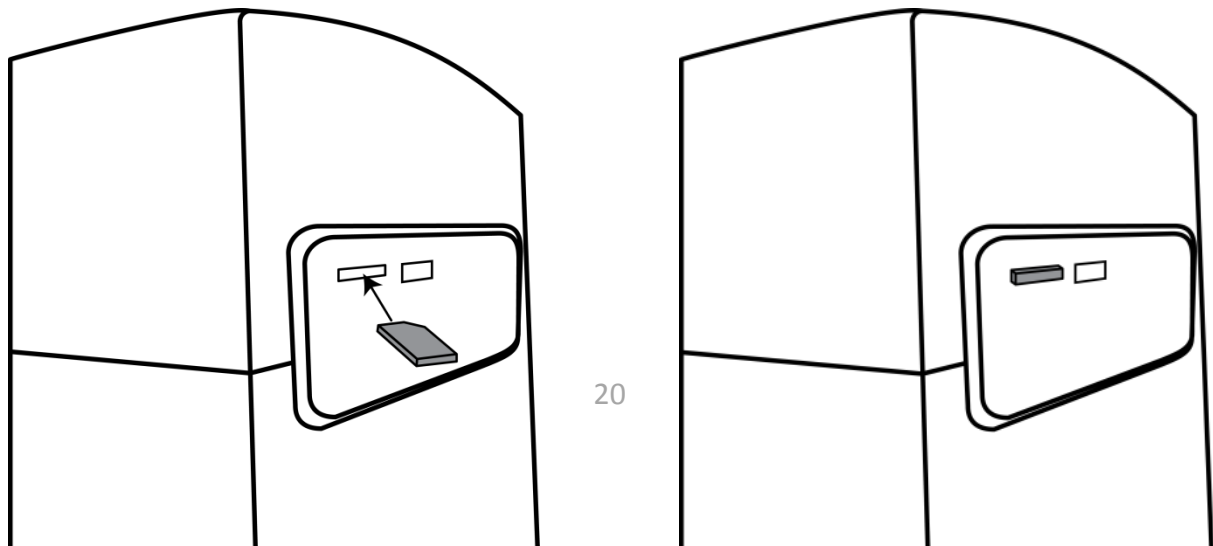

The device will start reading the SD card. Once the SD card is read, the device will automatically start playing the files on the card.

Pausing playback

During playback, press the play / pause knob on the device or the remote control to pause playback, press the button once more to resume playback.

Skipping to the next track

During playback of an audio file, press the next button on the device or the remote control to skip to the next track.

Searching forward

During the playback of an audio file, hold the next button on the device or the remote control. The device will search forward in the track until the button is released.

Skipping to the next track

During playback of an audio file, press the previous button on the device or the remote control to skip to the previous track.

Searching backward

During the playback of an audio file, hold the previous button on the device or the remote control. The device will search backward in the track until the button is released.

Stopping playback

Press the stop button on the device or the remote control to stop playback.

Playing the content on the storage media in random order

Press the RAN button on the remote control to enable or disable the random mode. When the random mode is active, tracks will be played in random order. When the display shows RAN OFF, the random mode is switched off. When the display shows RAN ON, the random mode is switched on.

Repeating the content on the storage media

 
Press the REPEAT button on the remote control to enable or disable the repeat function. This device has various repeat functions:

- REP ONE, when this is shown on the display, the current track will be repeated continuously.
- REP DIR, this is shown on the display when all tracks in the current folder are repeated. This function can only be used when the tracks are stored into 1 or multiple folders.
- REP ALL, if this is shown on the display, all tracks on the storage media will be repeated.

- REP OFF, when this is shown on the display, the repeat function is disabled and all tracks will be played normally.

USB Mode

Put the device in USB mode and insert the USB storage device.

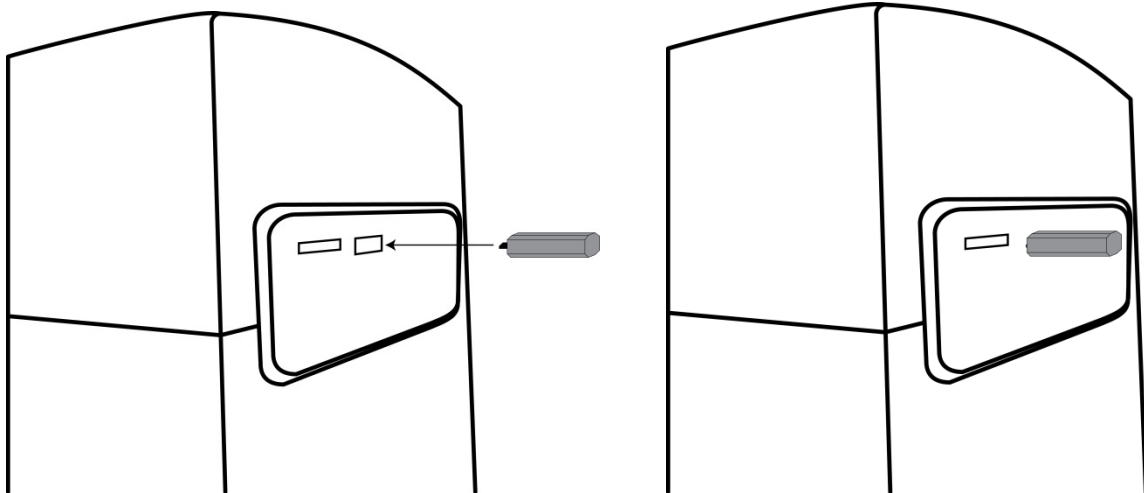

The device will start reading the USB storage device. Once the USB storage device is read, the device will automatically start playing the files on the card.

Pausing playback

During playback, press the play / pause knob on the device or the remote control to pause playback, press the button once more to resume playback..

Skipping to the next track

During playback of an audio file, press the next button on the device or the remote control to skip to the next track.

Searching forward

During the playback of an audio file, hold the next button on the device or the remote control. The device will search forward in the track until the button is released.

Skipping to the previous track

During playback of an audio file, press the previous button on the device or the remote control to skip to the previous track.

Searching backward

During the playback of an audio file, hold the previous button on the device or the remote control. The device will search backward in the track until the button is released.

Stopping playback

Press the stop button on the device or the remote control to stop playback.

Playing the content on the storage media in random order

Press the RAN button on the remote control to enable or disable the random mode. When the random mode is active, tracks will be played in random order. When the display shows RAN OFF, the random mode is switched off. When the display shows RAN ON, the random mode is switched on.

Repeating the content on the storage media

Press the REPEAT button on the remote control to enable or disable the repeat function. This device has various repeat functions:

- REP ONE, when this is shown on the display, the current track will be repeated continuously.
- REP DIR, this is shown on the display when all tracks in the current folder are repeated. This function can only be used when the tracks are stored into 1 or multiple folders.
- REP ALL, if this is shown on the display, all tracks on the storage media will be repeated.
- REP OFF, when this is shown on the display, the repeat function is disabled and all tracks will be played normally.

Advanced

Display information

Press the info button on the remote control to display extra information. The information that is shown on the display depends on the mode and media that is being played.

Sleep timer

This device is equipped with a sleep timer that can be used to turn off the device after a preset amount of time has elapsed.

Press the SLEEP button on the remote control to set the sleep timer. Once the button is pressed, the display will show the sleep time (the time in minutes after which the device will be turned off). When the sleep timer is already active, the remaining sleep time is shown on the display. Repeatedly press the SLEEP button on the remote control to adjust the sleep time. You can also do this when the sleep timer is already activated and you want to adjust or disable the sleep timer. The sleep timer is disabled when the display shows OFF.

Adjusting the audio setting

Via the audio settings, it is possible to adjust the high and low tones. Press the TONE button on the remote control to adjust the audio settings.

- After pressing once, BASS will appear on the display. Bass are the low tones. Press the vol+ button on the remote control to enhance the bass tones. Press the vol- button on the remote control to reduce the bass tones.
- Press the TONE button on the remote control to confirm the bass settings.
- Now TREB appears on the display. Treble are the high tones. Press the vol+ button on the remote control to enhance the treble tones. Press the vol- button on the remote control to reduce the high tones.
- Press the TONE button on the remote control to confirm the treble settings.

Resetting the device

When the device is not responding or is not responding correctly, reset the device by putting the power switch on the back of the device in the off position. Then wait at least 5 minutes before switching on the device again. If the device still does not work properly after the reset, please consult the section [troubleshooting](#), contact your dealer or contact the Lenco [helpdesk](#).

Maintenance

1. Clean the device only with a soft damp cloth.
2. No part of this product requires maintenance.

Breaking down the device



The operations in this chapter should not be performed by children.



 
Before breaking down the device, make sure the main power switch on the back of the device is in the OFF position. If you have trouble locating this switch, please consult the section [Exploring the device](#) (number 17) to see where this switch can be found.



Do not touch the metal parts of the power cable, because there is a risk of shocks with personal injury.

Get ready: Phillips screwdriver*


1. Disconnect the equipment that is connected to the AUX input and remove any USB devices and SD cards.
2. Turn the main power switch on the back of the device in the off position.
3. Remove the plug from the outlet and disconnect the power cord from the device.

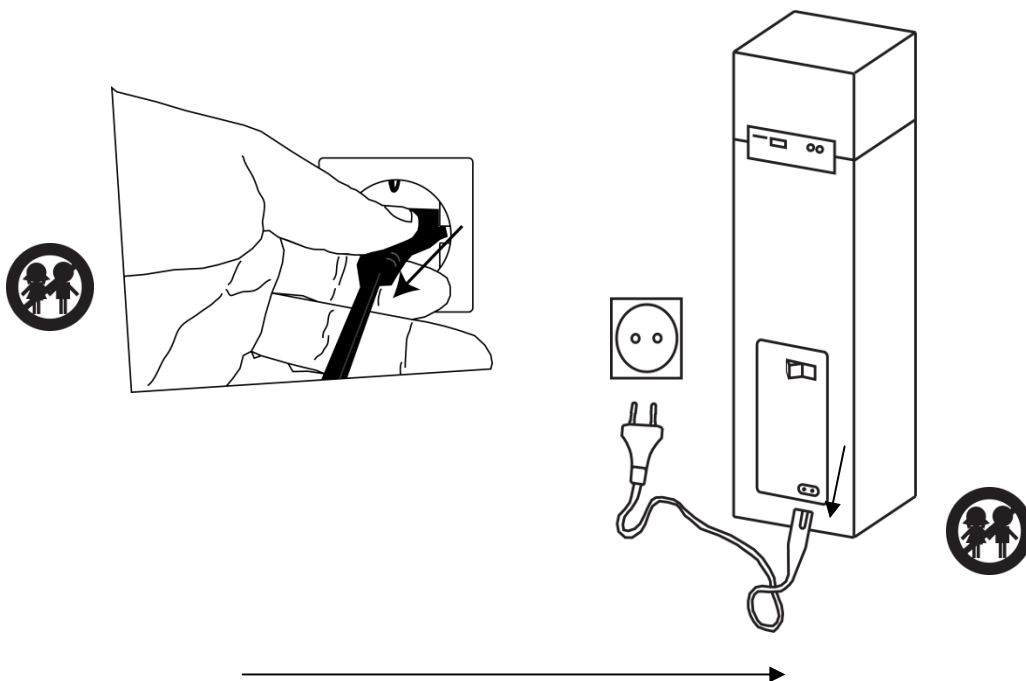



Legend:

* = not included

 4. Disconnect the wire antenna.

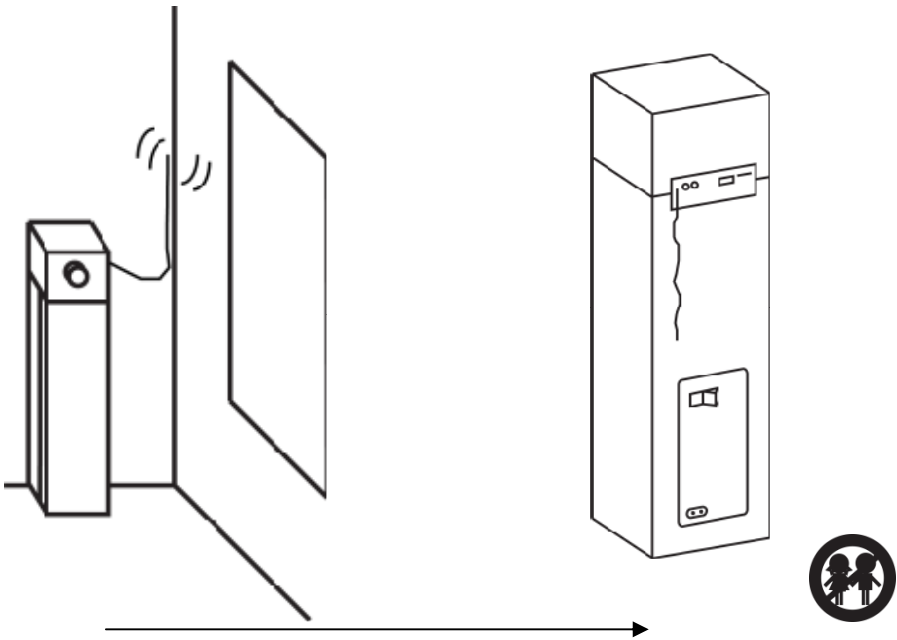

  5. Put the device on a flat, stable surface that is slightly elevated (for instance on a table) so that the base can easily be removed. Loosen the 4 screws and don't forget to hold the base, so it can't fall down.

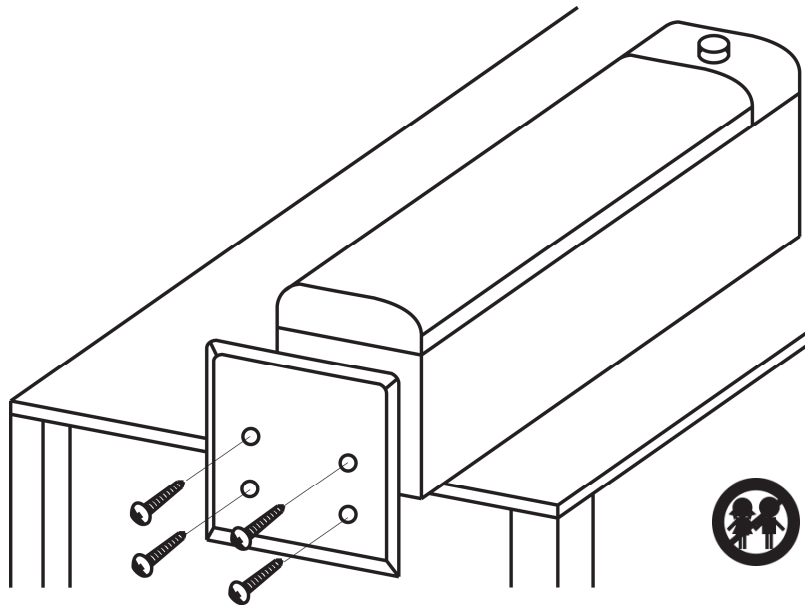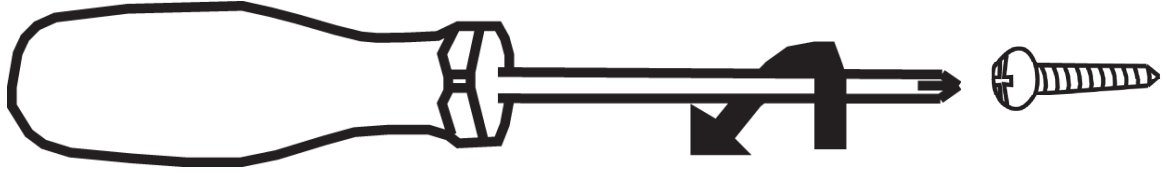


Storing and transporting the device




The operations in this chapter should not be performed by children.

Get ready: Wide sturdy tape * and the packaging material as saved according to the unpacking instructions.

 
1. Insert the foam and lower the device into the box.

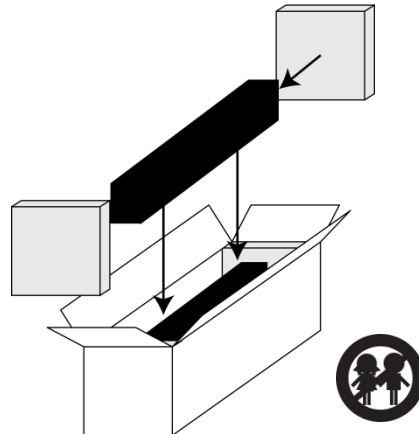

 2. Close the box shut.

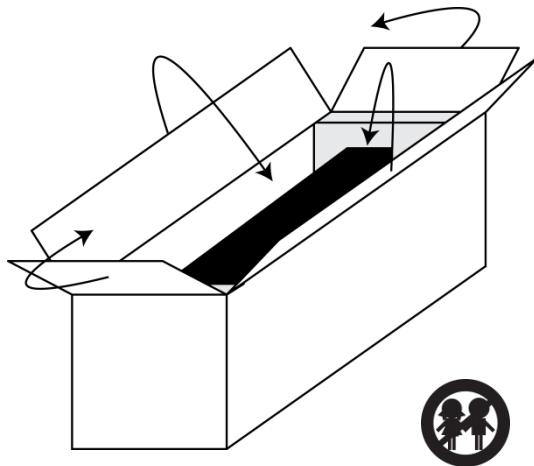

 3. Tape the box shut.

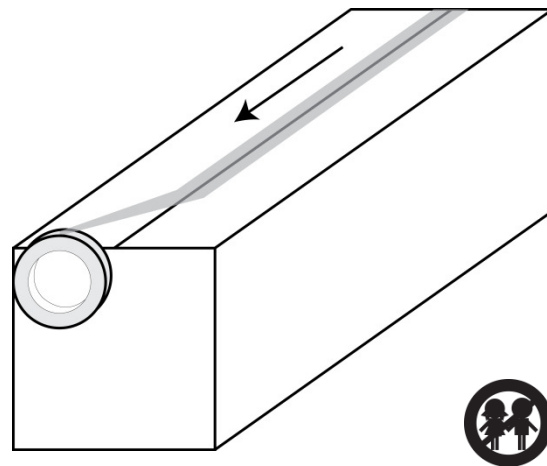

The device is now ready to be stored or transported. Try to limit the number of shocks as much as possible during transport.

 
Legend:

* = not included


Reorder accessories

Spare parts and accessories for this product can be ordered via your dealer or <http://lencosupport.zendesk.com>. The warranty terms on reordered accessories differ from our general warranty terms. Always inform about the warranty terms before buying accessories to avoid future complications.

Available accessories:

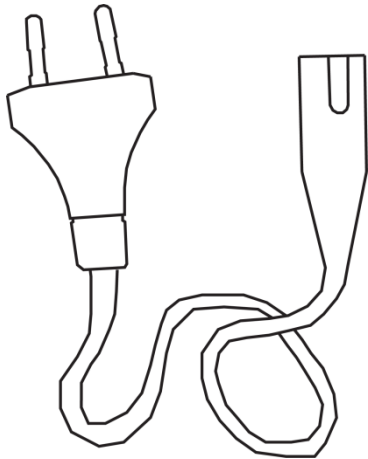

Euro plug

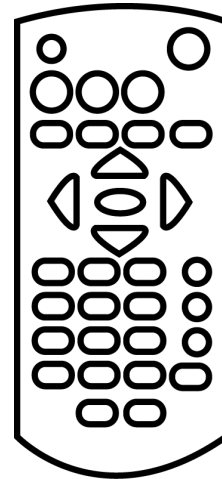 

Remote control

Glossary

Bluetooth®: Bluetooth® is an open standard for short-distance wireless connections between devices.

Open standard: an open norm (or standard) that is publicly available.

LED: The word *led* was originally an acronym for *light-emitting diode*. A led is an electronic component, a semiconductor that emits light when electric power is sent through in the forward direction.

Sensor: Machines use sensors to observe the surroundings or gather information to control processes.

LCD: A liquid crystal display is a flat screen with low energy consumption.

USB stick: A USB stick (also: memory stick or plugin memory) is an external storage media that can be connected to a computer by means of a USB port. A USB stick uses flash memory to store information.

USB port: USB (*Universal Serial Bus*) is a standard for connecting peripherals to computers or other equipment.

Flash memory: Flash memory is a non-volatile form of external memory. This technique makes it possible to write or erase in several parts of the memory using a single programming operation. Flash memory is non-volatile memory: it retains data when power is turned off.

SD Card: A Secure Digital card (SD Card) is a memory card that is built from flash memory.

AUX in: Auxiliary in. An input on an audio device that allows connecting an external device.

Fail situation: A situation in which the device does not respond or operate as intended. For instance when buttons do not respond or smoke starts coming out of the device.

Mono: Mono means *one* and in sound engineering the term is used to indicate that all sound is distributed and output through a single channel.

Stereo: Stereo generally refers to two-channel sound recording and/or output: a recording that contains a simultaneous signal for two speakers, as opposed to monaural sound which one contains one channel. Humans naturally hear stereo sound. With two ears humans can process two different signals (left and right) and because of this, the human brain can get a certain degree of spaciousness in the sound perception. This is stereo.

Input source: These are the various connectivity options that the device offers for external equipment.

Troubleshooting

Problem	Solution
No power.	Check if the plug is inserted firmly into the outlet.
	Put the main switch on the back of the device in the on position.
	Make sure the power outlet is powered.
	To save energy, during playback, if not any operation in about 4 hours, the unit will switch to standby mode automatically.
No sound or poor sound.	Adjust the volume or disable the mute function.
	Check the input source.
The device does not respond or responds poorly.	Remove the plug from the outlet for at least 5 minutes.
Settings or selections are suddenly cancelled.	There is a time limit for settings and selections. Repeat the steps.
Radio stations cannot be received or can barely be heard because of hiss.	Fully extend the wire antenna.
	Re-position the wire antenna.
	Increase the distance between the device and other equipment.
Bluetooth® music stutters.	Place the Bluetooth® device closer to the radio.
The remote control does not work.	Check the input source.
	Keep the remote control closer to the device.
	Check the batteries and replace if needed.
	Aim the remote control directly on the remote control sensor on the front of the device.
The SD/USB media does not play.	The format of the files is not supported.
	The SD card or the USB device is not compatible with the device, try using a different SD card or USB device.

Specifications

Power Supply	AC ~ 110-240V, 50/60Hz	
Power Connection	1,5M euro plug	
Power Consumption	Standby	<1W
	During use	85W
Operation	Temperature	-10~+35°C
	Humidity	10%~75%
During storage	Temperature	-10~+50°C
	Humidity	5%~90%
Output	Output Speaker (max) + Subwoofer	90 Watt (Max)
	Frequency Response	35Hz ~ 16KHz
	Adjustable Bass + Treble	Yes
	FM band	87.5MHz - 108MHz
Dimensions, WxDxH	Speaker Tower (incl. base)	28,4 x 29,5 x 90,7 cm
	Remote Control	11 x 5 x 2 cm
Weight	Main device (incl. base)	7,5 KG
	Remote Control	40 Gram (ex. battery)
Display	Color Information Display	Light Blue
Remote Control		5M (max)
	Operating Range	Angle of 30°
	Battery	2x AAA 1,5V
Connections	USB slot	USB 2.0, 5V, 500mA
		Tot 32GB
		FAT16/32
		999 files, 99 folders
	External Audio Input	Line in RCA (cinch)
	SD Memory Card	Up to 32GB
999 Files, 99 folders		
FAT16/32		
Bluetooth®		A2DP / AVRCP
Others	Sleep timer	Yes
	Repeat function	Yes (SD & USB)
	Random function	Yes (SD & USB)
Materials	Housing	Wood
	Control Panel	Plastic
	Base	Plastic

Product specifications may change without prior notice.

Safety Precautions

Explanation of the symbols:



This symbol indicates that there are important operating maintenance instructions in the user manual accompanying the device



This symbol indicates that dangerous voltage is present within this device, constituting a risk of electronic shock or personal injury



This symbol indicates that the action in question may not be performed by a child because there is a risk of personal injury.

CAREFULLY READ THE FOLLOWING SAFETY PRECAUTIONS BEFORE USE.



WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN THIS DEVICE



WARNING: DO REMOVE ANY SCREWS OR OTHER COMPONENTS OF THE DEVICE TO PREVENT THE RISK OF ELECTRIC SHOCK.

- Install and use the device only as described in the user manual.
- Never remove the housing of this device.
- Never place this device on top of other devices.
- Use only the specified accessories and attachments specified by the manufacturer.
- This device must be used in combination with a power supply as specified in the specification table. If you are not sure of the type of power supply used in your home, consult your power company.
- Do not use loose or damaged cords and/or plugs.
- This device has a Class II construction. Devices with a Class II construction can be connected to an unearthed power outlet.
- The power outlet must be located close the device and must be easily accessible.
- Make sure that power outlets or extension cables are not over overloaded. Overloading can cause short-circuits or fire.
- Always pull the plug when removing it from the power outlet.
- Do not pull the power cord. This may cause a short-circuit.
- If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the power outlet immediately.
- Disconnect the plug from the power outlet during lightning storms.
- Disconnect the plug from the outlet when the device will not be used for a long time.
- Do not step on the power cord and don't pinch the power cord.

- Do not place heavy objects on the power cord or any other cables as this may damage the cord or cables.
- Keep the device away from children! When they play with the power cord, they can seriously injure themselves.
- Keep the power cable away from rodents and rabbits. These animals like biting in cables.
- Make sure all ventilation openings are clear at all times, do not cover or block them.
- Leave 5 cm (2") free space around the device.
- Always make sure the device is well ventilated.
- Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products.
- Avoid using the device near strong magnetic fields.
- Do not use this device when condensation may occur.
- Do not use this device near water or other liquids.
- Do not use this device in a damp room.
- Do not use this device near a swimming pool.
- Do not place objects that can create danger, such as a candle or a glass of water, on top of the device.
- The display is made of plastic and might break when it's damaged. Beware of sharp plastic splinters when the screen breaks to avoid injury.
- Should the unit become wet, immediately remove the plug from the power outlet and let the appliance fry for 72 hours before trying to use it again.
- Remove the batteries from the device and/or remote control if they will not be used for a long time.
- This device and the supplied accessories contain sensitive components. Never drop them, put them in a microwave, burn them or paint them.
- Do not bite or suck on the device and/or supplied accessories.
- Do not insert the device or the supplied accessories in your ears, mouth or other body orifices.
- This device and/or accessories contain small parts that may lead to a choking hazard. Therefore, keep it away from children.
- When connecting the device, if a connector does not seem to fit, do not force it.
- Lenco recommends using A-brand batteries.
- Never expose the batteries to direct sunlight or extreme heat.



WARNING: Prolonged exposure to loud sounds may lead to temporary or permanent hearing loss.



WARNING: Do not use a USB extension cable to connect a USB device. The use of a USB extension cable can cause malfunction or loss of data.

Notice, statements and information

Lenco is not liable for printing errors in the manual.

Service and support

For information: www.lenco.com

For support: <http://lencosupport.zendesk.com>

Lenco helpdesk:

Germany	0900-1520530	(Local charges)
The Netherlands	0900-23553626	(Local charges + 1ct p/min)
Belgium	02-6200115	(Local charges)
France	0333-81484280	(Local charges)
France (email)	sav@logydis.com	

The helpdesk is accessible from Monday till Friday from 9 AM till 6 PM.

When contacting Lenco, you will always be asked for the model and serial number of your product. The serial number can be found on the back of the device. Please write down the serial number below:

Model: BTT-2

Serial number: _____

Lenco offers service and warranty in accordance to European law, which means that in case of repairs (both during and after the warranty period) you should contact your local dealer.

Important note: It is not possible to send products that need repairs to Lenco directly.

Important note:

If this unit is opened or accessed by a non-official service center in any way, the warranty expires.

This device is not suitable for professional use. In case of professional use, all warranty obligations of the manufacturer will be voided.

Do not distribute copyrighted material

Do not distribute copyrighted material without the permission of the owners. By doing this you risk violation of copyright laws. The manufacturer is not liable for any legal issues caused by illegal use of copyrighted material by the user.

Trademarks

Lenco and the Lenco logo are trademarks of STL Group BV

Pair & Play™ is a trademark of STL Group BV



logo is a trademark of STL Group BV

Bluetooth® and the Bluetooth® logo are trademarks of Bluetooth SIG, Inc.

 
Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent-, trademark- and/or other intellectual property laws. Such content and services are solely provided for your personal and non-commercial use. You may not use any content or services in a manner that has not been authorized by the content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, or create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

“THIRD PARTY CONTENT AND SERVICES ARE PROVIDED ‘AS IS.’ LENCO DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, NEITHER EXPRESSLY NOR IMPLIED, FOR ANY PURPOSE. LENCO EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. LENCO DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE. UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL LENCO BE LIABLE. NEITHER IN CONTRACT, NOR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.”

Third party services may be terminated or interrupted at any time, and Lenco makes no representation or warranty that any content or service will remain available for any period. Content and services are transmitted by third parties by means of networks and transmission facilities over which Lenco has no control. Without limiting the generality of this disclaimer, Lenco expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device. Lenco is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

Declaration of Conformity

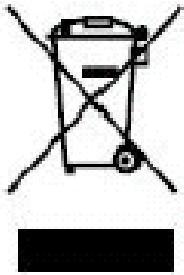

This symbol indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe. To ensure the correct waste treatment of the product and battery, please dispose them in accordance to any applicable local laws of requirement for disposal of electrical equipment or batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste (Waste Electrical and Electronic Equipment Directive).



Products with the CE marking comply with the EMC Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community.

Hereby, STL Group BV, Ankerkade 20 NL 5928 PL Venlo, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The declaration of conformity may be consulted at

<https://lencosupport.zendesk.com/forums/22413161-CE-Documents>

This product operates at 2400 - 2483.5 MHz and is designated only to be used inside a normal household environment. This product is suited for this purpose within all EU countries.

CE 0700

®All rights reserved

2012 STL Group B.V. all rights reserved, Lenco is a trademark of STL Group B.V. STL Group B.V. is not responsible for any printing errors in this manual. Products of other manufacturers are only mentioned for information. This does not mean that these products are recommended by STL Group B.V.. STL Group B.V. accepts no liability for the reliability or compatibility of these products.