

# NovoConnect™ B360

# **Wireless Presentation & Collaboration System**



User Manual Version 0.97


# **Table of Contents**

 
1. GETTING STARTED	4
1.1 Package Contents	5
2. WIFI SETUP	9
2.1 Hotspot Mode	
3. MAKING A PRESENTATION	11
3.1 Presenting with Windows and Mac PC  3.1.1 Step 1: Presentation Software Configuration	11
3.1.4 Step 4: Presentation Management  3.1.4.1 Role Assignment  3.1.4.2 Role Change, Screen Preview, and 4-way Split Screen.  3.1.4.3 Pause, Resume, and Disconnect  3.1.4.4 Reset	14 15 16
3.2 Presenting with iOS Tablet (iPad)  3.2.1 Step 1: Presentation Software Configuration  3.2.2 Step 2: Connect to your B360 device  3.2.3 Step 3: Making a Presentation	182021232527
3.2.4.2 Role Change, Screen Preview, and 4-way Split Screen	30

3.3 Presenting with Android Tablet	35
3.3.1 Step 1: Presentation Software Configuration	35
3.3.2 Step 2: Connect to your B360 device	37
3.3.3 Step 3: Make a Presentation	38
3.3.3.1 Presenting an Image	39
3.3.3.2 Presenting a Document (Local Storage)	40
3.3.3.3 Presenting a Document (Dropbox)	42
3.3.3.4 Presenting with a Browser	44
3.3.3.4 Annotation	45
3.3.4 Step 4: Presentation Management	46
3.3.3.1 Role Assignment	47
3.3.3.2 Role Change, Screen Preview, and 4-way Split Screen	48
3.3.3.3 Pause, Resume, and Disconnect	
3.3.3.4 Reset	51
3.4 Presenting with the NovoConnect B360 Device	52
4. B360 CONFIGURATION	55
5. SPECIFICATIONS	57
6. TROUBLESHOOTING	58
7. SAFETY INFORMATION	60
8. COPYRIGHT INFORMATION	61
9. INDEX	62

# 1. Getting Started


# 1.1 Package Contents

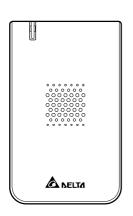





 
(b) Micro-HDMI-to-HDMI cable



(c) Micro-USB-to-USB power cable




 (d) USB power adapter



(e) NovoConnect Mount

# 1.2 Connecting your NovoConnect B360 Device

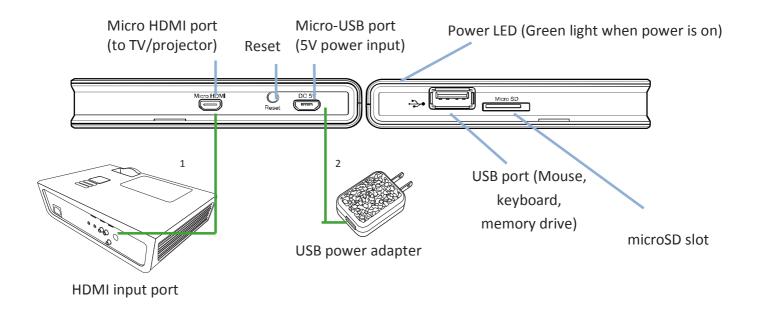

### Steps to connect your NovoConnect B360 Device

- 1. <u>Video/Audio connection</u>: Connect the Micro HDMI port to the TV/projector's HDMI input port using the Micro-HDMI-to-HDMI cable (item (b) in "Package Contents.")
- 2. <u>Power</u>: Connect the Micro-USB port to the power source using the Micro-USB-to-USB power cable and the USB power adapter (items (c) and (d) in "Package Contents.")

Note: In this manual, your NovoConnect B360 will also be referred to as B360 for short.

Note: You may connect an optional USB mouse, keyboard, or memory drive to the USB port.

Note: The microSD slot supports microSD cards up to 32 GB and supports FAT32 and NTFS file types.

#### The NovoConnect Home Screen



The NovoConnect B360 device will power up with the above display after steps 1 and 2 in last section. This display is referred to as the "NovoConnect home screen" or just the "home screen" in the document. The display is generated by the presentation management software, in the B360 device, which is also known as the *remote viewer*.

# A Presentation Setup

The lower right corner of the home screen shows the name of the presentation group, IP address, four-digit PIN, WiFi SSID, and the WiFi Mode Setting. Your actual presentation setup information is generated by your B360 and may differ from the information shown in the figure on this page.

# B Software Download

The lower left corner of the NovoConnect home screen shows the location where you can download the presentation software required to make a wireless presentation on Windows PC, Mac PC, iOS tablet, or Android tablet.

You can also find the presentation software on the Delta official website: http://www.deltaww.com/EduSolution

# 1.3 Software Download and installation

The NovoConnect B360 device supports up to 64 concurrent participants across a mix of PC and Tablet devices. Each participant's device will need to set up a connection with the presentation application, the *remote viewer*, residing on the B360 to make a presentation. To set up the connection and make a presentation, you will need to download and install the following application software:

On Windows PC - <u>NovoConnect Desktop Streamer</u>
On Mac PC - <u>NovoConnect Desktop Streamer</u>
On iOS tablet – <u>NovoPresenter</u>
On Android tablet – <u>NovoPresenter</u>

Note: Throughout the document, these four presentation application software and the B360 *Remote Viewer* software are highlighted in *Italics* font.

### Downloading the Presentation Software for Windows PC and Mac PC

Enable Wi-Fi on the computer. Click the network icon icon , , or . Select the B360 SSID on the NovoConnect home screen (for example, NVC\_DC9AB) and click Connect or Join. Ignore all security warnings.

Launch the web browser of your choice on your PC and enter the URL displayed on the NovoConnect home screen. In the example display screen shown above, you would enter <a href="http://192.168.43.1:8080">http://192.168.43.1:8080</a> into the address line of the browser. The following screen will be displayed on your browser.



Select the operating system type from the drop down menu and then click the **DOWNLOAD** button to download the NovoConnect *Desktop Streamer* software to your PC.

### **Installing the Application Software**

Run either <code>Desktop\_Streamer\_Setup\_Windows.exe</code> (for MS Windows based computers) or <code>Desktop\_Streamer\_Setup\_Mac.exe</code> (for Macintosh computers) by double clicking the downloaded file on your computer. Follow installation instructions on the PC to complete the installation. Allow all security permissions for <code>NovoConnect Desktop Streamer</code> and all of its subcomponents.

The computer is now ready to make a wireless presentation with your B360.

**Downloading and Installing the Presentation Software for Android and iOS Tablet Devices**On iOS tablets, the iOS version of the *NovoPresenter* is required. You can download and install it from the Apple App Store.

On Android tablets, the Android version of the *NovoPresenter* is required. You can download and install it from the Google Playstore.

Once you have downloaded and installed the presentation software, you are ready to make a wireless presentation from your tablet device.

# 2. WiFi Setup

Depending on where your presentation content is located, you may select

- A) Client Mode for content residing in a networked environment or the Internet cloud
- B) Hotspot mode for content residing in your PC or Tablet
- C) Either for content residing in your microSD card

The NovoConnect B360 defaults to start up in WiFi Hotspot mode, which is the shortest path to make a wireless presentation without needing a WiFi AP. If this is your preferred mode, you may skip to next chapter for steps to making a presentation.

If you would like to make your presentation in a WiFi AP networked environment, please refer to the "Client Mode" section in this chapter.

# 2.1 Hotspot Mode

Right out of the box, NovoConnect's WiFi is set to function as a WiFi Hotspot and will stay in this configuration until you alter it. The default SSID for the WiFi Hotspot is "NVC\_XXXXX", where "XXXXXX" is a machine generated string of characters and numbers. A mouse is required for the following steps.

If you alter your settings and then choose to revert to Hotspot mode, on the NovoConnect home screen, select **WiFi-> Hotspot Mode->Apply**.

For a PC to connect to the B360 Hotspot, click the network icon or on task bar. Select the SSID of the NovoConnect B360 device shown on the home screen (for example, NVC\_DC9AB) and click **Connect**.

For a Mac to connect to the B360 Hotspot, click the network icon. Select the SSID of the NovoConnect B360 device shown on the home screen (for example, NVC\_DC9AB) and click **Join**. Ignore any security warnings.

For a tablet to connect to the B360 Hotspot, enable WiFi and go to the WiFi AP list. Select the SSID of the NovoConnect B360 device shown on the home screen (for example, NVC\_DC9AB).

<u>Note</u>: In Hotspot mode operation, all participating presentation devices must be connected to the same NovoConnect B360 WiFi HotSpot.

# 2.2 Client Mode

In this mode, the B360 device functions as a WiFi client and a WiFi AP is needed for network connectivity. A mouse is required for the following steps.

In the home screen of the NovoConnect, first select **WiFi->Normal Mode-> Config->Wireless & Networks-> Wi-Fi (ON)**, and then select the desired WiFi AP SSID. Enter password if prompted.

For a PC to connect to the Wi-Fi AP, click the network icon or Select the desired WiFi AP SSID. Enter password if prompted.

For a Mac to connect to the Wi-Fi AP, click the network icon . Select the desired WiFi AP SSID and click **Join**. Enter password if prompted.

For a tablet to connect to the Wi-Fi AP, enable WiFi and go to the WiFi AP list. Select the desired WiFi AP SSID. Enter password if prompted.

# 3. Making a Presentation


The NovoConnect B360 device supports up to 64 concurrent participants across a mix of PC and Tablet devices. To make a presentation, each participant's device will need to connect to the B360 and join the presentation group hosted by the B360. There are three key features which help facilitate smooth collaboration and coordination of presentations using the NovoConnect:

- 1) A participant list is included with the individuals' roles indicated with clear graphical representation
- 2) A specific capability is defined for each role
- 3) Split screen and annotation tool for simultaneous operation of multiple participants.

# 3.1 Presenting with Windows and Mac PC

### **Launch Presentation Application**

Launch the *NovoConnect Desktop Streamer* Application by double clicking the licon. The *NovoConnect Desktop Streamer* will be launched (pictured in the image below).

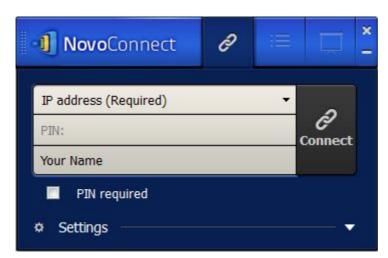

To make a presentation, you must follow the below steps:

Step 1: Configure the presentation software

Step 2: Connect to your B360 device

Step 3: Make a Presentation

Step 4: Manage the presentation


# 3.1.1 Step 1: Presentation Software Configuration

Click the connection tab and access the configuration options below.




#### Description

Configure the NovoConnect Desktop Streamer software.

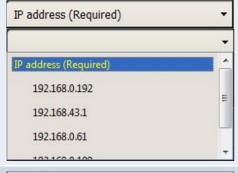

 Manually enter the IP address shown on the NovoConnect home screen, or select an IP address entry from the drop down menu that matches the IP address shown on the NovoConnect home screen.




(Optional) Manually enter a name for this computer to be viewed in the presentation group among other participants. Example: Kevin.



If PIN is required for a presentation group, check the "PIN required" box and enter the four-digit PIN shown on the home screen.



Click to expand the Settings tab to access more detailed settings.

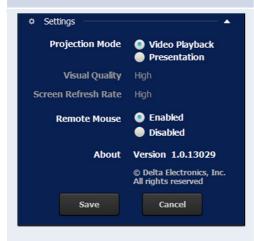

### **Projection mode:**

Video Playback: Select this option for a higher frame rate screen mirroring and to turn on audio transmission. Presentation: Select this option for document presentation or browser content presentation. The audio will be automatically set to off. Two additional drop-down configurations, Visual Quality and Screen Refresh Rate, will be enabled.

#### **Visual Quality:**

*High*: This setting yields the best visual quality but has the longest latency.

*Normal*: This setting is the middle ground between *High* and *Low*.

Low: This setting yields the lower visual quality but has the shortest latency.

#### **Screen Refresh Rate:**

*High*: This setting yields the best visual quality but has the longest latency.

Normal: This setting is the middle ground between High and Low.

Low: This setting yields the lower visual quality but has the shortest latency.

#### **Remote Mouse:**

Supports mouse event back-channeled from the B360 device to your desktop.


### About:

Software version number of your NovoConnect Desktop Streamer.

**Save** and **Cancel** buttons: You can save your configuration for future presentation.

## 3.1.2 Step 2: Connect to your B360 device

Once you are done configuring your NovoConnect Desktop Streamer, you are ready to start or join a presentation group with your B360.

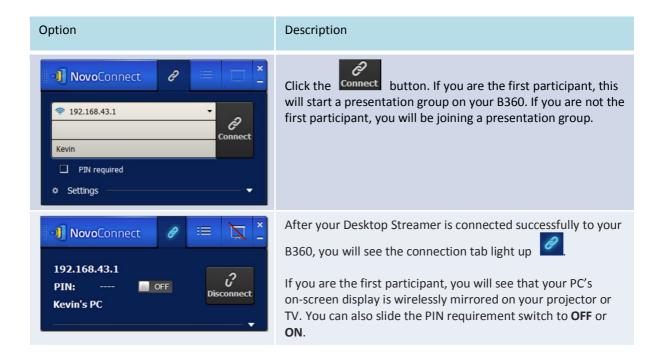

Please note that your PC screen resolutions may be changed to match projector resolution, and when disconnect from the NovoConnect device, the original screen resolution will be restored. This takes place for all PCs in the same presentation group.

# 3.1.3 Step 3: Make a Presentation

Once you have started/joined a presentation group you can make a presentation with the contents stored on your PC, local network, or Internet. Your desktop screen will be mirrored to the B360 display regardless the applications you are running on your PC.

Sometimes you may want to write, highlight, mark, video-record, or cut-and-paste portions of your presentation materials directly on the desktop screen. Delta provides a free simple-to-use tool for all of these functions – *NovoScreenote*. You can download the Windows PC or Mac PC versions of *NovoScreenote* from <a href="http://www.deltaww.com/EduSolution">http://www.deltaww.com/EduSolution</a>.

## 3.1.4 Step 4: Presentation Management


## 3.1.4.1 Role Assignment

There are three roles in a presentation group, namely the *host*, the *presenter*, and the *participant*.

The first *participant* of the presentation is assigned the *host* role for the group. Subsequent joiners are assigned the *participant* role.


The *host* is defaulted to assume the *presenter* role until he handed over the *presenter* role to another *participant*.

To show all current participants who have joined the presentation group, click the

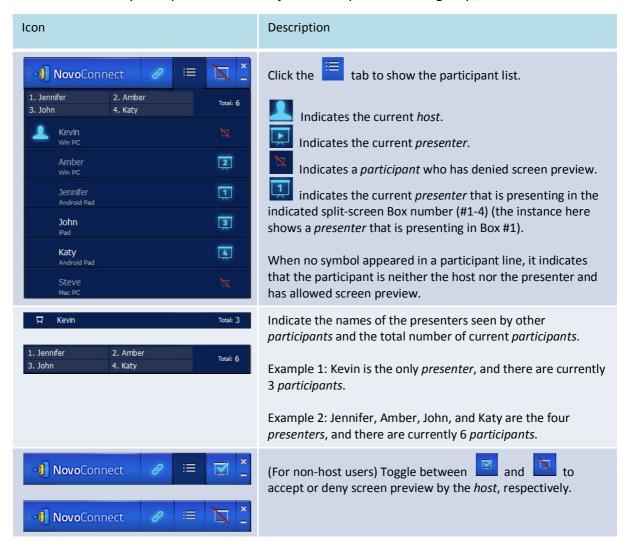



### 3.1.4.2 Role Change, Screen Preview, and 4-way Split Screen



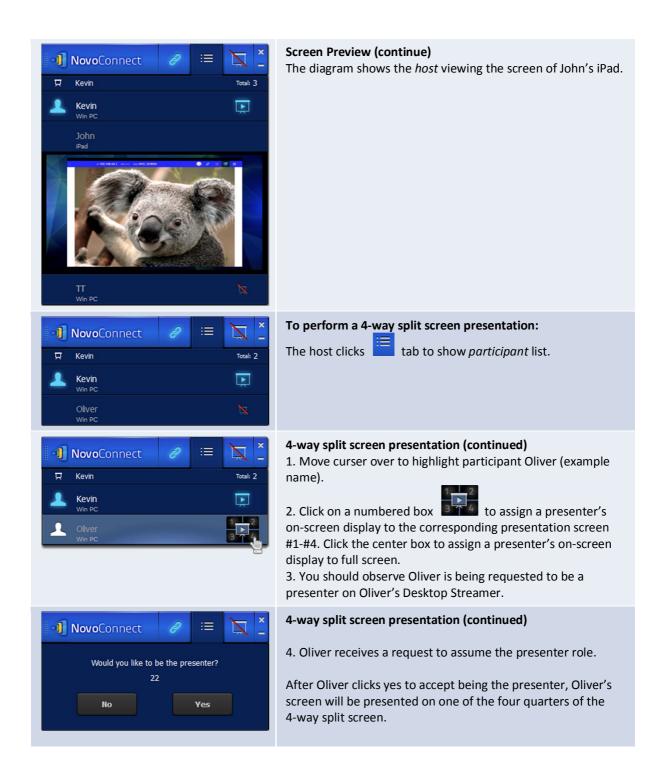


### 3.1.4.3 Pause, Resume, and Disconnect

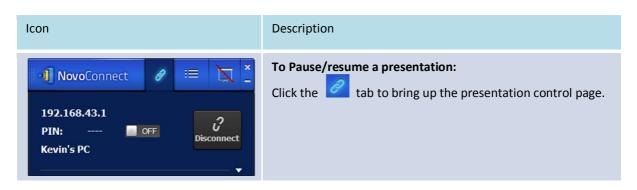

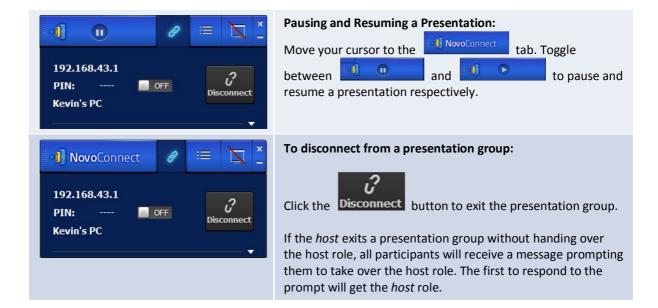


### 3.1.4.4 Reset

Occasionally you may encounter problems with the network or the computer, causing the presentation group to malfunction on your B360. One way to resolve the problem is to reset the presentation group.

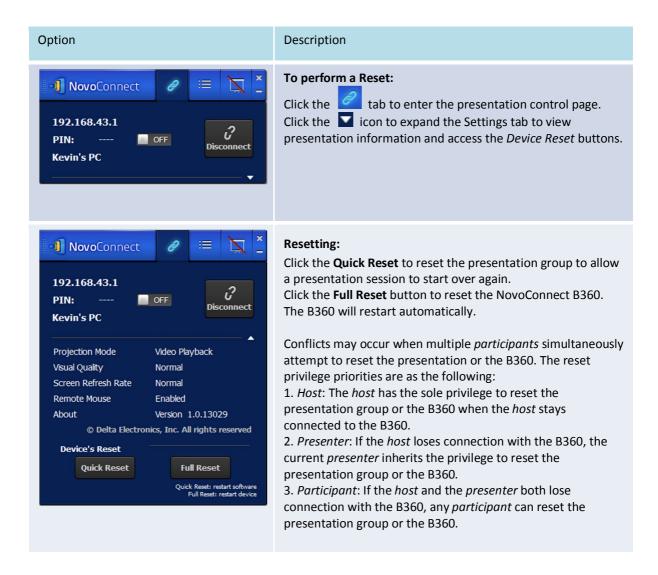

# 3.2 Presenting with iOS Tablet (iPad)

The iOS version of the *NovoPresenter* app (pictured in the image below) enables an iPad device to connect to the B360 and make a presentation.

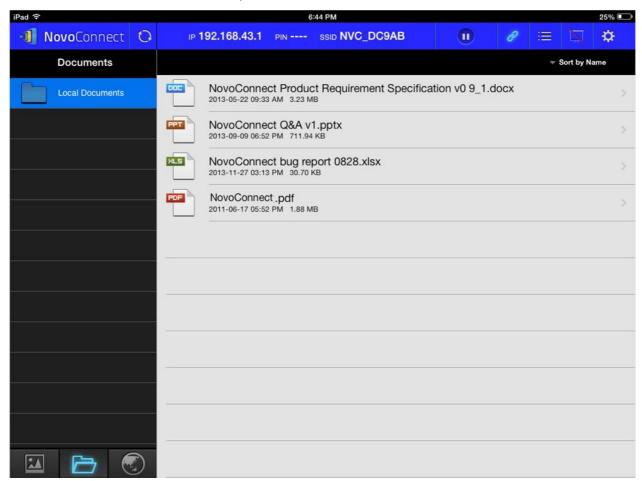

### **Launch Presentation Application**


Launch the NovoPresenter application by selecting the NovoPresenter app on your iOS tablet. The NovoPresenter app will be launched.

To make a presentation, you must follow the steps below:


- Step 1: Configure the presentation software
- Step 2: Connect to your B360 device
- Step 3: Make a presentation
- Step 4: Manage the presentation


# 3.2.1 Step 1: Presentation Software Configuration

To configure the presentation software, you first select the NovoPresenter Apps by tapping on the app on your iPad touch screen. A sample screen is provided below.

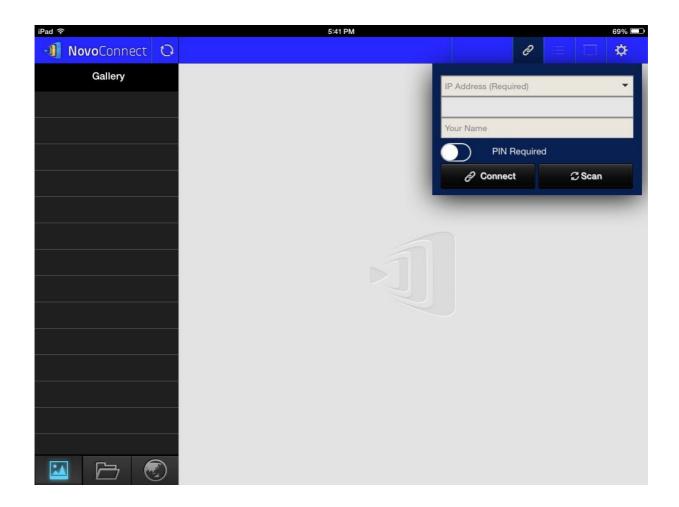


Select the and access the configuration options below.

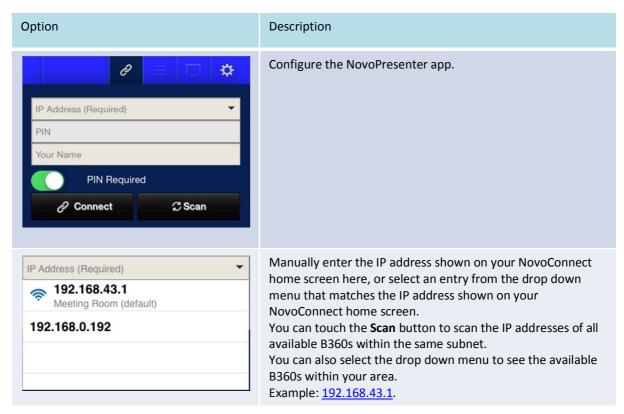


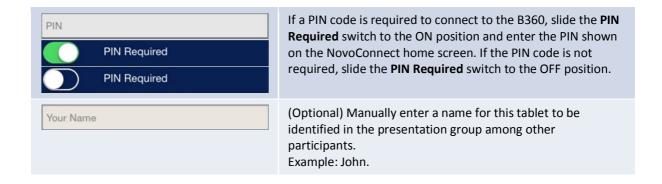

## 3.2.2 Step 2: Connect to your B360 device

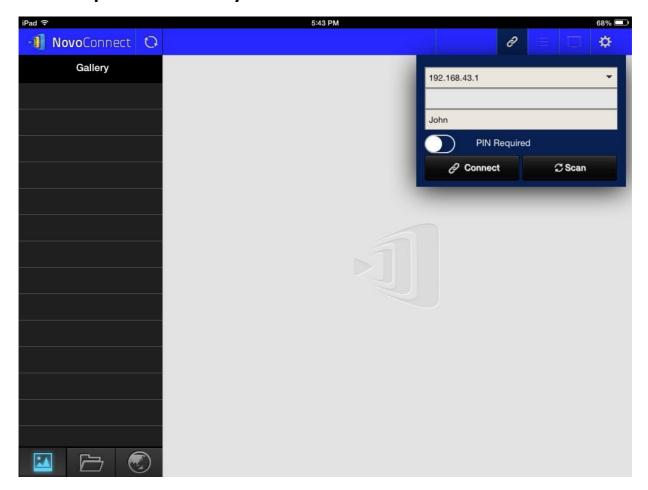

Once you are done configuring your NovoPresenter, you are ready to start or join a presentation group with the B360 box.

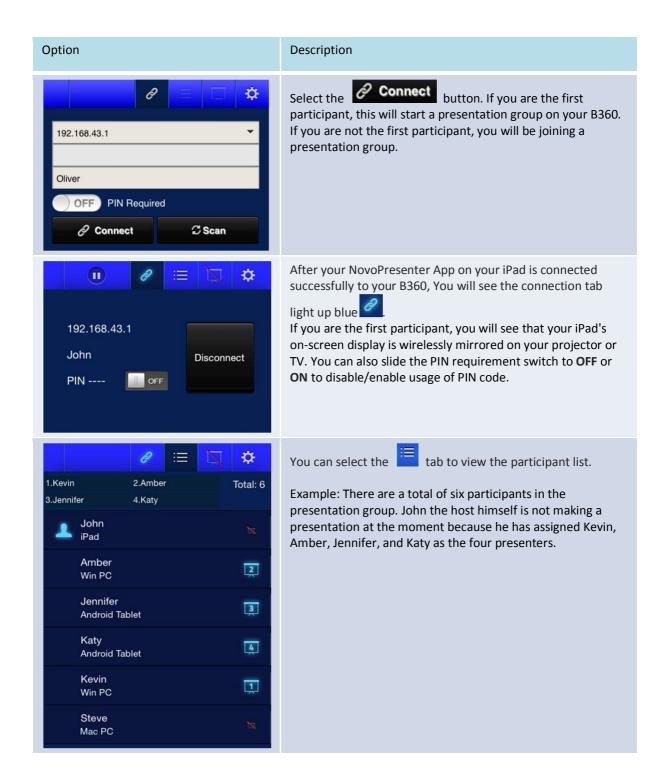



# 3.2.3 Step 3: Making a Presentation


Once you have started/joined a presentation group you can make a presentation with the contents stored on your iPad, local network, or Internet. There are three tabs on the lower left corner of the NovoPresenter's home screen:

- [22]: Touch this tab to present an image stored on your iPad.
- : Touch this tab to present a document stored on your iPad.
- Touch this tab to present a web page.


## 3.2.3.1 Presenting an Image

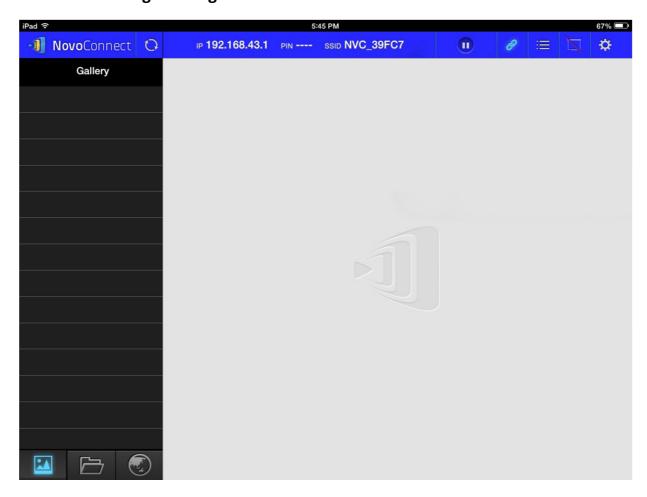

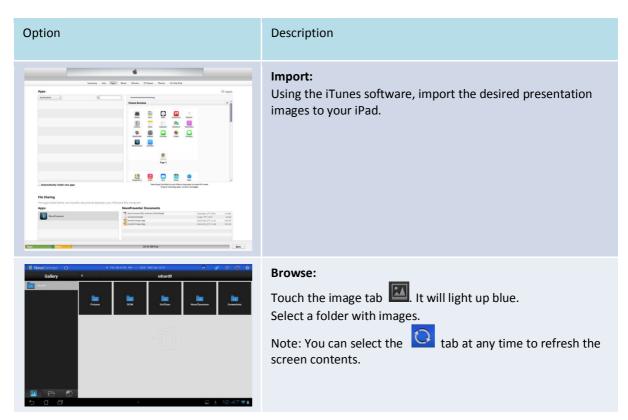

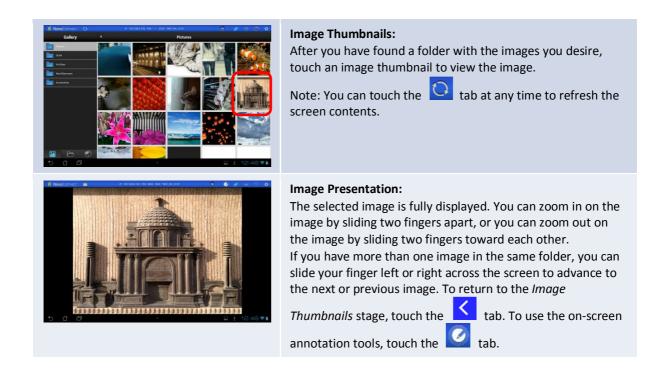

### 3.2.3.2 Presenting a Document

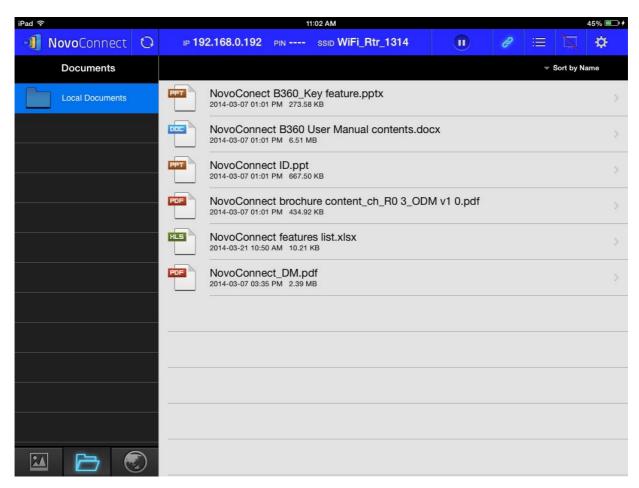


### Option

#### Description



#### Import:

Using the iTunes software, import the desired presentation documents to your iPad.

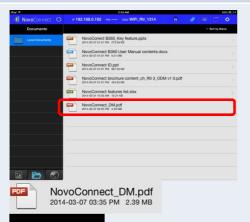

#### **Document List:**

Touch the folder tab 

It will light up blue.

The document list will display documents that are supported by NovoPresenter. Search for and touch the document of interest.

Example: Touch the document "NovoConnect\_DM.pdf". If you wish to sort the folder list with a desired order, touch the drop-down menu **Sort**, then select one of the following options:

- Sort by Name (default)
- Sort by Date
- Sort by Extension

Example: Touch the **Sort by** drop-down menu. Touch the option *Sort by Date*, then touch the

icon of the **Sort by** drop-down menu.

Note: You can touch the tab at any time to refresh the screen contents.





### **Document Presentation:**

The selected document (PDF as an example) is fully displayed. You can zoom in on the document by sliding two fingers apart, or you can zoom out on the document by sliding two fingers toward each other.

To scroll down or move to the next page, slide your finger up or drag the scroll bar down. To scroll up or move to the previous page, slide your finger down or drag the scroll bar up.

To return to the *Document List* stage, touch the To use the on-screen annotation tools, touch the

tab.

t

### 3.2.3.3 Presenting with a Browser





### WIKIPEDIA



Find Wikipedia in a language:

Deutsch • English • Español • Français • Italiano • Nederlands • Polski • Русский • Svenska

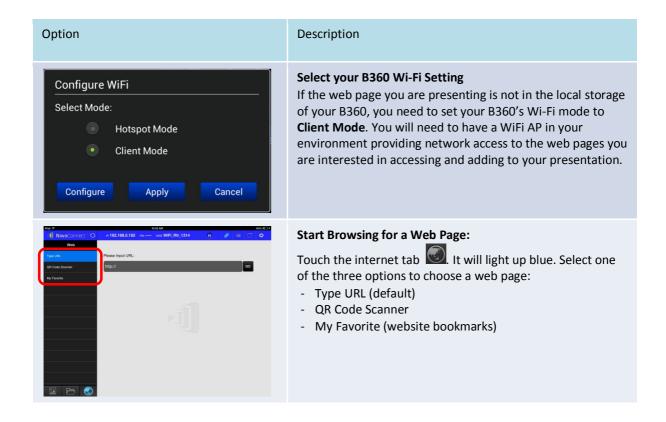

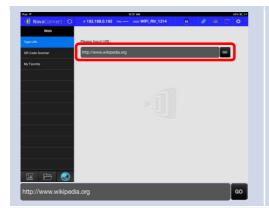

### Type URL:

Touch the Type URL tab.

Enter the web page URL and touch Go.


Example: Enter the URL www.wikipedia.org and touch Go (the pre-fix http:// can be omitted).



#### Snap a QR code:

Touch the **Snap a QR code** tab.

Aim your tablet's camera to a QR code containing web page information. NovoPresenter will detect the URL and access the corresponding web page.

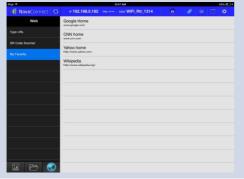

#### My Favorite:

Touch the My Favorite tab.

From the bookmark list, touch a bookmark of interest to go to its corresponding web page.

Touch and hold a bookmark for two seconds to edit or delete that bookmark.

Note: The bookmark list may initially be empty. You can add a web page to the bookmark list at any time while browsing and presenting web pages.



### Web Page Presentation:

The selected web page is fully displayed. You can zoom in on the web page by sliding two fingers apart, or you can zoom out on the web page by sliding two fingers toward each other.

To scroll down or move to the next page, slide your finger up. To scroll up or move to the previous page, slide your finger down.

To add this web page to the bookmark list, touch the



To return to the Start Browsing for a Web Page stage, touch




tab. To use the on-screen annotation tools, touch

### 3.2.3.4 Annotation

Sometimes you may want to write, highlight, or mark portions of your presentation materials directly on the tablet screen. The NovoPresenter provides an on screen annotation tool for the presenter to annotate directly on the presentation material. Enable the annotation tool




by toggling the tab on, as shown in the screen shot below.

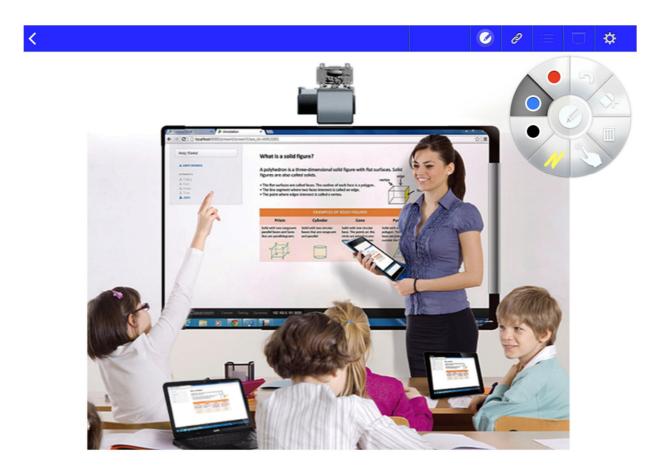



## 3.2.4 Step 4: Presentation Management

Once you are done starting/joining a presentation group, you are ready to make a presentation and collaborate with other participants. A sample screen view is provided below.

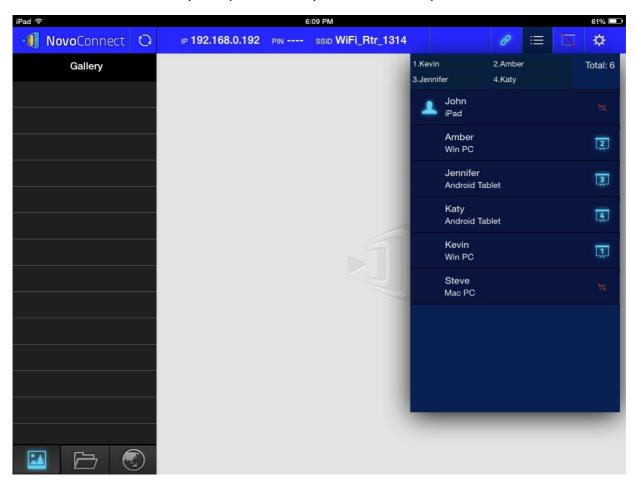


### 3.2.4.1 Role Assignment


There are three roles in a presentation group, the *host*, the *presenter*, and the *participant*. The first *participant* to start the presentation group with a B360 is assigned the *host* role. Subsequent joiners are assigned the *participant* role.

The *host* is defaulted to assume the *presenter* role until he assigns the *presenter* role to another *participant*.

To show all current participants who have joined the presentation group, please touch the tab.

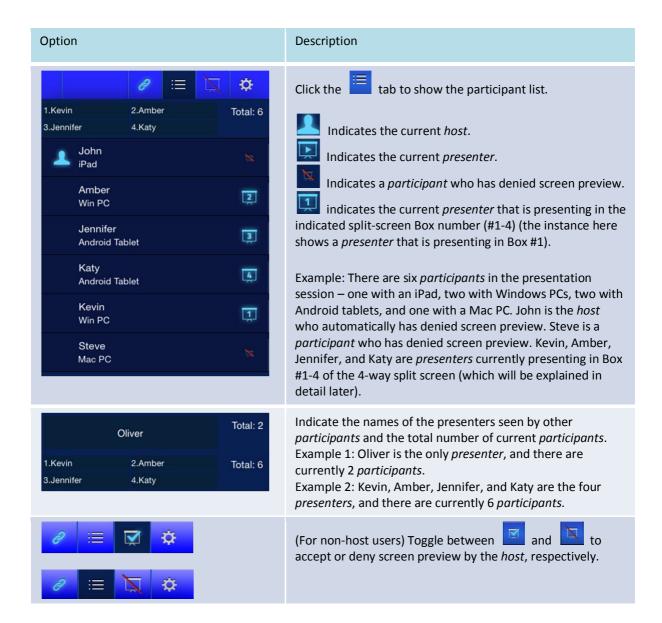

### 3.2.4.2 Role Change, Screen Preview, and 4-way Split Screen

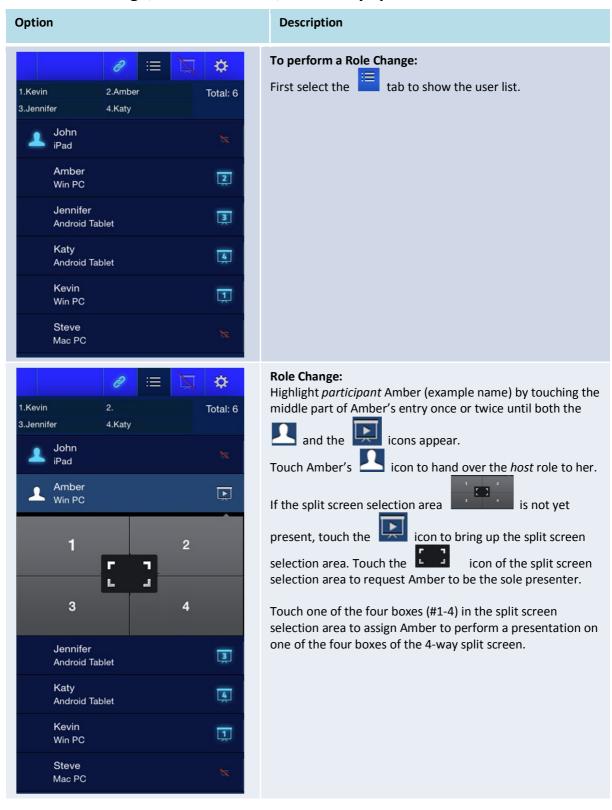




### **Role Change:**

When a *participant* is asked to be a *host*, a dialog box will appear on the participant's screen.

When a participant is asked to be a *presenter*, a dialog box will appear on the participant's screen.

The *participant* has 20+ seconds to touch the **Yes** button to become the new *host* or touch the **No** button to reject the *host* assignment.

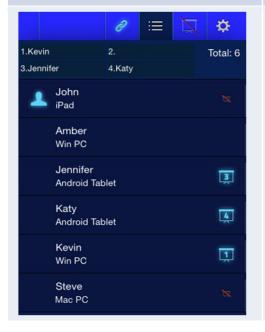

### **To perform Screen Preview:**

Touch the tab to show the participant list.

The participant Amber (example name) does not have a

icon, indicating that she allows screen preview.



### **Screen Preview:**

Highlight Amber by touching the middle part of her entry to preview her device's on-screen display once or twice until


both the and the icons appear.




### To perform a 4-way split screen presentation:

Touch the **tab** to show the participant list.


Select a *participant* to make a presentation. In this example, Amber (example name) will be selected by touching her entry.

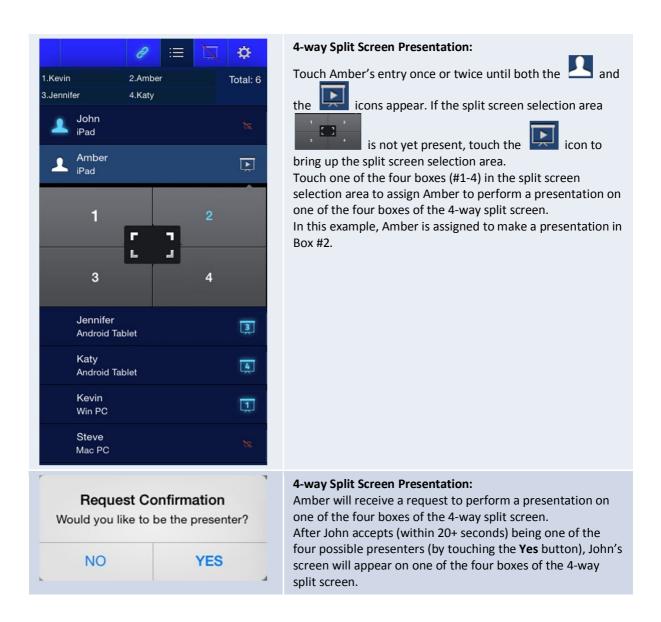

### 3.2.4.3 Pause, Resume, and Disconnect

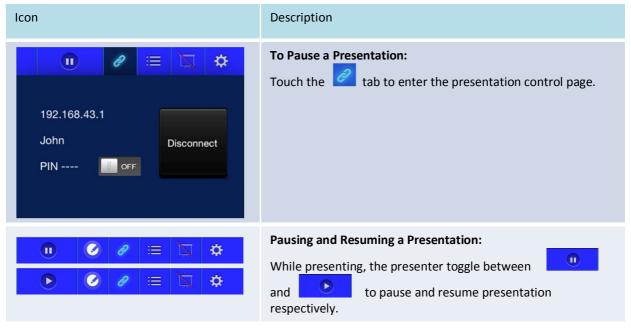


Copyright © 2014 DELTA Electronics, Inc. All rights reserved.

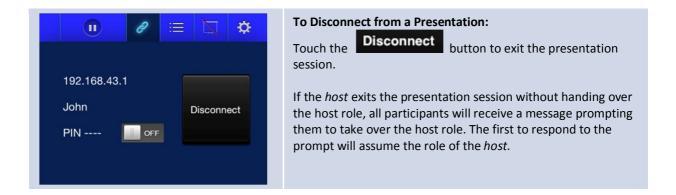

### 3.2.4.4 Reset

Occasionally you may encounter problems with the network or the computer, causing the presentation group to malfunction on your B360. One way to resolve this problem is to reset the presentation group.

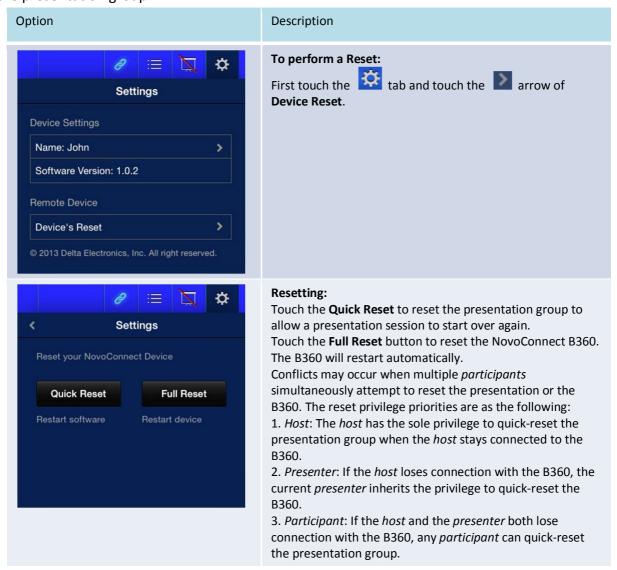

# 3.3 Presenting with Android Tablet

The Android version of the *NovoPresenter* app (pictured in the image below) enables an Android tablet device to connect to the B360 and make a presentation.



## **Launch Presentation Application**


Launch the NovoPresenter application by selecting the NovoPresenter application on your Android tablet. The NovoPresenter application by selecting the Nov

To make a presentation, you must follow the steps below:


- Step 1: Configure the presentation software
- Step 2: Connect to your B360 device
- Step 3: Make a presentation
- Step 4: Manage the presentation

# **3.3.1 Step 1: Presentation Software Configuration**


To configure the presentation software, you first select the NovoPresenter Apps by tapping on the apps on your Android touch screen. A sample screen is provided below.

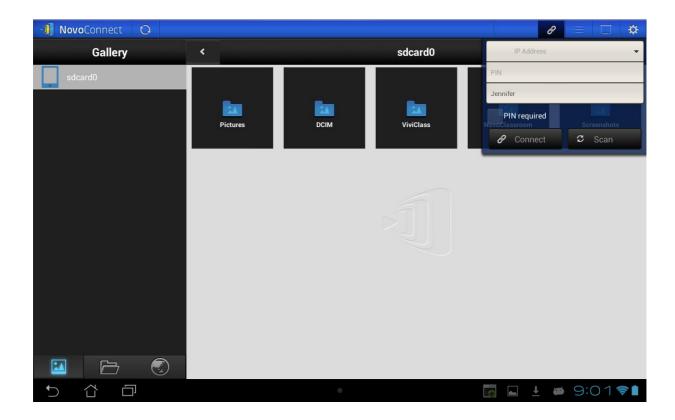

Touch the and access the configuration options below.

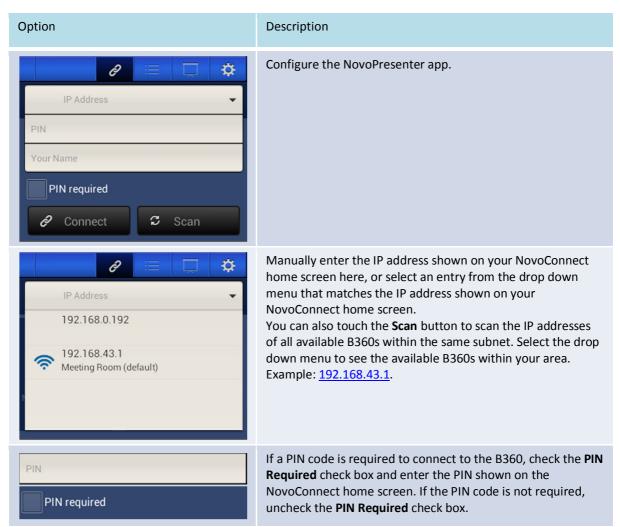


 Copyright © 2014 DELTA Electronics, Inc. All rights reserved.




## 3.3.2 Step 2: Connect to your B360 device

Once you are done configuring your NovoPresenter, you are ready to start or join a presentation group with the B360 box.

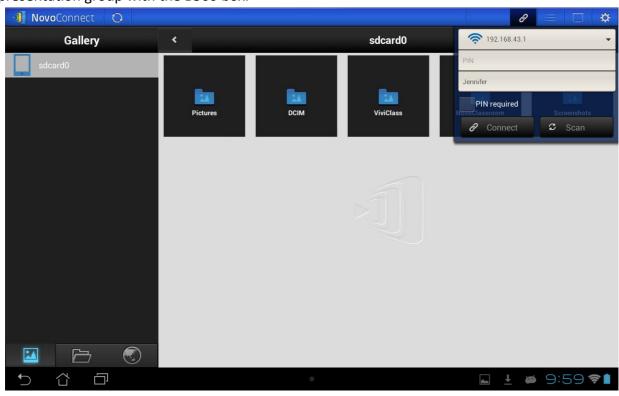



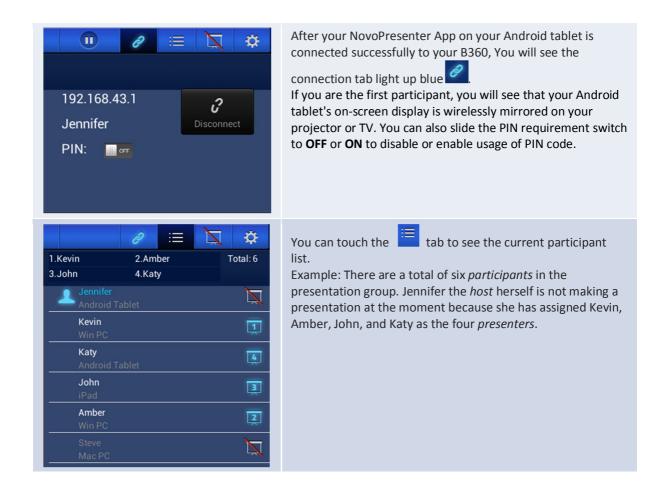



### 3.3.3 Step 3: Make a Presentation


Once you have started/joined a presentation group you can make a presentation with the contents stored on your tablet, local network, or the Internet. There are three tabs on the lower left corner of the NovoPresenter's home screen:

- Each this tab to present an image stored on your tablet.
- Touch this tab for presenting a document stored on your iPad.
- : Touch this tab for presenting a web page.


### 3.3.3.1 Presenting an Image

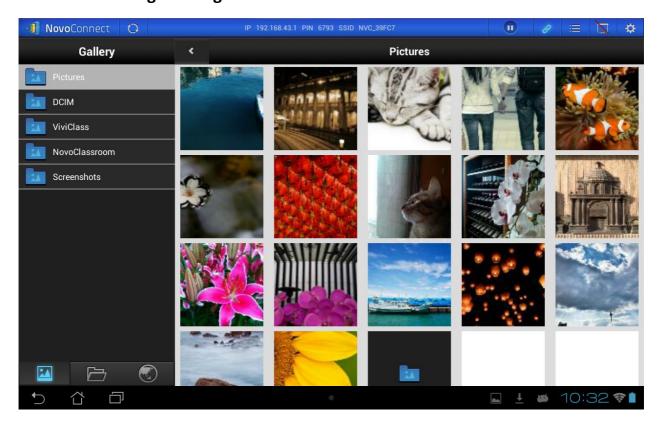

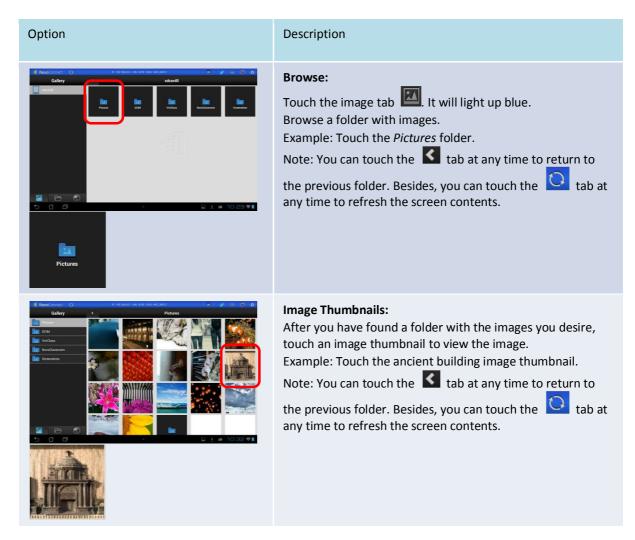

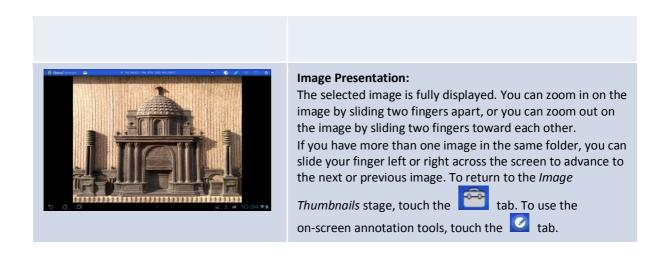

### 3.3.3.2 Presenting a Document (Local Storage)

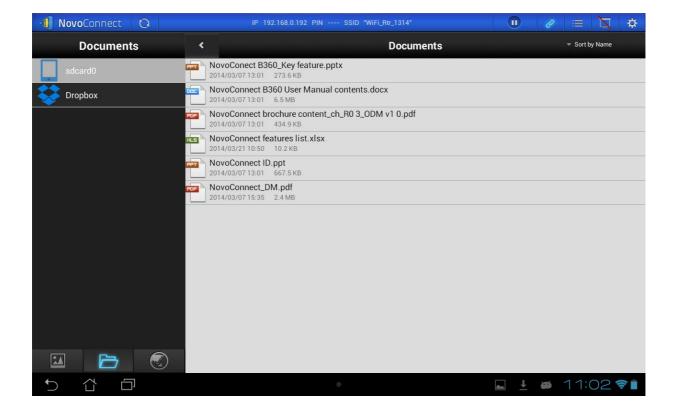

#### Option

#### Description



#### **Browse:**

Touch the folder tab . It will light up blue.


Touch the device) and browse a folder with documents. If you wish to sort the folder list with a desired order, touch the drop-down menu **Sort by**, then select one of the following options:

- Sort by Name
- Sort by Date (default)
- Sort by Extension

Example: Touch the **Sort by** drop-down menu. Touch the option *Sort by Name*, then touch the *Documents* folder.

Note: You can touch the **S** tab at any time to return to

the previous folder. Besides, you can touch the any time to refresh the screen contents.

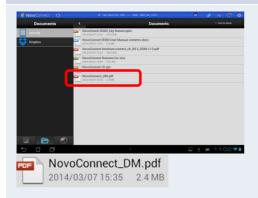


#### **Document List:**

After you have found a folder with documents supported by NovoPresenter, touch the document of interest.

Example: Touch the document "NovoConnect\_DM.pdf".

Note: You can touch the **S** tab at any time to return to

the previous folder. Besides, you can touch the any time to refresh the screen contents.

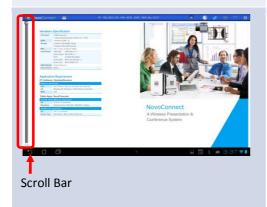

#### **Document Presentation:**

The selected document (PDF as an example) is fully displayed. You can zoom in on the document by sliding two fingers apart, or you can zoom out on the image by sliding two fingers toward each other.

To scroll down or move to the next page, slide your finger up or drag the scroll bar down. To scroll up or move to the previous page, slide your finger down or drag the scroll bar up.

To return to the *Document List* stage, touch the





tab.

To use the on-screen annotation tools, touch the

tab.

#### 3.3.3.3 Presenting a Document (Dropbox)

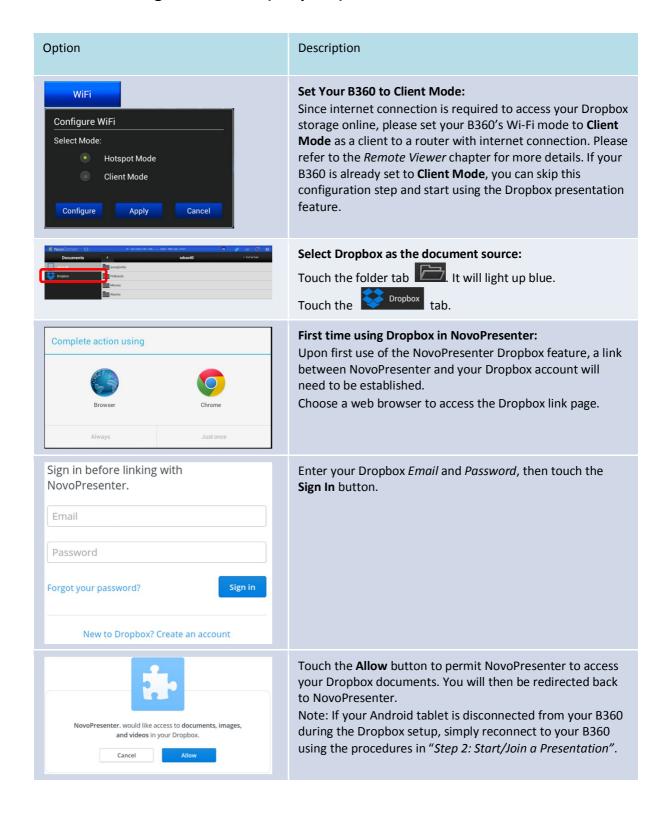

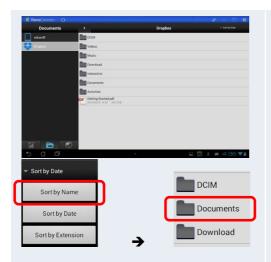

#### **Browse:**


Browse the Dropbox list with documents or sub-folders. If you wish to sort the list with a desired order, touch the drop-down menu **Sort by**, then select one of the following options:

- Sort by Name
- Sort by Date (default)
- Sort by Extension

Example: Touch the **Sort by** drop-down menu. Touch the option *Sort by Name*, then touch the *Documents* folder.

Note: You can touch the **tab** at any time to return to

the previous folder. You can also touch the at any time to refresh the Dropbox list.

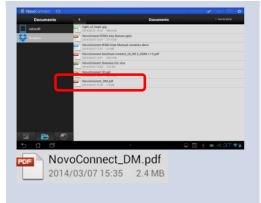

#### **Document List:**

After you have found a folder with Dropbox documents supported by NovoPresenter (including images), touch the document of interest. The document will be downloaded and presented.

Example: Touch the document "NovoConnect\_DM.pdf".

Note: You can touch the **tab** at any time to return to the previous folder.



#### **Document Presentation:**

The selected document (PDF as an example) is fully displayed. You can zoom in on the document by sliding two fingers apart, or you can zoom out on the image by sliding two fingers toward each other.

To scroll down or move to the next page, slide your finger up or drag the scroll bar down. To scroll up or move to the previous page, slide your finger down or drag the scroll bar up.

To return to the *Document List* stage, touch the



tab.

To use the on-screen annotation tools, touch the

tab.

#### 3.3.3.4 Presenting with a Browser


#### Option

#### Description



#### Set Your B360 to Client Mode:


If the web page you are presenting is not in the local storage of your B360, you need to set your B360's Wi-Fi mode to **Client Mode**. You will need to have a WiFi AP in your environment providing network access to the web pages you are interested in accessing and adding to your presentation.

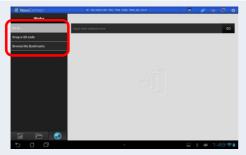

#### Start Browsing for a Web Page:

Touch the internet tab . It will light up blue. Select one of the three options to choose a web page:

- Go to ... (default)
- Snap a QR code
- Browse My Bookmarks

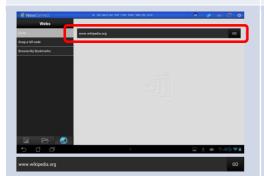

#### Go to ...:

Touch the **Go to ...** tab.

Enter the web page URL and touch Go.


Example: Enter the URL www.wikipedia.org and touch Go.



#### Snap a QR code:

Touch the **Snap a QR code** tab.

Aim your tablet's camera to a QR code containing web page information. NovoPresenter will detect its URL and go to the corresponding web page.

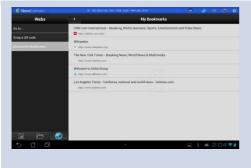


#### **Browse My Bookmarks:**

Touch the Browse My Bookmarks tab.

From the bookmark list, touch a bookmark of interest to go to its corresponding web page.

Touch and hold a bookmark for two seconds to edit or delete that bookmark.

Note: The bookmark list may initially be empty. You can add a web page to the bookmark list at any time during the *web* page presentation stage.

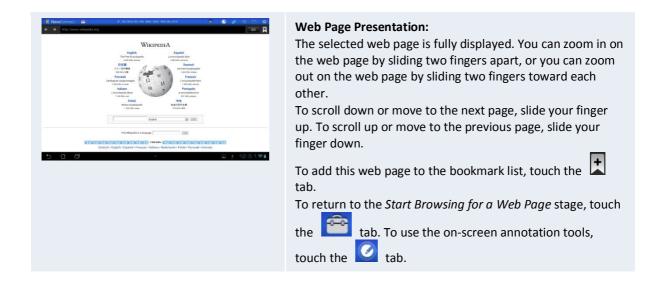


#### 3.3.3.4 Annotation

Sometimes you may want to write, highlight, or mark portions of your presentation materials directly on the tablet screen. The NovoPresenter provides an on screen annotation tool for the presenter to annotate directly on the presentation material. Enable the annotation tool






by toggling the tab on, as shown in the screen shot below.

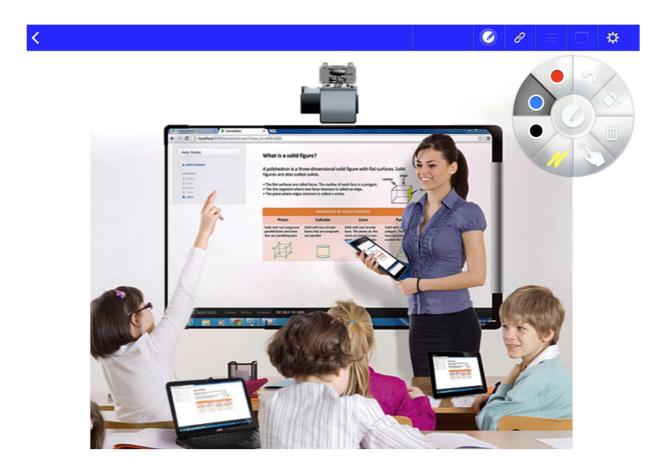



### 3.3.4 Step 4: Presentation Management

Once you are done starting/joining a presentation group, you are ready to make a presentation and collaborate with other participants. A sample screen view is provided below.

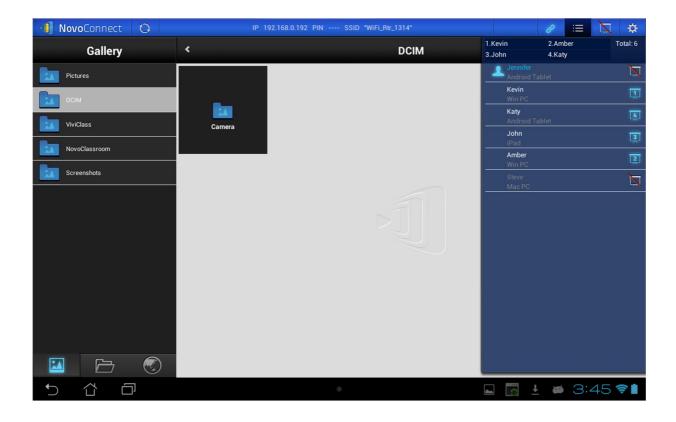

#### 3.3.3.1 Role Assignment

There are three roles in a presentation group, the *host*, the *presenter*, and the *participant*.


The first *participant* to start the presentation group with a B360 is assigned the *host* role. Subsequent joiners are assigned the *participant* role.

The *host* is defaulted to assume the *presenter* role until he assigns the *presenter* role to another *participant*.

To show all current participants who have joined the presentation group, please touch the



tab.

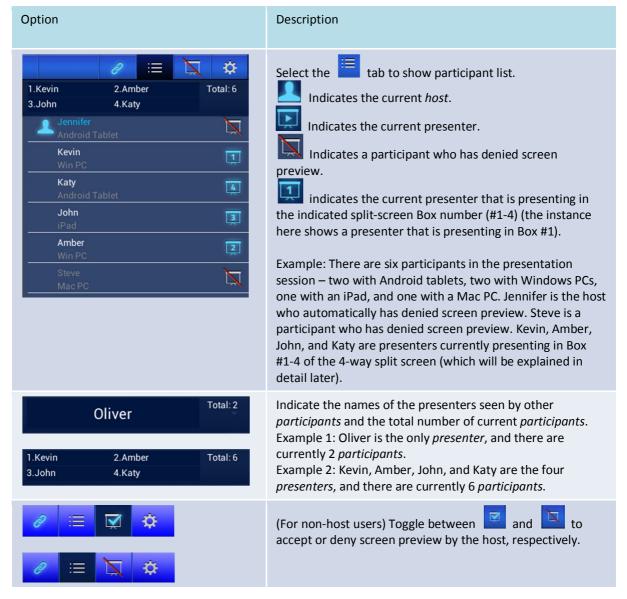

#### 3.3.3.2 Role Change, Screen Preview, and 4-way Split Screen





#### To perform Screen Preview:

Touch the tab to show the participant list.

The participant Amber (example name) does not have a icon, indicating that she allows screen preview.



#### **Screen Preview:**

Highlight Sam by touching the middle part of his entry to preview his device's on-screen display once or twice until


both the and the icons appear.




#### To perform a 4-way split screen presentation:

Touch the **lab** to show the participant list.

Select a *participant* to make a presentation. In this example, Amber (example name) will be selected by touching her entry.

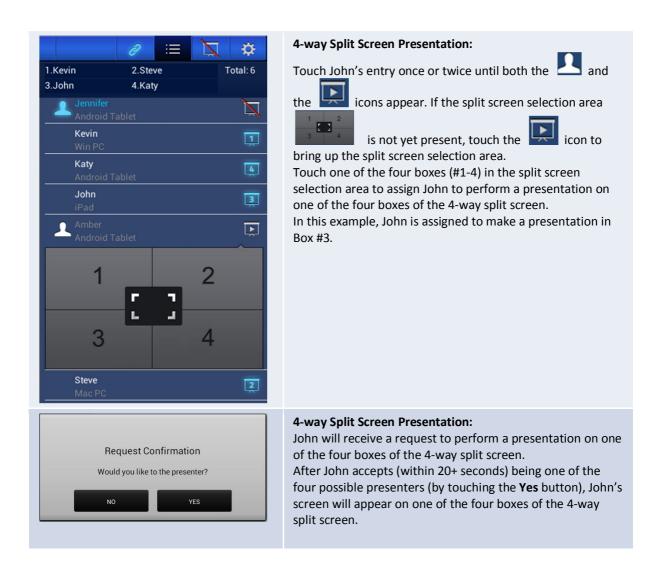


#### 3.3.3.3 Pause, Resume, and Disconnect

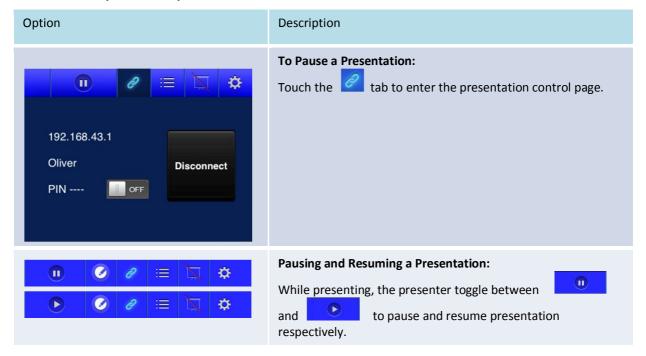



#### 3.3.3.4 Reset

Occasionally you may encounter problems with the network or the computer, causing the presentation group to malfunction on your B360. One way to resolve this problem is to reset the presentation group.

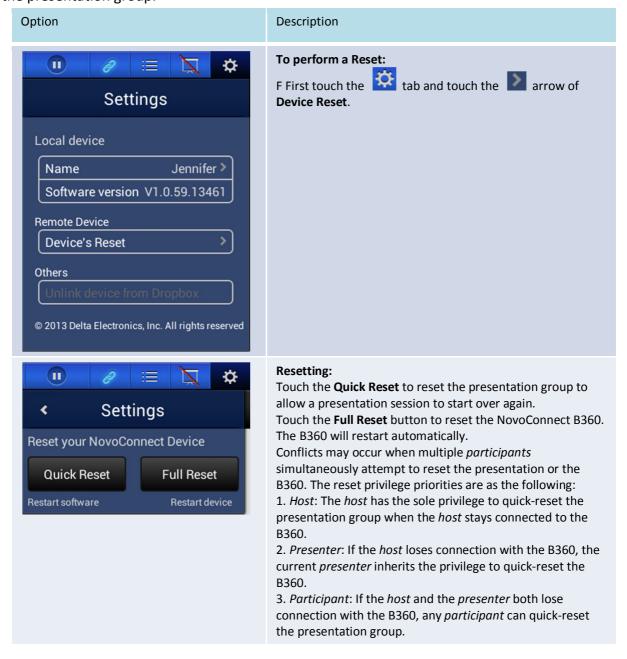


## 3.4 Presenting with the NovoConnect B360 Device

Your B360 is loaded with an Android operating system inside, allowing you to directly use presentation files stored in your USB memory drive, your microSD card, or your B360 device. The basic steps for making a presentation with your B360 are as follows:

- 1) If your presentations are stored on a USB memory drive, please first connect the USB hub to your B360 device, then connect a mouse and a USB memory drive to the USB hub. Otherwise, just simply connect a mouse to your B360.
- 2) If your presentations are stored on a microSD card, please insert the microSD card into the microSDcard slot.
- 3) For convenience, you can also save your presentation files in the local storage of your B360.
- 4) Browse for and open your presentation file.

You are now ready to make a direct presentation on your B360.

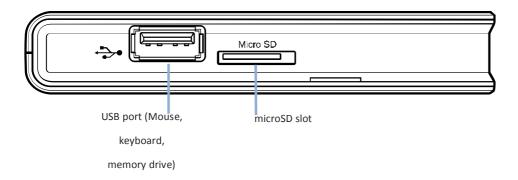


The following table shows detailed steps on how to make a direct presentation (using a microSD card as an example):





#### To present directly using a microSD card:

 



#### To present directly using a microSD card:

Click the SD card icon





#### To present directly using a microSD card:

Browse to a folder containing your presentation files. Click the desired file and its contents will be presented.



#### To unmount a microSD card:

After making a presentation from your microSD card, we recommend that you safely unmount your microSD card before physically removing it from your B360.

Click the home button





#### To unmount a microSD card:

Click the apps button





#### To unmount a microSD card:

 
Click **Settings** 





#### To unmount a microSD card:

Locate and touch the submenu **Storage**, then scroll down the submenu **Storage** until the option **Unmount SD card** is found. Touch Unmount SD card.



#### To unmount a microSD card:

A confirmation window will appear. Click **OK**.



#### To return to Remove Viewer:

You can now safely remove your microSD card physically from your B360.

To return to *Remote Viewer*:

Click the home button





#### To return to Remove Viewer:

Click the apps button





#### To return to Remove Viewer:

Click Remote Viewer





#### To return to Remove Viewer:

Click one or more times until the system bar disappears.

## 4. B360 Configuration


The *Remote Viewer* is the application software on the NovoConnect B360 device that hosts the presentation group. The main function of the *Remote Viewer* is to manage and control all presentation sessions between the participant devices and the NovoConnect B360. In addition to presentation management, the *Remote Viewer* supports the configuration of the below attributes of the B360 device:

- WiFi
- Display
- Settings
- Reset
- Presentation Group Name

<u>Note</u>: Following any clicking activity on the screen, the system bar



more times until the system bar disappears.

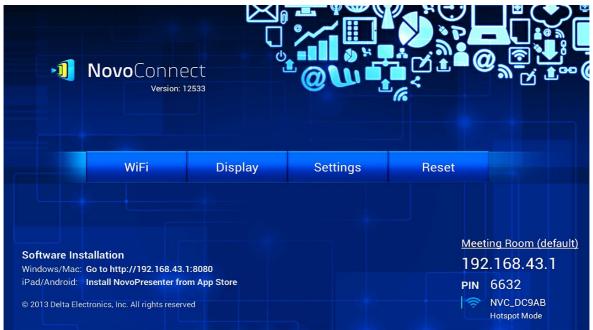

NovoConnect Home Screen

Please go to the NovoConnect home screen to locate the attributes. You will need a USB based mouse to perform setting changes.





#### WiFi:

Click the **WiFi** software button to bring up the *Configure WiFi* popup window.

Select either **Hotspot Mode** (B360 is the Wi-Fi host) or **Client Mode** (B360 is the Wi-Fi client). To set the Wi-Fi mode immediately, click **Apply**. To further customize and set the selected Wi-Fi mode in more details, click **Configure** to bring up

mode in more details, click **Configure** to bring up the relevant Android system menu item of the selected Wi-Fi mode.



#### Display:

Click the **Display** software button to bring up the *Select Display Output Format* popup window. Select one of the following screen resolution options (the presenter devices' resolutions will be automatically adjusted to match the selected option):

Auto Config

automatically determines the optimal screen resolution

1024x768 1280x800 720p (1280x720) 1080p (1920x1080)

Click **Save** to make the selection official, or click **Cancel** to abort the selection.




#### **Settings:**

For more detailed device settings of your B360, click the **Settings** software button to access the Android system menu.



#### Reset:

To fully reset the NovoConnect B360: Press and hold on the **Reset** tab 2 seconds. The B360 will restart.

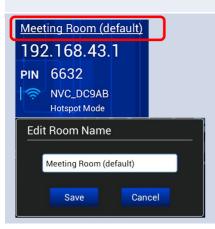

#### **Presentation Group Name:**

Click on the presentation group name shown on the lower right corner of the NovoConnect home screen. This will bring up the *Edit Room Name* popup window. Enter the new presentation group name using the on-screen soft keyboard or a physical keyboard. Click **Save** to make the name change official, or click **Cancel** to abort the name change.

# 5. Specifications

•	
Hardware Specifications	
Power Supply	5VDC, 2A
Power	< 10W
Consumption	
Output	1024x768 (XGA), 1280x720 (HD), 1280x800 (WXGA),
Resolutions	1920x1080 (Full HD), Auto Config
CPU (SoC)	ARM Cortex A9
	Video Decoder/Encoder (H.264, VC-1, VP8)
Memory	DDR 1024MB
Storage	Internal: 4GB (eMMC Flash)
	External: microSD Card Slot
Wi-Fi	802.11 b/g/n (2.4GHz & 5GHz)
Input/Output	USB Input USB Type A x 1
	Video Output Micro HDMI x 1
	Card Reader microSD Card Slot x 1
	Power Input Micro USB (5V 2A)
LED Indicator	Green (Power On)
Button/Switch	Reset
Dimensions	88 x 55 x 16 mm (L x W x H)
Weight	105 g
PC/Notebook Application Requirements	
CPU	Intel Pentium, 2GHz (Intel Core i3 and above are
	preferred)
Operating	Windows XP, Windows 7, Windows 8 (32 bits and 64
System	bits), Mac 10.6 and above
RAM	4 GB
Android Mobile Device Application Requirements	
Operating	Android 3.2 and above (Android 4.0 and above are
System	recommended)
Resolution	1024x768, 1280x800, or Higher are recommended
iOS Mobile Device Application Requirements	
Operating System	iOS 5.1 and above
Device Type	iPad, iPad 2, iPad 3, iPad 4, iPad mini, and iPad Air

## 6. Troubleshooting

- Q: NovoConnect does not operate.
- A: Check if the proper DC power supply with the appropriate operating voltage and sufficient operating current (5VDC, 2A) is connected to the Micro-USB port of the NovoConnect B360.
- Q: My PC cannot link to NovoConnect wirelessly.
- A: Your PC must either have a built-in a WiFi module or an external WiFi adapter, and WiFi must be enabled. If the NovoConnect B360 is set to Hotspot Mode (factory-default mode), choose NovoConnect's SSID from the available SSID list. If NovoConnect is set to Normal Mode and is connected to a particular WiFi router, choose that router's SSID from the available SSID list.
- Q: The play/pause buttons do not work.
- A: These buttons are functional only for presenters.
- Q: I cannot connect to the internet on NovoConnect.
- A: This is normal if the NovoConnect B360 is set to Hotspot Mode, since NovoConnect by itself does not support WWAN (wireless wide area network) connection. To use internet features, such as web page browsing, on NovoConnect please set its wireless connection to Normal Mode and connect to a WiFi router that is connected to the internet.
- Q: My PC or mobile device has failed to login to NovoConnect.
- A: WiFi may not be enabled on your device, or the WiFi access point that your device is connected to is not the NovoConnect B360 or the same WiFi access point that the NovoConnect B360 is connected to.
  - First, make sure that WiFi is enabled on your device. If NovoConnect is set to Hotspot Mode (factory-default mode), choose NovoConnect's SSID from the available SSID list. If NovoConnect is set to Normal Mode and is connected to a particular WiFi router, choose that router's SSID from the available SSID list.
- Q: I cannot choose to present in full screen or in one of the split screens.
- A: You are not the host at the moment. Wait for a presentation invitation from the host, who has the authority to decide whether your presentation is to be seen in full screen or one of the split screens. You may be invited to be the host if the Reset Host button is clicked on the NovoConnect B360, if the host explicitly hands over host control to you, or if all other presenters have disconnected from NovoConnect.
- Q: I am the host, but I cannot preview other presenters' screen.

- A: To preview a particular presenter's screen before sending a presentation invitation, that presenter must have screen preview enabled on his device.
- Q: My device's on-screen display looks stretched or compressed on NovoConnect's screen output.
- A: There may be an aspect ratio mismatch between the NovoConnect B360's chosen output resolution and your device's screen aspect ratio (e.g. your device's screen has the 4:3 aspect ratio, and you have set NovoConnect's output resolution to a 16:9 or 16:10 option). Try to set the display resolution on the NovoConnect B360 so that it has an aspect ratio either matching that of your device or is as close to your device's screen aspect ratio as possible, or you can let NovoConnect automatically determines the best output resolution.
- **Q:** During the presentation, my PC/Mac computer's cursor is flickering.
- A: You can try a different screen resolution for your PC/Mac computer. You can also try different settings for Projection Mode, Visual Quality, and Screen Refresh Rate (which need to be set before you connect your PC/Mac computer to your NovoConnect B360) until the problem disappears or is reduced.

## 7. Safety Information

Refer to the manual and take note of the safety instructions before operating your device.

- Ensure that the power source's output voltage matches your device's operating voltage.
- To prevent the risk of electric shock, do not operate this device near water or in environments of high moisture.
- Do not disassemble or try to repair this device by yourself. Contact your local Delta service center for assistance.
- Keep the device's plastic packages out of the reach of children.

## 8. Copyright Information

Copyright 2014 Delta Electronics, Inc. All Rights Reserved.

Android and Google are registered trademarks of Google Inc.

ARM is a registered trademark of ARM Inc.

App Store, iPad, iTunes, Mac, and Mac OS are service marks, trademarks, or registered trademarks of Apple Inc.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

miniSD, microSD, miniSDHC, microSDHC, microSDXC, smartSD, smartSDHC, SDIO and miniSDIO are all trademarks or registered trademarks of SD-3C, LLC in the United States, other countries or both.

Microsoft and Windows are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Pentium and Core i3 are registered trademarks of Intel Corporation.

VGA and XGA are registered trademarks of International Business Machines Corporation.

Product names, logos, brands, and other trademarks featured or referred to in this materials are the property of their respective trademark holders.

## 9. Index

- 1. access point
- 2. Android
- 3. B360
- 4. cable
- 5. click
- 6. Client Mode
- 7. configure
- 8. connect
- 9. device
- 10. disconnect
- 11. HDMI
- 12. host
- 13. Hotspot Mode
- 14. icon
- 15. install
- 16. internet
- 17. iOS
- 18. iPad
- 19. IWB
- 20. join
- 21. keyboard
- 22. login
- 23. Mac
- 24. mobile
- 25. mouse
- 26. NovoConnect
- 27. NovoConnect Desktop Streamer
- 28. NovoPresenter
- 29. PC
- 30. PIN
- 31. participant
- 32. power
- 33. presentation
- 34. presenter
- 35. preview
- 36. projector
- 37. reset
- 38. Remote Viewer

- 39. resolution
- 40. role
- 41. screen
- 42. setting
- 43. software
- 44. SSID
- 45. tablet
- 46. touch
- 47. USB
- 48. Wi-Fi
- 49. Windows