



Stainless Steel Kettle

Model CE1034SJ

INSTRUCTION MANUAL

PLEASE SAVE THESE INSTRUCTIONS



Dear Valued Customer

Thank you for purchasing a *CASCADA* appliance.

We understand the importance of your purchasing decision, and appreciate your final choice to introduce this *CASCADA* product into your home.

Your *CASCADA* appliance is recognised as a quality product at an affordable price, and is proudly supported by our after sales service team. We encourage you and your friends to choose from the range of *CASCADA* appliances available exclusively to The Warehouse.

TECHNICAL INFORMATION

Please make sure that your house installation voltage corresponds to the voltage marked on the unit.

Mains supply: 230-240V ~ 50 Hz – AC only
Rated Power: 2000 Watts

SERVICE

In the unlikely event of failure or for product information please contact the below help lines.

New Zealand call 0800 898580
Email: service@opnz.com
Australia call Toll Free 1-800-858011



BEFORE FIRST USE

- Your *CASCADE* appliance has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, immediately contact your retailer for replacement or repair.
- Carefully unpack your *CASCADE* appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found.
- Rinse the inside of the kettle with clean water and discard. Carefully wipe the exterior of the kettle to remove any dust that may have accumulated. Dry with a dry towel. Do not use harsh abrasive cleaners. Remove any label or sticker.
WARNING! Do not immerse in water or any other liquids.

OPERATION

- Always place the appliance on a level non-slippery stable surface.
- Always place the appliance on a heat resistant surface, as the appliance will reach high temperatures.
- **WARNING!** DO NOT LEAVE ON WHILE UNATTENDED.
- **WARNING!** Always leave a gap of approximately 20 cm around the exterior of appliance when on. Never use near curtains, under cupboards or near walls, or other flammable material.
- **WARNING!** DO NOT LET SUPPLY CORD HANG OVER THE EDGE OF ANY BENCH OR TABLETOP. AS THERE MAY BE A RISK OF SCALDING OR OTHER INJURY SHOULD YOUNG CHILDREN PULL THE APPLIANCE FROM THE BENCH OR TABLETOP.



- Plug the power base supply plug into a suitable mains outlet corresponding to the supply requirements of your appliance. Mains supply: 230-240V ~50Hz – AC only
- For first time use only:
 - Fill the kettle to just below the maximum level
 - Place on base and switch onAfter this water has boiled and the switch has turned off, disconnect from power supply, remove kettle from base, and discard this water. This should eliminate any impurities in the kettle. Repeat if necessary.
WARNING! To avoid electrocution, damage to the kettle or scalding from ejected water, do not over fill or under fill, do not fill kettle when it is connected to the base or when it is in operation. Always take special care when moving the appliance containing hot water. Do not open the lid when boiling.
- To switch on depress the on/off switch to position marked "I". The indicator lamp will light indicating the kettle is heating the water.
- The kettle will automatically switch off and return to position marked "O" once the water has reached boiling point.
- The kettle can be switched off manually at any time. Do not attempt to re boil water immediately after it has switched off as this may damage the switch mechanism.
- Remember to switch off at power supply before removing kettle from base, before cleaning, or when not in use.
- **CAUTION!** Ensure that the kettle is switched off before removing it from its stand.
- **CAUTION!** Do not operate the kettle on an inclined surface. Do not operate the kettle unless the element is fully immersed. Do not move while it is switched on.

- NOTE. This kettle uses the latest high quality automatic on/off switch. It is operated by the steam, which is produced from the boiling water. The switch unit is mounted in the base of the kettle. Steam produced from the boiling water activates the on/off switch mechanism, which is located below the lower handle area. There may be a small amount of condensation left on the base unit at this point. This is normal and not a reason for concern. If this occurs after use, wipe this condensation dry with a dry towel.

CARE AND CLEANING

- Always disconnect your CASCADE kettle from the mains supply before cleaning.
- Never immerse your kettle or base in water or other liquids.
- Wipe the exterior of the kettle and base with a damp cloth. Dry with a dry towel. Do not use harsh abrasives or solvents. Do not use detergent.
- Periodically check the supply cord for damage.
- Store your appliance and these instructions in its original box or in a dry cupboard.

DESCALING

In order to retain the performance of your kettle, it is important to periodically remove calcium deposits that build up inside the kettle.

- Half fill the kettle with clean water.
- Add 30 ml of white vinegar.
- Boil this mixture and allow kettle to stand for 1 minute. Repeat this step two or three times.
- Drain this water away.
- Rinse the inside of the kettle with clean water.
- Fill kettle to the maximum level and boil. Drain this water away completely.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Carefully read these instructions before using your appliance.
2. VERY IMPORTANT: Do not immerse in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.
3. Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.
4. WARNING! Unplug from mains outlet when appliance is not in use, filling with water or cleaning.
5. An appliance dropped or damaged should not be used until examined by a service engineer.
6. Do not permit the mains lead to come in contact with hot objects.
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
8. CAUTION: Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance
9. Use this appliance only for its intended use.
10. WARNING! This kettle must only be used with the power base provided. Use only genuine attachments supplied by an authorised service dealer.
11. This appliance is intended for household use only and not for commercial or industrial use.



12. The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
13. **WARNING!** Do not let the cord hang over edge of table or counter. Risk of scalding.
14. **WARNING!** An appliance should never be left unattended when plugged in.
15. **WARNING!** Hot steam. Keep away from hot steam. Do not touch hot surfaces.
16. **WARNING!** Always place the appliance on a heat resistant surface.
17. **WARNING!** Ensure adequate ventilation; keep an open space of approximately 20 cm all around the appliance.
18. **WARNING!** Do not use the appliance near flammable materials such as curtains, or other combustible material.
19. If appliance is to be used by a third party, please supply the instruction manual with it.
20. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

CAUTION

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase with proof of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts or refund when the product is returned freight prepaid to the retailer with proof of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: **Stainless Steel Corded Kettle**

Model No.: CE1034SJ Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

_____ Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer. If service or a warranty claim is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged or warranty declined. For technical help contact the helpline.

Technical Assistance Helpline

New Zealand call Toll Free 0800-898580

Australia call Toll Free 1-800-858011

Email service@orientalpacific.com