

JEWELRY CLEANER (MEC-175V)

USER MANUAL

IMPORTANT SAFEGUARD INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always "Unplug it" immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, "Unplug it" immediately. Do not reach into the water.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Do not leave appliance unattended while it is operating or is plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged in any manner or dropped into water. Take appliance to the mechanical adjustment.
5. Keep the cord away from hot or heated surfaces. Do not wrap the cord around the appliance.
6. Do not use flammable or toxic liquids.
7. Never drop or insert any object into any opening.
8. Keep out of the reach of children.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

Your appliance is for household use and may be plugged into any AC electrical outlet (ordinary household current).

NOTE:

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

HOW TO USE YOUR JEWELRY CLEANER

Remove clear cover. Fill unit with clean, warm water to water line. Add approximately ½ teaspoon of liquid dish soap. BE SURE to add **liquid** soap. Stir gently to mix water and soap.

Place jewelry in baskets. Place baskets in water, making sure to face handles toward the inside so they both fit down into unit. Place the clear cover on unit, and plug into any 120V outlet. Slide switch to "Hi" position. Operate for approximately 5 minutes, then slide switch to "Off" position. A soft brush may be necessary to loosen trapped particles.

Unplug unit, remove cover and jewelry baskets. Empty liquid from unit, and refill with fresh, clean water.

Place jewelry baskets back into unit. Replace cover, and plug unit in. Slide switch to "Lo" position, and operate for approximately one minute.

Heavily soiled jewelry may require a second cleaning.

Switch unit off, and remove cover. Lift jewelry baskets from unit and place on side of unit, using the notch provided. Let jewelry air dry for several minutes, then remove jewelry and place on a soft, lint-free cloth.

Be sure to unplug unit when cleaning is complete.

NOTE: DO NOT USE any other concentrate or cleaning solution not recommended by the manufacturer.

USER MAINTENANCE INSTRUCTIONS

This appliance is permanently lubricated and will not require additional lubrication for the life of the unit. It contains no user serviceable parts. Refer service to qualified service personnel.

TO CLEANER: Unplug unit and allow to cool. Use a soft, slightly damp cloth to wipe the surfaces. Do not allow water or any other liquid to get into motor area of unit.

TO STORE: Unplug appliance, allow to cool, and store in its box or in a dry place. Never store it while it is still hot or still plugged in. Never wrap the cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

Professional Jewelry Cleaning Solution

We are supplying a bottle of Professional Cleaning Solution.

This jewelry cleaning solution is specially formulated to clean up your jewelry, and recommend using with the "Jewelry and Optical Cleaner". If you have used up this Professional Cleaning Solution, you can also continue to clean your jewelry by following the instruction mentioned as per our "Jewelry Cleaner User Manual" for regular cleaning steps by using Liquid Dish Soap on this Jewelry and Optical Cleaner. Please note following instruction to use:

INSTRUCTION TO USE THIS Professional Jewelry Cleaning Solution:

Directions: For use in Jewelry & Optical Jewelry Cleaner:

1. Pour one unit of **Jewelry Cleaning Solution** from bottle into a glass of container or beaker. One unit of solution equal to 3 parts water.
2. Use a tweezers to stir gently to mix **Jewelry Cleaning Solution** with water
3. Pour the diluted solution to cover the jewelry.
4. Rinse for 5 minutes,
5. Then start using the Jewelry and Optical Cleaner as follows:
6. Removes clear cover; fill unit with warm water to waterline.
7. Place jewelry in baskets, place baskets in water, making sure to face handles toward inside so they both fit down into unit. Place the clear cover on unit, and plug into any 120 volts outlet. Slide switch to "**Lo**" position, and operate for approximately one minute.
8. Switch unit "**Off**", and remove cover, Lift jewelry baskets from unit and place on side, using the notch provided. Let jewelry air dry for several minutes, then remove jewelry and place on a soft, lint-free cloth.

NOT TO BE USED: on **Pearl, Opal, Coral or Semi-Precious Stone**

Important: Do not use the solution in full strength. Solution must be mixed with water to assure efficient cleaning.

Caution: Keep out of reach of children

Do not take internally. Avoid contact with the eyes or skins. In case of accidental contact, flush immediately with plenty of fresh water

Store in a cool, dry place.

Flammable, keep away from fire or flame

Made in China