

FP-51 Guide

Users may see the “Fingerprint Flash FP51 demo” of “Read Me First” in the enclosed CD.



Fingerprint Enrollment Adaptation



Step 1 Fingerprint Flash FP51 installation : First time execution

1-1 Plug in Fingerprint Flash FP51 into any available USB port.

1-2 Double click “My Computer” then click the “removable disk”.

1-3 Double click on the icon “RUN”  , the “palm” icon  should appear in the task bar at the bottom right-hand side of your screen.

1-4 Enter the serial number provided in your package and click”OK” after completed.



Step 2 Fingerprint or password enrollments: To become the administrator

2-1 Click one of the blue fingers and follow the instructions on the bottom left-hand side to enroll the fingerprint. (Enrolled at least 3-5 times)

2-2 The color will turn from blue to pink for successfully enrollment. Click “Exit”.



2-3 The password function will act as a secondary access security for unclear fingerprint images.

Tick enable rescue password first before enter password

(Recommend to enter at least six digits password, it can be numbers and alphabets)

2-4 Users can access the Fingerprint Flash FP51 through fingerprint or password if both have enrolled previously.

Step 3 Deleting or adding existing fingerprints :

3-1 Click “palm” icon  on bottom right-hand side of your screen and select “change password”.

3-2 Fingerprint password verification.

3-3 Click the pink finger to delete the image that was saved previously, click “Yes” to continue

3-4 Repeat **Step 2** to enroll the new fingerprint.

Step 4 Unlock USB Flash Disk :

4-1 Click “palm” icon and select “unlock USB Flash Disk”.



4-2 Verify the fingerprint/password and access the Fingerprint Flash.



4-3 For next time to enter the Fingerprint Flash FP51 , users only need to plug and play by verifying the fingerprint or password.

Step 5 Lock USB Flash Disk :

5-1 Right click the “palm” icon and select “Lock USB flash disk”. The Fingerprint Flash FP51 will lock automatically.

Bonus package (Please find it in the enclosed CD)

Fingerprint Flash FP51 Service: For files encryption/ zip and Screen Saver Lock.

FlashRoamer is specially designed to enable business travelers to check email easily while using different computers. For further operation please see PDF "FlashRoamer manual" contained within the CD .

Step 1 Fingerprint Flash FP51 Service installation: First time user

1-1 Insert the installation CD and execute Fingerprint Flash FP51 service.

1-2 Find the "Secret&Zip" folder in the Fingerprint Flash FP51 and a "key" icon  in the task bar, if the "Fingerprint Flash FP51 service" is successfully installed.

Step 2 "Secret&Zip" folder for files encryption / zip

2-1 Users can encrypt and zip the file simultaneously by dragging the file into the "Secret&Zip" folder.

2-2 For the file decryption & unzip, enter the "Secret&Zip" folder and drag the file to the proper location.

2-3 Decrypt & unzip the file by verifying the fingerprint or password

Step 3 Screen Saver Lock :

3-1 Right click "key" icon  and select Utility /ScreenSaver Lock.



3-2 Screen Saver Lock will be activated.



Notices :

- ◆ Perform "Recovery" : It performs a basic level of format on your Fingerprint Flash FP51 , erasing all data and files and returning Fingerprint Flash FP51 to the default or new configuration. (Serial No is required.)
- ◆ Unplug the Fingerprint Flash FP51 correctly: Please left click the "unplug or Eject hardware" icon  on the bottom right of the screen and click "Stop" and then click "OK".
- ◆ For further instructions of the Fingerprint Flash FP51 , please see the "User's Manual" contained within CD.