

# TEAC

Made for  
 iPod  iPhone

## SR-L20i

### Portable Speaker for iPod / iPhone



\* iPhone shown is not included

## Owner's Manual

Thank you for purchasing the Teac Portable Speaker for iPod/iPhone.  
Please read through this manual carefully before operating



**Dear Customer,**

 
Congratulations on the purchase of this top-quality **TEAC** product. As with all **TEAC** products, this product has also been developed on the basis of the recent technical standards and manufactured using the most modern electronic components available.

Please take a few minutes to carefully read the following instruction manual before using the equipment for the first time, so that you will be able to enjoy your new **TEAC** equipment for a long time.

## **CONTENTS**

	PAGE
Important Safety Instructions .....	2
Controls and Connections .....	4
Using the Stand .....	4
Fitting Batteries .....	5
Introduction .....	5
Preliminaries.....	6
Getting Started .....	6
Power Control.....	7
Charging an iPhone .....	7
Docking an iPhone .....	7
Adjusting the Volume .....	7
Care and Maintenance .....	8
Specifications .....	8
Environmental Protection.....	9

## IMPORTANT SAFETY INFORMATION

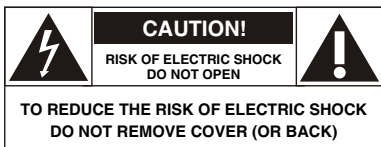

This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a slightly damp cloth.
- Do not block any ventilation openings.
- Install in accordance with the manufacturer's instructions.
- Do not install or operate near any heat sources such as radiators, stoves, or other apparatus that produce heat.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.
- Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**Warning:** To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids such as a vase of flowers should be placed on the product.

No naked flame sources such as candles should be placed on the product.

**Caution:** Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

**Caution:** Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

## IMPORTANT

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## ELECTRICAL INFORMATION

Use this appliance only with the supplied AC Adaptor.

Using non-approved power supplies will void the warranty.

Mains Supply: The mains operating voltage of the AC Adaptor is marked on a rating plate on the AC Adaptor.

The means of disconnecting this appliance from the mains supply is the AC adaptor. This should be unobstructed and readily operable at all times.

"Made for iPod/iPhone" means that an electronic accessory has been designed to connect specifically to iPod or iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

## Made for



iPod nano  
1st generation  
1GB 2GB 4GB



iPod nano  
2nd generation (aluminum)  
2GB 4GB 8GB



iPod nano  
3rd generation (video)  
4GB 8GB



iPod nano  
4th generation (video)  
8GB 16GB



iPod nano  
5th generation (video camera)  
8GB 16GB



iPod nano  
6th generation  
8GB 16GB



iPod  
5th generation (video)  
30GB 60GB 80GB



iPod classic  
80GB 120GB 160GB



iPod touch  
1st generation  
8GB 16GB 32GB



iPod touch  
2nd generation  
8GB 16GB 32GB 64GB



iPod touch  
3rd generation  
8GB 16GB 32GB



iPod touch  
4th generation  
8GB 32GB 64GB




iPhone/iPhone 3G/iPhone 3GS  
4GB 8GB 16GB 32GB



iPhone 4  
16GB 32GB


## CONTROLS AND CONNECTIONS
 
### LEFT SIDE

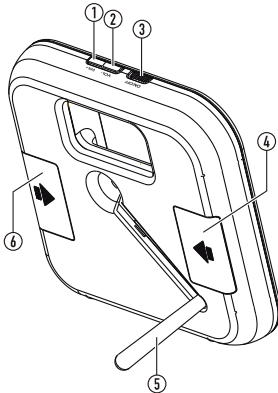

- ① Volume up button
- ② Volume down button
- ③ OFF/ON switch
- ④ Left battery compartment
- ⑤ Pull-down stand
- ⑥ Right battery compartment

### RIGHT SIDE

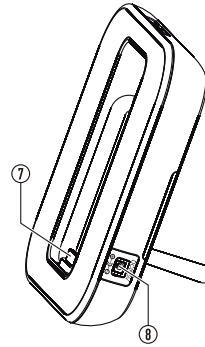 

- ⑦ iPhone docking connector
- ⑧ DC In jack


## USING THE STAND

 The back panel includes a stand that can be folded down.

Pull the stand out and rotate it down until it clicks into the fully open position.



Your docking station will now stand upright as shown.


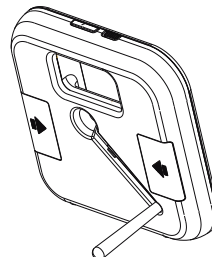


## FITTING BATTERIES

The unit can be powered by batteries for portable operation.

To fit the batteries:

  1. Slide off the left and right battery covers.
2. Insert two AAA batteries into each battery holder, observing polarity as shown.
3. Replace both battery covers.

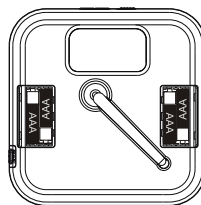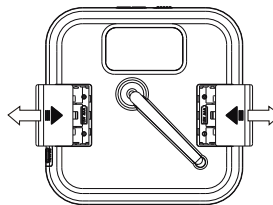

## DISPOSAL OF BATTERIES

Dispose of used batteries with regard to the recycling regulations in your area. DO NOT short circuit batteries or throw them into water, the general rubbish or in a fire.

Weak batteries can leak and damage the remote control. Replace them in good time!

## INTRODUCTION

The SR-L20i is a compact iPhone docking station that can be powered from the mains or from batteries for portable operation.

### COMPATIBILITY

The SR-L20i is recommended for use with iPhone or iPod touch models. In the text of this user guide, 'Phone' refers to both iPhone and iPod touch models.

## PRELIMINARIES

### UNPACKING

Carefully unpack the unit. If it is damaged, please return it to your nearest TEAC store for replacement. Remember to take your purchase receipt with you.

Retain the Owner's Manual. If you pass the unit on to a third party make sure you pass on the Owner's manual.

We suggest you retain the packaging. If you dispose of it, do so having regard to any recycling regulations in your area.

### CONTENTS

The carton should contain:

- The SR-L20i docking speaker
- AC adapter
- Owner's Manual

If any items are missing or damaged, contact your nearest TEAC store for a replacement. Have your receipt ready when you call. Retain the packaging. If you dispose of it, do so having regard to any recycling regulations in your area.

### LOCATION

Place the unit on dry stable surface away from heat and damp and where it is unlikely to fall or be knocked over.

## GETTING STARTED

### CONNECTING POWER

Before connecting the power, check that the mains voltage on the rating plate of the AC adapter is the same as the voltage in your area.

- Plug the DC cord from the AC adapter into the DC In jack on the side of the unit.
- Plug the AC adapter into the wall socket and switch the mains power on.

*The unit is now ready for use.*

#### NOTE:

- The AC adapter may become warm during operation - this is normal.



## POWER CONTROL

### To turn the docking station on:

Slide the **OFF/ON** switch to the **ON** position.

### To turn the docking station off:

Slide the **OFF/ON** switch to the **OFF** position.

## CHARGING AN iPhone

When an iPhone is docked it will charge when the unit is connected to mains power.

NOTE: The iPhone will continue to charge if the **OFF/ON** switch is set to **OFF**.

## DOCKING AN iPhone

### To dock your iPhone:

- Locate the iPhone on the Docking Connector and press it gently home.  
*The iPhone is now ready to play.*

### Playing a docked iPhone:

- Unlock the phone.
- Use the controls on the iPhone to choose the tracks you want to play.

### To remove your iPhone from the dock:

- From behind, gently push the iPhone forward.
- From the front, grip the iPhone at the sides and lift the iPhone from the docking connector.

## ADJUSTING THE VOLUME

### To increase the volume

Press and hold the **VOL+** button until the volume increases to the level you want.

### To reduce the volume

Press and hold the **VOL-** button until the volume reduces to the level you want.

## CARE AND MAINTENANCE

### CARE AND CLEANING

All care and cleaning operations should be carried out with the unit unplugged from the mains power.

The surface of the unit can be cleaned with a barely damp cloth and then dried carefully.

Never use abrasives, abrasive cloths or chemical solvents .

## SPECIFICATIONS

### POWER ADAPTER

Supply Voltage, Current : .....5V  $\overline{\text{---}}$  , 2A

AC Adaptor input: .....100-240V  $\sim$ , 50/60 Hz, 500 mA

Battery: .....4 x AAA  $\overline{\text{---}}$  battery type R03/LR03

### SPEAKER

Output: .....2 x 2W(max)

Impedance: .....4  $\Omega$

Frequency response: .....380Hz-16KHz

Net Weight: .....262 g

Dimension(WxHxD): .....162 x 162 x 30mm



### Conformity

This device has been tested for compliance with the basic and other relevant requirements of the EMC Directive 2004/108/EC and the low Voltage Directive 2006/95/EC.



Class II construction double insulated.

This product must not be connected to earth.

## ENVIRONMENTAL PROTECTION



Do not put your used batteries, nickel cadmium, rechargeable, round cell or starter batteries in with your household rubbish. Take them to an appropriate disposal/collection site.



Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres (if available).



# **TEAC**

**TEAC CORPORATION**

1-47, Ochiai, Tama-shi, Tokyo 206-8530, Japan