

ZB-8150/ZB-8110/ZB-8210

CCD BARCODE SCANNER

# User's Manual

**ZBA Inc**  
**249 Homestead Rd Unit 12**  
**Hillsborough NJ 08844**

**Phone: 908-359-2070**  
**Fax: 908-359-1272**  
**Web: <http://www.zbausa.com/>**

## **Installation:**

### **Keyboard Wedge**

- 1) Turn off the PC
- 2) Disconnect the keyboard cable from the PC.
- 3) Connect the Keyboard Cable to the scanner and connect the scanner cable to the PC
- 4) Turn the terminal/computer power on.
- 5) You are ready use the scanner

### **RS-232**

- 1) Turn off the PC.
- 2) Connect the Scanner cable to the PC.
- 3) Plug the power supply to the scanner
- 4) Plug the power pack into power source.
- 5) Turn on PC, You are ready to use the scanner

### **USB (with HID Keyboard Interface)**

- 1) Plug the USB cable to PC. (some USB hub may have power problem, Check with HUB manufacturer)
- 2) Follow the instruction to install windows driver come with your windows operating system.

Note: The scanner may not work with windows 95 or windows 98 first edition.

**Default Setting for each barcode shown  
as below:**

Code Type	Read Enable		Checksum Verification Enable	Checksum Transmission Enable	Code ID
	8110	8150/8210			
UPC-A	V	V	V	V	A
UPC-E	V	V	V	V	E
EAN-13	V	V	V	V	F
EAN-8	V	V	V	V	FF
Code-39	V	V			*
Interleaved 2 of 5	V	V	V		i
Industrial 2 of 5			-	-	i
Matrix 2 of 5					B
Codabar	V				%
Code-128	V	V	V		#
Code-93			V		&
Code-11			V One digit		O
MSI/Plessey			V		@
UK/Plessey			V		@
Telepen					S
Standard 2 of 5			-	-	i
RSS-14					R4
RSS-Limited					RL
RSS-Expanded					RX
China Post					t
Italian Pharmaode.					p
Code-16K			-	-	
PDF417		V(8210)	-	-	

<b>ZBA ZB- 8110 / 8150 - 1D Barcode scanner</b>		
Specification	Model 8110	Model 8150
<b>Operational</b>		
Light Source	660 nm Visible Red LED	
Optical System	2048 pixel CCD (Charge-coupled device)	
Depth of Scan Field	0-80 mm (CODE 39, PCS=90%, 20mils)	0-250 mm (CODE 39, PCS=90%, 20mils)
Scanning Width	80 mm	120 mm
Scan Speed	50 scans/sec	200 scans/sec
Resolution	0.125mm(5mils) Code39,PCS=45%, on contact	0.1mm(4mils) Code39,PCS=90%,
Print Contrast	30% or more	
Scanning Angle	Front: 60° Rear: 60° Yaw: 75°	
Decode Capability	Autodiscriminates all standard barcodes; Other symbologies can be ordered optionally	
Beeper Operation	7 tones or no beep	
Indicator	Green led	
<b>Mechanical</b>		
Length	182 mm	
Width-handle	26 mm	
Width-head	90 mm	74 mm
Depth-handle	51 mm	
Depth-head	35 mm	

Weight	155 g (cable not included)	160 g (cable not included)
Cable – K/B wedge	Straight 2.0 m	
Cable – universal type	Straight 2.3 m	
Connector type	RJ-45 phone jack connector	
Case material	ABS plastic	
Cushion material	Rubber	
<b>Electrical</b>		
Input Voltage	5 VDC $\pm$ 0.25V	
Power - Operating	380 mW	1275 mW
Power - Standby	240 mW	600 mW
Current - Operating	76 mA @ 5 VDC	255 mA @ 5 VDC
Current - Standby	48 mA @ 5 VDC	120 mA @ 5 VDC
DC Transformers	Class 2; 5VDC @ 450 mA	
Agency listing	UL, FCC Class A	
<b>Environmental</b>		
Operating Temperature	0°C to 45°C (32°F to 113°F)	
Storage	-40°C to 60°C (-40°F to 140°F)	
Humidity	5% to 90% relative humidity, non-condensing	
Light Level	Up to 15000 Lux	Up to 60000 Lux
Shock	1.0m drop onto concrete	1.5m drop onto concrete
Contaminants	Seals to resist airborne particulate contaminants	
Ventilation	None required	

<b>Programming</b>	
Programming method	Manual (Reading special barcode) DOS command through RS-232, Windows configuration program
Program upgrade	Enabled by built-in flash memory
Programmable characteristics	Code type selection, check digit selection Decoding option Decoding option Transmitted character delay, Header selection, trailer selection, message suffix, good read beep tone and volume, scanner trigger selection Keyboard emulation type (intermessage delay, keyboard type and keyboard language) Serial interface type (ACK/NAK, Xon/Xoff, RTS/CTS, good read LED control, start/stop bits)

## **Programming the 8110/8150/8210**

To program the 8110/8150/8210, you must scan a series of programming barcode in the correct order. Fold out the back cover of this manual. You will see a table of alphanumeric barcodes, which are used to program the various options presented.


### **To program each option, you must:**


1. Scan the **Program barcode** on the parameter setting part.
2. Enter the option mode by scanning the **Option Bar Code** (also on the Parameter setting part).
3. To the right of the option barcode, the necessary alphanumeric inputs are listed. Scan these alphanumeric entries from the **back fold out** page. To confirm above steps, you must scan the **Finish barcode** on the back fold out page.
4. Once you have finished programming. Scan the **Exit** barcode, listed on the lower right hand corner of each parameter setting part.



Program

Program Barcode

Option Bar Code	Option	Alphanumeric Entry
	Keyboard Wedge	00 *
Interface	RS-232	01
selection	Wand emulation	02
	USB	03
	Keyboard/RS-232	04
	Auto detection	
	reserved	05

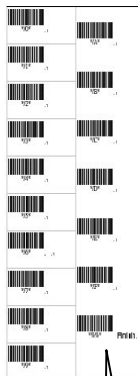

Exit

Option Barcode

Exit Barcode

Back Fold Out

Finish barcode



## Interface Selection

This decoder build-in scanner comes in one model and supports interfaces such as keyboard wedge, RS232 serial wedge, wand emulation, and the latest USB interface. In most of the cases, simply selecting an appropriate cable with a device code will work for a specific interface.


**Interface selection:** You can change factory interface default for other type interface. By plugging different cables, setting right interface, then the scanner will be changed to another interface. However, you must make sure which cable you need.

**Keyboard/RS232/USB Auto detection:** By setting this function, it will automatically select the Keyboard wedge or RS-232 or UBS interface for user.



\*\$%+PRO\*

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *1AA* Interface selection	Keyboard Wedge	00
	RS-232	01
	Wand emulation	02
	USB	03
	Keyboard	} 04 *
	/RS232/USB	
	Auto detection	
Reserved	05	

Note: \* -Default



\*%\$\$\*

Exit


## Keyboard wedge

As a keyboard interface, the scanner supports most of the popular PCs and IBM terminals. The installation of the wedge is a fairly simple process without any changes of software or hardware.

**Keyboard Type:** Select keyboard type connector of your host computer. Scanner must be selected to the appropriate host interface cable converter.



**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *2AA*	IBM AT, PS/2	00 *
Keyboard type	Reserved	01
	Reserved	02
	Reserved	03
	Reserved	04
	Reserved	05
	Reserved	06



**Exit**

## Keyboard wedge

**Keyboard Layout:** The selecting of keyboard layout supports many country languages other than USA keyboard layout. First you need to confirm country language that you desire. In DOS, using command “keyb” to select the desirable keyboard layout or in WINDOWS entry “Control” then pops “Keyboard” to select country at “language” item. For details, please refer to your DOS or WINDOWS user’s manual.

**Keyboard Speed:** By selecting, you can change output speed of scanner to match with host computer. Generally, set 00 or 01 in working high speed. If some output characters of barcode have been lost, you may need to set 05 or 06 to match your host keyboard speed.





**Function Key:** Set Enable, scanner can output code as pressing function-key in your application program while the barcode datas contain ASCII value between 0116 to 1F16. Refer to ASCII table, page 94.

**Numeric Key:** The Keypad has to be selected if your application program is only keypad numeric code acceptable. So, scanner will output code as press numeric keypad when it read numeric digit. (The keypad is in the right side of keyboard, and Num Lock control key is also on.) If Alt+Keypad is selected, Caps Lock and output will be independent.



**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
------------------------	---------------	---------------------------

 *2AB* Keyboard layout	USA Belgium Danish France Germany Italian Portuguese Spanish Swedish Switzerland UK Latin American	00 * 01 02 03 04 05 06 07 08 09 10 11
 *2AC* Keyboard speed	0-8 0 : high clock rate 8 : low clock rate	00-08 01 *
 *2AD* Function key	Disable Enable	00 01 *
 *2AE* Numeric key	Alphabetic key Numeric keypad (Num lock state only) Alt+Keypad	00 * 01 02



\*%\$\$\*

**Exit**

## Keyboard wedge

**Caps Lock:** By selecting  Caps Lock or  No Caps Lock, scanner can get Caps Lock status.

**Power-on simulation:** All of the PCs check the keyboard status during power-on selftest. It is recommended to  Enable function if you are working without keyboard installation. It simulates keyboard timing and pass keyboard present status to the PC during power-on.





**Inter-character delay:** This delay is inserted after each data characters transmitted. If the transmission speed is too high, the system may not be able to receive all characters. Adjust it and try out suited delay to make system work properly.

**Block transmission delay:** It is a delay timer between barcode data output. The feature is used to transfer continually with shorter barcode data or multi-field scanning.



\*\$%+PRO\*

**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *2AF* Caps lock	Caps lock"ON" Caps lock"OFF"	00 01 *
 *2AG* Power-on simulation	Disable Enable	00 * 01
 *2AH* Inter-character delay	00-99 msec	00-99 02 *
 *2AI* Block transmission delay	00-99 10 msec	00-99 10 *



\*%\$\$\*

**Exit**

## RS-232

**CTS:** Clear To Send (Hardware Signal)

**RTS:** Request To Send (Hardware Signal)

**Xon:** Transmit On (ASCII Code 11<sub>16</sub>)

**Xoff:** Transmit Off (ASCII Code 13<sub>16</sub>)

### **Flow control:**

**None-**The communication only uses TxD and RxD signals without regard for any hardware or software handshaking protocol.

**RTS/CTS-**If the scanner wants to send the barcode data to host computer, it will issue the RTS signal first, wait for the CTS signal from the host computer, and then perform the normal data communication. If there is no replied CTS signal from the host computer after the timeout (Response Delay) duration, the scanner will issue a 5 warning beeps.

**Xon/Xoff-** When the host computer is unable to accept data, it sends a Xoff code to inform the scanner to suspend data transmission, and Xon to continue.

**ACK/NAK-** When the ACK/NAK protocol is used, the scanner waits for an ACK (acknowledge) or (not acknowledge) from the host computer after data transmission, and will resend in response to a NAK.

**Inter-character delay:** It is delay time between data character's data output. It is also same as Inter-char. delay of keyboard wedge.





**Block transmission delay:** It is a delay time between barcode data output. It is also same as Block transmission delay of keyboard wedge.

**Response delay:** This delay is used for serial communication of the scanner to waiting for handshaking acknowledgment from the host computer.



\*\$%+PRO\*

**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *3AA* Flow control	None RTS/CTS Xon/Xoff ACK/NAK	00 * 01 02 03
 *3AB* Inter-character delay	00-99 (msec)	00-99 00 *
 *3AC* Block transmission delay	00-99 (10 msec)	00-99 00 *
 *3AD* Response delay	00-99 (100 msec)	00-99 20 *



\*%\$\$\*





**Exit**





\*\$%+PRO\*

**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *3AE* Baud rate	300 BPS 600 BPS 1200 BPS 2400 BPS 4800 BPS 9600 BPS 19200 BPS 38400 BPS	00 01 02 03 04 05 * 06 07
 *3AF* Parity	None Odd Even	00 * 01 02
 *3AG* Data bit	8 bits 7 bits	00 * 01
 *3AH* Stop bit	One bit Two bits	00 * 01



\*%\$\$\*

**Exit**

## Wand Emulation

### Bar/space polarity:

**High/low**- Black will be transmitted as a high voltage level (+5) and space as low level (0V).


**Low/high**- Black will be transmitted as a low voltage level (0V) and space as high level (+5).

**Initial polarity:** You must make sure what is Initial polarity of your wand decode device in stand-by (idle). So, initial signal state as a High voltage level (+5) or Low voltage level (0V).



\*\$%+PRO\*

**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *4AA* Bar/space polarity	High/low Low/high	00 * 01
 *4AB* Initial polarity	Low High	00 * 01



\*%\$\$\*

**Exit**

## Wand Emulation

**Output speed:** This setting is same as serial transmission baud rate, and it must be approbated your wand decode resolution. The unit of speed is a width of minimum narrow bar.

**Margin delay:** It is a timer of zone like space zone of barcode label margin. The width of margin time will be added before and after in each barcode data automatically when it is transmitted.

**Transmit delay:** It is a delay time between barcode data output. It is the same as Block transmission delay of keyboard wedge.



**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
<p>*4AC*</p> <p>Output speed</p>	620 pps	00
	1250 pps	01
	2500 pps	02
	5000 pps	03 *
	10000 pps	04
	20000 pps	05
	*pps: pixel per second	

 *4AD* Reserved		00 *
 *4AE* Reserved		00 *
 *4AF* Margin delay	00-99 (10 pixel)	00-99 15 *
 *4AG* Transmit delay	00-99 (10 msec)	00-99 30 *



**Exit**

## Scan

### Scanning mode:

**Good-read off**-The trigger button must be pressed to activate scanning. The light source of scanner stops scanning when there is a successful reading or no code is decoded after the Stand-by duration elapsed.

**Momentary**-The trigger button acts as a switch. Press button to activate scanning and release button to stop scanning.

**Alternate**-The trigger button acts as a toggle switch. Press button to activate or stop scanning.

**Timeout off**-The trigger button must be pressed to activate scanning, and scanner stops scanning when no code is decoded after the Stand-by duration elapsed.

**Continue**-The scanner always keeps reading, and it does not matter when trigger button is pressed or duration is elapsed.





**Same Barcode delay time:** If the barcode has been scanned twice, then only the first barcode will be accepted.

**Double confirm:** If it is enabled, the scanner will require a several times successful decoding to confirm the barcode data. The more confirming times required the more inhibitive miss-reading code will be shown. If you set Double confirm, the Multi field scan Enable function won't be able to work.



\*\$%+PRO\*

**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *7AA* Scanning mode	Good-read off Momentary Alternate Timeout off Continue	00 01 * 02 03 04
 *7AB* Stand-by duration	01-99 (second)	00-99 10 *
 *7AC* Same barcode delay time	01-99 (10 msec)	01-99 50 *
 *7AD* Double confirm	00-99 (00: no double confirm)	00-09 00 *



\*%\$\$\*

**Exit**

## Scan

**Multi field scan:** The scanner can be read many sets of barcode data on the same scanning line at the same time, even if they are different kinds of barcode symbology.

**Global min./max. code length:** Global Minimum and Maximum length can be set to qualify data entry. The length is defined as the actual barcode data length to be sent. Label with length exceeds these limits will be rejected. Make sure that the Minimum length setting is no greater than the Maximum length setting, or otherwise the labels of the symbology will not be readable. In particular, you can set the same value for both Minimum and Maximum reading length to force the fixed length barcode decoded. The values of setting have no effect on certain symbologies with fixed length.

Notes 1): Please set the min/max length if you have special demand for individual barcode.

2): Include the Check sum digits if you want to set Global min/max code length.

**Inverted image scan:** Set  Enabled the scanner will scan both black/white barcode with white/black background.

**CTS trigger:** This operation enabled an external device to control scanning. The CTS trigger is controlled by apply an external trigger signal to the CTS input. When active, this signal causes scanning to begin as the scanner's trigger was depressed.







**Position indication:** This function can indicate the specific location before scanning. You can also set up the time of indication(except ZB-8110).



\*\$%+PRO\*

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
------------------------	---------------	-------------------------------

 *7AE* Multi field scan	Disable Enable	00 * 01
 *7AF* Global min. code length	00-63	00-63 04 *
 *7AG* Global max.code length	00-63	04-63 63 *
 *7AH* Inverted image scan	Disable Enable	00 * 01
 *7AI* CTS trigger	Disable Enable	00 * 01
 *7AK* Position indication	Disable 30 second 60 second 90 second 120 second 150 second 180 second Continue	00 * 01 02 03 04 05 06 07



**Exit**



## Indication

**Power on alert:** After power-on the scanner it will generate an alert signal to indicate a successful self-test.

**LED indication:** After each successful reading, the LED above the scanner will light up to indicate a good barcode reading.







**Buzzer indication:** After each successful reading, the scanner will beep buzzer to indicate a good barcode reading, and its **Beep loudness**, **Beep tone freq.** and **Beep tone duration** are adjustable.

**Beep loudness/Beep tone freq./Beep tone duration:** You can adjust **Beep Loudness**, **Beep tone** and **Beep duration** for a good reading upon favorite usage.



\*\$%+PRO\*

**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *5AA* Power on alert	Disable Enable	00 01 *
 *5AB* LED indication	Disable Enable	00 01 *
 *5AC* Buzzer indication	Disable Enable	00 01 *
 *5AD* Beep loudness	00-07	00-07 07 *
 *5AE* Beep tone freq.	00-99 (100Hz)	00-99 26 *
 *5AF* Beep tone duration	00-99 (10 msec)	00-99 10 *



\*%\$\$\*

**Exit**

## UPCA

**Read:** Format

Leading Zero	Data Digits (11 Digits)	Check Digit
-----------------	----------------------------	----------------

**Check-sum transmission:** By setting Enable, checks sum will be transmitted.

**Truncate leading/ending:** The leading or ending digits of barcode data characters can be truncated when these values are set to non-zero. It will beep instead of reading anything when the truncate value is more than the barcode data digits or the value of Truncate Leading is overlapped with that of the Ending. The maximum value of truncate digits is 15.

**Code ID setting:** Code ID setting is a character used to represent the symbol upon a succeeding reading. A Code ID setting is prefixed to the data begin or end transmitted if the feature is selected. If you want application to transmit Code ID, you must set Code ID transmission to Enable first. Refer to Code ID transmission.


**Insertion group selection:** The scanner offer one or two insertion group for own symbology. By setting one or two digits to indicate which insertion group you want to insert. You may refer to Character insertion.









Example: Group 2 → set 02 or 20.

Group 1 and 4 → set 14 or 41.



**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *NAA* Read	Disable Enable	00 01 *

 *NAB* Check-sum verification	Disable Enable	00 01 *
 *NAC* Check-sum transmission	Disable Enable	00 01 *
 *NAD* Max.code length	00-64	00-64 64 *
 *NAE* Min.code length	00-64	00-64 01 *
 *NAF* Truncate leading	0-15	00-15 00 *
 *NAG* Truncate ending	0-15	00-15 00 *
 *NAH* Code ID setting	00-ffH ASCII code	00-ffH < A > *
 *NAI* Insert group selection	00-44	00-44 00 *



**Exit**

# UPCA

**Supplement digits:** The Supplement digits barcode is the supplemental 2 or 5 characters for WPC code.

Format

Leading Zero	Data Digits (11 Digits)	Check Digit	Supplement Digits 2 or 5 or UCC / EAN 128
--------------	-------------------------	-------------	---

**Truncate Leading zero:** The leading "0" digits of UPCA data characters can be truncated when the function is enabled.



**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 Supplement digits	None 2 digits 5 digits UCC/EAN 128 Auto detection	00 * 01 02 03 04
 Truncate Leading zero	Disable Enable	00 01 *



**Exit**

# UPCE

**Read:** Format

Leading Zero	Data Digits (6 Digits)	Check Digits
-----------------	---------------------------	-----------------

**Check-sum verification:** The checksum of EAN-13 is optional and made as the sum of the numerical value of the data digits.

**Check-sum transmission:** By setting  Enable, checks sum will be transmitted.



**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
<p>*OAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00</p> <p>01 *</p>
<p>*OAB*</p> <p>Check-sum verification</p>	<p>Disable</p> <p>Enable</p>	<p>00</p> <p>01 *</p>
<p>*OAC*</p> <p>Check-sum transmission</p>	<p>Disable</p> <p>Enable</p>	<p>00</p> <p>01 *</p>



**Exit**

## UPCE

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.

### Supplement digits:

Format

Leading Zero	Data Digits (6 Digits)	Check Digit	Supplement Digits 2 or 5 or UCC/EAN 128
-----------------	---------------------------	----------------	---

**Truncate Leading zero:** Refer to Truncate Leading zero of UPCA.

**Expansion:** The expansion function is used only for UPCE and EAN-8 code reading. It extends to 13-digits with "0" digits when the feature is enabled.

Example: Barcode "0123654"







Output: "001236000057"



\*\$%+PRO\*

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *OAF* Truncate leading	0-15	00-15 00 *

 *OAG* Truncate ending	0-15	00-15 00 *
 *OAH* Code ID setting	00-ffH ASCII code	00-ffH < E > *
 *OAI* Insert group selection	00-44	00-44 00 *
 *OAJ* Supplement digits	None 2 digits 5 digits UCC/EAN 128 Auto detection	00 * 01 02 03 04
 *OAK* Truncate Leading zero	Disable Enable	00 * 01
 *OAL* Expansion	Disable Enable	00 * 01



**Exit**



## EAN-13

**Read:** Format

Data Digits (12 Digits)	Check Digits
-------------------------	--------------

**Check-sum verification:** The checksum of EAN-13 is optional and made as the sum of the numerical value of the data digits.

**Check-sum transmission:** By setting  Enable, checks sum will be transmitted.

**Max./Min. code length:** Each symbology has own Max./Min. Code Length. They can be set to qualify data entry. If their Max./Min. Code Length is zero, the Global Min./Max. Code Length is in effect. The length is defined as to the actual barcode data length to be sent. Label with length exceeds these limits will be rejected. Make sure that the Minimum length setting is no greater than the Maximum length setting, or otherwise all the labels of the symbology will not be readable. In particular, you can see the same value for both Minimum and Maximum reading length to force the fixed length barcode decoded.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.



**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *GAA*	Disable Enable	00 01 *
Read		

 *GAB* Check-sum verification	Disable Enable	00 01 *
 *GAC* Check-sum transmission	Disable Enable	00 01 *
 *GAD* Max.code length	00-64	00-64 64 *
 *GAE* Min.code length	00-64	00-64 01 *
 *GAF* Truncate leading	0-15	00-15 00 *
 *GAG* Truncate ending	0-15	00-15 00 *



Exit

## EAN-13

**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.

**Supplement digits:**

Format

Data Digits (12 Digits)	Check Digits	Supplement Digits 2 or 5 or UCC / EAN 128
----------------------------	-----------------	---

**ISBN/ISSN:** The ISBN (International Standard Book Number) and ISSN (International Standard Serial Number) are two kinds of barcode for book and magazines. The ISBN is 10 digits with leading "978" and the ISSN is 8 digits with leading "977" of the "EAN-13" symbolology.





Example: Barcode "9789572222720" - Output: "9572222724"

Example: Barcode "9771019248004" - Output: "10192484"



\*\$%+PRO\*

**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *GAH* Code ID setting	00-ffH ASCII code	00-ffH < F > *
 *GAI* Insert group selection	00-44	00-44 00 *
 *GAJ* Supplement digits	None 2 digits 5 digits UCC/EAN 128 Auto detection	00 * 01 02 03 04
 *GAL* ISBN/ISSN conversion	Disable Enable	00 * 01



\*%\$\$\*

**Exit**

## EAN-8

**Read:** Format

Data Digits (7 Digits)	Check Digits
---------------------------	-----------------

**Check-sum verification:** The checksum of EAN-8 is optional and made as the sum of the numerical value of the data digits.

**Check-sum transmission:** By setting  Enable, checks sum will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of EAN-13.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA








**Insertion group selection:** Refer to Insertion group selection of UPCA.



\*\$%+PRO\*

**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *FAA* Read	Disable Enable	00 01 *
 *FAB* Check-sum verification	Disable Enable	00 01 *

 *FAC* Check-sum transmission	Disable Enable	00 01 *
 *FAD* Max.code length	00-64	00-64 64 *
 *FAE* Min.code length	00-64	00-64 01 *
 *FAF* Truncate leading	0-15	00-15 00 *
 *FAG* Truncate ending	0-15	00-15 00 *
 *FAH* Code ID setting	Two characters 00-ffH ASCII code	00-ffH, 00-ffH < FF > *
 *FAI* Insert group selection	00-44	00-44 00 *



Exit

## EAN-8

**Supplement digits:** Format

Data Digits (7 Digits)	Check Digits	Supplement Digits 2 or 5 or UCC/EAN 128
---------------------------	-----------------	---

**Truncate Leading zero:** Refer to Truncate Leading zero of UPCE.

**Expansion:** Refer to Expansion of UPCE.



\*\$%+PRO\*

**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
<p>*FAJ*</p> <p>Supplement digits</p>	None 2 digits 5 digits UCC/EAN 128 Auto detection	00 * 01 02 03 04
<p>*FAK*</p> <p>Truncate Leading zero</p>	Disable Enable	00 * 01
<p>*FAL*</p> <p>Expansion</p>	Disable Enable	00 * 01



\*%\$\$\*

**Exit**

## Code 39

**Read:** Format

Start “★”	Data Digits ( Variable)	Checksum (Optional)	End “★”
--------------	----------------------------	------------------------	------------

**Check-sum verification:** The checksum of Code-39 is optional and made as the sum module 43 of the numerical value of the data digits.

**Check-sum transmission:** By setting Enable, checksum and will be transmitted.



\*\$%+PRO\*

**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *BAA* Read	Disable Enable	00 01 *
 *BAB* Check-sum verification	Disable Enable	00 * 01
 *BAC* Check-sum transmission	Disable Enable	00 * 01



\*%\$\$\*

**Exit**



## Code 39

**Max./Min. code length:** Each symbology has own Max./Min. Code Length. They can be set to qualify data entry. If their Max./Min. Code Length is zero, the Global Min./Max. Code Length is in effect. The length is defined as to the actual barcode data length to be sent. Label with length exceeds these limits will be rejected. Make sure that the Minimum length setting is no greater than the Maximum length setting, or otherwise all the labels of the symbology will not be readable. In particular, you can see the same value for both Minimum and Maximum reading length to force the fixed length barcode decoded.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.







 
**Insertion group selection:** Refer to Insertion group selection of UPCA.

**Format:** The Full ASCII Code-39 is an enhanced set of Code-39 that is the data with total of 128 characters to represent Full ASCII code. It is combined one of the digits +, %, \$ and/ with one of the alpha digits (A to Z).



**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
------------------------	---------------	---------------------------

 *BAD* Max. code length	00-64	00-64 00 *
 *BAE* Min. code length	00-64	00-64 00 *
 *BAF* Truncate leading	0-15	00-15 00 *
 *BAG* Truncate ending	0-15	00-15 00 *
 *BAH* Code ID setting	00-ffH ASCII code	00-ffH < * >
 *BAI* Insert group selection	00-44	00-44 00 *
 *BAJ* Format	Standard Full ASCII	00 * 01



\*%\$\$\*

Exit

## Code 39

**Append:** This function allows several symbols to be concatenated and be treated as one single data entry. The scanner will not transmit the embedded appending code (space for Code-39). If **Enable** and other symbols were read again with the appended code, then codes will be transmitted without Code ID, Preamble and Prefix. When a symbol was decoded without the appended code, the data will be transmitted without Code ID and Prefix, but the Postamble Suffix codes are appended. This function is used when the first number of code 39 is a space. Example: □123456.

**Start/end transmission:** The start and end characters of Code-39 are "★". You can transmit all data digits including two "★".



**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
<p>*BAK*</p> <p>Append</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>
<p>*BAM*</p> <p>Start/end transmission</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>



**Exit**

## Interleaved 2 of 5

**Read:** Format

Data Digits (Variable)	Checksum (Optional)
---------------------------	------------------------

**Check-sum verification:** The checksum is made as the sum module 10 of the numerical values of all data digits.

**Check-sum transmission:** By setting  Enable, checksum and will be transmitted.



**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
<p>*IAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00</p> <p>01 *</p>
<p>*IAB*</p> <p>Check-sum verification</p>	<p>Disable</p> <p>Enable</p>	<p>00</p> <p>01 *</p>
<p>*IAC*</p> <p>Check-sum transmission</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>



**Exit**

## Interleaved 2 of 5

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.



**Insertion group selection:** Refer to Insertion group selection of UPCA.



\*\$%+PRO\*

Program

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *IAD* Max. code leading	00-64	00-64 00 *
 *IAE* Min. code leading	00-64	00-64 00 *
 *IAF* Truncate leading	0-15	00-15 00 *
 *IAG* Truncate ending	0-15	00-15 00 *

 *IAH* Code ID setting	00-ffH ASCII code	00-ffH < i > *
 *IAI* Insert group selection	00-44	00-44 00 *



\*%SS\*

**Exit**

## Industrial 2 of 5

**Read:** Format

Data Digits (Variable)	Checksum (Optional)
---------------------------	------------------------

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.




**Code Id setting:** Refer to Code ID setting of UPCA.





**Insertion group selection:** Refer to Insertion group selection of UPCA.



\*\$%+PRO\*

**Program**

<i>Option Bar Code</i>	<i>Option</i>	<i>Alphanumeric Entry</i>
 *HAA* Read	Disable Enable	00 * 01
 *HAD* Max. code length	00-64	00-64 00 *
 *HAE* Min. code length	00-64	00-64 00 *

 *HAF* Truncate leading	0-15	00-15 00 *
 *HAG* Truncate ending	0-15	00-15 00 *
 *HAH* Code ID setting	00-ffH ASCII code	00-ffH < i > *
 *HAI* Insert group selection	00-44	00-44 00 *



**Exit**



## Matrix 2 of 5 Eur

**Read:** Format

Data Digits (Variable)	Checksum (Optional)
---------------------------	------------------------

**Checksum Verification:** The checksum is made as the sum module 10 of the numerical values of all data digits.

**Checksum Transmission:** By setting  Enable, checksum and will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.





**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.



**Program**

Option Bar Code	Option	Alphanumeric Entry
<p>*PAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>
<p>*PAB*</p> <p>Checksum Verification</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>

 *PAC* Checksum Transmission	Disable Enable	00 * 01
 *PAD* Max. code length	00-64	00-64 00 *
 *PAE* Min. code length	00-64	00-64 00 *
 *PAF* Truncate leading	0-15	00-15 00 *
 *PAG* Truncate ending	0-15	00-15 00 *
 *PAH* Code ID setting	00-ffH ASCII code	00-ffH < B > *
 *PAI* Insert group selection	00-44	00- 44 00 *



**Exit**

## Codabar

**Read:** Format

Start	Data Digits (Variable)	Checksum (Optional)	End
-------	------------------------	---------------------	-----

**Checksum Verification:** The checksum is made as the sum module 16 of the numerical values of all data digits.

**Checksum Transmission:** By setting Enable, checksum and will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.



**Program**

Option Bar Code	Option	Alphanumeric Entry
 Read	Disable Enable	00 * (8150/8210) 01 * (8110)
 Checksum Verification	Disable Enable	00 * 01

 *EAC* Checksum Transmission	Disable Enable	00 * 01
 *EAD* Max. code length	00-64	00-64 00 *
 *EAE* Min. code length	00-64	00-64 00 *
 *EAF* Truncate leading	0-15	00-15 00 *
 *EAG* Truncate ending	0-15	00-15 00 *
 *EAH* Code ID setting	00-ffH ASCII code	00-ffH < % > *



**Exit**

## Codabar

**Insertion group selection:** Refer to Insertion group selection of UPCA.

**Start/End type:** The Codabar has four pairs of Start/End pattern; you may select one pair to match your application.

**Start/End Transmission:** Refer to Start/End Transmission of Code 39.



**Program**

Option Bar Code	Option	Alphanumeric Entry
 Insert group selection	00-44	00-44 00 *
 Start/End type	ABCD/ABCD abcd/abcd ABCD/TN*E Abcd/tn*e	00 * 01 02 03
 Start/End transmission	Disable Enable	00 * 01



**Exit**

## Code-128

**Read:** Format

Data Digits (Variable)	Checksum (Optional)
---------------------------	------------------------

**Checksum Verification:** The checksum is made as the sum module 103 of all data digits.

**Checksum Transmission:** By setting Enable, checksum



\*\$%+PRO\*

**Program**

Option Bar Code	Option	Alphanumeric Entry
 *DAA* Read	Disable Enable	00 01 *
 *DAB* Checksum Verification	Disable Enable	00 01 *
 *DAC* Checksum Transmission	Disable Enable	00 * 01



\*%\$\$\*

**Exit**

## Code-128

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.

**Format:** The Code-128 can be translated to UCC/EAN-128 format if it starts with FNC1 character. The first FNC1 will be translated to "J1", and next to be a field separator code as <GS>(1D16).

J1	Datas	<GS>	Datas	Checksum
----	-------	------	-------	----------








 
**Append:** When the function is enabled, it won't show the data immediately if scanner read the barcode includes FNC2 code. It will show all data until it read the barcode, which doesn't have FNC2 code.

**Field separator code:** This feature is only used for UCC/EAN-128 format. This Field separator code means you can reassign second or after a FNC1 for your usage. The default of ASCII code is <GS>(1D16).



Program

Option Bar Code	Option	Alphanumeric Entry
 *DAD* Max. code length	00-64	00-64 00 *
 *DAE* Min. code length	00-64	00-64 00 *

 *DAF* Truncate leading	0-15	00-15 00 *
 *DAG* Truncate ending	0-15	00-15 00 *
 *DAH* Code ID setting	00-ffH ASCII code	00-ffH < # > *
 *DAI* Insert group selection	00-44	00-44 00 *
 *DAJ* Format	Standard UCC/EAN-128	00 * 01
 *DAK* Append	Disable Enable	00 * 01
 *DAL* UCC/EAN-128 ID setting	00-ffH ASCII code	00-ffH < # > *
 *DAM* Field separator code	00-ffH ASCII code	00-ffH 1DH *



Exit



## Code-93

**Read:** Format

Data Digits (Variable)	Checksum1 (Optional)	Checksum2 (Optional)
---------------------------	-------------------------	-------------------------

**Checksum Verification:** The checksum is made as the sum module 47 of the numerical values of all data digits.

**Checksum Transmission:** By setting **Enable**, checksum and will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.








**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.



**Program**

Option Bar Code	Option	Alphanumeric Entry
 Read	Disable Enable	00 * 01
 Checksum Verification	Disable Enable (two digits)	00 01 *

 *CAC* Checksum Transmission	Disable Enable	00 * 01
 *CAD* Max. code length	00-64	00-64 00 *
 *CAE* Min. code length	00-64	00-64 00 *
 *CAF* Truncate leading	0-15	00-15 00 *
 *CAG* Truncate ending	0-15	00-15 00 *
 *CAH* Code ID setting	00-ffH ASCII code	00-ffH < & > *
 *CAI* Insert group selection	00-44	00-44 00 *



**Exit**

## Code-11

**Read:** Format

Data Digits (Variable)	Checksum1 (Optional)	Checksum2 (Optional)
---------------------------	-------------------------	-------------------------

**Checksum Verification:** The checksum is presented as the sum module 11 of all data digits.

**Checksum Transmission:** By setting Enable, checksum1 and checksum2 will be transmitted upon your selected checksum verification method.

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.







**Insertion group selection:** Refer to Insertion group selection of UPCA.



\*\$%+PRO\*

**Program**

Option Bar Code	Option	Alphanumeric Entry
 *AAA* Read	Disable Enable	00 * 01
 *AAB* Checksum Verification	Disable One digit Two digits	00 01 * 02

 * AAC * Checksum Transmission	Disable Enable	00 * 01
 * AAD * Max. code length	00-64	00-64 00 *
 * AAE * Min. code length	00-64	00-64 00 *
 * AAF * Truncate leading	0-15	00-15 00 *
 * AAG * Truncate ending	0-15	00-15 00 *
 * AAH * Code ID setting	00-ffH ASCII code	00-ffH < O > *
 * AAI * Insert group selection	00-44	00-44 00 *



**Exit**

## MSI/plessey

Read: Format

Data Digits (Variable)	Checksum1 (Optional)	Checksum2 (Optional)
---------------------------	-------------------------	-------------------------

**Checksum Verification:** The MSI/Plessey has one or two optional checksum digits. The checksum is presented 3 kinds of method Mod10, Mod10/10 and Mod 11/10. The checksum1 and checksum2 will be calculated as the sum module 10 or 11 of the data digits.

**Checksum Transmission:** By setting Enable, checksum1 and checksum2 will be transmitted upon your selected checksum verification method.

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.








**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.



Program

Option Bar Code	Option	Alphanumeric Entry
 Read	Disable Enable	00 * 01
 Checksum Verification	Disable Mod 10 Mod 10/10 Mod 11/10	00 * (8110) 01 * (8150/8210) 02 03

 *KAC* Checksum Transmission	Disable Enable	00 * 01
 *KAD* Max. code length	00-64	00-64 00 *
 *KAE* Min. code length	00-64	00-64 00 *
 *KAF* Truncate leading	0-15	00-15 00 *
 *KAG* Truncate ending	0-15	00-15 00 *
 *KAH* Code ID setting	00-ffH ASCII code	00-ffH < @ > *
 *KAI* Insert group selection	00-44	00-44 00 *



**Exit**

## UK/plessey

**Read:** Format

Data Digits (Variable)	Checksum1+2 (Optional)
---------------------------	---------------------------

**Checksum Verification:** The UK/Plessey has one or two optional checksum digits. The checksum1 and checksum2 will be calculated as the sum module 10 or 11 of the data digits.

**Checksum Transmission:** By setting Enable, checksum will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.








**Insertion group selection:** Refer to Insertion group selection of UPCA.



\*\$%+PRO\*

**Program**

Option Bar Code	Option	Alphanumeric Entry
<p>*LAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>
<p>*LAB*</p> <p>Checksum Verification</p>	<p>Disable</p> <p>Enable</p>	<p>00</p> <p>01 *</p>

 *LAC* Checksum Transmission	Disable Enable	00 * 01
 *LAD* Max. code length	00-64	00-64 00 *
 *LAE* Min. code length	00-64	00-64 00 *
 *LAF* Truncate leading	0-15	00-15 00 *
 *LAG* Truncate ending	0-15	00-15 00 *
 *LAH* Code ID setting	00-ffH ASCII code	00-ffH < @ > *
 *LAI* Insert group selection	00-44	00-44 00 *



**Exit**



# Telepen

**Read:** IATA (International Air Transport Association).

**Checksum Verification:** The checksum is presented as the sum module 10 or 11 of the data digits.

**Checksum Transmission:** By setting Enable, checksum will be transmitted.

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.







 
**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.



**Program**

Option Bar Code	Option	Alphanumeric Entry
 *MAA* Read	Disable Enable	00 * 01
 *MAB* Checksum Verification	Disable Enable	00 * 01
 *MAC* Checksum Transmission	Disable Enable	00 * 01

 *MAD* Max. code length	00-64	00-64 00 *
 *MAE* Min. code length	00-64	00-64 00 *
 *MAF* Truncate leading	0-15	00-15 00 *
 *MAG* Truncate ending	0-15	00-15 00 *
 *MAH* Code ID setting	00-ffH ASCII code	00-ffH < S > *
 *MAI* Insert group selection	00-44	00-44 00 *
 *MAJ* Format	Numeric only Full ASCII only	00 * 01



**Exit**

## Standard 2 of 5

**Read:** Format

Data Digits (Variable)	Checksum1 (Optional)
---------------------------	-------------------------

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.





**Insertion group selection:** Refer to Insertion group selection of UPCA.



\*\$%+PRO\*

**Program**

Option Bar Code	Option	Alphanumeric Entry
 *JAA* Read	Disable Enable	00 * 01
 *JAD* Max. code length	00-64	00-64 00 *
 *JAE* Min. code length	00-64	00-64 00 *

 *JAF* Truncate leading	0-15	00-15 00 *
 *JAG* Truncate ending	0-15	00-15 00 *
 *JAH* Code ID setting	00-ffH ASCII code	00-ffH < i > *
 *JAI* Insert group selection	00-44	00-44 00 *



**Exit**

## RSS-14

**Read:** Format

Data Digits (Variable)	Checksum1 (Optional)
---------------------------	-------------------------

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.






**UCC/EAN 128 emulation:** Refer to Transmission (P89), Code ID transmission must be set as AIM ID enable. Then ]C1 will be identified as prefix of barcode data transmission.



\*\$%+PRO\*

**Program**

Option Bar Code	Option	Alphanumeric Entry
<p>*TAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>
<p>*TAD*</p> <p>Max. code length</p>	<p>00-64</p>	<p>00-64</p> <p>64 *</p>
<p>*TAE*</p> <p>Min. code length</p>	<p>00-64</p>	<p>00-64</p> <p>01 *</p>

 *TAF* Truncate leading	0-15	00-15 00 *
 *TAG* Truncate ending	0-15	00-15 00 *
 *TAH* Code ID setting	00-ffH ASCII code	00-ffH < R4 > *
 *TAI* Insert group selection	00-44	00-44 00 *
 *TAK* UCC/EAN128 emulation	Disable Enable	00 * 01



**Exit**

## RSS-Limited

**Read:** Format

Data Digits (Variable)	Checksum1 (Optional)
---------------------------	-------------------------

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.






 
**UCC/EAN 128 emulation:** Refer to UCC/EAN 128 emulation of RSS-14.



\*\$%+PRO\*

Program

Option Bar Code	Option	Alphanumeric Entry
<p>*UAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>
<p>*UAD*</p> <p>Max. code length</p>	<p>00-64</p>	<p>00-64</p> <p>64 *</p>

 *UAE* Min. code length	00-64	00-64 01 *
 *UAF* Truncate leading	0-15	00-15 00 *
 *UAG* Truncate ending	0-15	00-15 00 *
 *UAH* Code ID setting	00-ffH ASCII code	00-ffH < RL > *
 *UAI* Insert group selection	00-44	00-44 00 *
 *UAK* UCC/EAN128 emulation	Disable Enable	00 * 01



Exit



## RSS-Expanded

**Read:** Format

Data Digits (Variable)	Checksum1 (Optional)
---------------------------	-------------------------

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.






 
**UCC/EAN 128 emulation:** Refer to UCC/EAN 128 emulation of RSS-14.



\*\$%+PRO\*

**Program**

Option Bar Code	Option	Alphanumeric Entry
<p>*VAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>
<p>*VAD*</p> <p>Max. code length</p>	<p>00-64</p>	<p>00-99</p> <p>99 *</p>

 *VAE* Min. code length	00-64	00-99 01 *
 *VAF* Truncate leading	0-15	00-15 00 *
 *VAG* Truncate ending	0-15	00-15 00 *
 *VAH* Code ID setting	00-ffH ASCII code	00-ffH < RX > *
 *VAI* Insert group selection	00-44	00-44 00 *
 *VAK* UCC/EAN128 emulation	Disable Enable	00 * 01



Exit

# China Post

**Read:** Format

Data Digits (Variable)	Checksum1 (Optional)
---------------------------	-------------------------

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.





**Insertion group selection:** Refer to Insertion group selection of UPCA.



\*\$%+PRO\*

**Program**

Option Bar Code	Option	Alphanumeric Entry
<p>*SAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>
<p>*SAD*</p> <p>Max. code length</p>	<p>00-64</p>	<p>00-64</p> <p>11 *</p>
<p>*SAE*</p> <p>Min. code length</p>	<p>00-64</p>	<p>00-64</p> <p>11 *</p>

 *SAF* Truncate leading	0-15	00-15 00 *
 *SAG* Truncate ending	0-15	00-15 00 *
 *SAH* Code ID setting	00-ffH ASCII code	00-ffH < t > *
 *SAI* Insert group selection	00-44	01-44 00 *



**Exit**

## Italian Pharmacode

**Read:** Format

Data Digits (Variable)	Checksum1 (Optional)
---------------------------	-------------------------

**Max./Min. code length:** Refer to Max./Min. code length of Code-39.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.






 
**Leading "A":** If this function is enabled, each prefix of data shall be A.



\*\$%+PRO\*

**Program**

Option Bar Code	Option	Alphanumeric Entry
 *WAA* Read	Disable Enable	00 * 01
 *WAD* Max. code length	00-64	00-64 10 *

 *WAE* Min. code length	00-64	00-64 09 *
 *WAF* Truncate leading	0-15	00-15 00 *
 *WAG* Truncate ending	0-15	00-15 00 *
 *WAH* Code ID setting	00-ffH ASCII code	01-ffH < p > *
 *WAI* Insert group selection	00-44	00-44 00 *
 *WAJ* Leading "A"	Disable Enable	00 * 01



Exit

## Code-16K

Only the ZB-8210 can decode Code-16K.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.



**Program**

Option Bar Code	Option	Alphanumeric Entry
<p>*RAA*</p> <p>Read</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>
<p>*RAF*</p> <p>Truncate leading</p>	<p>0-15</p>	<p>00-15</p> <p>00 *</p>
<p>*RAG*</p> <p>Truncate ending</p>	<p>0-15</p>	<p>00-15</p> <p>00 *</p>
<p>*RAH*</p> <p>Code ID setting</p>	<p>00-ffH ASCII code</p>	<p>00-ffH</p> <p>&lt; &gt; *</p>
<p>*RAI*</p> <p>Insert group selection</p>	<p>00-44</p>	<p>00-44</p> <p>00 *</p>



## PDF-417

Only the ZB-8210 can decode PDF-417.

**Truncate leading/ending:** Refer to Truncate leading/ending of UPCA.

**Code Id setting:** Refer to Code ID setting of UPCA.

**Insertion group selection:** Refer to Insertion group selection of UPCA.



\*\$%+PRO\*

### Program

Option Bar Code	Option	Alphanumeric Entry
 *QAA* Read	Disable Enable	00 01 *
 *QAF* Truncate leading	0-15	00-15 00 *
 *QAG* Truncate ending	0-15	00-15 00 *
 *QAH* Code ID setting	00-ffH ASCII code	00-ffH < > *
 *QAI* Insert group selection	00-44	00-44 00 *



\*%\$\$\*

Exit



## String setting

**Prefix characters:** Up to 22 ASCII characters may be sent before data digits.

Prefix	Data Digits	Suffix
--------	-------------	--------

**Suffix characters:** Up to 22 ASCII characters may be sent after data digits.

**Preamble/ Postamble characters:** They are appended to the data automatically when each barcode is decoded.

Example:

Add a prefix/suffix or preamble/postamble for all symbologies. In this example, you are sending a \$ symbol as a prefix for all symbologies.



Steps:







- 1) Scan **Programming** and **Prefix characters setting** barcode.
- 2) Use the ASCII code table to find the value of \$→24.
- 3) Scan **2** and **4** from the barcode on the fold out back page.
- 4) Scan **Finish** from the barcode on the fold out page.
- 5) Scan **Exit** barcode.



\*\$%+PRO\*

Program

Option Bar Code	Option	Alphanumeric Entry
 *8AA* Prefix characters setting	None 1-22 characters	00 * 00-ffH ASCII code
 *8AB* Suffix characters setting	None 1-22 characters	0D * 00-ffH ASCII code

 *8AC* Preamble characters setting	None 1-22 characters	00 * 00-ffH ASCII code
 *8AD* Postamble characters setting	None 1-22 characters	00 * 00-ffH ASCII code
 *8AE* Insert G1 characters setting	None 1-22 characters	00 * 00-ffH ASCII code
 *8AF* Insert G2 characters setting	None 1-22 characters	00 * 00-ffH ASCII code
 *8AG* Insert G3 characters setting	None 1-22 characters	00 * 00-ffH ASCII code
 *8AH* Insert G4 characters setting	None 1-22 characters	00 * 00-ffH ASCII code

  
\*%\$\$\* **Exit**

## String setting

**Insert G1/G2/G3/G4 character setting:** The scanner offer 4 positions and 4 characters to insert among the symbol.

Example: Barcode "1 2 3 4 5 6".

Output- Barcode "1 2 A B 3 4 C D 5 6".



Steps:

- 1) Scan **Programming** and **Insert G1 characters setting** barcode.
- 2) Use the ASCII code table to find the value of A→41,B→ 42.
- 3) Scan **4, 1** and **4, 2** from the barcode on the fold out back page.
- 4) Scan **Finish** from the barcode on the fold out page.
- 5) Repeat the same procedure in **Insert G2 characters setting**.
- 6) Scan **Exit** barcode.
- 7) Insert data group 1-4 position. Please refer to Chapter-Transmission, page 65 and in specific barcode that you want to use.



**Program**

Option Bar Code	Option	Alphanumeric Entry
 Insert G1 characters setting	None 1-22 characters	00 * 00-ffH ASCII code
 Insert G2 characters setting	None 1-22 characters	00 * 00-ffH ASCII code

 *8AG* Insert G3 characters setting	None 1-22 characters	00 * 00-ffH ASCII code
 *8AH* Insert G4 characters setting	None 1-22 characters	00 * 00-ffH ASCII code



**Exit**

## Transmission

**Preamble transmission:** By setting Enable, Preamble will be appended before the data transmitted.

**Postamble transmission:** By setting Enable, Postamble will be appended after the data is transmitted.





**Insert data group 1-4 position:** The scanner offers 4 positions to insert among the symbol. The position default value is "00" to indicate no character insertion. Beside, make sure insertion positions are not greater than the symbols; otherwise the insertion data is not effective.

**Code ID position:** Upon your usage, the transmitting position of Code ID can be selected to place Before Code Data or After Code Data when it is transmitted.



**Program**

Option Bar Code	Option	Alphanumeric Entry
<p>*6AA*</p> <p>Preamble transmission</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>
<p>*6AB*</p> <p>Postamble transmission</p>	<p>Disable</p> <p>Enable</p>	<p>00 *</p> <p>01</p>

 *6AC* Insert data group 1 position	00-64 (00: no insertion)	00-64 00 *
 *6AD* Insert data group 2 position	00-64 (00: no insertion)	00-64 00 *
 *6AE* Insert data group 3 position	00-64 (00: no insertion)	00-64 00 *
 *6AF* Insert data group 4 position	00-64 (00: no insertion)	00-64 00 *
 *6AG* Code ID position	Before code data After code data	00 * 01



**Exit**

## Transmission

**Code ID transmission:** If your application is needed to transmit Code ID, you must set this to Proprietary ID or AIM ID.

**Code length transmission:** A number of data digits can be transmitted before the code data when **Enable** is selected. The total length of the barcode is the number of barcode data except Truncate Leading/Ending Digits. And the length is a number with two digits.




**Code name transmission:** This function is to show unknown barcode symbologies that include all readable symbologies of the scanner. When Enable is selected, Code Name will be transmitted before code data, you will know what kind of barcode symbology is.

**Case conversion:** Under the barcode, you can set the alphabet in either upper case or lower case.



Program

Option Bar Code	Option	Alphanumeric Entry
<p>*6AH*</p>	Disable	00 *
Code ID	Proprietary ID	01
transmission	AIM ID	02

 
 *6AI* Code length transmission	Disable Enable	00 * 01
 *6AJ* Code name transmission	Disable Enable	00 * 01
 *6AK* Case conversion	Disable Upper case Lower case *For barcode data only	00 * 01 02



Exit

**Format of barcode data transmission:**

Prefix	Name	Preamble	ID	Code Length	Barcode data	ID	Postamble	Suffix
--------	------	----------	----	-------------	--------------	----	-----------	--------





# Test Chart

CODABAR-PARA



a154987a

CODE-11 PARA



654215



258963

CODE-39 PARA



\*741258\*



951263



7 534539 789813

PDF-417



STANDRAD-25 PARA



65978



87549


EAN-8 PARA



9456 2156



04976

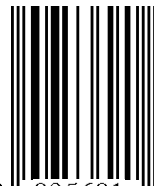

0 095601 1

INTERLEAVED-25 PARA



46820

MATRIX 25 PARA



4563535663

MSI/PLESSEY PARA



754268

UPCA PARA



5 73648 64734 5

UK/PLESSEY PARA



64872

**ASCII Code Table** *Note:*  *For keyboard wedge only.*

L \ H	0	1	0	1
0	Null		NUL	DLE
1	Up	F1	SOH	DC1
2	Down	F2	STX	DC2
3	Left	F3	ETX	DC3
4	Right	F4	EOT	DC4
5	PgUp	F5	ENQ	NAK
6	PgDn	F6	ACK	SYN
7		F7	BEL	ETB
8	Bs	F8	BS	CAN
9	Tab	F9	HT	EM
A		F10	LF	SUB
B	Home	Esc	VT	ESC
C	End	F11	FF	FS
D	Enter	F12	CR	GS
E	Insert	Ctrl+	SO	RS
F	Delete	Alt+	SI	US

L \ H	2	3	4	5	6	7
0	SP	0	@	P	`	p
1	!	1	A	Q	a	q
2	"	2	B	R	b	r
3	#	3	C	S	c	s
4	\$	4	D	T	d	t
5	%	5	E	U	e	u
6	&	6	F	V	f	v
7	'	7	G	W	g	w
8	(	8	H	X	h	x
9	)	9	I	Y	i	y
A	★	:	J	Z	j	z
B	+	;	K	[	k	{
C	,	<	L	\	l	
D	-	=	M	]	m	}
E	.	>	N	^	n	~
F	/	?	O	_	o	DEL

## Parameter Setting List



Program



### Barcode standard parameter setting list

If you wish to display the current configuration of your ZB-8110/8150/8210, scanner over the host terminal/computer, scan the Barcode standard parameter setting list bar code.



### Unique parameter list

If you wish to display the unique parameter setting list, scan the unique parameter list bar code



### System parameter setting list

If you wish to display the product information and revision number for your ZB-8110/8150/8210 scanner over the host terminal/computer, scan the System parameter setting list bar code.



### String setting list

If you wish to display the string format list, scan the String setting list bar code.



\*!VR\*

**Firmware version list**

If you wish to display the firmware version, scan the Firmware version list.



\*!IN\*

**WARNING: Default value initialization**

If you wish to return the ZB-8110/8150/8210 to all the factory default settings, scan the Default value initialization bar code.



\*%\$\$\*

**Exit**



0



1



2



3



4



5



6



7



8



9



A



B



C



D



E



F



Finish