

easyRAID S16-U4R4

**Ultra 320 SCSI to Serial ATA
Disk Array System**

&

easyRAID S16-F2R4

**Fibre Channel to Serial ATA
Disk Array System**

Hardware User Manual

Table of Contents

Preface.....	iii
--------------	-----

Chapter 1 Overview

Features	2
Understanding RAID	3
Just a Bunch Of Disks	3
RAID Levels	3
Hot Spare Disks	6
RAID Combinations	6
Summary of RAID Levels	7
System Requirements	8
Operating Environment	8
VT100 Terminal Settings	8
Host Interface	8
Hard Disks	9

Chapter 2 Basic Configuration

Unpacking	11
Components	12
Front View	12
Disk Tray	13
Rear View	14
Installing Disks	15
Making Connections	18
Connecting the Host Interface	18
Connecting the RS-232 Cable	19
Connecting and Turning on the Power	20

Chapter 3 Maintenance

Replacing a Disk	21
Replacing a Power Supply	22
Replacing a Fan	24
Upgrading Memory	26

Appendix

Hardware Specifications	31
Warnings and Certifications	33

Preface

About this Manual

This manual is designed to make the disk array system as easy to use as possible. Information contained in this document has been checked for accuracy, but no guarantee is given that the contents is correct. Information and specifications are subject to change without notice.

Copyright Notice

© Copyright 2003

All rights reserved. This disk array system and related documentation are protected by copyright and are distributed under licenses restricting their use, copying, and distribution. No part of this documentation may be reproduced in any form by any means without prior written authorization of the company and its licensors, if any.

Conventions



Caution

This symbol is used to remind users to pay attention to important descriptions regarding usage and maintenance (repair) or additional important information related to this disk array system.



Note

This symbol is used to remind users of useful information that can make procedures such as configuration easier to accomplish.

Important Safety Instructions, Care and Handling



Before starting, take a few minutes to read this manual. Read all of these instructions and save this manual for later reference.



Protect the disk array system from extremely high or low temperatures. Let the disk array system warm (or cool) to room temperature before using it.



Protect the disk array system from being bumped or dropped. Do not place the disk array system on an unstable cart, stand, or table. It may fall, causing serious damage to the product.



Keep the disk array system away from magnetic forces.



Do not use the disk array system near water.



Keep the disk array system away from dust, sand, or dirt.



Gaps and openings in the cabinet are provided for ventilation. Never block or cover these openings, because the disk array system may overheat and become unreliable. Don't place the disk array system on a bed, sofa, rug, or other similar surface.



 
Do not place the disk array system near or over a radiator or heat register.



Refer to the rating plate for the correct voltage and ensure that the appliance voltage corresponds to the supply voltage.



The appliance must be grounded. The disk array system is equipped with a 3-wire grounded type of power cord. This power cord will only fit into a grounded type of power outlet.



If an extension cord or a power center is used with the disk array system, make sure that the total current consumption of all products plugged into the wall outlet does not exceed the ampere rating.



Do not place the disk array system where the cord will be walked on.



Never push any kind of object into the disk array system through cabinet gaps and openings, since they may touch dangerous voltage points and cause a risk of fire or electric shock.



Unplug the power cord from the wall outlet before cleaning. Keep the disk array system dry. Do not use liquid cleaners, aerosol cleaners, or a wet cloth. Use a damp cloth for cleaning.



Except as specifically explained in this User Manual, do not attempt to service the disk array system by yourself. Opening or removing the covers may expose you to dangerous voltages.



Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions.

- If the disk array system has been exposed to water or any liquid.
- If the disk array system has been dropped or the cabinet damaged.



Placement Notes

- The disk array system LCD panel can be damaged by exposure to direct sunlight. Limit exposure to subdued or indirect sunlight only.
 - The disk array system should be used only in clean environments that are free from airborne contaminants such as dust, dirt, and smoke. Excessive moisture or oil particles in the air can also hinder disk array system performance.
 - To reduce the possibility of data errors caused by electromagnetic interference, locate the disk array system at least five feet away from electrical appliances and equipment that generates magnetic fields.
-



Power Supply Safety Notes

- To avoid electric shocks, do not use an extended power cord or an outlet that does not match the disk array system plug or leaves the plug exposed.
 - The disk array system has a 3-wire grounded plug. The third pin connects to ground; do not remove it.
 - If the power cord or plug is damaged or worn, unplug it immediately and contact a qualified service technician for maintenance.
 - To avoid fire or electric shocks, do not overload electric power outlets.
-


1 Overview

The disk array system uses groups of inexpensive disks to provide flexibility when balancing data availability, access rate, and capacity management needs.

High data availability is achieved by using the fault tolerance features of RAID (Redundant Array of Inexpensive Disks); hot spare disks with automatic on-line rebuild; hot swap disks, power supplies, and fans; independent serial ATA (SATA) disk controllers; and dual host controllers. Our confidence in the disk array system is backed by a three year warranty.

A high data access rate is achieved by combining the individual data rates of serial ATA disks in a RAID configuration. Serial ATA disks lack some of the features of SCSI disks but are just as fast when used with a high performance RAID controller. In the disk array system, RAID is controlled by a high performance CPU, which transfers data through dual host interfaces at the maximum possible rate.

Flexible data capacity management is achieved with on-line RAID expansion, RAID capacity division into slices, and multiple logical RAIDs. Management is performed through front panel, or RS-232 interfaces.

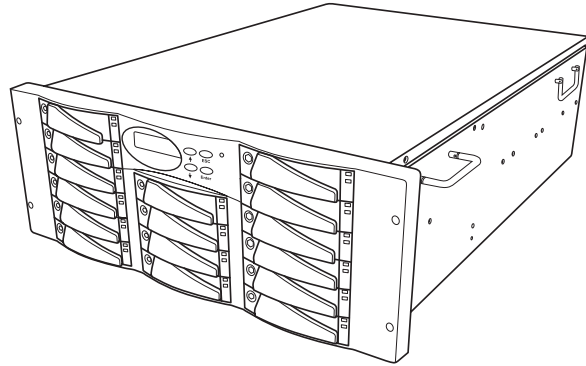

Features

The main features of the disk array system are listed as follows. Refer to the specifications table on page 31 for more detailed information.

- Operating system independent
- Up to eight JBOD, RAID 0, 1, 3, 5, 0+1, 30, or 50 array groups
- On-line expansion
- Allows division of array groups into slices, each mapped to a LUN
- Hot spare disk and automatic on-line rebuild
- Up to 16 hot swap serial ATA disks for a total capacity of 3.5 TB (terabytes)
- Three hot swap power supplies – if one fails, the others take over without interruption
- Two hot swap fans with intelligent speed and temperature management
- Sixteen 150 MB/s serial ATA channels
- Fast 64-bit RISC CPU based RAID controller with up to 1 GB of cache in an SO-DIMM
- Dual Ultra SCSI (ERX16S-U4R4) or fibre channel (ERX16S-F2R4) host interfaces
- Audible alarm, disk tray LED, and LCD panel failure indicators
- Configuration via the front panel and RS-232 interfaces

Understanding RAID

Read this section to understand how to balance data availability, access rate, and capacity management needs.

Just a Bunch Of Disks

Just a Bunch Of Disks (JBOD) consists of two or more disks that can be different sizes. Disk 1 is completely filled, then disk 2, disk 3, and so on until the final disk is full.

The total capacity of JBOD is the sum of the capacities of each disk. Disks are added until the desired total capacity is reached.

JBOD is used in the following situations:


- Building useful capacity from disks that are too small to be individually useful
- Making capacity management easier, since the user only sees one logical disk

JBOD doesn't improve data availability or access rate when compared with a single disk.

RAID Levels

The overall arrangement of disks in RAID is called the RAID level. Read this section to understand RAID levels.

RAID 0

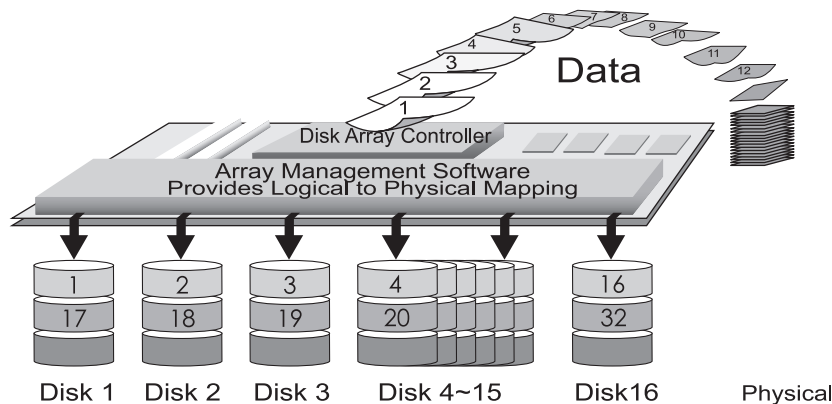

In RAID 0, data is divided into pieces and written to all disks in parallel. This process is called striping because the pieces of data form a stripe across multiple disks. This improves access rate, but makes availability lower, since there are more disks and failure of a single disk causes failure of the array. A RAID 0 array is unsuitable for data that can not easily be reproduced, or for data that must be available for critical system operation.

RAID 0 consists of two or more disks of equal capacity. The total capacity of RAID 0 is the sum of the capacities of each disk. Disks are added until the desired total capacity is reached.

easyRAID S16 Serial ATA Disk Array Systems


A RAID 0 array is useful in the following situations:

- Storing program image libraries or run-time libraries for rapid loading. A backup exists because these libraries are usually supplied on read-only media.
- Storing large tables or other structures of read-only data for rapid application access. This data should be backed up so that it can be recreated in the event of a failure.
- Capturing data from external sources at very high data transfer rates.

A RAID 0 array is not useful in the following situations:

- Applications that make sequential requests for small amounts of data. These applications spend most of their I/O time waiting for disks to spin, whether or not they use striped arrays.
- Applications that make synchronous random requests for small amounts of data.

RAID 1

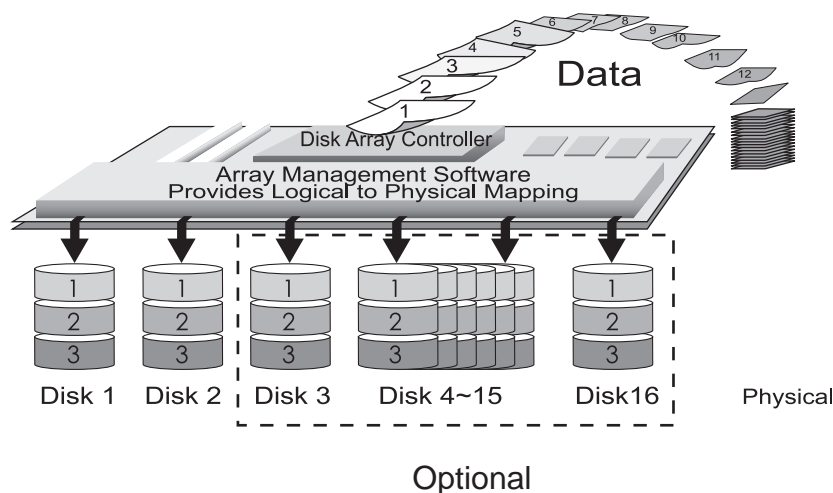


In RAID 1, data is duplicated on two or more disks to provide high access rate and very high data availability. This process is called mirroring. If a disk fails, the RAID controller directs all requests to the surviving members.

A RAID 1 array is useful in the following situations:

- Availability requirements are very high
- High access rate is required
- Cost of storage is a secondary issue

RAID 3

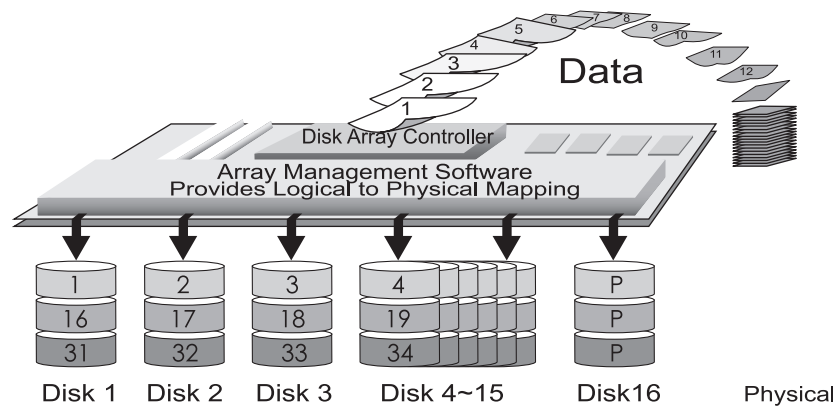

In RAID 3, data is divided into pieces; the parity of these pieces is calculated; and the pieces are written to separate disks in parallel with the writing of the parity to a dedicated disk. This process is called striping with parity. The parity disk stores redundant information about the data on other disks. If a single disk fails, then the data on the other disks is used to regenerate the data on the failed disk. Striping delivers a high access rate and parity delivers good data availability. The single parity disk is a bottleneck on sequential writes, since parity must always be written to the single parity disk.

RAID 3 consists of two or more disks used for data and one disk used for fault tolerant data. The total capacity of RAID 3 is the sum of the capacities of each data disk. Add disks until the desired capacity is reached, then add one more disk for fault tolerance.


RAID 3 is used by the following applications that request large amounts of data sequentially:

- Processing of graphical or video images
- Processing of CAD/CAM files

RAID 3 has the following characteristics:

- Excellent performance for data transfer intensive applications
- Not well suited for transaction processing or other I/O request intensive applications

RAID 5

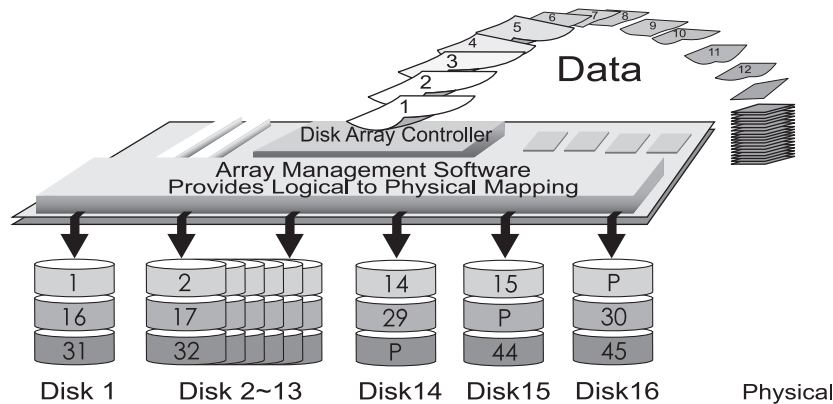

In RAID 5, data is divided into pieces; the parity of these pieces is calculated; and the pieces and parity are written to separate disks in parallel. The parity is written to a different disk each time. Parity provides redundant information about the data on other disks. If a single disk fails, then the data on the other disks is used to regenerate the data on the failed disk. Striping delivers a high access rate and parity delivers good data availability. The bottleneck caused by the single parity disk of RAID 3 is not present in RAID 5, since parity is stored on all disks.

RAID 5 consists of two or more disks used for data and one additional disk used for fault tolerance. The total capacity of RAID 5 is the sum of the capacities of each data disk. Add disks until the desired capacity is reached, then add one more disk for fault tolerance.

RAID 5 is best used with applications whose data has the following characteristics:

- The data is worth protecting, but not as much as in a RAID 1 configuration
- High read data rates
- Small proportion of writes to reads

Hot Spare Disks

A hot spare disk is a standby disk that is not used for data storage unless a RAID member fails. If a disk failure occurs, the failed RAID member is replaced by the hot spare disk without user intervention. This improves data availability, since the RAID is able to tolerate more disk failures with a hot spare disk.

RAID Combinations

RAID levels may be combined in the following hierarchies:

- RAID 0+1 is a RAID 1 consisting of RAID 0 members
- RAID 30 is a RAID 0 consisting of RAID 3 members
- RAID 50 is a RAID 0 consisting of RAID 5 members

Summary of RAID Levels

The following table summarizes the performance characteristics of each RAID level. A high availability or access rate number indicates high availability or quick access rate.

Array Group	Availability	Access Rate	Capacity Utilization	Description
JBOD	1	1	100%	Data is distributed by filling each disk in turn.
RAID 0	1	5	100%	Data is divided into pieces and written to all disks in parallel.
RAID 1	5	2	50%	Data is duplicated on both disks.
RAID 3	3	3	Between 67% for 3 disks to 94% for 16 disks	Data is divided into pieces; the parity of these pieces is calculated; and the pieces are written to separate disks in parallel with the writing of the parity to a dedicated disk.
RAID 5	3	3.5	Between 67% for 3 disks to 94% for 16 disks	Data is divided into pieces; the parity of these pieces is calculated; and the pieces and parity are written to separate disks in parallel. The parity is written to a different disk each time.
RAID 0+1	4.5	5	50%	RAID 0+1 is a RAID 1 consisting of RAID 0 members.
RAID 30	4	4	Between 67% for 6 disks to 88% for 16 disks	RAID 30 is a RAID 0 consisting of RAID 3 members.
RAID 50	4	4.5	Between 67% for 6 disks to 88% for 16 disks	RAID 50 is a RAID 0 consisting of RAID 5 members.

System Requirements

Ensure that the following requirements are met before installing the disk array system.

Operating Environment

- 15 cm (6 inches) of space around the disk array system for proper ventilation
- ambient temperature of 5°C to 40°C (40°F to 104°F)
- ambient non-condensing relative humidity of 10% to 85%
- dust, smoke, and oil free environment
- no large magnetic fields, such as those generated by a high voltage power cables and motors, etc.
- no direct sunlight
- a flat, stable surface capable of supporting the disk array system

VT100 Terminal Settings

Refer to the following table for a summary of VT100 terminal settings required to communicate with the disk array system. Refer to your system manual for instructions on setting up the VT100 terminal settings.

Item	Required Setting
Connection	Serial Port (COM1 or COM2)
Protocol	RS232 (Asynchronous)
Cabling	Null Modem cable
Baud Rate	115, 200
Data Bits	8
Stop Bit	1
Parity	None

Host Interface

The disk array system has either dual SCSI interfaces or dual fibre channel interfaces. Refer to the following sections to understand host interface system requirements.

Small Computer Systems Interface

The ERX16S-U4R4 has dual Ultra320 SCSI interfaces that are compatible with previous SCSI standards. Refer to the following table to understand SCSI bus requirements.



Note

Subtract the internal cable length (60 cm) from the maximum SCSI bus length to calculate the maximum external SCSI cable length.

SCSI Standard	Maximum SCSI Bus Length in Meters	Data Rate in Megabytes per Second	Maximum Number of Devices
Ultra320	12	320	15
Ultra160	12	160	15
Ultra2	12	80	15
Ultra Wide	1.5	40	7
Fast Wide	3	20	15
Ultra	1.5	20	7

Fibre Channel Interface

The ERX16S-F2R4 has dual 2 Gbit fibre channel interfaces with SFP connectors for linkage to a fibre channel switch or host computer interface card. With the correct SFP transceiver and optical cable, the following transmission distances can be achieved.

Component	Optical	
SFP Transceiver	LC Optical	
Cable	Short Wave	Long Wave
Maximum Cable Length	50m	10 Km

Hard Disks

Supply the number of serial ATA disks needed for your application. Refer to “Understanding RAID” on page 3 to determine the number of disks needed.

2 Basic Configuration

This chapter describes disk array system connections and disk installation.


Unpacking

Contact your supplier if any of the following items are missing or damaged.


Caution



The disk array system is heavy. Be careful when lifting and moving it.

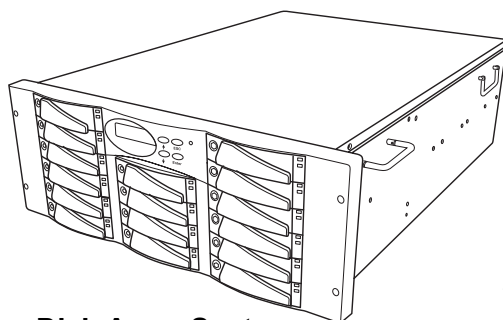


Disk Array System

 


**Active Terminator
(ERX16S-U4R4)**




Disk Tray Keys

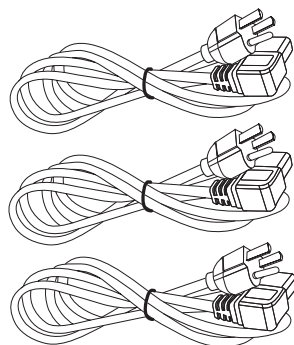


Power Cables

 

 **Ultra320 SCSI Cable
(ERX16S-U4R4 Only)**




RS-232 Cable

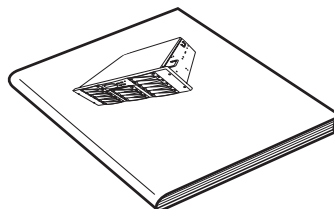

User Manual


Components

Front View

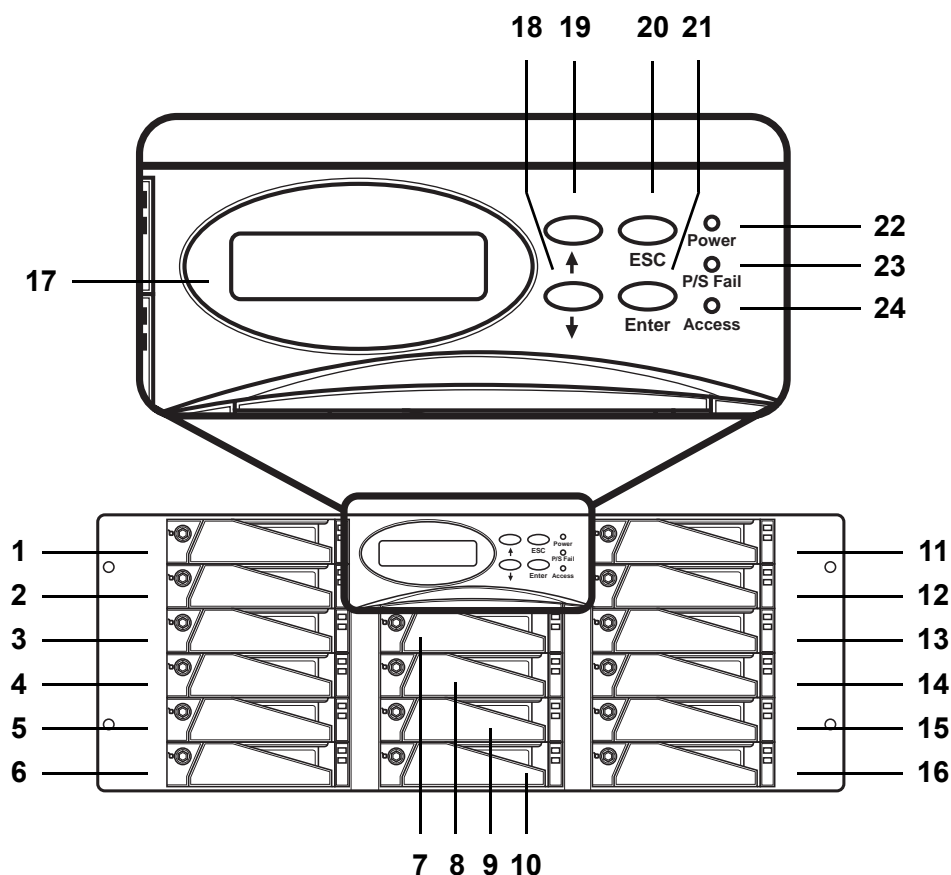


No.	Name	Description
1-16	Disk trays 1 to 16	Removable hot swap disk trays.
17	LCD panel	Displays warning, operating, and configuration information.
18	Down function button	Moves down in the LCD menus.
19	Up function button	Moves up in the LCD menus.
20	Escape function button	Returns to the previous LCD menu without making changes.
21	Enter function button	Selects a menu item or confirms a choice or entry.
22	Power-on indicator (green)	Indicates the disk array system power is on.
23	Power supply fail indicator (red)	Indicates a failed power supply.
24	Host computer access indicator	Indicates data transfer between the disk array system and the host computer.

Disk Tray

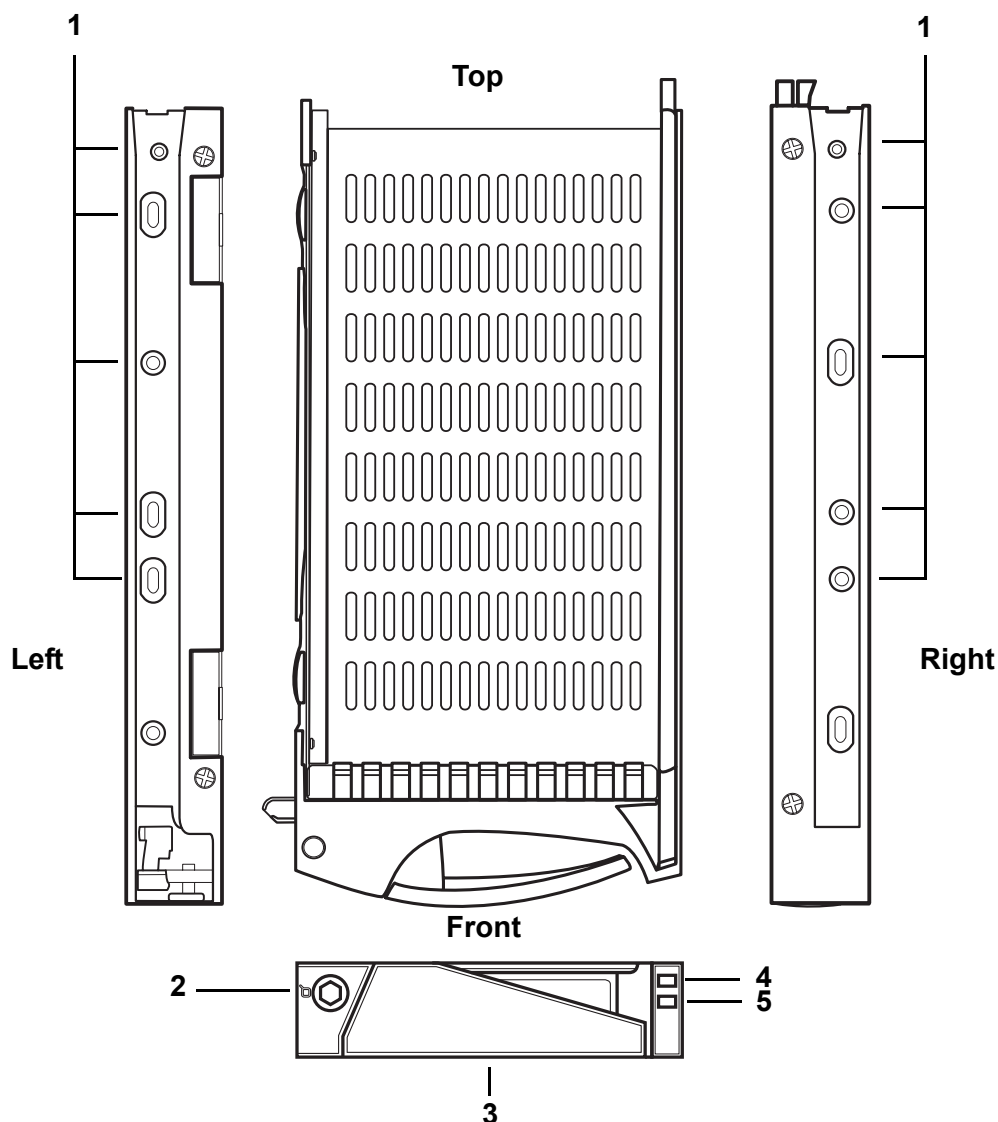

No.	Name	Description
1	Disk mounting holes	Allows the disk be mounted on the disk tray with the screws included with the disk.
2	Tray lock	Prevents unauthorized removal of a disk tray. Open with the included disk tray lock key.
3	Tray handle	Releases the disk tray.
4	Power/Error indicator LED	Indicates normal operation of the disk when green, or an error or failure of the disk when red.
5	Access indicator LED	Indicates that the disk is being accessed when orange.

Rear View

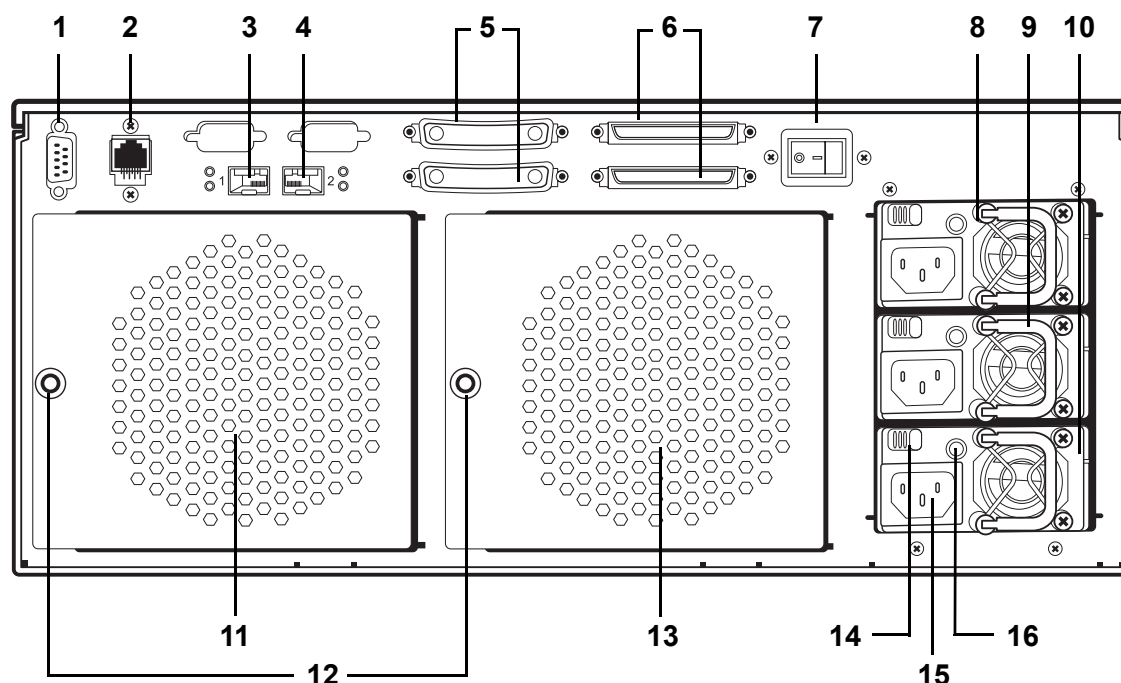


No.	Name	Description
1	RS-232 Port	Connects to a VT100 terminal or equivalent.
2	Ethernet Port	Used for browser-based configuration.
3	ERX16S-F2R4 Host Port 1 (Primary fibre channel)	Connects to the host server. (Found only on the ERX16S-F2R4)
4	ERX16S-F2R4 Host Port 2 (Secondary fibre channel)	Connects to the host server. (Found only on the ERX16S-F2R4)
5	ERX16S-U4R4 Host Port 2 (Secondary SCSI channel)	Connects to the host server. (Found only on the ERX16S-U4R4)
6	ERX16S-U4R4 Host Port 1 (Primary SCSI channel)	Connects to the host server. (Found only on the ERX16S-U4R4)
7	Main Power Switch	Turns the main power on or off.
8	Power Supply 1	Removable redundant power supply 1.
9	Power Supply 2	Removable redundant power supply 2.
10	Power Supply 3	Removable redundant power supply 3.
11	Fan 1	Removable redundant fan 1.
12	Fan thumbscrews	Allows the fan to be removed.
13	Fan 2	Removable redundant fan 2.
14	Hot Swap Power Supply Release	Allows the power supplies to be removed.
15	AC Power In	Connects to a 110-240 VAC power source.
16	Power Supply On Indicator	Indicates normal operation of the power supply when green, or standby when red.


Installing Disks

This section describes how to install disks in the disk array system. Read “Understanding RAID” on page 3 to decide how many disks are required.


- 1 Unlock the disk tray.

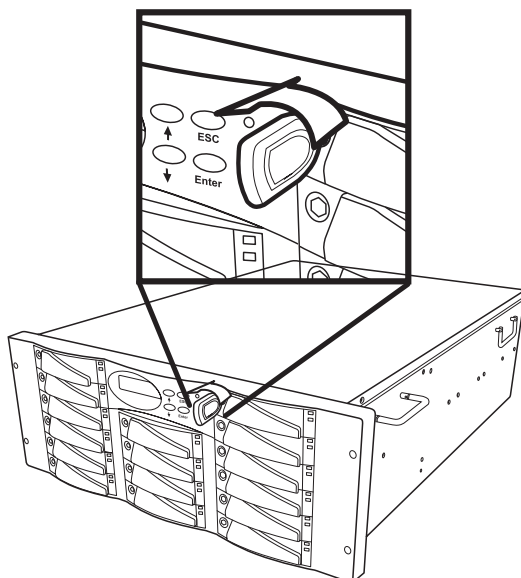

- 2 Pull the disk tray handle to the open position.

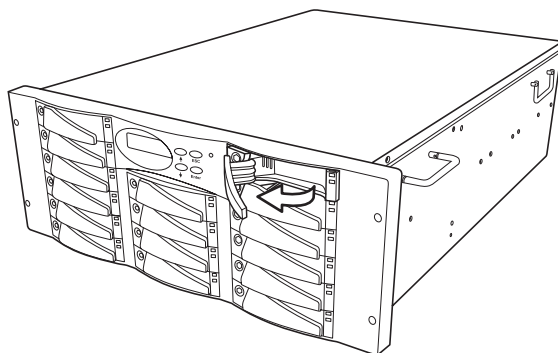


- 3 Pull the disk tray out.

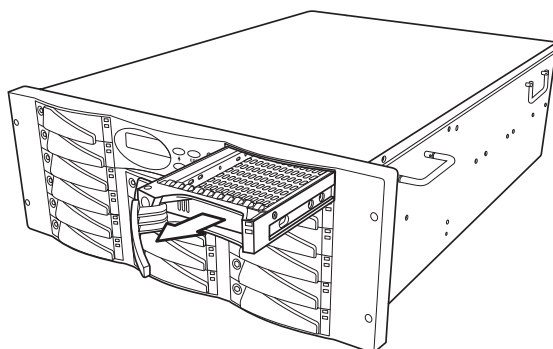


easyRAID S16 Serial ATA Disk Array Systems


- 4 Insert the disk into the disk tray. The disk should face up with the connectors directed toward the open rear of the tray.

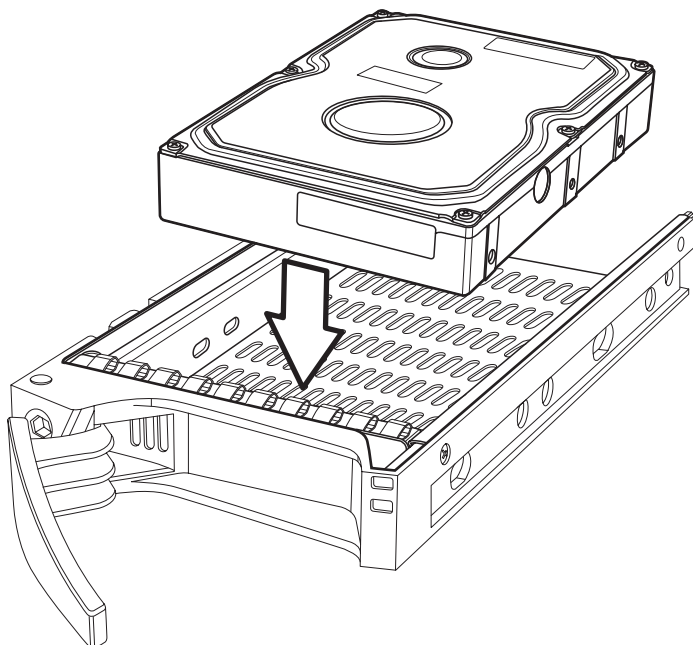


- 5 Align the rear of the disk with the rear of the disk tray.
- 6 Attach the disk to the disk tray with the screws that came with the disk.

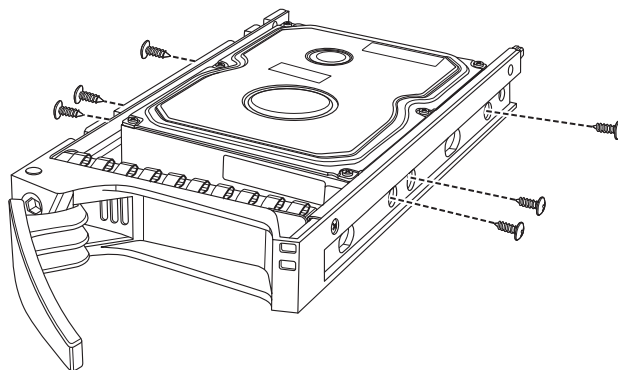


- 7 Insert the disk tray back into the empty slot.

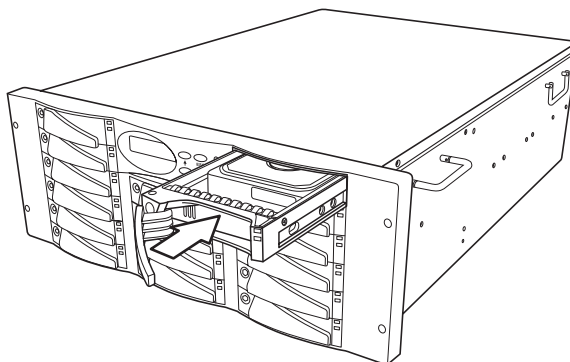

- 8** Push the disk tray handle closed.

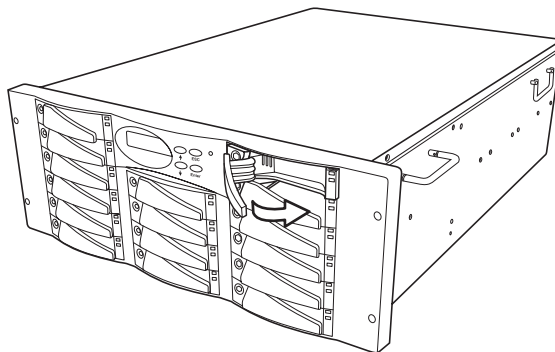

- 9** Lock the disk tray.

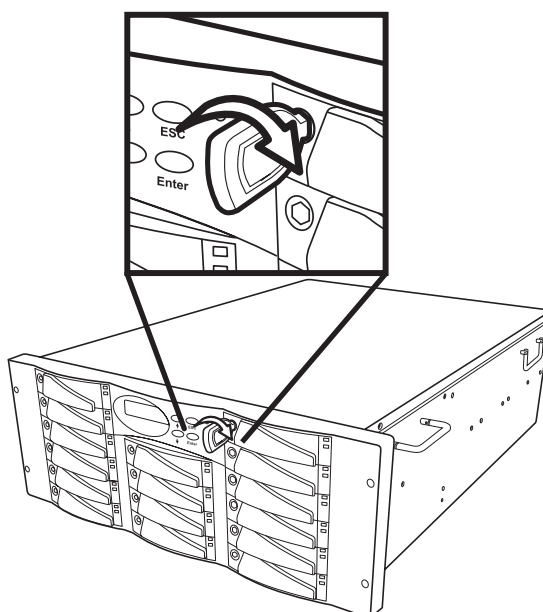

- 10** Repeat steps 1 to 9 until all of the required disks have been installed.

Making Connections

After the required number of disks have been installed, external connections to the disk array system must be made. This section describes how to make all of the necessary connections.



Connecting the Host Interface

The disk array system has either dual SCSI interfaces or dual fibre channel interfaces. Refer to the following sections to make host interface connections.

Small Computer Systems Interface

The ERX16S-U4R4 has dual Ultra320 SCSI interfaces. Follow these instructions to make connections.

- 1 Connect the active SCSI terminator (**A**) to the bottom connector of the ERX16S-U4R4 host port 1 (primary SCSI channel) at the rear of the disk array system.

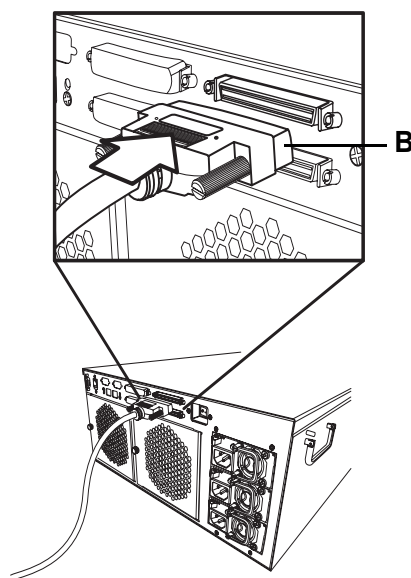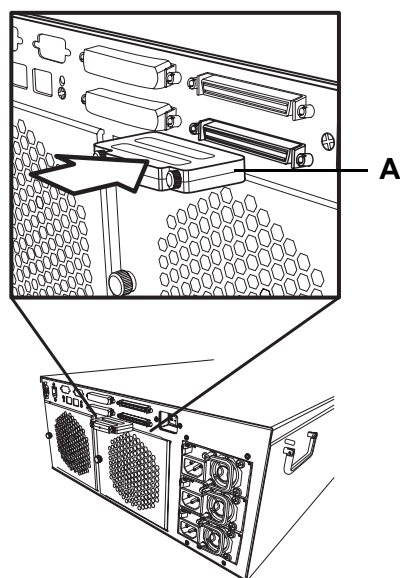


- 2 Connect the Ultra320 SCSI cable (**B**) to the top connector of the ERX16S-U4R4 host port 1 (primary SCSI channel) at the rear of the disk array system.

Fibre Channel Interface


The ERX16S-F2R4 has dual 2 Gbit fibre channel interfaces. Each interface can be used with optical or copper transceivers and cables. Follow these instructions to make optical connections.

- 1 Insert the LC Optical SFP transceiver (**A**) in to the ERX16S-F2R4 host port 1 (primary fibre channel) at the rear of the disk array system.
- 2 Connect the optical cable (**B**) to the LC Optical SFP transceiver (**A**).

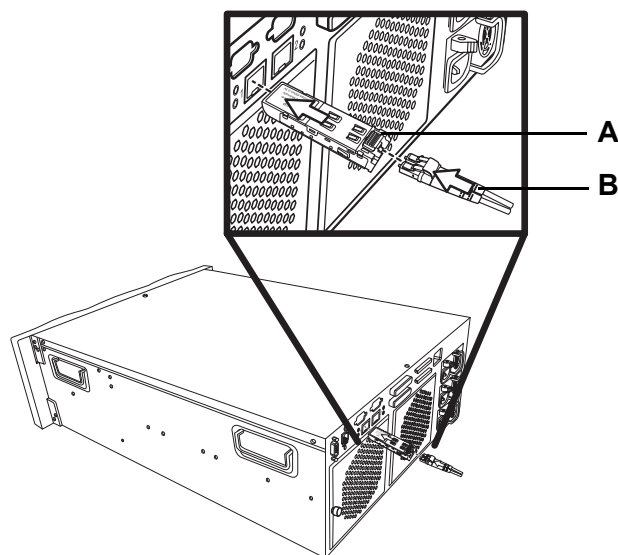


Connecting the RS-232 Cable

Connect the supplied RS-232 cable to the RS-232 port at the rear of the unit.

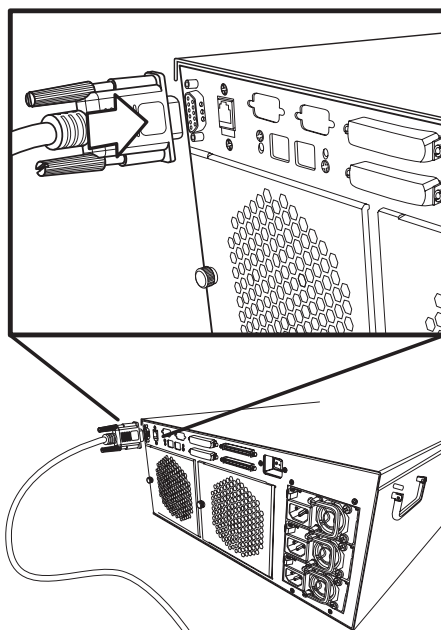

Connecting and Turning on the Power

- 1 Connect a power cable (**A**) to the power supply 1 connector at the rear of the unit. The power supply on indicator LED glows red.

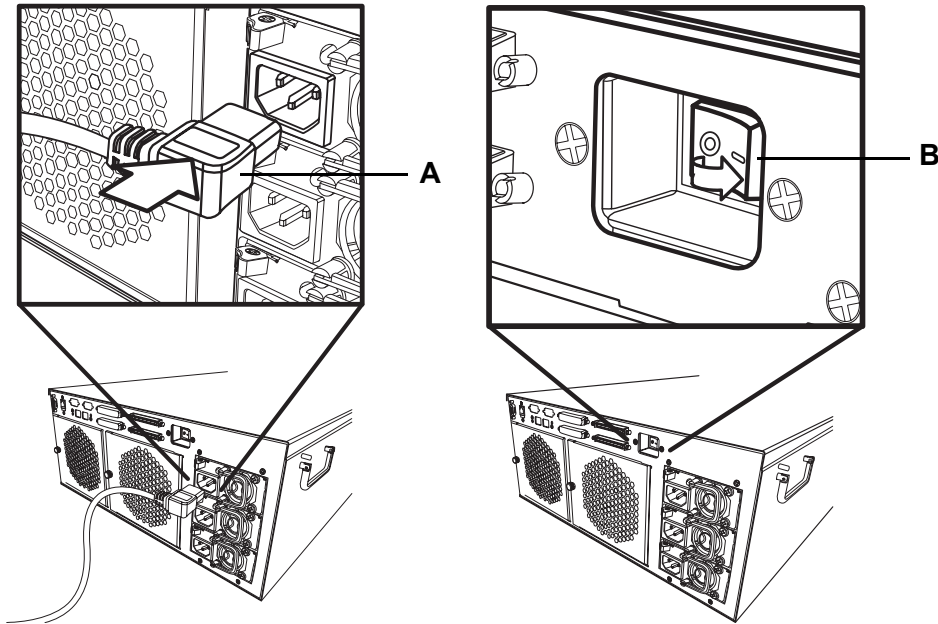

- 2 Connect the second and third power cables to the power supply 2 and 3 connectors at the rear of the unit. Each power supply on indicator LED glows red when the second and third power supplies are connected.



Note

The system is equipped with auto switching power supplies that can run on 100 to 240 VAC.

- 3 Press the disk array system main power switch (**B**) to the ON position. All power supply on indicator LEDs glow green and disk array system automatically begins the self-test sequence.

3 Maintenance

Replacing a Disk

A disk failure is indicated when the Power/Error LED at the front of the drive tray turns red and the audible alert sounds.



Note

Turn off the audible alert by pressing the Up ↑ and Down ↓ function buttons on the front panel twice simultaneously.

The LCD screen shows the failure with the symbol “R” or “W”. “R” indicates a disk failure or error, and “W” indicates that there are too many bad sectors on the disk.

Example:

- Disks 1 to 9 are members of array group 1.
- Disks 10 to 14 are members of array group 2.
- Disk 15 has too many bad sectors.
- Disk 16 has an error or a fault.

1 1 1 1 1 1 1 1 2 2 2 2 WR

Disks are hot swappable, which means that they can be inserted and removed while the disk array system is powered on and operating. Follow these instructions to replace a failed disk.

- 1 Unlock the disk tray.
- 2 Pull the disk tray handle to the open position, then pull the disk tray out.
- 3 Remove the screws from the failed disk, then remove the failed disk from the disk tray.
- 4 Insert the new disk into the disk tray. The disk must be face up with the connectors directed toward the open rear of the tray.



Note

The new disk must have the same or a greater capacity than the faulty disk that was removed. If the disk capacity is smaller, the audible alert sounds and the auto-rebuild operation doesn't start. For best performance, it is recommended that the new disk be identical to the failed disk.

- 5 Align the rear of the disk with the rear of the disk tray.
- 6 Attach the disk to the disk tray with the screws that came with the disk.
- 7 Insert the disk tray back into the empty slot, then close the tray handle.
- 8 Lock the disk tray. The disk array automatically begins rebuilding the RAID.

Replacing a Power Supply

The disk array system is equipped with a Power Supply Fail Indicator LED at the front of the unit that turns red when one of the power supplies fails. The message “Power x failure” also appears on the LCD panel, where x refers to power supply 1, 2, or 3, and an audible alert sounds.




Note


Turn off the audible alert by pressing the Up ↑ and Down ↓ function buttons on the front panel twice simultaneously.

Power supplies are hot swappable, which means that they can be inserted and removed while the disk array is powered on and operating. Follow these instructions to replace a failed power supply.


- 1 Identify the power supply that has failed.

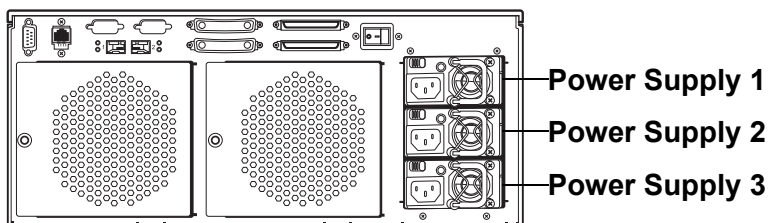


- 2 Unplug the power cable connected to the failed power supply unit.

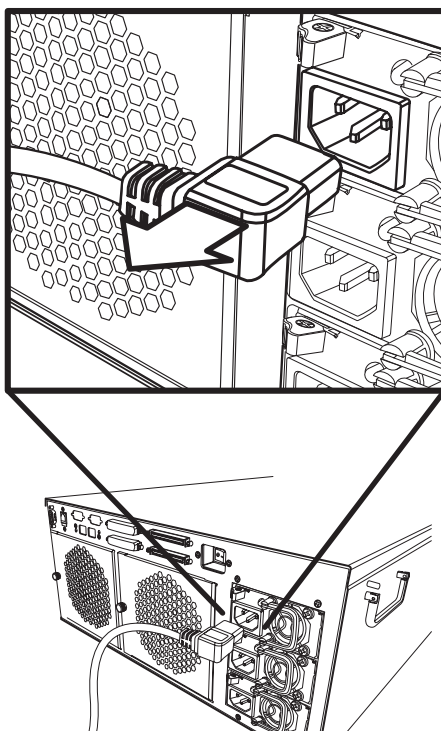


- 3 Push the power supply release switch (A) and pull the power supply handle (B) out at the same time.

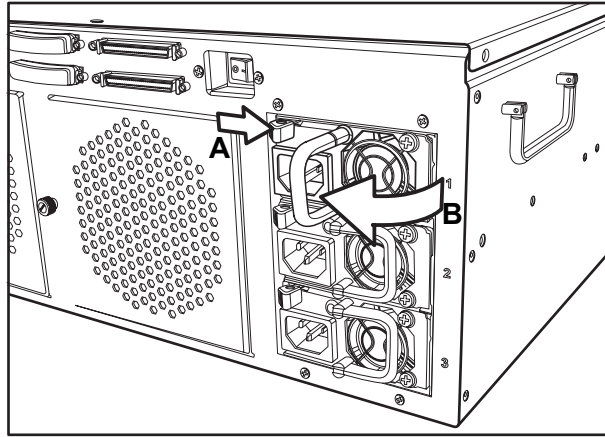

- 4 Remove the power supply unit.

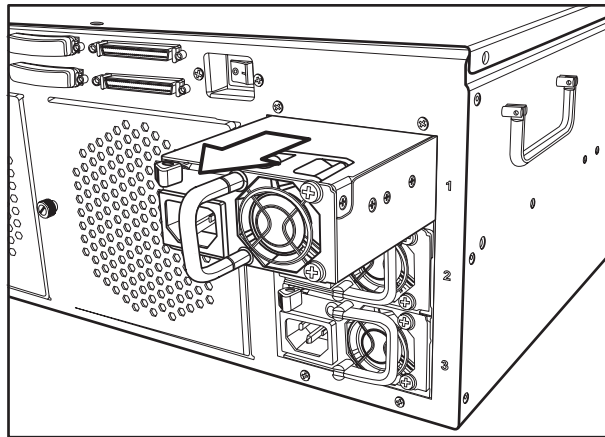

- 5 Insert a new power supply unit in the empty power supply unit slot. The power supply automatically locks into position when fully inserted.

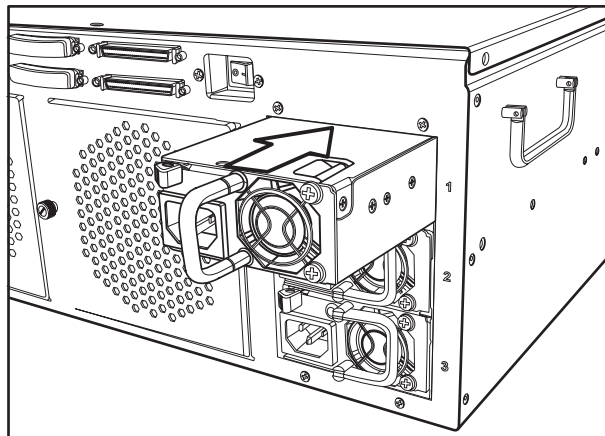

- 6 Reconnect the power cable. The Power supply On indicator LED glows green.

Replacing a Fan

A fan failure is indicated by the LCD panel message “Fan x failure”, where x refers to Fan 1 or Fan 2. An audible alert also sounds.




Note



Turn off the audible alert by pressing the Up ↑ and Down ↓ function buttons on the front panel twice simultaneously.

Fans are hot swappable, which means that they can be inserted and removed while the disk array is powered on and operating. Follow these instructions to replace a failed fan.

- 1 Identify the fan that has failed.

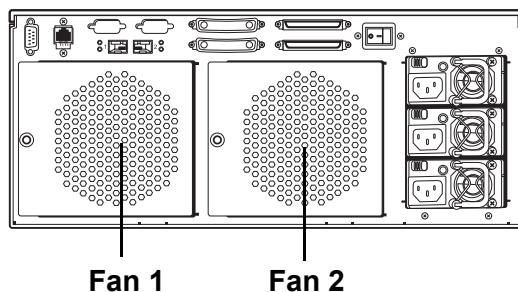


- 2 Loosen the fan enclosure thumbscrew, then open the fan enclosure to a 90° angle.

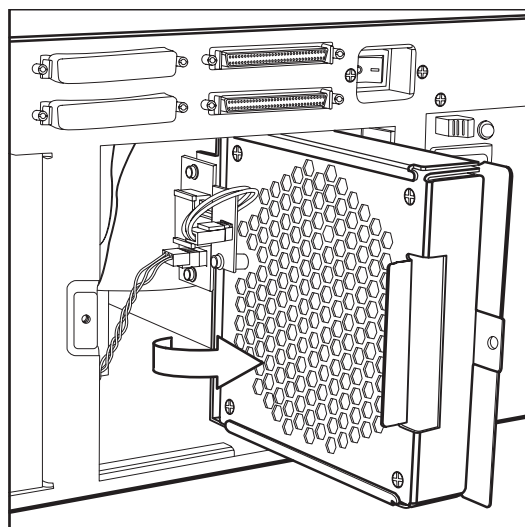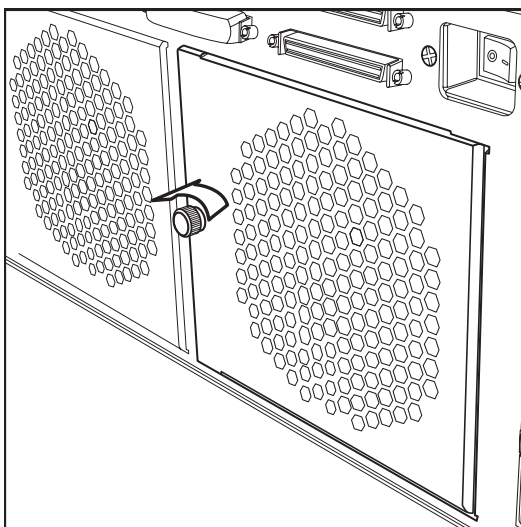

Caution

High speed rotating fan blades can cause injury. Wait until the fan has stopped completely before removing it.

- 3 Remove the fan from the fan enclosure, then insert a new fan in the fan enclosure.

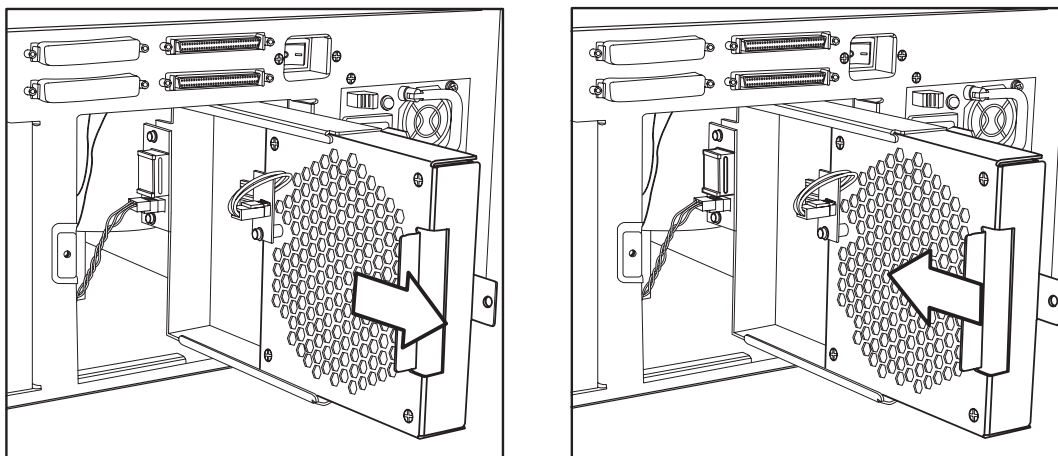


Caution



The fan will begin rotating immediately after it is plugged in. Keep your fingers away from the blades.


- 4 Close the fan enclosure, then tighten the fan enclosure thumbscrew.

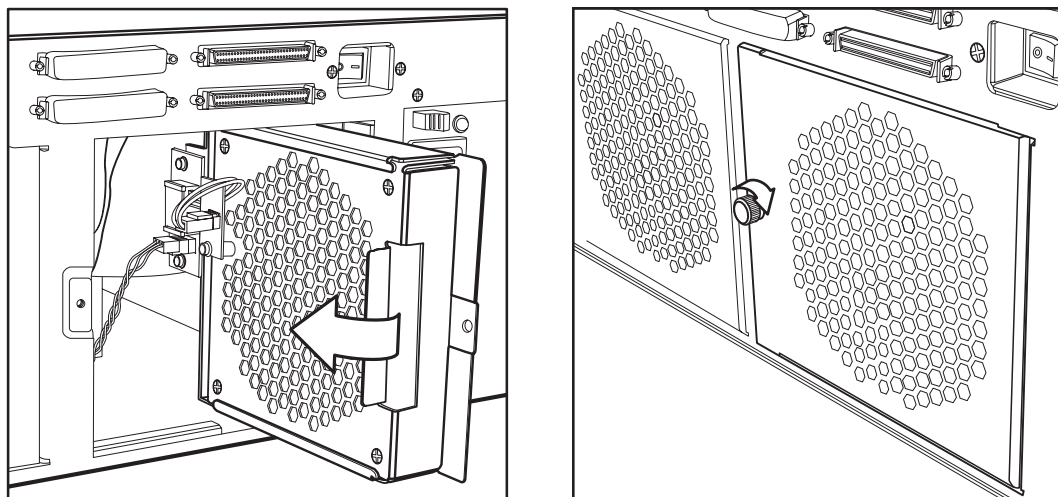


Upgrading Memory

The disk array system takes a single 200 pin PC200 DDR SDRAM SO-DIMM with a maximum capacity of 1 GB. Follow these instructions to upgrade the memory.


- 1 Remove the six screws from the ERX16S-U4R4 top cover as illustrated.

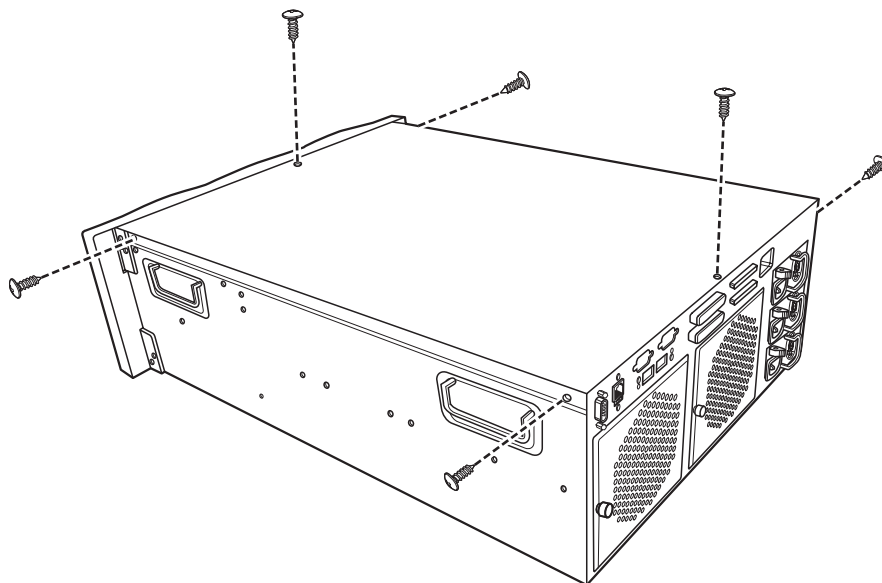



- 2 Slide the top cover toward the rear of the unit, then lift the cover.

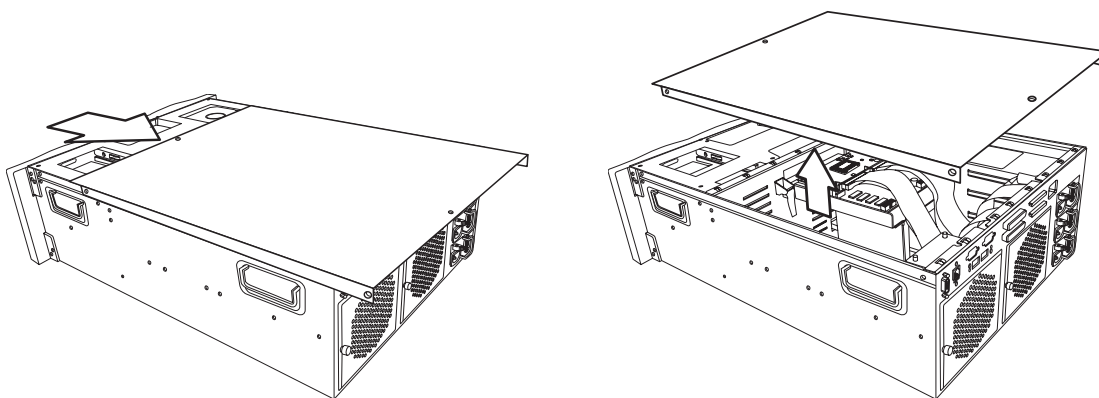



- 3 Carefully lift the daughterboard from the array group controller.

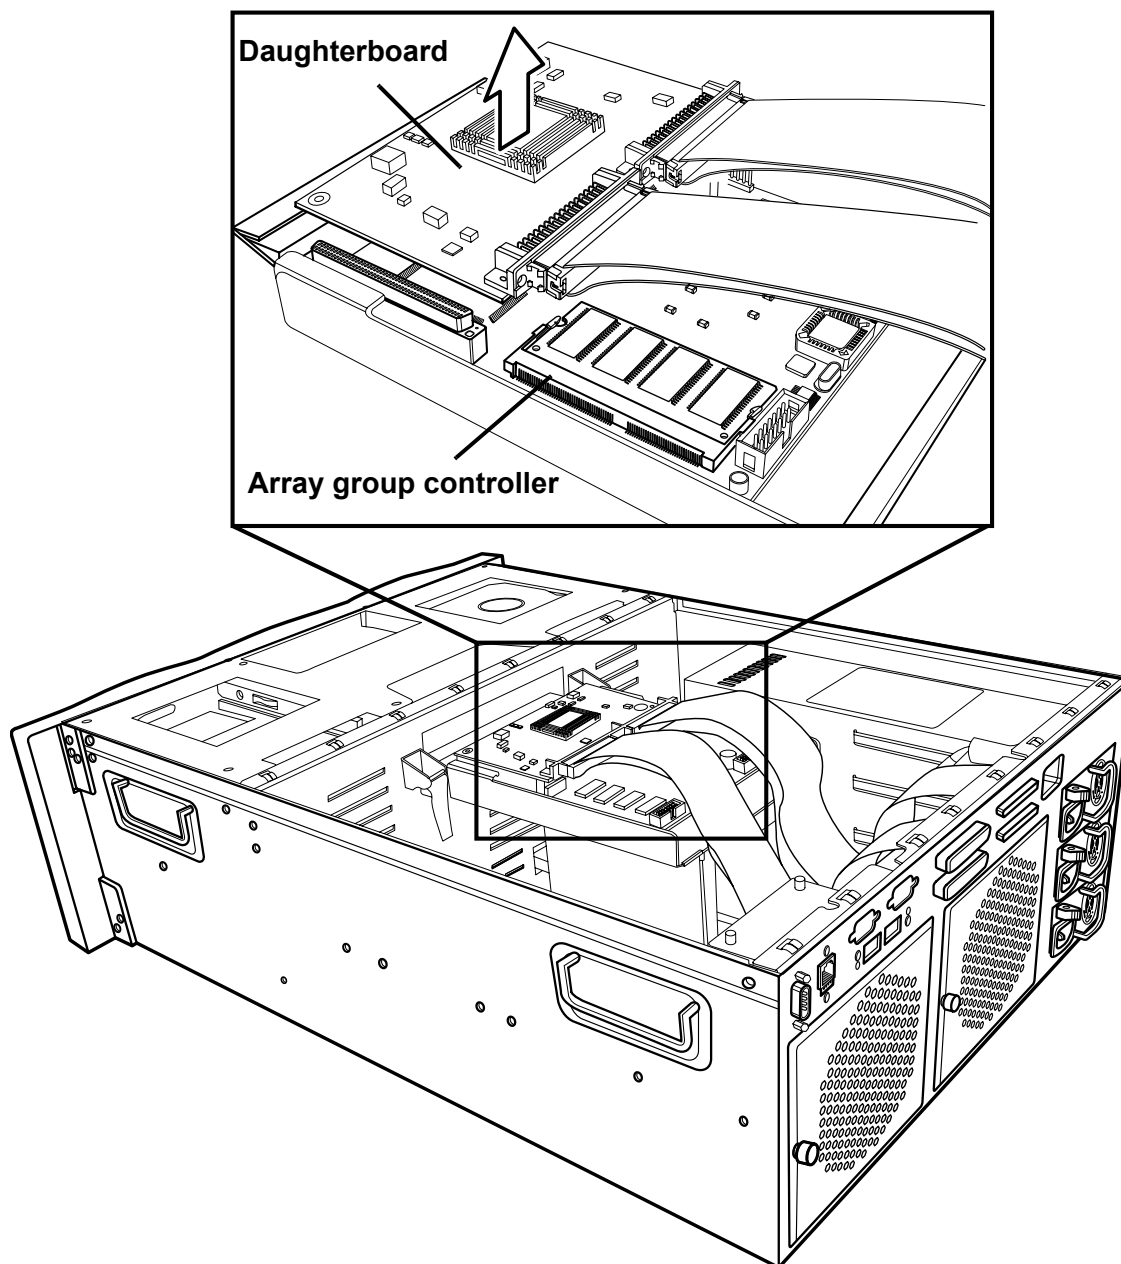

- 4 Pull the DIMM retaining clips away from the DIMM; the DIMM springs out of the socket. Remove the DIMM.

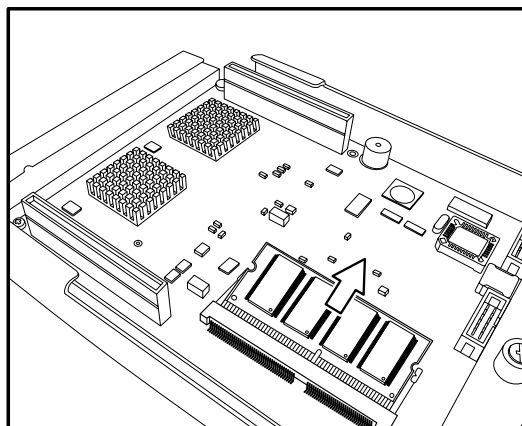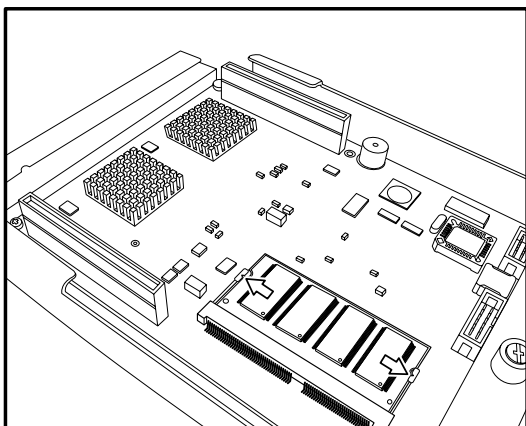


- 5 Gently push the new DIMM into the socket at 45 degrees, then push the corners of the DIMM down. The DIMM is secured by the DIMM socket retaining clips.

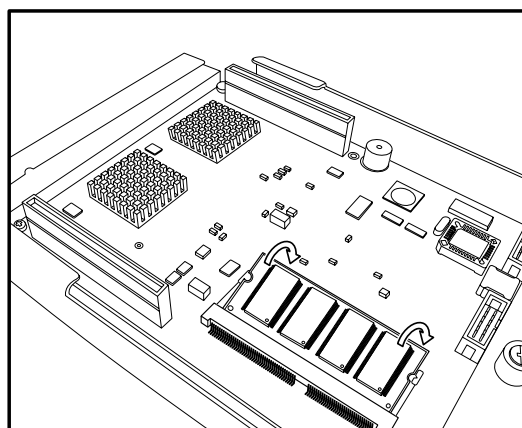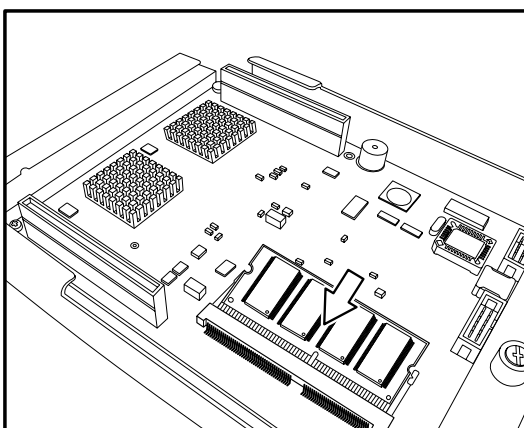

Note


The DIMM module will fit in only one direction. Do not force the DIMM into place.

- 6 Replace the daughterboard on the array group controller, taking care to align the connectors.

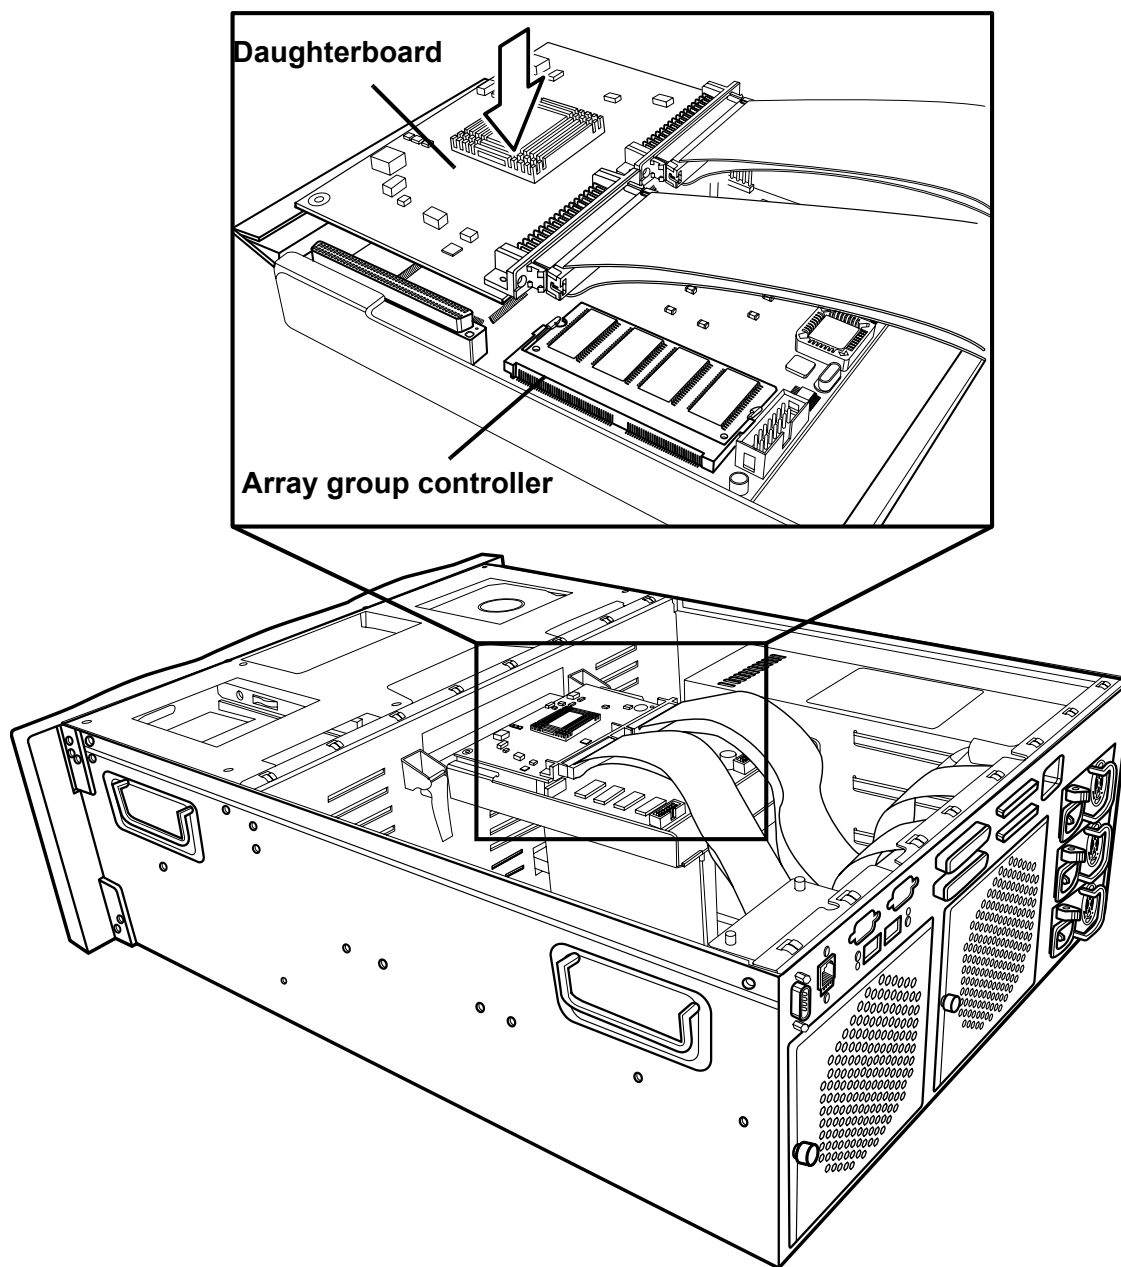


easyRAID S16 Serial ATA Disk Array Systems

- 7** Place the top cover on the disk array system, then slide the top forward into the closed position.

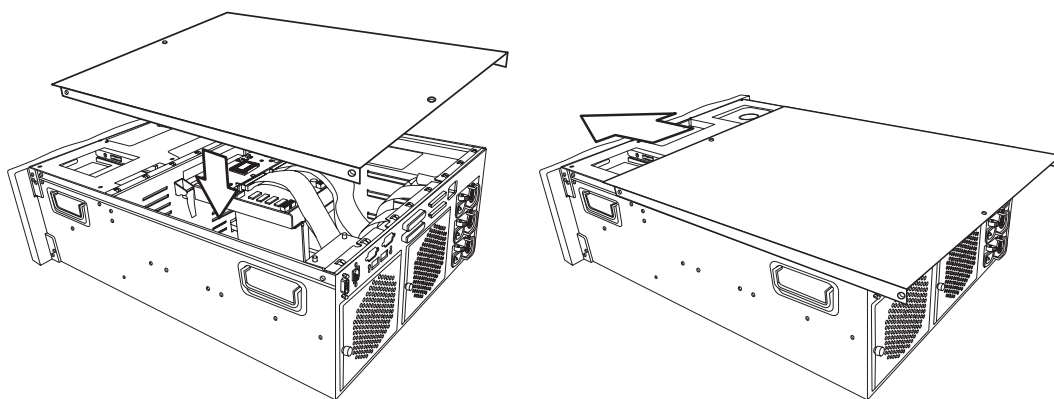

- 8** Replace the six screws to fix the top cover on the disk array system chassis.

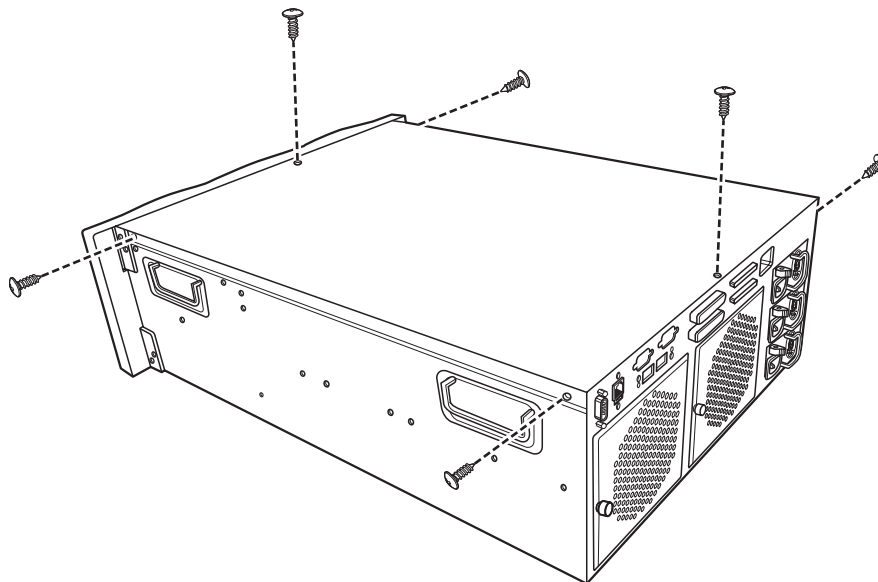

Appendix

Hardware Specifications

Item	Specification
Host Interface	SCSI Ultra320 (ERX16S-U4R4) or 2 Gbit Fibre Channel (ERX16S-F2R4)
Disk Interface	16 x Serial ATA (SATA), 150 MB/s
Dimensions	175 mm (H) x 483 mm (W) x 583 mm (D)
Weight	21 Kg without disks
RAID Functions	<ul style="list-style-type: none">• Raid levels: JBOD, 0, 1, 0+1, 3, 5, 30 or 50• Hot spare support• Disk hot swapping with automatic online rebuilding• Multiple RAID (max. 8)
Disk Array Functions	<ul style="list-style-type: none">• O/S independent and transparent• Maximum fault tolerant capacity > 3.5 TB• 64 MB ~ 1 GB DDR SDRAM• LCD panel operation indicator• Audible alarm/disable alarm• Optional battery backup for disk array status• LED indicator on disk failures
Connectors	<ul style="list-style-type: none">• 4 x Ultra320 SCSI ports (ERX16S-U4R4) or 2 x 2 Gbit Fibre Channel ports (ERX16S-F2R4)• 1 x RS-232 Serial port (115200, n, 8, 1)• 1 x RJ-45 Ethernet port (10 Mbps)
Power Supply	<ul style="list-style-type: none">• 600W (2+1) redundant• 90 - 264 VAC, 47-63 Hz, +/- 10%• Over voltage, current, power, and short circuit protection• LED indicates power status• Operating temperature: 0°C ~ 50°C• Operating humidity: 20 ~ 90%• Output: +5V, +3.3V, +12V• Harmonic: meets EN6100-3-2 standard• EMI/RFI: CE, FCC class B and CISPR class B• Safety: UL, cUL, CB, TUV
Warranty	3 year warranty
EMI	CE class B, FCC class B, C-Tick class B and BSMI class B
Safety	UL, cUL and CB

Item	Specification
Controller	
CPU	Intel i80321 64-bit RISC microprocessor
Disk Interface	Serial ATA 1
Disk Channels	16 channels (up to 32 channels by using a daughter board)
Disk Interface Chipset	Marvell MV88SX8050
Memory Type	PC200 DDR 200-pin SO-DIMM
Memory Sockets	1
Memory Size	Up to 1 GB
LCD Interface	One LCD panel, 2 lines by 16 characters
Button Interface	Up, Down, ESC, Enter and Reset
Battery Backup Interface	Yes
Daughter Board Interface	PCI-X 64-bit, 66/133MHz
Backplane Interface (connector)	Compact-PCI
Backplane	
Disk Channel Support	16 channels
Disk Channel Support	16 disks
Disk Connector Type	Serial ATA
Sequence Disk Power On	Select by jumper (H/W: power on all disks, S/W: 4 disks at 2 ms intervals)
Temperature Sensors	13
Power Connector Type	ATX x 2
Fan Connector Type	1 x 3-pin with housing, 2.54 mm pitch (1 red, 1 white)

Item	Specification		
Cooling Fans	Temperature	Fan 1 rpm	Fan 2 rpm
	Under 25°C	1000	1000
	26°C ~ 40°C	1500	1500
	41°C ~ 50°C	2100	2100
	Over 51°C	3100	3100
	Fan 1 Failure	Failed	3100
	Fan 2 Failure	3100	Failed
	Any Power Module Failure	1000	1000

Warnings and Certifications

Federal Communications Commission (FCC)

This FCC certification applies in the U.S. and Canada. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user's guide, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

