

 


DESIGNED WITH YOU IN MIND

# User's Manual

HYDROFALL *SERIES*...  
WASHING MACHINES

MODEL : HYDROFALL 68BS

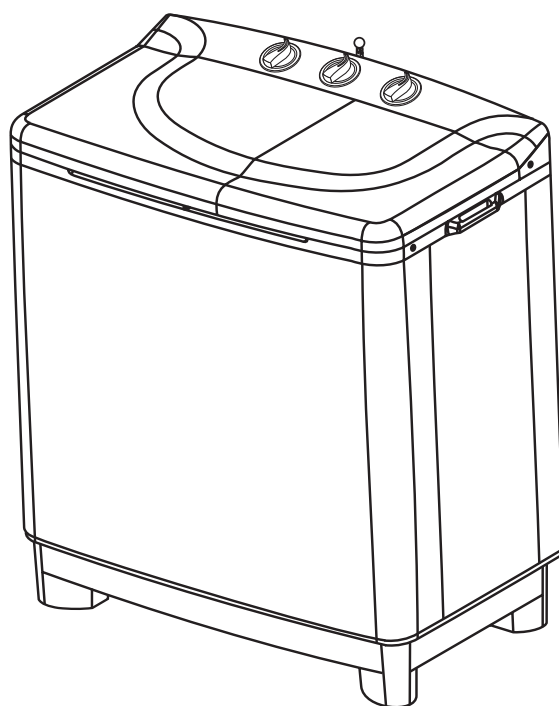

*Before operating the Washing Machine, Please read this Guide thoroughly, and retain this manual for future reference.*



*Dear Customer ,*


**Congratulations !** You are now a proud owner of **Onida HYDROFALL 68BS Washing Machine**. We would particularly advise you to study the User's manual carefully to get the best of your Onida Machine and please take the precautions mentioned on the following pages.

Once again, Welcome to the family of happy ONIDA Owner.


### **Contents :**

 * PARTS IDENTIFICATION .....	1
* INSTALLATION .....	2
* SAFETY PRECAUTION .....	3
* PREPARATION BEFORE WASH .....	4
* OPERATING INSTRUCTIONS .....	5-7
* TROUBLE SHOOTING .....	7
* MAINTENANCE .....	8
* TECHNICAL SPECIFICATIONS .....	9
* ONIDA SERVICE CENTRES .....	10
* WARRANTY CARD	

# PARTS IDENTIFICATION

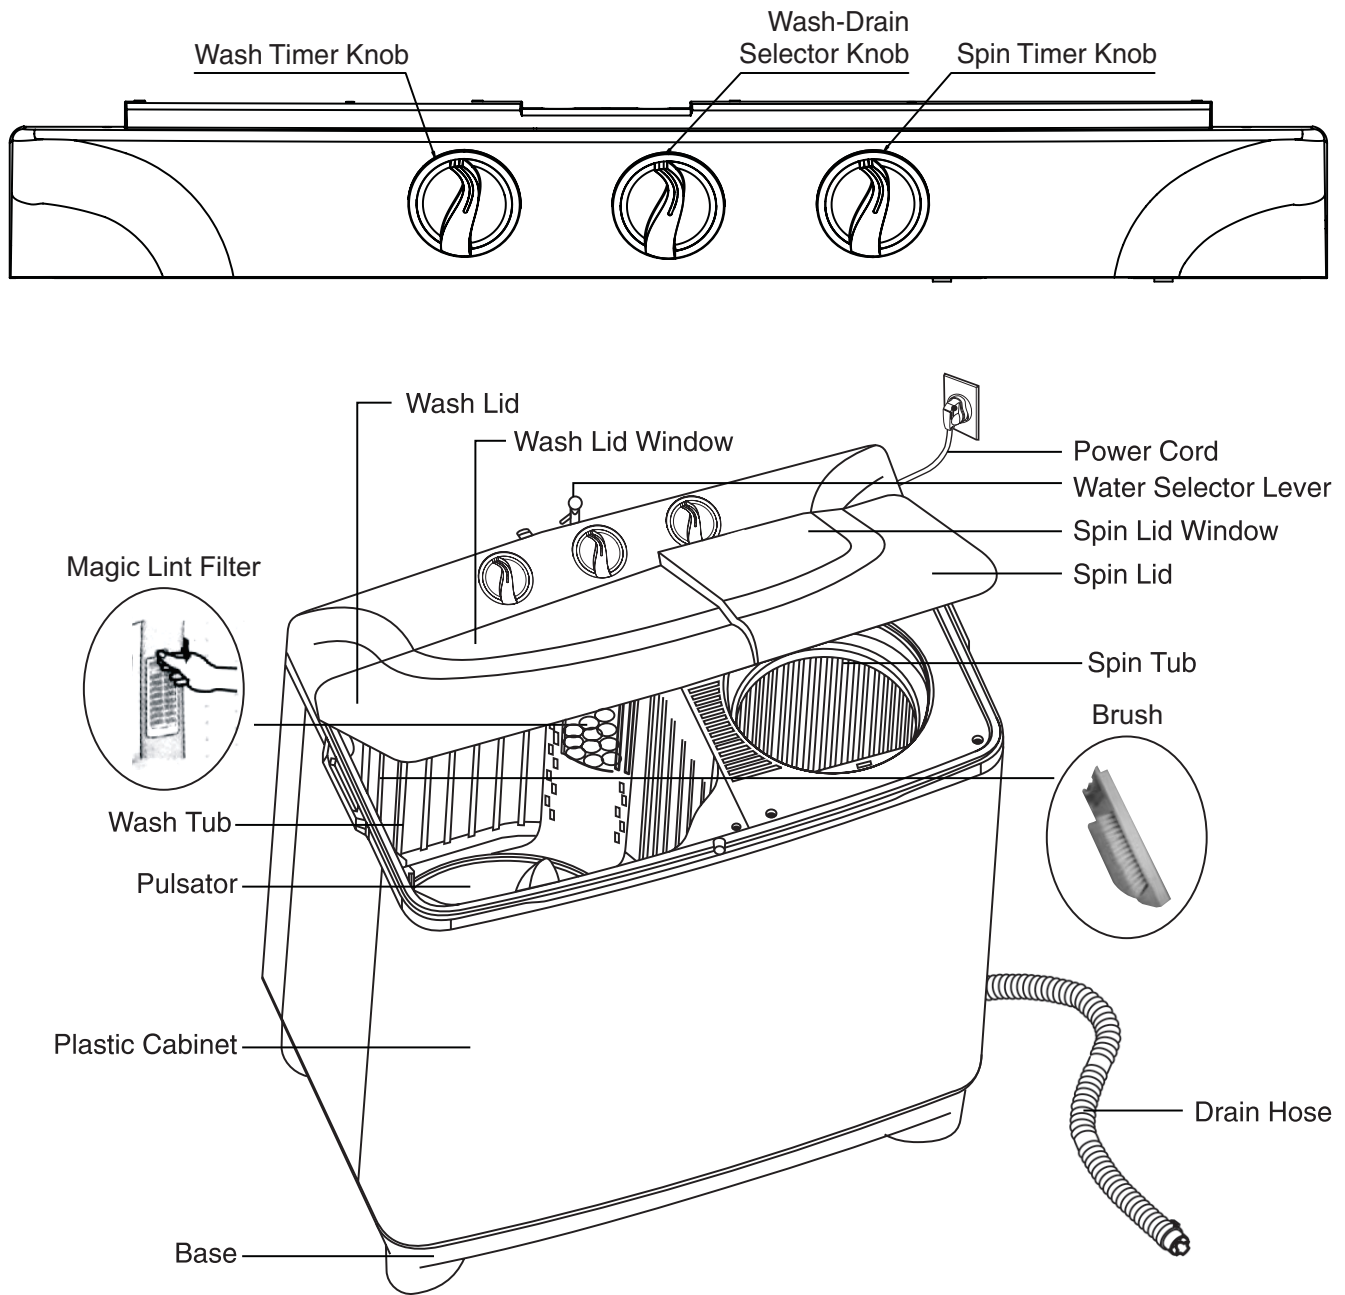

## ACCESSORIES

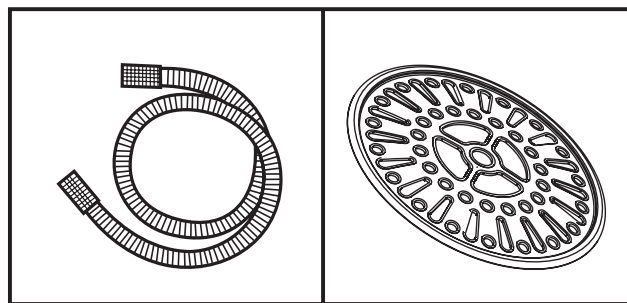 




Inlet hose

Spin cap

# INSTALLATION

   
## INSTALL ON A STABLE LEVEL SURFACE

- Install washing machine on a stable level surface.
- Keep the washing machine more than 25cm from the wall to prevent a noisy sound while spinning.
- A carpet must not obstruct the ventilation openings.

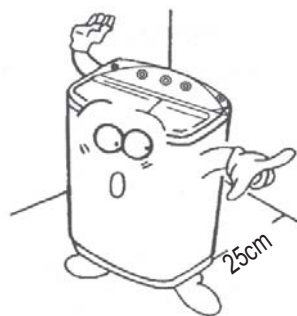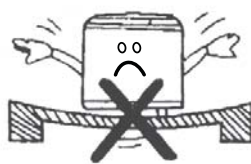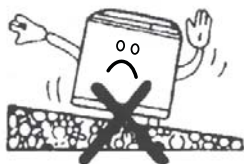


## CONNECT THE DRAIN HOSE

 Extension Drain Hose




 Never let the end of the drain hose be immersed in water

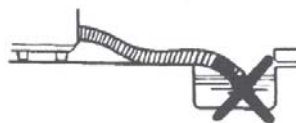

## CONNECTING POWER AND GROUNDING

 - Washer earth is connected to the power plug; don't alter it.
- Ensure that the earth wire is installed securely in the power socket.
- The appliance must be positioned where the plug is accessible.

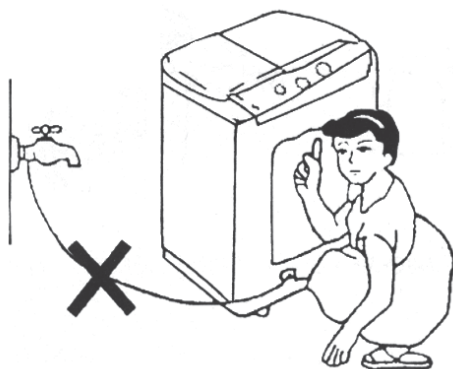

### CAUTION:

- Never connect the earth wire to a gas pipe, a tap water pipe, a phone wire or lightning rod.
- Do not use the washing machine in case the power cord or plug have been damaged, so as to avoid electric shock or risk fire.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid any mishap.
- Always remove the power cord from wall socket while cleaning.
- Always switch off the power when not in use.
- Avoid connecting several electric appliances to single outlet.

## SAFETY PRECAUTIONS

Do not expose the washing machine to direct sun light or rain.



Do not install the washing machine near a damp place.



Do not sprinkle water over switches.



Let water drain away from the drain hose thoroughly.



When plugging out the power cord, do not hold the wire.



Keep children away from the washing machine.



Keep the washing machine away from fire or heat source such as heater, candle, cigarette etc.



Do not wipe the washing machine with volatile material, gasoline, etc.



Do not pour over 50°C water into the tub.



The appliance is to be connected to the water mains using new hose-sets and old hose-sets should not be reused.

## PREPARATION BEFORE WASH

 
Be sure to remove things such as keys, pins and coins from the laundry.



Wash oily or dyed laundry separately.



Wash fuzzy laundry by turning it inside out.

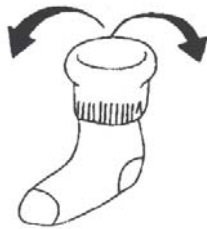

Wash delicate clothes, wrapping them in a nylon net.



- Insert the power plug into the power socket.
- Let the drain hose stay down.
- Connect the inlet hose.




# OPERATING INSTRUCTIONS
 
## WASH

### Step A


- Put the appropriate amount of detergent in the detergent drawer depending on the amount of laundry.
- Put the laundry in the tub and add water upto the desired water level depending on the laundry to be washed.
- Select the wash program NORMAL or HEAVY according to the kind and quality of laundry. Recommend to use SOAK program for heavily soiled laundry.

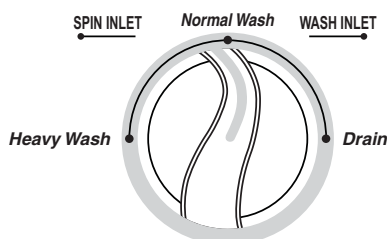

**Wash-Drain Selector**

Set the desired wash time by turning the knob clockwise (refer table below for time selection)

 Fabric Type	Woolen	Cotton, Workclothes, Linen	Heavily soiled cotton clothes
Wash Time	3-6 min	10-15 min	35 min

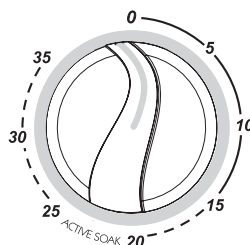

**Wash Timer**

After washing is complete, drain the water by setting the WASH-DRAIN selector knob to DRAIN position.

Note : The clothes should rotate freely during the washing for better results. Reduce the clothes load / increase the water level to achieve the free movement of clothes.

### Soak Function

 
- Soaking is provided for better cleaning of clothes as detergent water goes to inner pores of clothes resulting dirt removal and better wash.
- Soak time by default will be 20 min. So total time of cycle will be Soak + Wash time (20 min + wash time).
- In soak option, machine operate for 2 min and remain off for 5 min. This cycle continues for selected soak time.

# OPERATING INSTRUCTIONS

## INTERMEDIATE SPIN

### Step B

- Transfer the laundry to the spin tub, arrange it evenly and place the spin cap on top of the laundry tightly and horizontally.

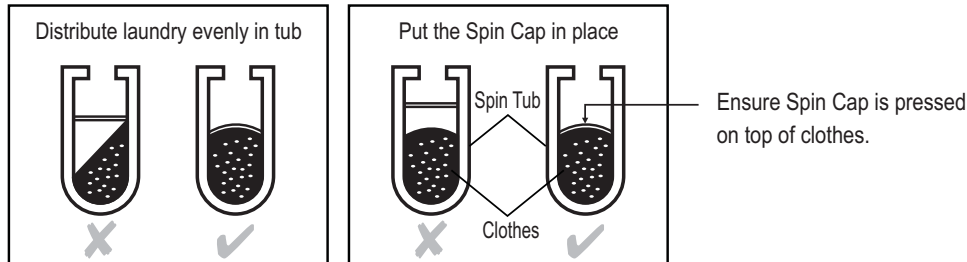

- Set the spin timer to 2-4 min.

**Note :** Do not open the Spin Lid while spin tub is running.

## RINSE

### Step C

**1. SOAK RINSE** – This is recommended for normally soiled clothes.

- Transfer the laundry from spin tub to the wash tub.
- Set the WASH-DRAIN SELECTOR knob to wash.
- Take the water up to appropriate level.
- Set the wash time to 4 to 6 min. Soak rinse will be performed.

**2. OVER FLOW RINSE** – This is recommended if more detergent was used or for baby clothes.

 
- Transfer the laundry from spin tub to the wash tub (after step B).
  - Set the WASH-DRAIN SELECTOR knob to wash.
  - Take the water up to appropriate level.
  - Set the wash time to 4 to 6 min. Overflow rinse will be performed.
- Keep the water tap on so the water flows while the rinse is being performed.

**3. SPIN SHOWER RINSE/WATER SAVER RINSE** – This is recommended for less soiled cloths / for water saving.

- This to be performed after Step B.
- Set the water selector to SPIN INLET.
- Open the water tap and allow the water to flow to spin tub.

PLEASE ENSURE THAT THE SPIN TUB IS NOT ROTATING AND WATER TAP IS OPENED PARTIALLY.

- After about 2 min close the tap.
- Set the spin timer for 2 min.

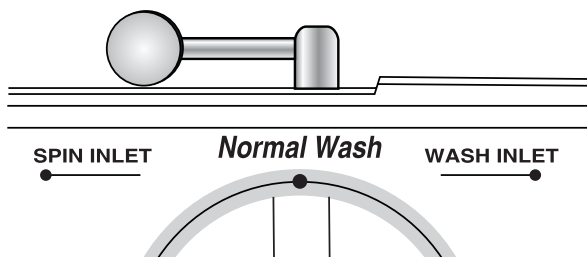

**Note :** Do not leave the water tap open while the spin tub is rotating. This can only waste water.

## OPERATING INSTRUCTIONS

 






### SPIN DRYING

#### Step D

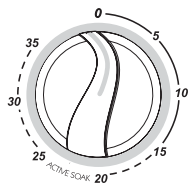- Transfer the laundry to the spin tub, arrange it evenly and place the spin cap on top of the laundry tightly and horizontally.
- Close the inner and outer spin lids.
- Turn the "SPIN TIMER" knob clockwise to the desired time. The spin dry process will begin.

Type of the clothes	Spin-drying time
Shirts (synthetic)	1-2 min
Undershirts	3-5 min
Work clothes	5 min

## TROUBLE SHOOTING

 
Troubles	Check up		
<b>No washing</b>	 <p>Is the wash timer knob at the "0" position?</p>	Is the pulsator clogged?	
<b>No spinning</b>	 <p>Is the spin control knob at the "0" position?</p>	 <p>Is the lid open?</p>	 <p>Is the laundry unevenly balanced?</p>
<b>No drain</b>	 <p>Is the drain hose not kept down?</p>	 <p>Is the drain hose twisted? Or is the threshold too high?</p>	 <p>Is the drain hose frozen?</p>
<b>Washing is forceless</b>	<ul style="list-style-type: none"> <li>■ Is the clothes load too much?</li> <li>■ Is the voltage too low?</li> </ul>		

### IF YOU NEED HELP :

In case the problem is not solved, contact your local ONIDA service centre for the correction and analysis.

# MAINTENANCE

- Remove the power plug after washing.

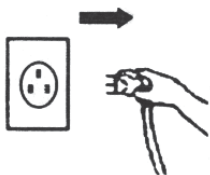


- Must clean tubs after bleaching or starching, otherwise, some deposit will be created.


- Wipe the washer clean and dry with a soft cloth.

- Clean the waste thread collected in the Magic Lint filter.

 - 1** Push the upper part of the filter and pull in.

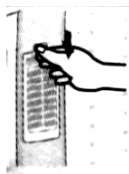

 - 2** Open the cover as shown in the figure.

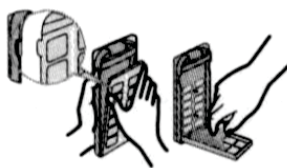

- 3** Clean the filter.



- 4** Close the cover and insert the lower part of the filter in the basket first and then push the filter with "click" sound.



 
**CAUTION :** It is advisable never to run the machine without Magic lint Filter Assembly as foreign lint may damage the machine.

**NOTE :** In case of Magic Lint Filter damage, please replace with new unit available at your ONIDA Service Centre near to you.


- Clean the brush to get rid off residues and lints accumulated over the bristles.

- 1** Push the upper part of the Brush and pull in.

BRUSH

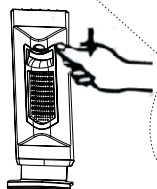

- 2** Clean the Brush.

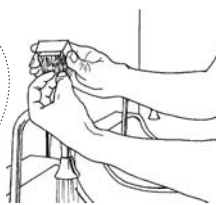 

- 3** Insert lower part of the Brush in the tub first and then push the brush with "click" sound.



**Note :**

1. Bristle distortion might be there in the brush after completion of wash cycle. This will be resumed before next wash.
2. In case of damage, please replace with new Brush available at your ONIDA Service Centre near to you.

## TECHNICAL SPECIFICATIONS

MODEL	Hydrofall 68BS
Type	Semi Automatic Twin Tub
Capacity	6.8 kg
Power supply	230V, 50Hz, AC
Power input	Wash 400W max, Spin 160 W max
water supply	less than 1kgf/cm <sup>2</sup> / less than 10m water head
Wash program	2
Soak function	YES
Net Weight	26.5 kg
M/c Dim	810 (W) X 505 (D) X 931 (H)

**Note :** The appearance and specifications are subject to change without notice to raise the unit quality.  
The graphics shown in the manual are schematic and it is possible that they do not conform to your washing machine.

## List of Service Centre nos. In India

<b>State</b>	<b>Service Number</b>
Andhra Pradesh	040-39889000
Delhi	011-39889000
GOA	022-39889000
Gujarat	079-39889000
Haryana	0172-3988900
Karnataka	080-39889000
Kerala	0484-3988900
Madhya Pradesh	0731-3988900
Maharashtra	022-39889000
Punjab	0172-3988900
Rajasthan	0141-3988900
Tamilnadu	044-39889000
Uttar Pradesh	0522-3988900
W Bengal	033-39889000
Bihar	1800 30099000
Chattisgarh	1800 30099000
Himachal Pradesh	1800 30099000
Jharkhand	1800 30099000
Orrisa	1800 30099000
Uttaranchal	1800 30099000
Assam-Guwahati	0361-2413138 / 2413158
Assam-Jorhat	0376-2309008
Jammu & Kashmir- Jammu	0191-2562258

## Overseas-Middle East Asia

UNITED ARAB EMIRATES : M/s Al Futtaim Electronics, DUBAI .U.A.E. Tel : +971 4 6090760 Fax: +971 4 2832590,  
 OMAN : M/s Mohsin Haider Darwish, P.O.Box : 880, PC 112-RUWI, OMAN Tel : +968 24 703411 Fax : +968 24 798662  
 QATAR: M/s Videohome & Electronics Centre, PO Box : 4668, DOHA-QATAR, Tel : +974 4410060 Fax : +974 44373876  
 BAHRAIN: M/s Kewalram & Sons. PO Box : 84, Manama BAHRAIN Tel : +973 17 210617 Fax : +973 17 210627  
 KUWAIT: M/s Seifeena Gen Trading & Cont Est, P.O Box : 5610, Safat: 13057 KUWAIT Tel : +9652456293 fax : +9652456297  
 KINGDOM OF SAUDI ARABIA: M/s Said Ahmed El-Ajou Trading Corp. LLC, Tel: +966 22830923, Fax : +966 2830924

## Warranty Card for Onida washing machine

2. The warranty does not apply if
  - a) The washing machine has been damaged due to misuse, negligence, accident, improper installation, improper electrical circuit outside the machine, any defective electric supply, pests or any external agency.
  - b) The washing machine has been damaged due to use of sea water and/or sub standard detergent.
  - c) The washing machine is damaged in transit whether carried by the company's transport or by the purchaser himself.
  - d) The washing machine is tampered with, serviced or repaired by any agency not specifically authorised by the company.
  - e) The washing machine is not used in accordance with the instructions given in the USER GUIDE given along with this machine.
  - f) The serial number of the washing machine is deleted, defaced or altered.
  - g) The washing machine has been transported to another city without obtaining warranty transfer note from ONIDA.
  - h) The washing machine is purchased from any agency/dealer not authorised by Onida.
  - i) Accessories other than those supplied with this washing machine.
3. The company shall not be liable for any dealer expenses, if any, in carrying out the terms of this warranty.
4. The company shall not be liable for any delay in rectifying the washing machine, in the event of non-availability of parts or situations beyond the control of the company. The company will not be responsible for any losses direct or indirect in this regard.
5. This warranty is not applicable if the machine is put into any commercial use or used at places like hospitals, institutions, community halls, hostels and other similar applications.
6. Onida employees, dealer and service personnel have no authority to vary the terms of this warranty.
7. This warranty is issued subject to the jurisdiction of civil courts of Delhi.

### WARRANTY

Customer Privileges.

Dear Customer,

Congratulations ! We wish you a long and happy association with your Onida Washing Machine. We would like you to know your privileges with respect to your washing machine.

You are entitled to :

1.
  - a) Repair or replacement of any parts other than rubber and plastic parts free of charge, for a period of 24 months from the date of invoice/bill.
  - b) The defective part(s) shall be replaced with a functionally working equivalent part(s). The removed part(s) will be Onida property.
2. After sales service is available with in the municipal limits of the city where the service station/authorised dealer is located.
3. These privileges are available to the original purchaser only.
4. In the event the washing machine requires attention at the company's service centre/authorised dealer under an advice of company's service engineer, the purchaser should arrange to deliver the washing machine to the service centre at his cost. The company shall arrange to transport the washing machine to the purchaser free of cost, after service.

ONIDA warrants your above privileges.

Kindly note

1. Your privileges mentioned above, are for the repair and replacement of the defective parts only and does not cover any consequential damages or loss or replacement of the washing machine itself or refund of the price.

### WARRANTY CARD

Machine Sl. No.: _____	<div>Stamp of Dealer</div>
Model : _____	
Dealer's Name : _____	
Address : _____	
_____	
Date of Purchase : _____	
Date of Expiry : _____	

\* CONDITIONS APPLY AS DESCRIBED IN MANUAL





DESIGNED WITH YOU IN MIND

MANUFACTURED & MARKETING BY :

**MIRC ELECTRONICS LIMITED**

ONIDA HOUSE, G-1, MIDC, MAHAKALI CAVES ROAD,  
ANDHERI (EAST), MUMBAI 400 093

MADE IN INDIA

[www.onida.com](http://www.onida.com)