


LPRDS-CMS-2011

User Manual

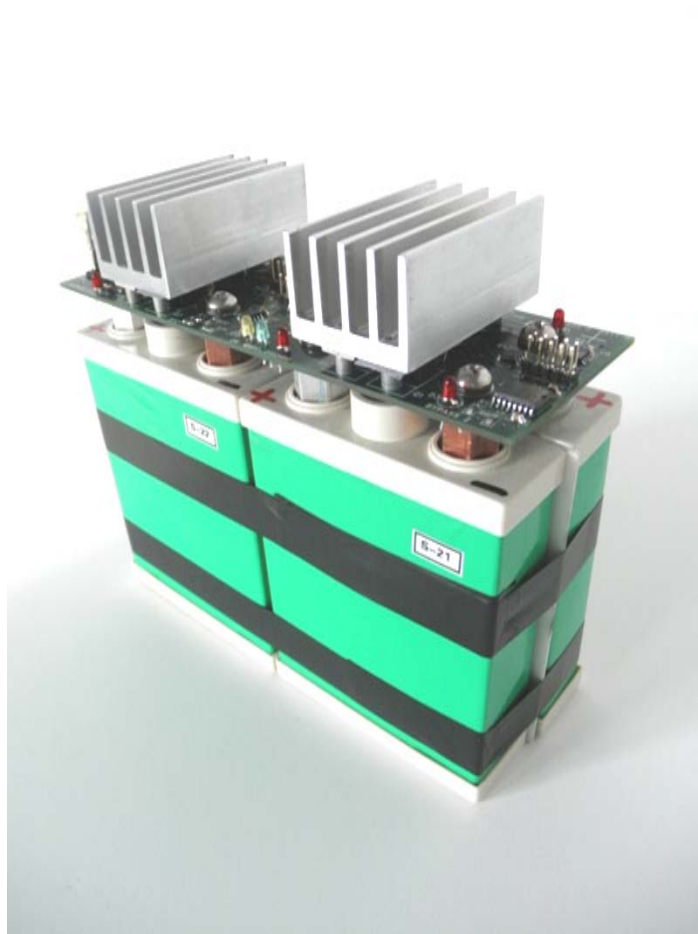

Lafayette Photovoltaic Research and Development System

Cell Management System

ECE492 – Spring 2011

Table of Contents

I. Introduction

II. Getting Started

A. System Components

B. Extras

C. Warnings

III. Installation

IV. Operating Instructions

A. Charging

B. Discharging

C. I²C Operation

V. I²C Instruction Set

VI. Troubleshooting

A. System Reset

B. Replacing a Fuse

VII. Appendix

A. Board Components

B. Cell Maintenance

I. Introduction

Cell Management System (CMS)

The main function of the CMS is to balance and monitor the state of charge of a pack of four Lithium Iron Phosphate Cells. The CMS can be used in automatic mode, and can also be easily monitored and controlled via I²C communication. Each pack of cells contains a single Printed Circuit Board (PCB), which is referred to as the OBPP (One Board Per Pack). The OBPP acts as the brain of the CMS, as well as a visual indicator of the state of the CMS.

Under automatic conditions, a pack of 4 cells can be charged or discharged by the user and the CMS will automatically balance the cells' state of charge over several cycles, thus improving the lifetime of the cells, and improving the pack performance. The user can visually monitor charge and discharge cycles by observing the LED indicators on the OBPP. For more information about these indicators, see Operating Instructions Section.

In addition to automatic mode, the user can also control and monitor the CMS from a PC terminal. A range of commands allows the user to set cell bypass conditions, change parameters, or read cell voltages, current, or temperature. For more about this command set, see the Operating Instructions Section.

II. Getting Started

A. System Components

1. Batteries - The Cell Management System includes 4 Li-Ion batteries. Specifically, the batteries are Lithium Iron Phosphate (LiFePO4) cells.

Capacity: 3.2V, C = 10Ah

Size: 82x27x108 mm (L x W x H).

2. One Board Per Pack (OBPP) - The OBPP is the board responsible for managing and monitoring each cell in a pack of four cells. This board must be mounted in the appropriate orientation onto a pack of four cells. See the Installation Section for instructions.

3. Screws and Spacers- Provided with the CMS are:

Spacers: Four (4) Aluminum, four (4) copper

Screws: 8 (5/8" 10-32)

Lock Washers: 8 (10-32)

4. Cables- Provided with the CMS are:

Power Cable: 1 to connect to another pack in series

I²C Cable: 1 for connection to I²C bus

5. PC to I2C Converter: The converter provided with the CMS is necessary for the use of the I2C features. This device is used to convert either RS-232 or USB to I2C.

6. RealTerm: This is free software that is useful for sending basic hex/ascii/binary commands via a PC's USB or RS-232 COM ports. This software is used for sending basic I2C commands.

B. Extras You May Need

1. Constant Current Power Supply- For cell charging, it is recommended to use a constant current source. The current source should be limited to no more than 2C (20A). It is recommended to use a constant 10A source, which will charge an empty pack in about 1 hour.

3. Relay- It may be convenient to use a relay when charging a pack. A common emitter output on the OBPP provides a logic high output when a pack becomes fully charged, and a logic low when the pack is fully discharged. Connecting a power supply or load to the pack through a relay controlled by this output will prevent the pack from being over charged or over discharged. In the event that a relay is not available, the user can view an LED indicator on the OBPP that will signify when charging or discharging is complete.

4. Safety Glasses- Please be cautious when working with high voltage electronics. Particularly when connecting several packs in series, or installing the OBPP, it is important to wear safety glasses.

5. PicKit Serial Programmer: The PicKit is a device that is used for In Circuit Serial Programming (ICSP) of PIC u-controllers. This device may be needed if the CMS firmware requires recompiling or software updates.

C. Warnings

- 1. DO NOT** short the terminals of any cells. This could result in serious injury or cause the permanent damage to the CMS and/or cells.
- 2. DO NOT** touch heat sinks while board is in operation. They, or other components on the board may become extremely hot!

III. Installation

A. Installing the OBPP

1. Screw spacers onto the terminals of four cells. Match Copper spacers with Copper terminals, and Aluminum spacers with Aluminum terminals
2. Place the OBPP on top of a pack of four cells, as shown below, lining the holes with the top of the spacers.

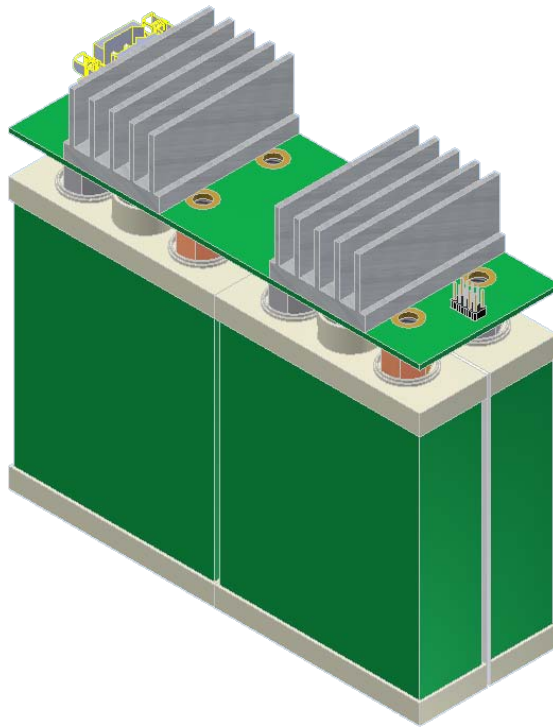


Figure 1- Single Pack with OBPP

3. Once aligned, secure the OBPP with the provided screws, being careful not to short any of the cells with a screw or screwdriver.

IV. Operating Instructions

A. Charging

1. If it is the first time using the CMS, or after a system crash, reset the CMS by jumping the reset pins on the OBPP, as shown in *figure 2*.



Figure 2 - Reset Pin

2. If a relay is unavailable, skip to step 7.
3. If a relay is available, attach the positive terminal of the relay switch to the “Done” pin on the OBPP and the negative terminal of the relay switch to the “GND” pin on the OBPP. Use a 10KOhm Resistor to pull up the “Done” Signal to V_{DD} .
4. Attach the positive terminal of the power supply to the positive terminal of the relay.
5. Attach the negative terminal of the power supply to the negative terminal of the pack.
6. Attach the negative terminal of the relay to the positive terminal of the pack. The above configuration will cause the relay to open when the cell becomes fully charged. This will prevent the cells from being over charged.

7. For a setup without a relay, connect the positive terminal of the power supply to the positive terminal of the pack, and the negative terminal of the power supply to the negative terminal of the pack as show in *figure 3*.

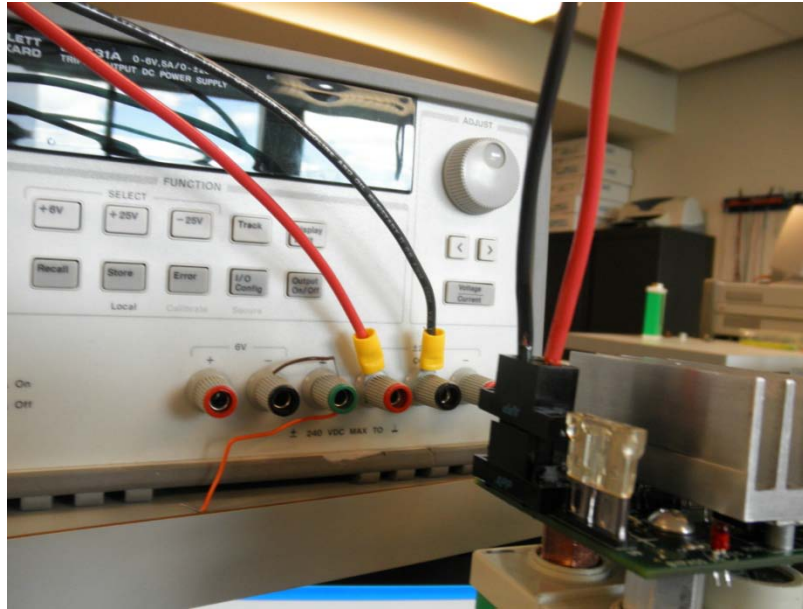


Figure 3- Power/ Load Connector

8. After checking to make sure the relay is closed (on), turn on the power supply so that it is current limited within a range of 5-20A. Once on, the pack will begin to charge. The green LED labeled “CHRG” should blink, as well as the yellow LED labeled “ON.” If this is not the case, perform a system reset, or refer to the maintenance manual for instructions to reprogram the CMS.

*Note: **DO NOT** turn a power supply on before attaching to a pack.

B. Discharging

1. If it is the first time using the CMS, or after a system crash, reset the CMS by jumping the reset pins on the OBPP, as shown in *figure 2*.
2. If a relay is unavailable, skip to step 7.
3. If a relay is available, attach the positive terminal of the relay switch to the “Done” pin on the OBPP and the negative terminal of the relay switch to the “GND” pin on the OBPP. Use a 10KOhm Resistor to pull up the “Done” Signal to V_{DD} .
4. Attach the positive terminal of the load* to the positive terminal of the pack.
5. Attach the negative terminal of the load to the positive terminal of the relay.
6. Attach the negative terminal of the relay to the negative terminal of the pack. The above configuration will cause the relay to open when the cell becomes fully discharged. This will prevent the cells from being over discharged.
7. For a setup without a relay, connect the positive terminal of the load to the positive terminal of the pack, and the negative terminal of the load to the negative terminal of the pack as show in *figure 3*.
8. Check to make sure the relay is closed (on), once on, the pack will begin to discharge.

* **DO NOT** use a load that requires more than 20A. Doing so could cause the fuse to give out, or in certain situations cause permanent damage to the CMS.

C. I2C Operation

1. If it is the first time using the CMS, or after a system crash, reset the CMS by jumping the reset pins on the OBPP, as shown below.
2. Open RealTerm I2C. If RealTerm I2C is not installed on your PC, go to:
<http://realterm.sourceforge.net/index.html#downloads> Download
To download, as well as for RealTerm help.
3. Using either an RS-232 or USB cable, connect the PC to I2C converter to the PC running RealTerm I2C.
4. Connect the provided I2C communication cable between the PC to I2C converter and the OBPP. Be sure to orient the cables as shown below.
5. In RealTerm, under the 'Port' tab:
 - a. Select 'Baud' of 57600
 - b. Select 'Port' 3, the Port number for the USB port
 - c. Set 'Parity' to 'None'
 - d. Set 'Data Bits' to '8'
 - e. Set 'Stop Bits' to '1 bit'
 - f. Set 'Hardware Flow Control' to 'RTS/CTS'
 - g. Set 'Software Flow Control' to 'Xon Char: 17' and 'Xoff Char: 19'. Do not check 'Receive' or 'Transmit'
 - h. Click 'Change' Button to save settings
6. In RealTerm, under the 'I2C' tab:
 - a. Set 'Bus Num' to '1'
 - b. Set 'Address' to 0x54, which is the default address of an OBPP, or else set to the known address of the board.
 - c. Set 'SubAddr=' to 0

7. Sending Commands

Read Command Format:

Board Address	Command Number	Data Byte High	Data Byte Low
Default 0x54	(0x00-0x1B)	0xF0	0x00

Write Command Format:

Board Address	Command Number	Data Byte High	Data Byte Low
Default 0x54	(0x00-0x1B)	0x0X	0xXX

- 8.** Pay careful attention to the boundary conditions for command sets. Failure to send correct commands could result in failure of the system.

D. I2C Instruction Set

Command #	Input Range	Value Range	Default Value	Description	Calculation
0x00	0x0000 - 0x0FFF	-25A - 25 A	R/O	Using a read command, this returns the current passing through the addressed board.	Calculate current from returned hex value (X) as: $I = \left(\left(\frac{X}{0xFFFF} \right) * 50 \right) - 25$
0x01	0x0000 - 0x0FFF	0 - 5 V	R/O	Using a read command, this returns Cell 1 Voltage .	Calculate voltage from returned hex value (X) as: $V1 = \left(\left(\frac{X}{0xFFFF} \right) * VDD \right)$
0x02	0x0000 - 0x0FFF	0 - 5 V	R/O	Using a read command, this returns Cell 2 Voltage .	Calculate voltage from returned hex value (X) as: $V2 = \left(\left(\frac{X}{0xFFFF} \right) * VDD \right)$
0x03	0x0000 - 0x0FFF	0 - 5 V	R/O	Using a read command, this returns Cell 3 Voltage .	Calculate voltage from returned hex value (X) as: $V3 = \left(\left(\frac{X}{0xFFFF} \right) * VDD \right)$
0x04	0x0000 - 0x0FFF	0 - 5 V	R/O	Using a read command, this returns Cell 4 Voltage .	Calculate voltage from returned hex value (X) as: $V4 = \left(\left(\frac{X}{0xFFFF} \right) * VDD \right)$

0x05	0x0000 - 0x0FFF		R/O	Using a read command, this returns Cell 1 Temperature .	Calculate temperature (°C) from returned hex value (X) as: $T1 = \frac{\left(\frac{X}{0xFFFF} * 5000\right) - 1409.1}{29.6}$
0x06	0x0000 - 0x0FFF		R/O	Using a read command, this returns Cell 2 Temperature .	Calculate temperature (°C) from returned hex value (X) as: $T2 = \frac{\left(\frac{X}{0xFFFF} * 5000\right) - 1409.1}{29.6}$
0x07	0x0000 - 0x0FFF		R/O	Using a read command, this returns Cell 3 Temperature .	Calculate temperature (°C) from returned hex value (X) as: $T3 = \frac{\left(\frac{X}{0xFFFF} * 5000\right) - 1409.1}{29.6}$
0x08	0x0000 - 0x0FFF		R/O	Using a read command, this returns Cell 4 Temperature .	Calculate temperature (°C) from returned hex value (X) as: $T4 = \frac{\left(\frac{X}{0xFFFF} * 5000\right) - 1409.1}{29.6}$
0x09	0x01F4 – 0x34BC	~1% - ~99%	R/O	Using a read command, this returns the State of Charge of the pack of cells addressed.	Calculate the State of Charge (%) from the returned hex value (X) as: $SOC = \left(\frac{X \text{ to Decimal}}{6}\right)$

0x0A	0x0000 – 0xFFFF	0 – 65,536 min	R/O	Using a read command, this returns Total Run Time since last reset.	Calculate run time from returned hex value (X) as: T = (X to Decimal)
0x0B	0x0000 – 0xFFFF b1-b11 = duration b0 = 0n(1) or Off(0)	0 – 2,048 min On or Off	0x0000 0 min / Off	Using a read command, this returns the State of Bypass 1 Using a write command, this can turn Bypass 1 On for the specified amount of time, or Off	If Bypass 1 is on, Rightmost bit returned is 1, otherwise, it is 0
0x0C	0x0000 – 0xFFFF b1-b11 = duration b0 = 0n(1) or Off(0)	0 – 2,048 min On or Off	0x0000 0 min / Off	Using a read command, this returns the State of Bypass 2 Using a write command, this can turn Bypass 2 On for the specified amount of time, or Off	If Bypass 2 is on, Rightmost bit returned is 1, otherwise, it is 0

0x0D	0x0000 – 0x0FFF b1-b11 = duration b0 = 0n(1) or Off(0)	0 – 2,048 min On or Off	0x0000 0 min / Off	<p>Using a read command, this returns the State of Bypass 3</p> <p>Using a write command, this can turn Bypass 3 On for the specified amount of time, or Off</p>	If Bypass 3 is on, Rightmost bit returned is 1, otherwise, it is 0
0x0E	0x0000 – 0x0FFF b1-b11 = duration b0 = 0n(1) or Off(0)	0 – 2,048 min On or Off	0x0000 0 min / Off	<p>Using a read command, this returns the State of Bypass 4</p> <p>Using a write command, this can turn Bypass 4 On for the specified amount of time, or Off</p>	If Bypass 4 is on, Rightmost bit returned is 1, otherwise, it is 0
0x0F	0x0000 or 0x00FF	Off (0x0000) or On(0x00FF)	Off (0x0000)	<p>Using a read command, this returns the current State of the Done Signal</p> <p>Using a write command, this can set the Done Signal either high or low</p>	

0x10	0x01 – 0xFF *note that 0x00 is reserved as a broadcast address		0x54	<p>Using a read command, this returns the Current Address of the board</p> <p>Using a write command, this can change the Current Address of the board</p>	
0x11	0x0000 – 0x0002	0x0000 – standby 0x0001 – charging 0x0002 – discharging	R/O	<p>Using a read command, this returns the current Charge State of the pack.</p>	
0x12	0x0000 or 0x00FF	0x0000 – Automatic 0x00FF – Slave	0x0000	<p>Using a read command, this returns the current Mode of the System</p> <p>Using a write command, this either puts the system in automatic mode or slave mode.</p>	

0x13	0x0000 – 0x0FFF	0 – 5V	3.8V (0xC29)	<p>Using a read command, this returns the Upper Voltage Threshold of used in the cell balancing algorithm.</p> <p>Using a write command, this sets the Upper Voltage Threshold used in the cell balancing algorithm.</p>	
0x14	0x0000 – 0x0FFF	0 – 5V	2.8V (0x8F6)	<p>Using a read command, this returns the Lower Voltage Threshold of used in the cell balancing algorithm.</p> <p>Using a write command, this sets the Lower Voltage Threshold used in the cell balancing algorithm.</p>	

0x15	0x0000 – 0x0FFF	0 – 255 deg C	0xB0A	Using a read command, this returns the Temperature Threshold used in the cell balancing algorithm	
0x16	0x0000 – 0x00FF	0 – 255 minutes	0x0014	<p>Using a read command, this returns the current Bypass Duration used in the cell balancing algorithm.</p> <p>Using a write command, this sets the Bypass Duration used in the cell balancing algorithm.</p>	
0x17	0x0000 – 0x0FFF	0 – 5 V	0x0029 (50mV)	<p>Using a read command, this returns the current Bypass Threshold used in the cell balancing algorithm.</p> <p>Using a write command, this sets the Bypass Threshold used in the cell balancing algorithm.</p>	

0x18	0x0000 – 0xFFFF	0 – 65636 minutes	R/O	Using a read command, this returns the Time (in minutes) since the last system reset.	
0x19	0x0000 – 0xFFFF	0 – 65636 minutes	R/O	Using a read command, this returns the Time (in minutes) since the last change in charge state.	
0x1A	0x0000 – 0xFFFF	0.0 – 255.255	R/O	Using a read command, this returns the Board's Version Number	
0x1B	0x0000 – 0xFFFF	0 – 255	R/O	Using a read command, this returns the Board's Serial Number	

E. Troubleshooting

1. Common Failures

Component	Error	Possible Solution
Batteries	Cell appears to have capacity of less than 10 A-h	Replace Cell
Any LED	LED never turns on	Replace Green LED
Any LED	LED acts in an unexpected manner	Reset OBPP
I ² C	I ² C Read Returns 0xFFFF or other unexpected value	Reset OBPP
I ² C	I ² C Write does not change parameters as expected	Reset OBPP
Current Sensor	I ² C returns invalid data for Current reading	See Maintenance Manual for Instructions to replace Current Sensor
Temperature Sensor	I ² C returns invalid data for Temperature reading	See Maintenance Manual for Instructions to replace Temperature Sensor
Fuse	CMS unable to be charged/ discharged - I ² C not responding as expected	Replace Fuse Reset OBPP

2. Replacing a Fuse

If you find the pack is unable to take a charge or a discharge, or if certain components are not responding properly, the problem may be a blown fuse. A blown fuse will look like the one shown in the figure __. If your fuse looks similar to this, follow the instructions below to replace the fuse.

- Remove the broken fuse.
- Using the part described below, install the new Fuse. There is no directionality to the part, so orientation does not matter.

25 Amp Automotive Blade Fuse	F1018-ND	Blade Fuse	Digikey
------------------------------	----------	------------	---------

3. Resetting Board

If you find any issues with I²C communication, or if the CMS appears to be stuck in a state, a possible solution is to reset the firmware. This can be done by simply putting a jumper across the reset pins, as shown in *figure 2*.

VII. Appendix

A. Board Components

a. The meaning of the LED's on the OBPP

The LED's on the OBPP are visual signals which inform the users and the maintainers about the current status of the CMS. The following figure depicts what LED's mean:

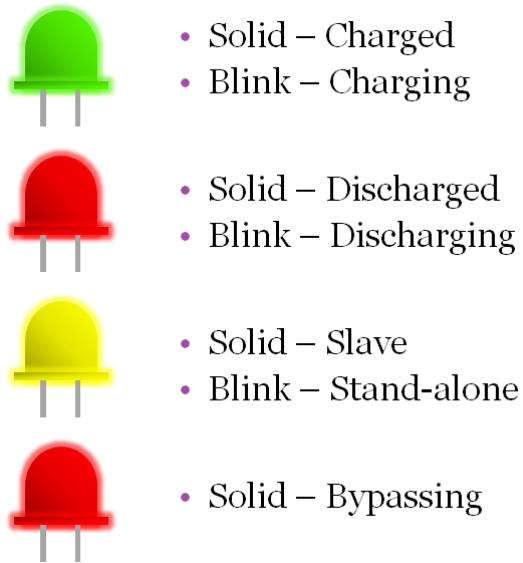


Figure 4 - OBPP LEDs

b. Pinouts of all connectors

There are two (2) connectors on the OBPP, which are:

- Anderson connector
- Data connector

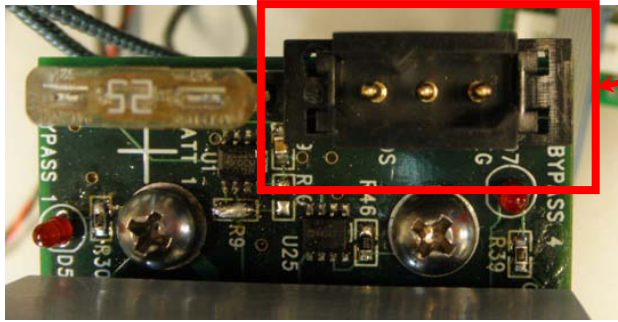


Figure 5 - Anderson Connector

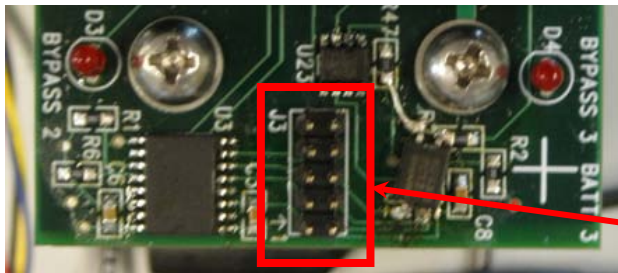



Figure 6 - I2C Data Connector



Figure 7 - OBPP 1

Pinout for Anderson Connector (3-pin connector)

Pin #	Signal
1	Power (+12V)
2	No Connection
3	Ground

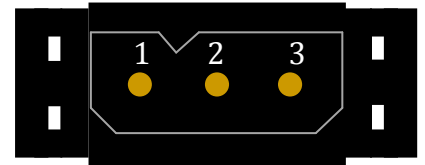

Pinout for Data Connector (2x5 connector)

Pin #	Signal
1	External Power (+5V)
2	External SDA (data for I ² C)
3	External SCL (clock for I ² C)
4	No Connection
5	No Connection
6	External RTSS (Redundant Temperature Sensing System)
7	External Done
8	Ground
9	No Connection
10	No Connection

