
1455

## INSTRUCTION MANUAL FOR SEWING MACHINE

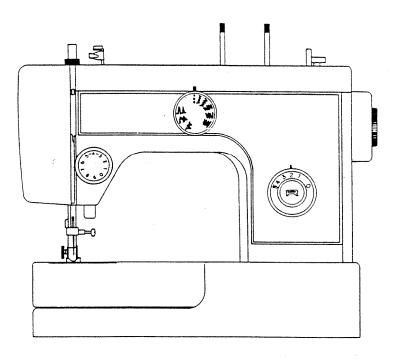

WHITE

### POLARIZED PLUGS CAUTION

This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

WHITE SEWING MACHINE COMPAN	WING MACHINE COMP	ΥΝΑ
-----------------------------	-------------------	-----

Record in space provided below the Serial No. and Model No. of this appliance.

The Serial No. is located on Bed Plate.
The Model No. is located on Rating Plate.


Serial No.	•
Model No.	

Retain these numbers for future reference.

### CONTENTS


iame of Parts
Recessories
efore sewing (Power supply and Sewing lamp)
ake out extension table, free arm sewing
Vinding the bobbin
Removing bobbin case and bobbin
nserting bobbin into bobbin case
nserting bobbin case into shuttle race8
hreading upper thread & Twin needle threading
rawing up bobbin thread
Changing sewing directions
Control dial & Adjusting thread tension
Regulating the presser foot pressure
Orop feed
Changing needle
abric. Thread. Needle table
Sewing (pattern selector) and operation table
o start sewing
o finish seam
Straight stitch
Zigzag sewing
Blind stitch
Button sewing
Binding
Zipper sewing
Hemming
Twin Needle
Embroidery
Quilter
Seam guide
Maintenance (Cleaning and oiling)
Checking Performance Problems WHAT TO DO

### NAME OF PARTS (FRONT VIEW)

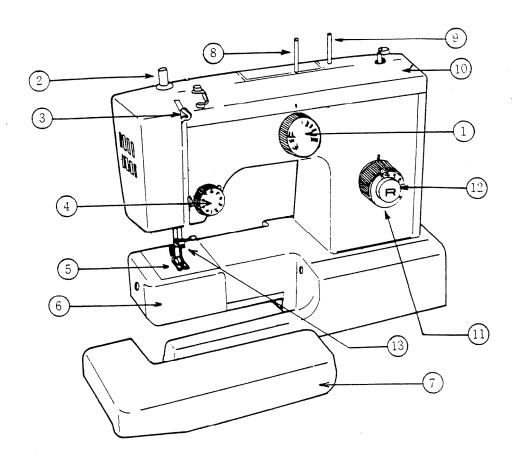

- 1 Pattern selector dial
- 2 Pressure regulator
- 3 Take up lever
- 4 Thread tension dial
- 5 Presser foot
- 6 Shuttle cover
- 7 Extension table

- 8 Sub-spool pins
- 9 Spool pins
- 10 Top cover
- 11 Stitch length dial
- 12 Reverse button
- 13 Thread guide for upper threading

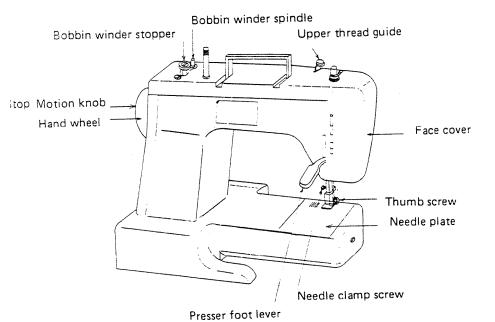

### ACCESSORIES



75734

Felt



Bobbin



Zigzag foot (On machine)



Button foot







Machine Oil




Zipper foot




Needle

# 11 # 14

### BEFORE SEWING

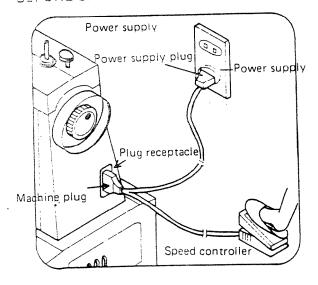


- 1. Fit the machine plug into the machine.
- 2. Plug the machine to the power supply.
- 3. Sewing speed can be varied by the speed controller.

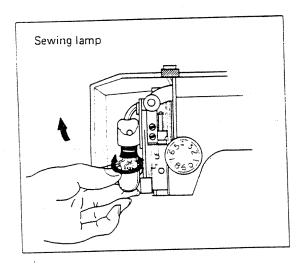


- 1. Remove or install bulb from inside of face cover.
- 2. Open face cover in direction of arrow.
- 3. Remove bulb by unscrewing it counter clockwise.
- 4. Install a new bulb by screwing it in clockwise.
- 5. Use a screw type bulb with 120V/15W. (Max)

### REMOVING EXTENSION TABLE

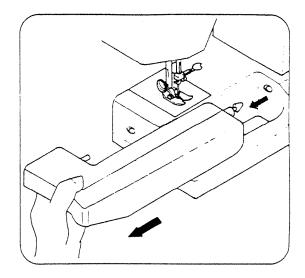


 Hold the left end of table and pull out in direction of arrow.

### FREE-ARM SEWING

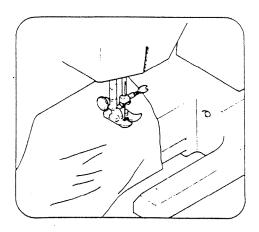


- Especially useful when sewing sleeves, pants leg, tubular fabrics etc more easily.
- 2. To sew tubular just slip the sleeve or pants leg on the free arm as shown above.
- This sewing machine can be used as a flat bed machine, but easily converts to free arm machine by removing the extension table.

### WINDING THE BOBBIN

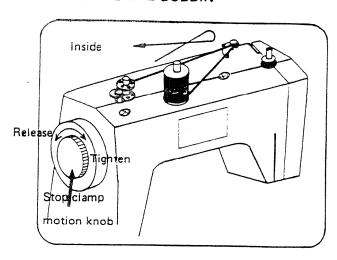


- 1. Release stop motion knob.
- 2. Thread as shown.
- 3. When bobbin is filled, tighten stop motion knob.

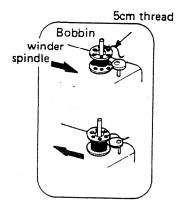


Push bobbin winder spindle in direction of arrow.

When bobbin winding is completed return spindle to original position.

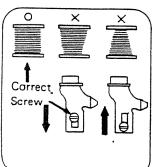

When bobbin winding is incorrect, release the screw of upper thread guide and adjust up or down until bobbin winding is balanced.


### REMOVING BOBBIN CASE AND BOBBIN

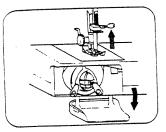

 Raise needle to its highest position and open the shuttle race cover.




Open hinged latch of bobbin case and pull bobbin case out of machine.

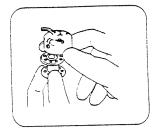


3. Release the latch and bobbin will fall out easily.

### INSERTING BOBBIN INTO BOBBIN CASE

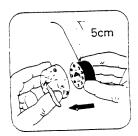


1. Pull off 5cm of thread from bobbin and insert it into bobbin case as shown.

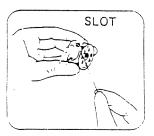


2. Guide the end of thread into slot.



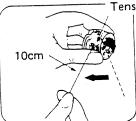


3. Pull into slot and under tension spring and draw out about 10 cm of thread.


### INSERTING BOBBIN CASE INTO SHUTTLE RACE

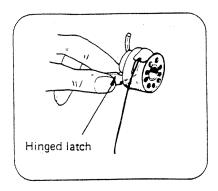



1. Raise needle to its highest position, pulling thread to the front, open the latch of bobbin case and hold it.

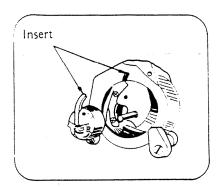


 2. Holding latch open, place bobbin case onto centre pin in-shuttle and release latch.

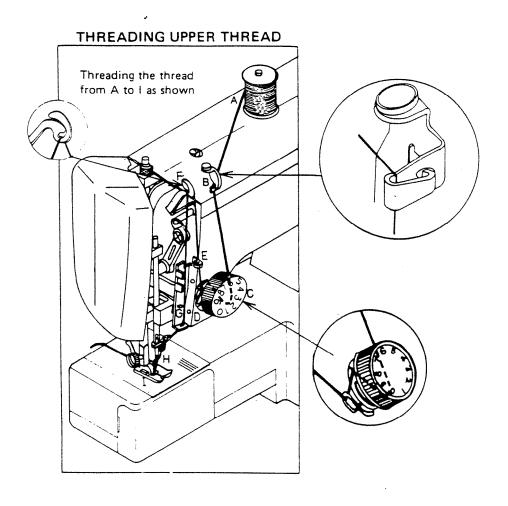




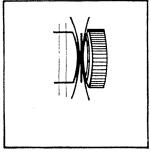


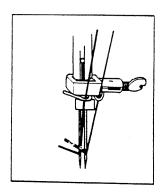

### RAWING UP BOBBIN THREAD

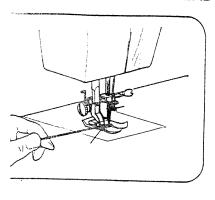


 Hold upper thread with left hand, turn the hand wheel slowly towards you until the needle goes down and comes up. Then stop the hand wheel when the takeup lever is at its highest position. Lightly draw up the upper thread will be brought up in a loop.

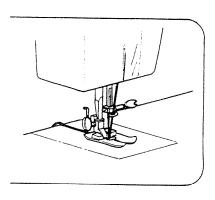


Pull out both threads and place them together under presser foot to the rear of machine.

### ANGING SEWING DIRECTIONS

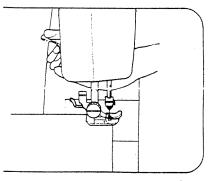


ower needle down into fabric and ise presser foot, pivot the fabric ound the needle to change direction desired.

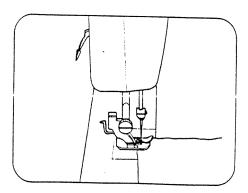

2. Put down presser foot and start to sew.

### CONTROL DIAL

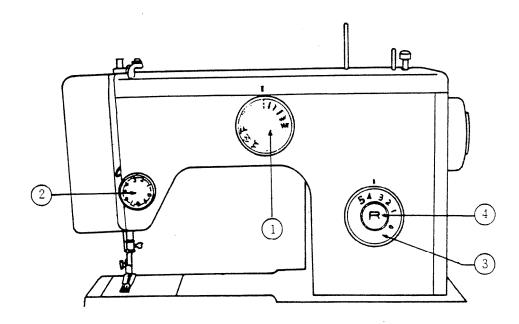


- 1. Pattern selector dial
- 2. Thread tension dial
- 3. Stitch length dial4. Reverse button


### **ADJUSTING THREAD TENSION**

  Correct




Upper thread tension may be adjusted by turning the thread tension dial.








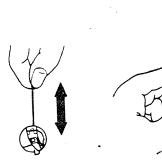


Lower thread tension can be adjusted by turning screw on bobbin case slightly to the right (clock-wise) to increase tension. (Anti-clockwise) to the left to decrease tension.


### REGULATING THE PRESSER FOOT PRESSURE

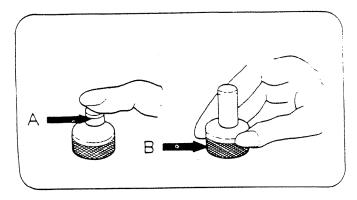

- Push down inner pin (A) to increase pressure.
   (Light to medium fabrics)
- 2. Push down outer ring to release pressure. (Heavy fabrics)
- 3. Insufficient pressure may cause poor feeding, skipped stitches, or difficulty in guiding the fabric.
- 4. No pressure adjustment is required when darning or sewing embroidery.

### DROP FEED (Daring plate is an optional accessories)

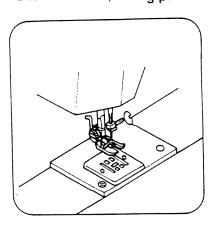


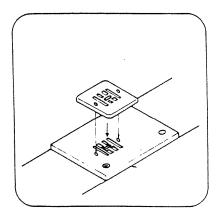

There are a few times when you want to control the feeding of fabric by your-self.

Raise needle bar to its highest position and raise presser foot, place daring plate over needle plate aligning two pins of darning plate with holes of needle plate. You may then determine the movement of the fabric by yourself. See page 20 for button sewing application -13

### CHANGING NEEDLE

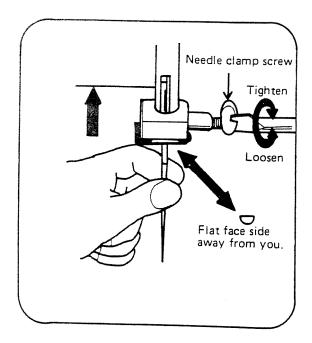

- 1. Raise needle to its highest position.
- 2. Loosen needle clamp screw and remove old needle.
- 3. With the flat side of the needle facing away from you, insert needle as far up as it will go.
- 4. Tighten the needle clamp screw securely.

### FABRIC - THREAD - NEEDLE TABLE

Please note that the following list is a guide when sewing different fabrics.

	Fabric	Thread	Needle	Pressure of presser foot	Lenat stiten ST.		Indica- tion of tension
	0		HA-1	Pressure regulation	Stiten	length	
Light	Nylon	80 Cotton					
	Tricot	60 S. Fiber	9				
	Silk	50 silk			1.3	1-4	1
*	Wool silk	50 S. Fiber Silk	11				الزين
Medium	Ging ham	60-80 Cotton	11-14		0.5 – 3		
	Thin Jersey	60 S. Fiber	11		0.5 - 3	0.5 - 6	
1	Gabardine	i50 Silk					
Heavy	Denim	50 cotton	14-16				
	Jersey	50 S. Fiber	11-14		0.5 – 3	10.5 – 4	1 (6, c, 3, r)
1	Tweed	50 Silk	11-14				

SEWING (PATTERN SELECTOR) AND OPERATION TABLE

Straight strich

Straight stra

No need

Embroidery

### TO START SEWING


### Important Hints.

- Raise the take-up lever to its highest position when starting and stopping sewing.
- 2. Hold both threads about 10 cms to the rear of machine for the first two to three stitches.
- 3. Sufficient fabric should be placed under needle before lowering presser foot.
- 4. Depress foot/Speed control and start to sew.
- 5. Test the machine stitches on a scrap of fabric you plan to use, adjusting the machine for the length of stitch and tension suitable to your fabric.


### Attenttion.

- 1. When turning the hand wheel manually, always turn it toward you.
- 2. Guide the cloth gently with your hand.
- 3. To prevent breaking needle always stop with the needle out of the fabric.

### O FINISH SEAM

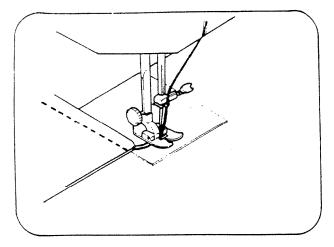

- 1. Sew to the edge of seam.
- 2. Push the reverse button and sew in reverse for about  $3-4\ cms$ .
- 3. Raise needle to its highest position.
- 4. Lift presser foot and pull out the fabric to rear of machine.

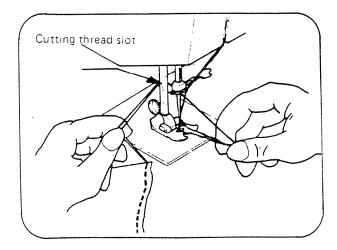


5. Cut threads as shown on the thread cutter.

### STRAIGHT STITCH


- 1. This type of stitching is the one used most frequently.
- 2. The zig-zag presser foot can be used for both straight and zig-zag sewing.
- 3. For sewing light fabric, use smaller stitch size and left needle position. (Refer to page 15 for dial setting).

### ZIGZAG SEWING

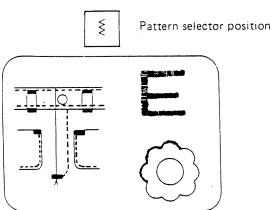



Satin stitching can be used for sewing initials, patterns, applique, etc.

1. Fold fabric as shown.

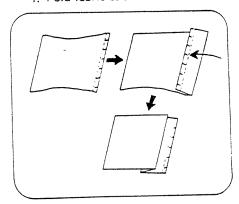


2. To finish seam as shown.

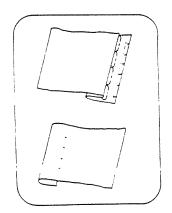

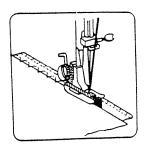


Adjust width and needle position to obtain correct seam.


Needle is not piercing edge of fold at all.

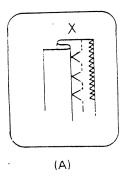


Needle is pierces edge of fold too much.

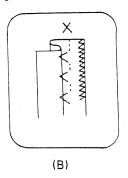


Correct seam

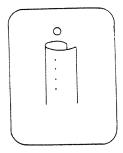


### **BUTTON SEWING**

 

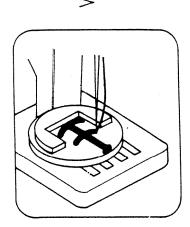


(Use darning plate see page 11)

- 1. Lower drop feed.
- 2. Use button presser foot and attach firmly.
- 3. Place button between presser foot and fabric and lower presser foot.
- Manually turn hand wheel towards you ensuring that the needle enters into both holes of button without obstruction. (Increase or decrease width setting).
- 5. Sew about 7 stitches.
- 6. Pull both threads to the underside and tie together.

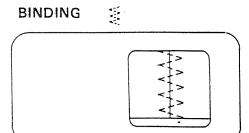


To sew fabrics edge to edge select the multi zig-zag stitch.

### **ZIPPER SEWING**

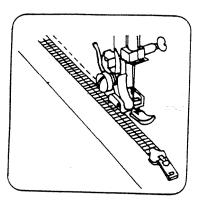


### Select straight stitch.

 - 1. Fold the fabric about 2cm and place fabric under foot.
- 2. Zipper foot is designed to sew close to a raised edge preventing sewing on zipper.




 - To sew the left side of the zipper, set the zipper foot on the left side of the needle.
- 2. To sew the right side of the zipper bring the foot to the right side of the needle.




sew as illustrated.

### HEMMING

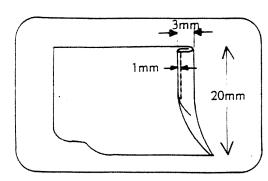


- 1. Raise the foot and the needle to its highest position. Replace the foot with the hemmer foot.
- 2. Fold over the fabric edge by about 3mm and place it under the foot. Secure the folded edge with a few stitches. Take out the workpiece and draw the hem into the hemmer foot by pulling the threads.

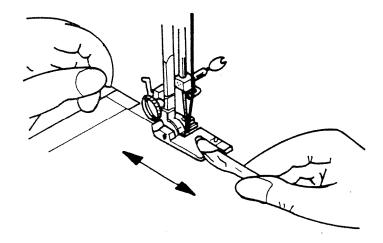

- 3. Lower the foot and sew the hem.
- 4. Durning sewing, fold the fabric to the left a little and allow it to run into the hemmer foot.
- 5. Make sure that the fabric does not move under the right half of the foot. The fabric must be fed into the scroll of the hemmer sufficiently so that the workpiece edge runs freely through the groove under the foot.

Only suitable materials can be used and some practice may be necessary to acheive best results.


### TWIN NEEDLE (optional)

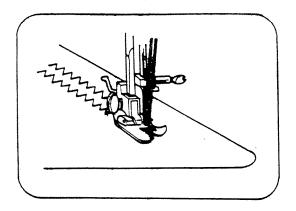

Thread machine as for normal sewing passing both threads through the same procedure:

NB. Sewing width should not exceed the third widest stitch width, exceeding this will result in breaking of needles.


### **EMBROIDERY**

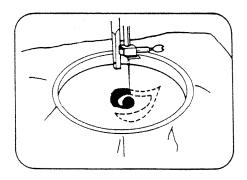

(Use darning plate see page 13)


Lower feed dog and move hooped fabric slowly to form the desired effect.

### QUILTER

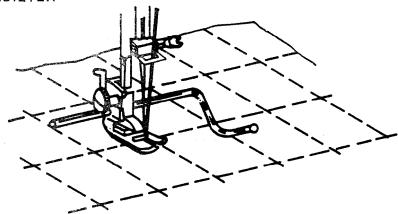


- 1. Insert supporter of quilter.
- 2. Move quilter and adjust stitch distance.

### SEAM GUIDE

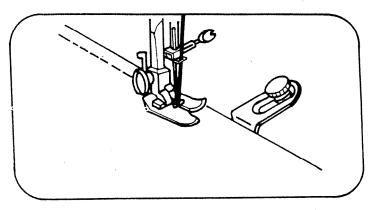

- Use seam guide when sewing a long seam of regular distance from edge of material.
- 2. Set guide in hole on bed, at right of needle plate, and adjust distance.
- 3. Run machine with edge of material touching guide. Position cloth guide at an angle to rew a curved seam.


### MAINTENANCE (CLEANING AND OILING)

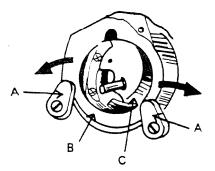


- 1. Raise needle to its highest position.
- 2. Take out bobbin case.
- 3. Turn latch knob A as illustrated.
- 4. Take off shuttle race cover.
- 5. Take out shuttle hook.
- 6. Clean and oil shuttle race and hook, then replace in the reverse order.

Cleaning shuttle race


- (A) Latch knob
- (B) Shuttle race cover
- (C) Shuttle hook

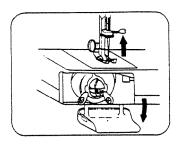


Open face cover and oil points indicated.

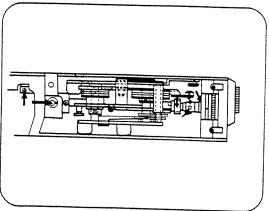

Open top cover and oil points indicated.

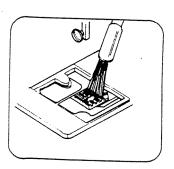

Cleaning feed dog

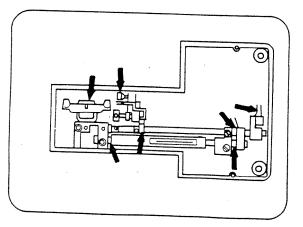

Oil points indicated on underside of bed base.

PROBLEM	PROBABLE CAUSE	CORRECTION
Fabric not moving	<ul> <li>Feel dog down.</li> <li>Machine not moving.</li> <li>Stitch length dial in 0 position.</li> <li>Light pressure on presser foot.</li> </ul>	<ul> <li>Raise feed dog.</li> <li>Moving stop motion.</li> <li>Moving dial to 1-4.</li> <li>Increase pressure on presser foot.</li> </ul>
Breaking Needle	<ul> <li>Incorrect setting of needle.</li> <li>Needle bent.</li> <li>Pulling fabric.</li> <li>Incorrect using needle, thread and fabric.</li> </ul>	<ul> <li>Reset needle.</li> <li>Replace new needle.</li> <li>Do not pull fabric.</li> <li>Correct using needle, thread, and fabric.</li> </ul>
Breaking Upper Thread	<ul> <li>Incorrect position of zigzag width dial.</li> <li>Improper threading.</li> <li>Tight upper thread tension.</li> <li>Needle bent.</li> <li>Nicks or burrs on shuttle.</li> </ul>	<ul> <li>Moving to correct position.</li> <li>Rethread machine.</li> <li>Loosen upper thread tension.</li> <li>Replace new needle.</li> <li>Replace shuttle, or polish off burrs completely.</li> </ul>
Breadkin Bobbin Thread	<ul> <li>Tight bobbin thread tension.</li> <li>Incorrect setting of needle.</li> <li>Improper threading.</li> <li>Dust and thread in shuttle.</li> </ul>	<ul> <li>Loosen bobbin thread tension,</li> <li>Reset needle,</li> <li>Rethread machine,</li> <li>Clean shuttle,</li> </ul>
Machine Jamming Knocking Noise	– No oil. · – Dust and thread in shuttle.	Need oil. - Clean shuttle.
Puckering	<ul> <li>Tension too tight.</li> <li>Sewing foot pressure too strong.</li> <li>Incorrect using fabric, needle, and thread.</li> </ul>	<ul> <li>Reset.</li> <li>Regulating sewing foot pressure.</li> <li>Correct using fabric, needle and thread.</li> </ul>

# NEEDLE - THREAD - FABRIC - STITCHING GUIDE

55

Fabric	Needle No.	Machine Stitches Per Inch	Cotton Thread	Mercerized Thread	$\begin{array}{c} \text{Silk} \\ \text{or} \\ \text{Nylon} \end{array}$
Extremely heavy		9	10		
tarpaulin, sacking,	4	ᅌ	ᅌ	Heavy Duty	
canvas, duck, etc.		8	30		
Heavy upholstery		8	30		
fabric, ticking,	ო	t	ᅌ	Heavy Duty	
denim, leatherette		10	40		
Medium heavy drapery		10	40		
fabric, velveteen,	7	ᅌ	t t	Heavy Duty	
suiting, felt, terry, etc.		12	9		
Medium broadcloth, percale,		12	09		
gingham, linen, chintz, taffeta,	۲,	to	to to	20	Ą
sheer wool, shantung, etc.		14	80		
Sheer voile, lawn,		14	80		
dimity, crepe,	0	ᅌ	to	20	Ą
handkerchief linen,		16	100		
plastic film, etc.		(Plastic film	film)		
		8 to	10		
Very sheer chiffon,		16	100		
batiste, lace, organdy,	8	to to	to to	20	Ą
ninon, net, marquisette, etc.		20	150		

When doing embroidery work, finer results will be obtained with machine embroidery thread regardless of the weight of fabric.

9

### SETTING THE NEEDLE

See Fig. 3. Raise the needle bar A to its highest point, turning wheel toward you by hand. Then loosen the needle clamp screw B and the needle clamp C will open. Place needle (flat side to back) in the needle clamp and push it upward as far as it will go into the needle clamp hole, fastening the needle clamp securely with a screw driver.

## WINDING THE BOBBIN

Disengage the hand wheel (Fig. 4) from the stitching mechanism by turning the clutch toward you or counterclockwise. Place a spool of thread on one of the spool pins, lead thread under the handle and through the upper thread guide on the arm, and down through the tension disc (11, Fig. 5) at the base of the machine. Run end of thread through a hole in the bobbin edge and place bobbin on spindle B of winder 4, fitting the notch on bobbin over small pin on spindle. Push

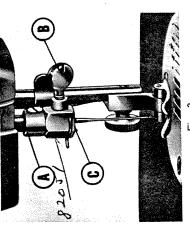


Fig. 3



Fig. 4