

If the unit doesn't operate...	Check that the batteries are installed correctly, or Install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the light becomes dim...	Install new batteries.
If the unit malfunctions...	Install new batteries.

## IMPORTANT INFORMATION

### Care instructions:

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.

This product complies with the essential requirements of the European Toy safety directive.

### InspirationWorks UK Ltd

Charlotte Court  
Proctor Way  
LUTON  
Bedfordshire  
LU2 9PE  
UK

[www.inspirationworks.co.uk](http://www.inspirationworks.co.uk)



### Warranty:

In the unlikely event that you should experience any problems with this product, all our products have a six-month guarantee. In the first instance, return the product back to the place of purchase, where a replacement will be issued.

© 2012 National Geographic Society  
NATIONAL GEOGRAPHIC and Yellow Border Design are trademarks of the National Geographic Society. All rights reserved.



National Geographic's net proceeds support vital exploration, conservation, research, and education programs.

Parents: Experience the National Geographic Channel. Call your cable or satellite provider. Visit our website: [www.ngceurope.com](http://www.ngceurope.com)  
Parents: Visit our website: [www.nationalgeographic.com](http://www.nationalgeographic.com)

© 2011 CIDE Toys - [www.cidetoys.com](http://www.cidetoys.com)  
© 2012 National Geographic Society.

*Carnotaurus*: Photograph by Pixeldust Studios / National Geographic Society  
*Amargasaurus*: Photograph by Renegade 9 / National Geographic Society  
*Troodon*: Photograph by John Sibbick / National Geographic Society

V00  
May 2012  
Printed in China  
Made in China



WASTE ELECTRICAL PRODUCTS AND BATTERIES SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE

 


AGE 3+



# Explore Dinosaurus

## Instruction manual

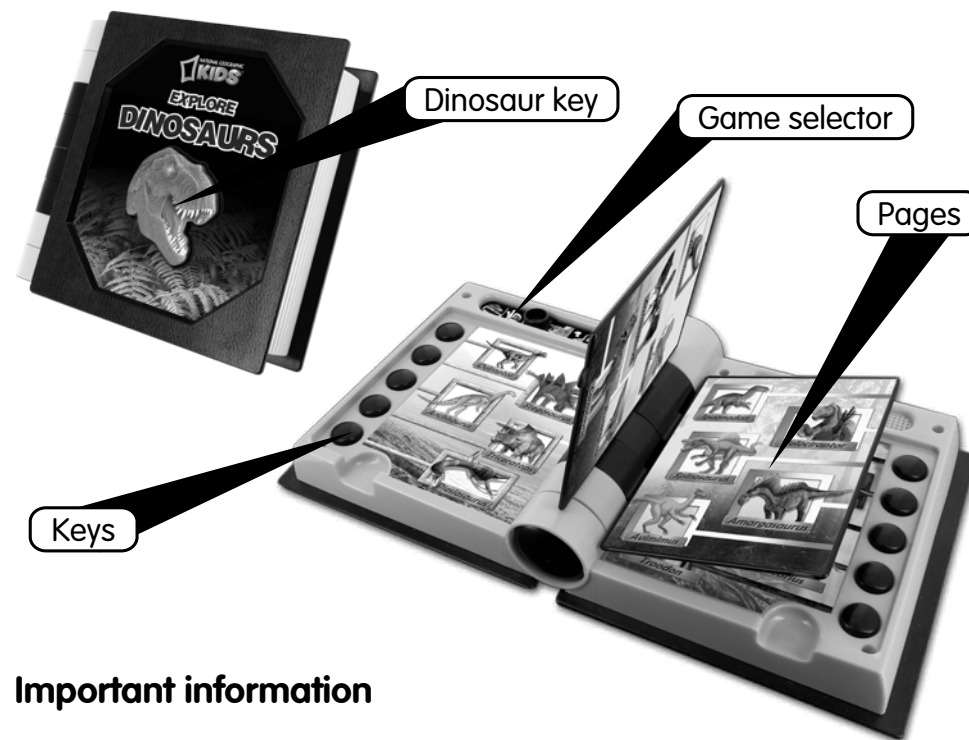

## Important information

- This toy is suitable for children ages 3 and older.
- Please retain this manual for further reference.
- WARNING: All packing materials such as internal bags, plastic collars, plastic films and carton inserts are not part of this product and should be discarded for your child's safety.
- IMPORTANT: For additional safety, check toys regularly for signs of damage during use.

## Contents

- Unit
- Instruction Manual



# HOW TO PLAY

Press on the dinosaur key on the front of the book to hear terrifying dinosaur sounds!

Open the book to start playing a game. Turn the pages in the book to see different dinosaurs! There are six fun games to choose from. Move the game selector at any time to choose a different game.



## Game 1: Dinosaur names

During this game, press on any key to learn the dinosaur's name and its meaning.




## Game 2: Key characteristics

During this game, press on any key to learn some main characteristics of each dinosaur.



## Game 3: Feeding habits

During this game, press on any key to learn the feeding habits of each dinosaur.

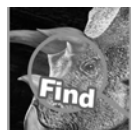


## Game 4: Find the dinosaur

During this game, you will be asked to identify different dinosaurs by name. For example, "Find the *Stegosaurus*." You have three chances to press the correct answer key before a different question is asked.



## Game 5: Quiz

During this game, you will be asked to identify different dinosaurs by their characteristics. For example, "Which dinosaur was a horned dinosaur?" You have three chances to press the correct answer key before a different question is asked.

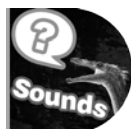

## Game 6: Dinosaur sounds

During this game, press on any key to hear realistic and terrifying dinosaur sounds.

# AUTOMATIC SHUT OFF

Close the book to switch the unit off.


In order to save the battery life, the unit will switch off when it is left idle for about two minutes. To reactivate the unit, just press any key, open the book, turn the pages or move the game selector to a new game.

By pressing a key or opening a page, you will go back into the selected game.

By moving the game selector, you will enter directly into the selected game.

# HOW TO CHANGE BATTERIES

1. This product requires 2 x 1,5V-AAA-LR03-AM4 batteries.
2. To insert or change batteries, use a suitable screwdriver to undo and remove the battery cover located under the unit.
3. Insert 2 x 1,5V-AAA-LR03-AM4 batteries into the compartment, ensuring they are installed the correct way.
4. The polarities are marked inside the battery compartment.
5. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
6. Reassemble the battery cover and tighten the screw to secure.
7. Do not overtighten the screw.

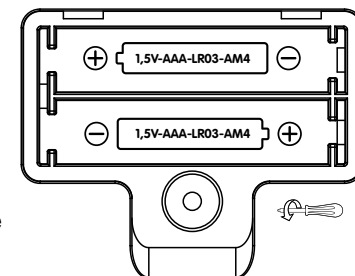

## Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or an equivalent type. We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- Inserting the batteries improperly may damage the toy, cause battery leakage or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries.
- Do not mix different types of batteries (e.g. alkaline and zinc carbon).
- Remove the batteries during long periods of non use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in a fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- If, against advice, rechargeable batteries are used anyway:
  - Rechargeable batteries shall be charged only under the supervision of an adult.
  - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a doctor or medical facility. Don't forget to take the product with you.
- If battery leakage occurs, and the leaked substance comes in contact with the skin or eyes, wash the affected area immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong electromagnetic interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.