



OPERATOR'S MANUAL

6 Ton Electric Log Splitter

Model: 56206



IMPORTANT:



Your new WEN® tool/equipment has been engineered and manufactured to high standards for dependability, ease of operation, and operator safety. Properly cared for, it will give you years of rugged, trouble-free performance.

Pay close attention to the Rules for Safe Operation and Warnings. If you use your tool /equipment properly and only for what it is intended, you will enjoy years of safe, reliable service.



It's not how, it's WEN the project get's done!
Contact us for product questions or technical support.



WenProducts.com



800-232-1195 M-F 8-5 (CST)



techsupport@wenproducts.com

TABLE OF CONTENTS

Product specifications.....	2
Safety information.....	3
General safety rules.....	4
Specific safety rules for log splitter.....	5
Electrical information.....	6
Know your log splitter.....	9
Package contents.....	10
Assembly.....	11
Operation.....	12
Maintenance.....	15
Troubleshooting.....	17
Exploded view and parts list.....	18
Warranty.....	21

PRODUCT SPECIFICATIONS

Model:	56206
Splitting force:	6 Tons
Cycle time:	25 seconds
Motor:	120 V A C, 60 Hz, 15 A, 2 HP, 1500W
Motor speed:	3400 RPM
Power cord:	6 feet, SJTW 14 AWG
Log capacity:	
Diameter:	10 inch
Length:	20.5 inch
Hydraulic pressure:	3000 psi
Hydraulic fluid:	AW32 hydraulic fluid for operation over 40 °F Dexron automatic transmission fluid for below 40 °F
Hydraulic tank capacity:	2.8 quarts
Cylinder stroke:	18 inch
Tire size:	6 inch
Dimensions (LxWxH):	38-1/4x11x18 inch
Weight:	99 lbs

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. These safety instructions are not meant to cover every possible condition that could occur. If you have any questions regarding the product please call customer service at 1-800-232-1195, 8:00 a.m.-5:00 p.m., CST, Monday-Friday.

Safety Signals

The purpose of safety signal statements and symbols is to attract your attention to possible danger. Read them carefully to understand and practice proper accident prevention.



DANGER Signals an **EXTREME** hazard

Failure to obey a safety **DANGER** signal **WILL** result in serious injury or death to yourself or to others. Always follow the safety precautions to reduce the risk of fire, electric shock, and personal injury.



WARNING Signals a serious hazard

Failure to obey a safety **WARNING** signal **CAN** result in serious injury to yourself and to others. Always follow the safety precautions to reduce the risk of fire, electric shock, and personal injury.



CAUTION Signals a moderate hazard

Failure to obey a safety **CAUTION** signal **MAY** result in property damage or personal injury to yourself or to others. Always follow the safety precautions to reduce the risk of fire, electric shock, and personal injury.

NOTE: Signals additional important general information.

GENERAL SAFETY RULES

Safety is a combination of common sense, staying alert, and knowing how to use the log splitter.



WARNING: TO AVOID MISTAKES THAT COULD CAUSE SERIOUS INJURY, DO NOT PLUG IN THE LOG SPLITTER UNTIL THE FOLLOWING STEPS HAVE BEEN READ AND UNDERSTOOD.

1. READ and become familiar with this entire instruction manual. LEARN the tool's applications, limitations, and possible hazards.
2. AVOID DANGEROUS CONDITIONS. DO NOT use in wet or damp areas or expose to rain.
3. DO NOT use in the presence of flammable liquids or gases.
4. KEEP BYSTANDERS AT A SAFE DISTANCE. NEVER allow children or pets near the tool.
5. DRESS FOR SAFETY. DO NOT wear loose clothing, neckties, or jewelry (rings, watches, etc.) when operating tool. Inappropriate clothing can get caught and pull you into moving parts.
6. ALWAYS WEAR EYE AND FACE PROTECTION.
7. ALWAYS remove the power cord plug from the electric outlet when making adjustments, changing parts, or cleaning.
8. AVOID ACCIDENTAL START-UPS. Make sure the power switch is in the OFF position before plugging in the power cord.
9. DO NOT abuse the power cord. Keep cord away from heat, oil, sharp edges, or moving parts. Replace damaged cord immediately; it may create a shock or fire hazard.
10. NEVER LEAVE A RUNNING TOOL UNATTENDED. Turn the power switch to OFF. Do not leave the tool until it has come to a complete stop.
11. DISCONNECT THE POWER. Unplug the tool when not in use, before making adjustments, changing parts, cleaning, or working on the tool.
12. DO NOT OVERREACH. Keep proper footing and balance at all times.



WARNING: Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints,
- Crystalline silica from bricks and cement and other masonry products, and
- Arsenic and chromium from chemically-treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well-ventilated area, and work with approved safety equipment, always wear MSHA/NIOSH approved, properly fitting face mask or respirator when using such tools.

13. MAINTAIN TOOLS PROPERLY. ALWAYS keep tools clean and in working order.

14. CHECK FOR DAMAGED PARTS. Check for alignment of moving parts, binding, breakage, or any other conditions that may affect the tool's operation. Any part that is damaged should be properly repaired or replaced before use.




Only wear safety goggles that apply with ANSI Z87.1

When operating power tools, foreign objects can be thrown into your eyes. This could result in permanent eye damage. Glasses or goggles that are not in compliance with ANSI Z87.1 could break resulting in severe eye injury.

SPECIFIC SAFETY RULES FOR LOG SPLITTER


1. IF YOU ARE NOT thoroughly familiar with the operation of the log splitter, obtain instruction from a qualified person.
2. MAKE SURE wiring codes and recommended electrical connections are followed. When servicing, use only identical replacement parts. Disconnect log splitter from the power source before making adjustments or repairs.
3. Place the log splitter on a stable, flat, and level work surface where there is plenty of room for handling logs.
4. INSPECT THE LOG SPLITTER before each use. Keep guards in place and in working order. Replace damaged, missing, or failed parts before using.
5. Do not alter the log splitter. Altering the tool or exceeding its design capabilities and capacities could result in serious injury or fatality and will void the warranty.
6. MAKE SURE THE EXTENSION CORD is no longer than 25 ft. 14 gauge. Ensure the power cord is rated for outdoor use. Ground the log splitter and avoid contact with grounded surfaces during operation. See "Electrical Information" for further details.
7. MAKE all adjustments with the switch in the OFF position and the log splitter disconnected from the power source.
8. Never use the log splitter for any other purpose than splitting wood. Any other use can result in injury. Use extreme caution at all times.
9. PREPARE LOGS FOR SPLITTING. Make sure the ends of the logs are cut square. Cut off any branches flush with the trunk.
10. INSPECT EACH LOG before splitting. Make sure there are no nails or foreign objects in the log.
11. Only a single operator should load and operate the log splitter. Keep all others, including children and pets, a minimum of 20 feet away from the work area.
12. NEVER TRY TO SPLIT LOGS larger than the rated capacity of the tool. Attempting to do so could result in personal injury and damage to the tool.

13. Split only one log at a time. Do not attempt to split two logs on top of each other.
14. DO NOT put your hands or feet between the log and the splitting wedge or between the log and the push rod while the tool is in operation.

 **WARNING:** KEEP HANDS AWAY FROM SPLITS AND CRACKS WHICH OPEN IN THE LOG. THEY MAY CLOSE SUDDENLY AND CRUSH OR AMPUTATE YOUR HANDS.


15. Do not attempt to load a log while the push rod is in motion. When loading, place your hands on the sides of the log, not on the ends.
16. WAIT FOR THE PUSH ROD TO STOP MOVING before loading another log onto the log splitter. Do not try to remove a split log until the entire splitting cycle is completed.
17. Use only your hands to operate the control lever. Never use your foot, knee, rope, or extension device.
18. Never use your hands to remove a jammed log. If a jam should occur, release the ON/OFF push button. Follow the instructions in this manual for removing a jammed log.
19. Stack logs as you work. This will provide a safer, less cluttered work area.


ELECTRICAL INFORMATION

 **WARNING:** TO AVOID ELECTRICAL HAZARDS, FIRE HAZARDS, OR DAMAGE TO THE TOOL, USE PROPER CIRCUIT PROTECTION. THE LOG SPLITTER IS WIRED AT THE FACTORY FOR 120-V OPERATION. CONNECT TO A 120-V, 15-A CIRCUIT AND USE A 15-A TIME DELAYED FUSE OR CIRCUIT BREAKER. TO AVOID SHOCK OR FIRE, IMMEDIATELY REPLACE THE POWER CORD IF IT IS WORN, CUT, OR DAMAGED IN ANY WAY.

This log splitter has a 3-prong plug that is intended for use on a circuit that has a receptacle like the one illustrated in Fig.1.

Do not modify the power cord plug. If it does not match the electrical outlet, have the proper outlet installed by a qualified electrician.

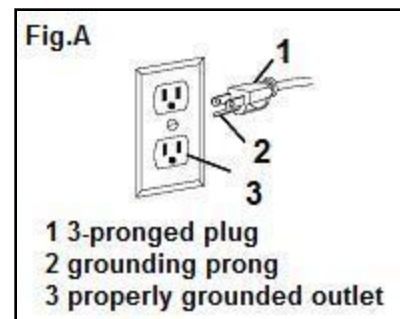

 **WARNING:** TO AVOID INJURY, USE ONLY IDENTICAL REPLACEMENT PARTS WHEN SERVICING THE LOG SPLITTER.

 **WARNING:** DO NOT TOUCH THE METAL BLADES ON THE POWER CORD PLUG WHEN REMOVING OR INSTALLING THE PLUG INTO AN ELECTRICAL OUTLET OR EXTENSION CORD.



WARNING: TO AVOID ELECTROCUTION:

1. Use only identical replacement parts when servicing this tool. Servicing should be performed by a qualified technician.
2. Do not use in wet or damp areas or expose to rain.

GROUNDING INSTRUCTIONS

IN THE EVENT OF A MALFUNCTION OR BREAKDOWN, grounding provides the path of least resistance for electrical current and reduces the risk of electric shock. This tool is equipped with an electric cord that has a POLARIZED plug.

The plug **MUST** be plugged into a matching outlet that is properly installed and grounded in accordance with ALL local codes and ordinances.

DO NOT MODIFY THE PLUG PROVIDED. If it will not fit the outlet, have the proper outlet installed by a qualified electrician.



CAUTION: IN ALL CASES, MAKE CERTAIN THE RECEPTACLE IN QUESTION IS PROPERLY GROUNDED. IF YOU ARE NOT SURE, HAVE A CERTIFIED ELECTRICIAN CHECK THE RECEPTACLE.



WARNING: IMPROPER USE OF EXTENSION CORDS MAY CAUSE INEFFICIENT OPERATION WHICH CAN RESULT IN OVERHEATING. USE AN EXTENSION CORD RATED FOR OUTDOOR OPERATION.

GUIDELINES FOR USING EXTENSION CORDS

USE THE PROPER EXTENSION CORD. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one of heavy enough gauge to carry the current your product will draw. An undersized cord will cause overheating. The table below shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gauge.

The smaller the gauge number, the heavier the cord.

Minimum Gauge for Extension Cords (AWG)
(When using 120 V only)

Ampere Rating		Total Length of Cord in feet			
More Than	Not More Than	25	50	100	150
0	6	18	16	16	14
6	10	18	16	14	12
10	12	16	16	14	12
12	16	14	12	Not Recommended	

Make sure your extension cord is properly wired and in good electrical condition.


Always replace a damaged extension cord or have it repaired by a qualified person before using it. Protect your extension cords from sharp objects, excessive heat and damp or wet areas.

Use a separate electrical circuit for your tools. This circuit should not be less than #12 gauge cord and should be protected with a 15-A, time-delayed fuse. Before connecting the motor to the power line, make sure the switch is in the OFF position and the electric current is rated the same as the current stamped on the motor nameplate. Running at a lower voltage will damage the motor.



WARNING: THE EXTENSION CORD AND RECEPTACLE MUST BE GROUNDED WHILE IN USE TO PROTECT THE OPERATOR FROM ELECTRICAL SHOCK.

KNOW YOUR LOG SPLITTER

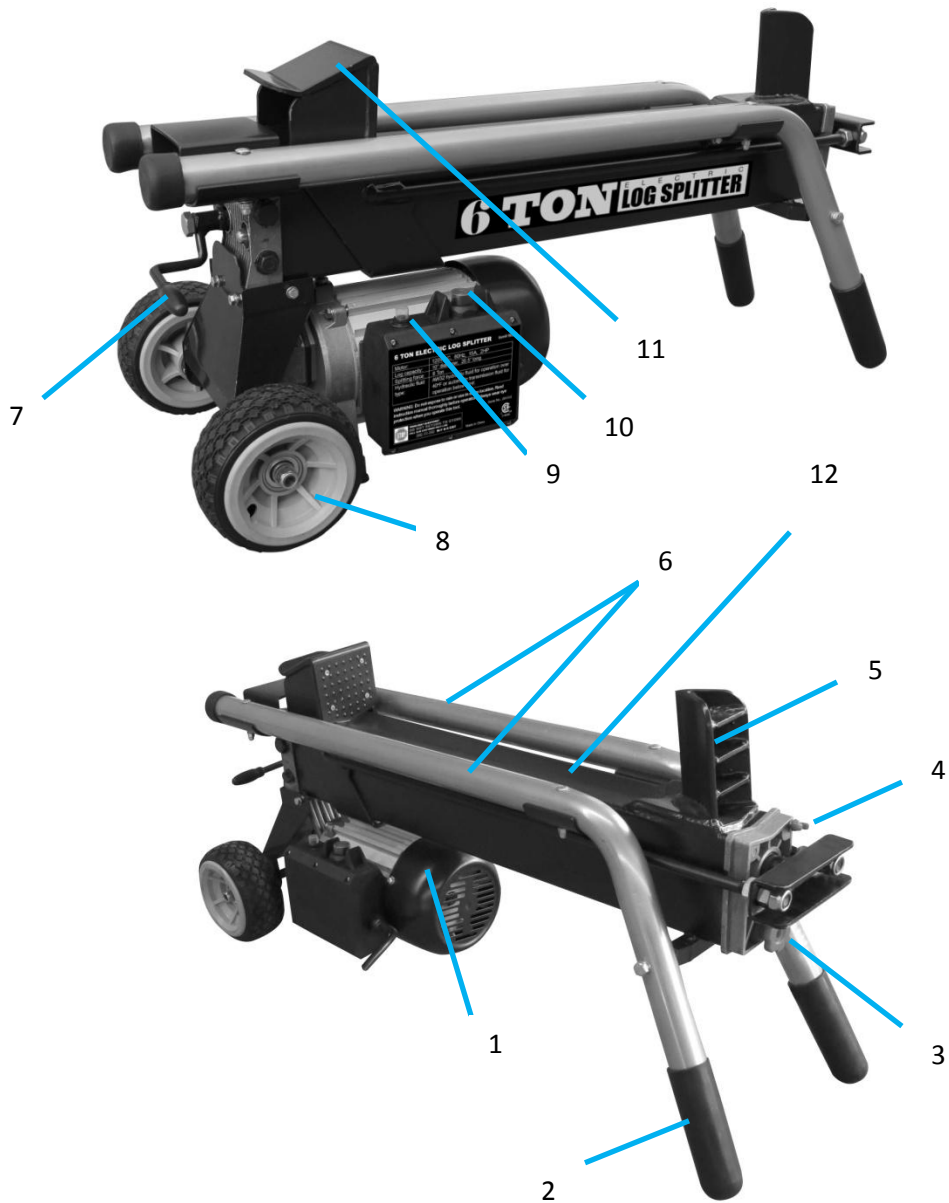

- | | | |
|---|---------------------|-------------------------------------|
| 1 Motor | 2 Handle | 3 Fluid Drain/ Fill Knob w/Dipstick |
| 4 Bleed Screw (must be open during operation) | | |
| 5 Wedge | 6 Work Table Guards | 7 Hydraulic Control Lever |
| 8 Wheel | 9 Circuit Breaker | 10 ON/OFF Power Switch |
| 11 Ram | 12 Beam | |


PACKAGE CONTENTS

UNPACKING

The log splitter requires the wheel assembly to be attached to the base. Please refer to Wheel Assembly on page 11 for assembly directions.

Note: Do not discard box or any packing material until all parts are examined and accounted for.

This log splitter has been filled with AW32 hydraulic oil at the factory. Refer to the photo and parts list should it become necessary to disassemble the unit for repair or replacement of parts. Inspect it for shipping damage.

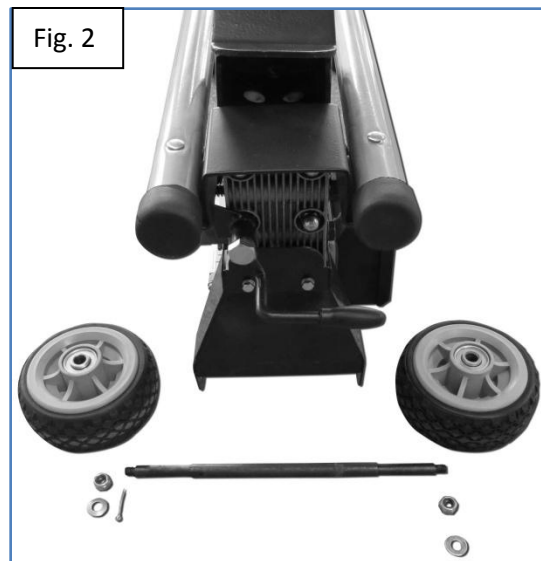

Item List:

1 Log Splitter

2 Wheels

1 Wheel Shaft

1 Cotton Pin


2 Washers and 2 Nuts

IF ANY PART OF THE LOG SPLITTER IS MISSING OR DAMAGED, DO NOT PLUG IN UNTIL THE DAMAGED PART IS REPAIRED OR REPLACED. PLEASE CALL 1-800-232-1195 FOR ASSISTANCE.

ASSEMBLY

Wheel Assembly

1. Insert the wheel shaft into the frame of the motor end of the log splitter and secure with the cotter pin.
2. Secure the wheels to the wheel shaft using the nuts and washers on both side.

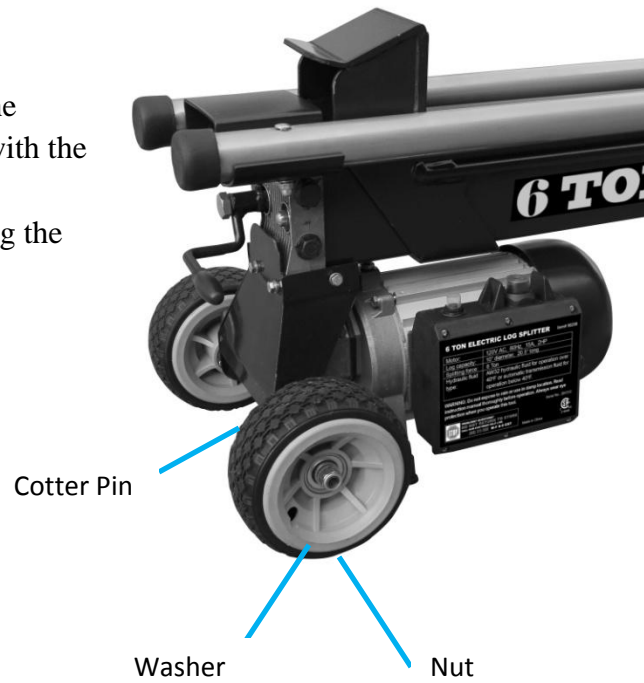

OPERATION

⚠ WARNING: Read and thoroughly understand all instructions and safety information before operating this log splitter. Failure to do so may cause serious injury or death. Do not allow anyone to operate this log splitter who has not read this manual. As with all power equipment, a log splitter can be dangerous if assembled or used improperly. Do not operate this log splitter if you have doubts or questions concerning safe operation. Call our customer service department at 1-800-232-1195 to address these concerns.

⚠ WARNING: ALWAYS WEAR SAFETY GLASSES, SAFETY GLOVES, SAFETY SHOES AND SUITABLE WORK CLOTHING WHEN OPERATING THIS LOG SPLITTER. NEVER WEAR JEWELRY, NECKTIES OR OTHER LOOSE CLOTHING WHICH COULD GET CAUGHT IN MOVING PARTS.

⚠ WARNING: KEEP HANDS AND FEET CLEAR OF RAM AND WEDGE AT ALL TIMES.

⚠ WARNING: KEEP AWAY FROM FLAMMABLE LIQUIDS AND GASES BEFORE STARTING MACHINE.

BEFORE OPERATING

Select a work area


Place the log splitter on a flat, stable surface. Make sure there is sufficient room for the unsplit logs and for the stacks of split logs. Make sure there is a safe electrical connection no more than 25 ft. from the work area.

Checking the hydraulic fluid level (Fig.4)

This log splitter has been filled with AW32 hydraulic oil at the factory.

⚠ Warning: Lifting the log splitter is a two person operation. Once raised, make sure the log splitter is stable before performing any maintenance.

1. Lift up on the handle of the log splitter. Make sure the splitter is resting securely and will not fall.
2. Loosen the fluid drain knob (1).
3. Pull out the bolt with attached dipstick.
4. Wipe the fluid off the dipstick.
5. Put the dipstick back in the fluid tank and then pull it out again.
6. Check the fluid level. It should be between the two notches (2) near the end of the dipstick.
7. Add fluid, if needed. (See below for types)
8. Replace the dipstick and tighten the fluid drain knob.

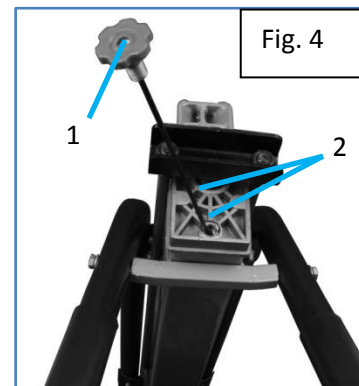

Hydraulic fluid

- Use an AW32 hydraulic fluid for operation over 40 ℉.
- Dexron® automatic transmission fluid for operation below 40 ℉.

Note: Do not mix AW32 hydraulic fluid with Dexron® automatic transmission fluid.

Loosen the bleed screw (Fig.5)



WARNING: ALWAYS LOOSEN THE BLEED SCREW PRIOR TO OPERATION. THIS WILL REMOVE ANY AIR TRAPPED IN THE HYDRAULIC SYSTEM.

FAILURE TO RELEASE AIR FROM THE HYDRAULIC SYSTEM MAY DAMAGE THE SEALS AND PERMANENTLY DAMAGE THE LOG SPLITTER.


1. Turn the bleed screw (1) counterclockwise one or two turns to allow air to be released from the hydraulic system.

Note: A flow of air through the bleed screw should be detectable while the log splitter is in use.

2. Close the bleed screw after operation.

Note: Check the bleed screw and make sure it is closed before and during transporting the log splitter to and from the jobsite and storage area. Hydraulic fluid may leak through the bleed screw opening if the bleed screw is not fully tightened.

Failure to loosen the bleed screw will cause pressure to build up in the hydraulic tank and could damage the seals and affect the operation of the log splitter.

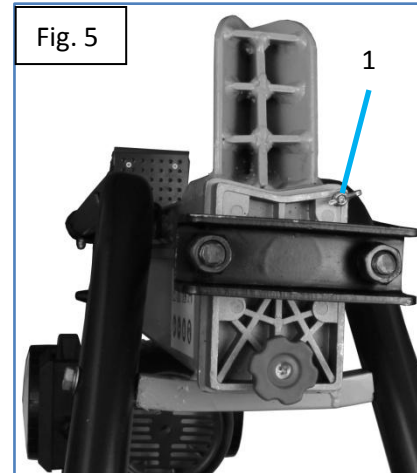

Place a log on the log splitter



WARNING: NEVER TRY TO SPLIT LOGS LARGER THAN THE RATED CAPACITY OF THE TOOL. ATTEMPTING TO DO SO COULD RESULT IN PERSONAL INJURY AND DAMAGE TO THE TOOL.


Select/prepare a log for splitting:

1. Make sure there are no nails or foreign objects in the log.
2. Make sure the end of each log to be split is square.
3. Remove any branches by cutting them flush with the trunk.
4. Make sure each log is no longer than 21 in. and the diameter is 10 in. or less.

Place a properly prepared log firmly on the worktable between the two worktable guards. The log should fit between the ram and the splitting wedge.

Operate the log splitter (Fig. 6)

1. Ensure the equipment is in safe working condition. Operate the unit without loading to make sure it is working normally. Check all nuts, bolts and hydraulic fittings are tight. Check the switch, power cable and plug for damage to avoid electric shock.
2. Plug in the power cable. NEVER use an extension cord longer than 25 feet. Minimum cord gage must be 16. The power supply for this log splitter must have a protection device (circuit breaker) for over or under voltage.
3. Place a log on the beam against the ram. Make sure that the log is securely on the beam and up against the ram. Logs should be cut with square ends and to a maximum length of 20.5 inch in advance. Always use extra care when splitting logs with unsquare ends.
4. Loosen the bleed screw one or two turns if necessary.
5. Two controls must be activated to operate the log splitter. The hydraulic control lever (1) and the ON/OFF push button (2) must be held during the splitting process. If either control is released, the log splitter will stop operating.
6. Depress and hold the ON/OFF push button (2) with your right hand and allow the motor to cycle up to speed.
7. Push down on the hydraulic control lever (1).
8. Release the ON/OFF button and the control lever when the log is split. The push rod will then retract.

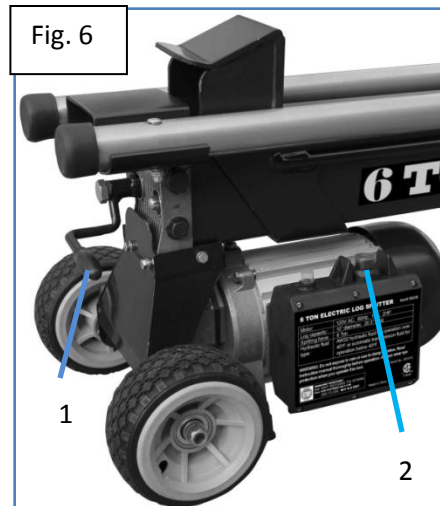

Warning: If the log does not begin to split after 5 seconds of operation, release both controls. The motor or hydraulic fluid may overheat and damage the machine.



Warning: Do not attempt to remove a jammed log with your hands or try to knock it off the worktable. Doing so may cause injury and may also damage the splitting wedge. Knock off the log with hammer.



When finished splitting the logs, unplug the power cord and lock the bleed screw.

MAINTENANCE



WARNING: DISCONNECT THE LOG SPLITTER FROM THE POWER SOURCE BEFORE PERFORMING ANY MAINTENANCE.


Check hydraulic fluid at the beginning of each season and if the fluid level is low.

Checking the hydraulic fluid level (Fig.7)



Warning: Lifting the log splitter is a two person operation. Once raised, make sure the log splitter is stable before performing any maintenance.

1. Lift up on the handle of the log splitter. Make sure the splitter is resting securely and will not fall.
2. Loosen the fluid drain knob (1).
3. Pull out the bolt with attached dipstick.
4. Wipe the fluid off the dipstick.
5. Put the dipstick back in the fluid tank and then pull it out again.
6. Check the fluid level. It should be between the two notches (2) near the end of the dipstick.
7. Add fluid, if needed. (See below for types)
8. Replace the dipstick and tighten the fluid drain knob.

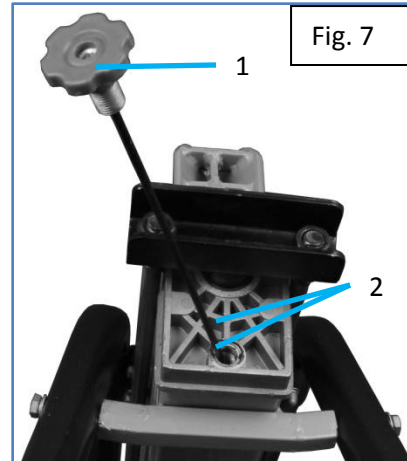

Hydraulic fluid

- Use an AW32 hydraulic fluid for operation over 40 ℉.
- Dexron® automatic transmission fluid for operation below 40 ℉.


Note: Do not mix AW32 hydraulic fluid with Dexron® automatic transmission fluid.

Replace hydraulic fluid (Fig.7-8)



Warning: Lifting the log splitter is a two person operation. Once raised, make sure the log splitter is stable before performing any maintenance.

1. Place a 1 Gallon (or larger) pan (3) under the splitting wedge end of the log splitter.
2. Loosen the fluid drain knob (1) and remove it.
3. Raise motor end of the log splitter to allow the fluid to drain into the pan. Lower motor end of the splitter when it is empty.

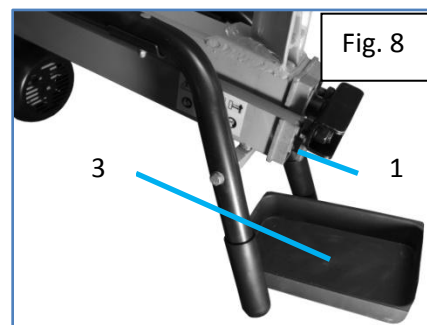

Note: Dispose of used fluid properly.

4. Raise the splitting wedge end and make sure it is secure.

5. Pour approximately 0.85 Gallon of approved hydraulic fluid (AW32 hydraulic fluid for operation over 40 °F or Dextron automatic transmission fluid for operation below 40 °F) into the tank.
6. Check the fluid level with the dipstick. Add more fluid if needed.
7. Replace the fluid drain knob (1) and tighten securely.
8. Lower the log splitter.

Hydraulic fluid

- Use an AW32 hydraulic fluid for operation over 40 °F.
- Dextron® automatic transmission fluid for operation below 40 °F.

Note: Do not mix AW32 hydraulic fluid with Dextron® automatic transmission fluid.

Sharpen the splitting wedge


After a period of use, the splitting wedge may need to be sharpened. Use a fine-toothed file or rasp to remove burrs or to refresh crushed areas.

TROUBLESHOOTING

Use this troubleshooting information to remedy problems that may occur during the operation of the log splitter.

Problem	Cause	Action
Logs will not split	Extension cord is too long or gauge is too low	Check extension cord to ensure the gauge of the cord is 12 or 14 AWG and that the cord length does not exceed 25 ft.
	Incorrect positioning of the log.	Make sure the log is properly positioned on the worktable (See page 13, "Place a log on the log splitter ")
	The size or hardness, or density of the log may exceed the capacity of the splitter.	Reduce the log size before placing it on the splitter.
	Splitting wedge cutting edge is blunt or dull	Sharpen the wedge (See page 16, "Sharpen the splitting wedge")
	The bleed screw was not loosened and air is trapped in the hydraulic tank	Loosen the bleed screw one or two turns
	The hydraulic fluid is low and may need to be replenished	Check the hydraulic fluid level and refill if needed
	The maximum pressure limiting adjustment setting has changed	Contact a trained service Technician at 1-800-232-1195
Hydraulic fluid leaks	The bleed screw may not have been tightened before transporting the splitter	Tighten the bleed screw
	The bleed screw may not have been loosened before operation and air is trapped in the hydraulic system	Loosen the bleed screw one or two turns.
	The fluid drain knob may be loose.	Tighten the knob
	The hydraulic control valve assembly and/or seals may be worn.	Contact a trained service Technician at 1-800-232-1195
Push rod movement is jerky, makes unfamiliar noise or vibration	The hydraulic fluid level may be low.	Check the fluid level and refill, if needed.
	There may be air in the hydraulic system.	Loosen the bleed screw one or two rotations.

EXPLODED VIEW AND PARTS LIST

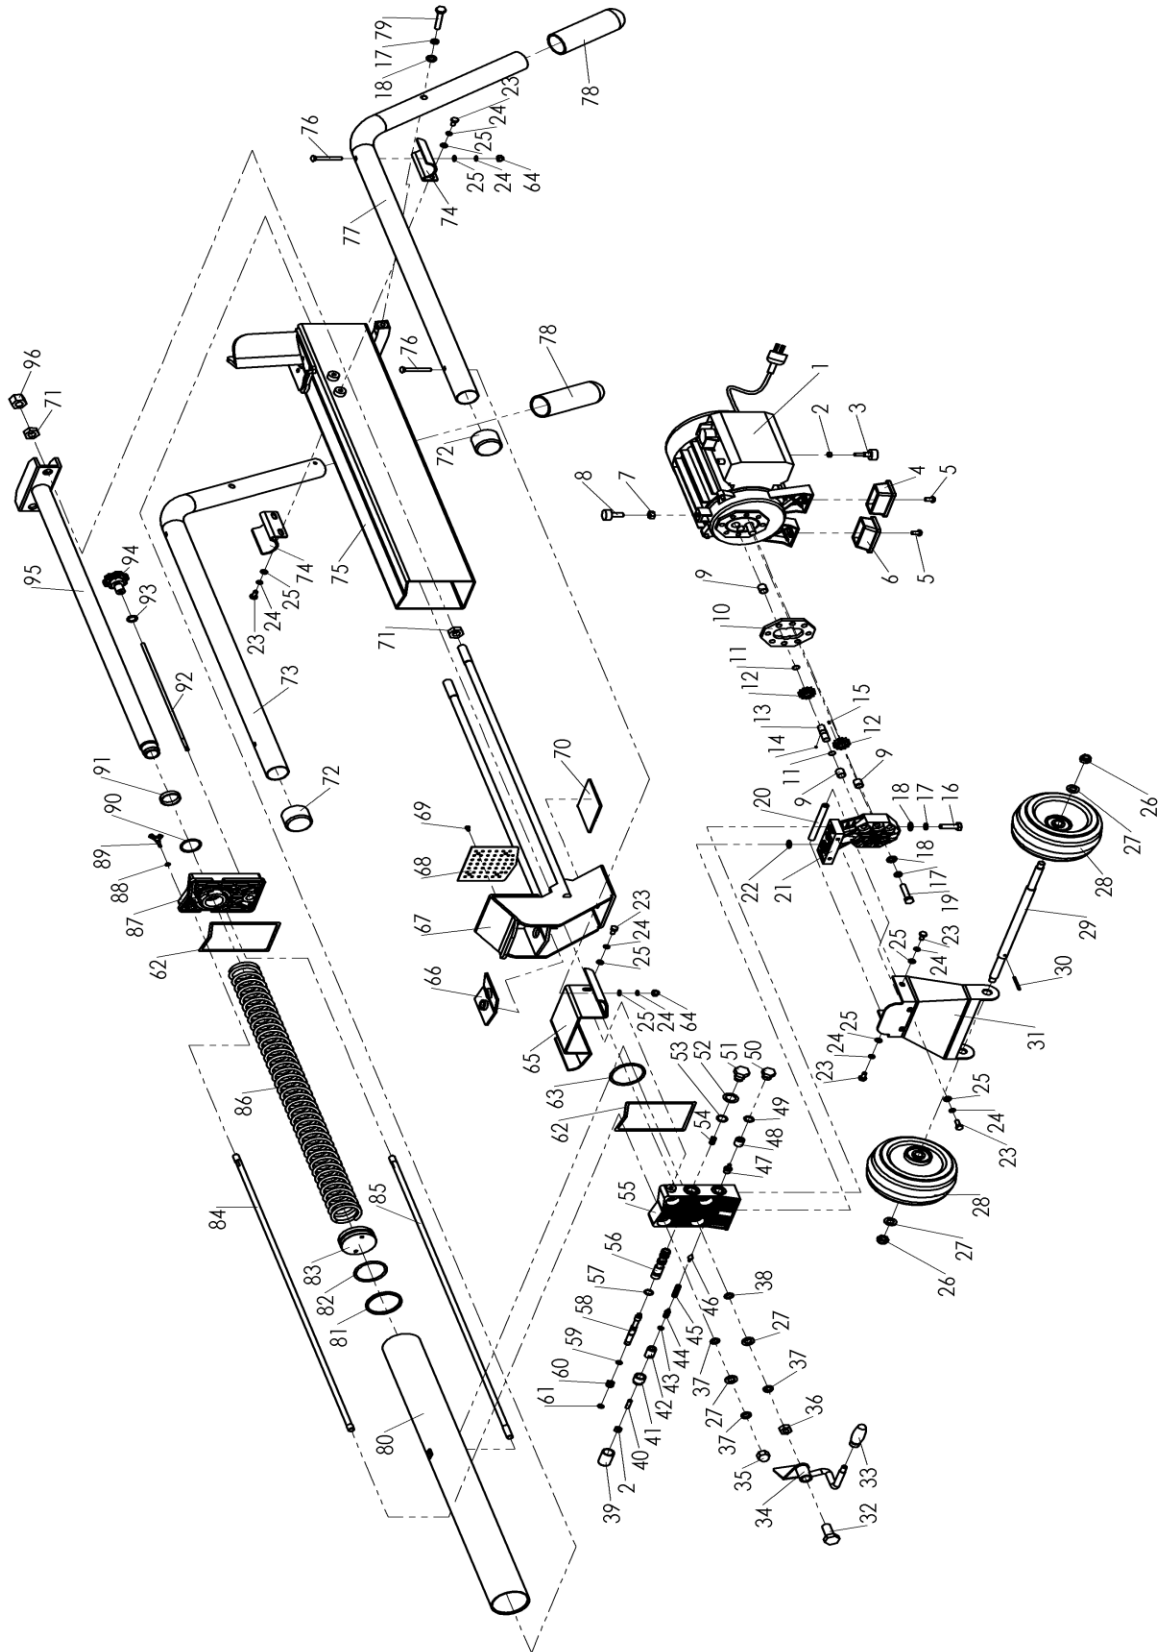

Item	Stock #	Description
1	56206-001	Motor
2	56206-002	Nut M6
3	56206-003	Rubber foot
4	56206-004	Right rubber foot
5	56206-005	bolt M6×12
6	56206-006	Left rubber foot
7	56206-007	Nut M8
8	56206-008	Washer
9	56206-009	Bearing bush
10	56206-010	Claboard
11	56206-011	Steel ring10
12	56206-012	Gear
13	56206-013	Gear shaft
14	56206-014	Steel ball 2.5
15	56206-015	Round pin 2.5×4
16	56206-016	Bolt M8×30
17	56206-017	Spring washer 8
18	56206-018	Flat washer 8
19	56206-019	Bolt M8×55
20	56206-020	Shaft
21	56206-021	Cover
22	56206-022	Oil seal 10×2.65G
23	56206-023	Bolt M6×12
24	56206-024	Spring washer 6
25	56206-025	Flat washer 6
26	56206-026	Locking nut M10
27	56206-027	Flat washer 10
28	56206-028	Wheel
29	56206-029	Wheel shaft
30	56206-030	Pin3.2×20

Item	Stock #	Description
31	56206-031	Bracket
32	56206-032	Bolt
33	56206-033	Rubber sleeve
34	56206-034	Hydraulic control lever
35	56206-035	Nut M10
36	56206-036	Nut M10
37	56206-037	Spring washer 10
38	56206-038	Oil seal 9.5×2.65G
39	56206-039	Plastic cover
40	56206-040	BoltM6×20
41	56206-041	Hexagon nut
42	56206-042	Bush for shaft
43	56206-043	Oil seal 4.87×1.8G
44	56206-044	Shaft
45	56206-045	Adjustment spring
46	56206-046	Cone valve
47	56206-047	Oil valve
48	56206-048	Screw
49	56206-049	Oil seal 11.8×2.2G
50	56206-050	Hexagon bolt
51	56206-051	Bolt
52	56206-052	Washer16×1
53	56206-053	Oil seal 14×1.8G
54	56206-054	spring II
55	56206-055	Front cover
56	56206-056	Control valve
57	56206-057	Oil seal 11.2×1.8G
58	56206-058	Journey valve
59	56206-059	Oil seal 5.6×1.8G
60	56206-060	Spring I

Item	Stock #	Description
61	56206-061	Washer 6
62	56206-062	Washer
63	56206-063	Oil seal 48.7×3.55G
64	56206-064	Nut M6
65	56206-065	Front bracket
66	56206-066	Upper pad
67	56206-067	Push rod
68	56206-068	Tine plate
69	56206-069	Bolt M4×6
70	56206-070	Down pad
71	56206-071	Nut M14
72	56206-072	Rubber plug
73	56206-073	Work table guard
74	56206-074	Back bracket
75	56206-075	Beam
76	56206-076	Step bolt M6×50
77	56206-077	Work table guard
78	56206-078	Rubber handle

Item	Stock #	Description
79	56206-079	Bolt M8×50
80	56206-080	Cylinder
81	56206-081	Ring58×52.5×4
82	56206-082	Oil seal43.7×3.55G
83	56206-083	Piston
84	56206-084	stud
85	56206-085	stud
86	56206-086	Spring
87	56206-087	Rear cover
88	56206-088	Oil seal 3.6×1.8G
89	56206-089	Bleed screw
90	56206-090	Oil seal30×2.65G
91	56206-091	Washer FC30×38×5
92	56206-092	Dipstick
93	56206-093	Oil seal 11.8×2.65G
94	56206-094	Knob
95	56206-095	Piston rod
96	56206-096	lock nut M14

TWO YEARS LIMITED WARRANTY

WEN[®] log splitters are warranted (to the original purchaser) to be free from defects in materials and workmanship for a period of two (2) years from the date of original purchase. Log splitters used for commercial or for rental have a warranty period of 90 days from date of original purchase. Please fill out and mail the enclosed warranty card and mail it to Power Pro Technology along with a copy of the receipt. The information is required to process warranty claims.

WEN[®] will repair or replace, at its discretion, any part that is proven to be defective in materials or workmanship under normal use during the two (2) year warranty period. Warranty repairs or replacements will be made without charge for parts or labor. Parts replaced during warranty repairs will be considered as part of the original product and will have the same warranty period as the original product.

TO EXERCISE WARRANTY COVERAGE:

Do not return to retailer! For warranty and technical support call the toll-free Customer Service Number: (800) 232-1195 and you will be informed of the nearest authorized service center. We will prearrange the repair with the center.

WARRANTY COVERAGE:

This warranty is conveyed to the original purchaser and is not transferable.

Log splitters contain parts that will wear out with usage and parts that need maintenance. The warranty does not cover wear or maintenance parts. Specifically, the warranty does not cover hydraulic fluid.

Warranty does not extend to log splitters damaged or affected by accidents, neglect, misuse, contaminated fuel, unauthorized alterations, use in applications beyond product design and any other modification or abuse.

WEN[®] is not liable for any indirect, incidental or consequential damages from the sale or use of this product. Any implied warranties are limited to two (2) years as stated in this written limited warranty. Some states do not allow limitation on the length of an implied warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages. This warranty gives you the specific legal right, and you may have other rights that vary by state.

For questions / comments, technical assistance or repair parts –

Please Call Toll Free at: 1-800-232-1195 (M-F 8am – 5pm) CST

SAVE YOUR RECEIPTS. THIS WARRANTY IS VOID WITHOUT THEM.

