

# PACSystems™ RX7i

## IC698CRE020-HL

### Redundancy CPU

GFK-2320P


August 24, 2007


The RX7i CPUs are programmed and configured by the programming software to perform real time control of machines, processes, and material handling systems. The CPU communicates with I/O and smart option modules over a rack-mounted backplane using the VME64 Standard format. It communicates with the programmer and HMI devices via the embedded Ethernet port or serial port.

**CRE020:** 700MHz Pentium III microprocessor with redundancy

## Features

- Hot standby (HSB) redundancy. Requires a Redundancy CPU and a Redundancy Memory Xchange module (IC698RMX016) configured as a redundancy link in each unit.
- Contains 10 Mbytes of battery-backed user memory and 10 Mbytes of non-volatile flash memory.
- Provides access to bulk memory via reference table %W.
- Configurable data and program memory.
- Programming in Ladder Diagram, C, Structured Text and Function Block Diagram.
- Supports auto-located Symbolic Variables that can use any amount of user memory.
- Supports Series 90-70 discrete and analog I/O, communications, and other modules. For a list of modules supported, refer to the PACSystems RX7i Installation Manual, GFK-2223.
- Supports all non-GE Fanuc VME modules supported by Series 90-70.
- Supports PLC data monitoring over the web. Allows a combined total of up to 16 web server and FTP connections.
- Supports up to 512 program blocks. Maximum size for a block is 128KB.
- Test Edit mode allows you to easily test modifications to a running program.
- Bit-in-word referencing.
- Battery-backed calendar clock.
- CPU and module firmware upgrades through the CPU's RS-232 or RS-485 serial port.
- Three isolated serial ports: an RS-485 serial port, an RS-232 serial port, and an RS-232 Ethernet station manager serial port.
- An embedded Ethernet interface provides:
  - Data exchange using Ethernet Global Data (EGD)
  - TCP/IP communication services using SRTP
  - Support for SRTP Channels, Modbus/TCP Server and Modbus/TCP Client
  - Full PLC programming and configuration services
  - Comprehensive station management and diagnostic tools
  - Two full-duplex 10BaseT/100BaseT/TX (RJ-45 Connector) ports with an internal network switch providing auto-negotiated network speed, duplex mode, and crossover detection.
  - PLC time synchronization to SNTP time server on Ethernet network (when used with Release 5.00 or later PLC CPU module).
- User-configurable Redundant IP allows:
  - Configuration of EGD exchanges to be produced from the active and inactive Ethernet interface(s) in an HSB Redundant pair.
  - Within a HSB Redundant CPU, production of EGD exchanges from an Ethernet interface that does not have a Redundant IP address configured.

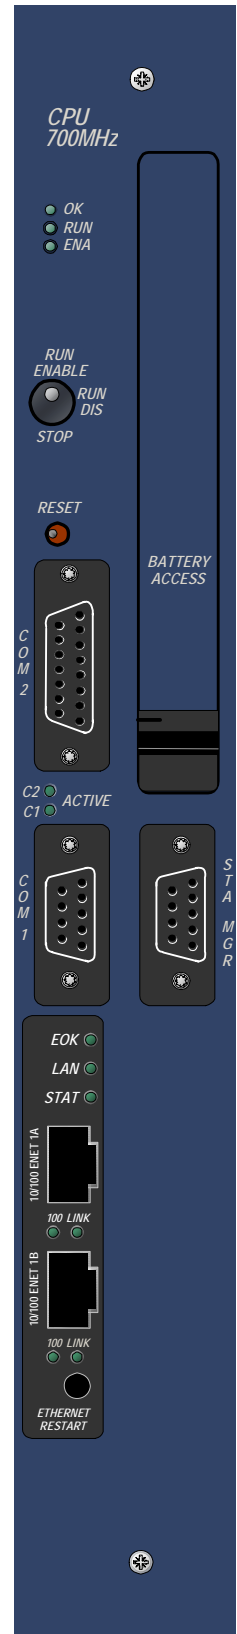

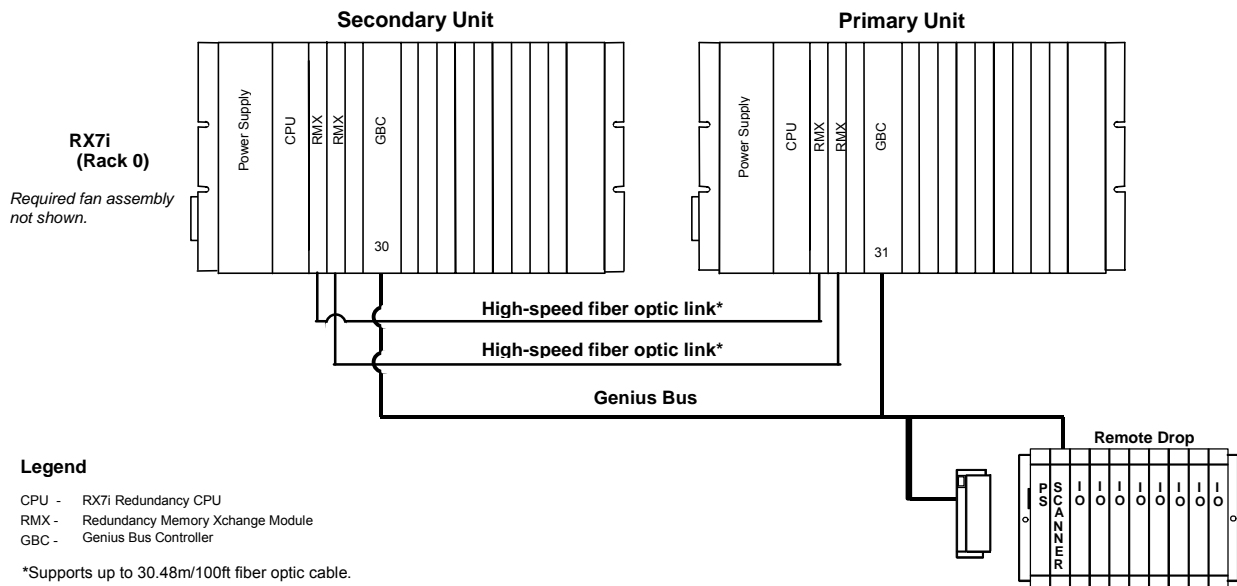

CPU Redundancy System Configuration

### HSB CPU Redundancy Features

For details on the configuration and operation of an RX7i CPU redundancy system, refer to the *PACSystems CPU Redundancy User's Manual*, GFK-2308.

- Survives any one single point of failure (excluding failures of Genius devices and bus stubs)
- Bumpless switching
  - Synchronized CPUs
  - One scan switching
  - Configurable transfer data size up to 2Mbytes
- Supports two redundancy communications links
- Online repair of failed component
- Online programming
- Redundancy Memory Xchange Module
  - Manual toggle switch for switching control between active and backup units
  - Redundancy status LEDs
- Redundancy status bits and message logging
- Application-initiated role switching
- Memory Error Checking and Correction (ECC single bit correcting and multiple bit checking)
- Supports single and dual Genius bus networks
- Background diagnostics

### HSB Control Strategy

The HSB control strategy has the following characteristics:

- Active unit does not automatically switch to primary on resynchronization
- Critical control data plus all redundant outputs must be included in the output data transfer
- Bumpless switchover from active unit to backup unit
- Supports multiple dual bus Genius networks with redundant bus controllers in each synchronized PLC
- Supports multiple single bus Genius networks with a redundant bus controller in each synchronized PLC
- Supports multiple local Genius networks with single or dual busses, and single or dual bus controllers

## Specifications

For environmental specifications and compliance to standards (for example, FCC or European Union Directives), refer to Appendix A of the PACSystems RX7i Installation Manual, GFK-2223.

Battery Memory retention	For estimated battery life under various conditions, refer to the <i>PACSystems CPU Reference Manual</i> , GFK-2222.
Program storage	Up to 10 Mbytes of battery-backed RAM 10 Mbytes of non-volatile flash user memory
Power requirements	+5 VDC: 4.5 Amps nominal +12 VDC: 0.042 Amps nominal -12 VDC: 0.008 Amps nominal
Operating temperature	0 to 60°C (32°F to 140°F), fan kit required
Floating point	Yes
Boolean execution speed, typical	0.14ms per 1000 Boolean contacts/coils
Time of Day Clock accuracy	Maximum drift of 9 seconds per day
Elapsed Time Clock (internal timing) accuracy	±0.01% maximum
Embedded communications	RS-232, RS-485, Ethernet interface
Ethernet Ports	Embedded auto-sensing 10/100 Mbps half/full duplex Ethernet interface
Serial protocols supported	Modbus RTU Slave, SNP, Serial I/O
VME Compatibility	System designed to support the VME64 standard ANSI/VITA 1
Program blocks	Up to 512 program blocks. Maximum size for a block is 128KB.
Memory	%I and %Q: 32Kbits for discrete %AI and %AQ: configurable up to 32Kwords %W: configurable up the maximum available user RAM Managed memory (Symbolic and I/O Variables combined): configurable up to 10Mbytes
Error Checking and Correction	Supported
<i>Ethernet Interface Specifications</i>	
Web-based data monitoring	Up to 16 web server and FTP connections (combined)
Ethernet data rate	10Mb/sec and 100Mb/sec
Physical interface	10BaseT RJ45
WinLoader support	Yes
Number of EGD configuration-based pages	255
Time synchronization	SNTP
Selective consumption of EGD	Yes
Load EGD configuration from PLC to programmer	Yes
Remote Station Manager over UDP	Yes
Local Station Manager (RS-232)	Dedicated RS-232 port
Configurable Advanced User Parameters	Yes

## Release History

<b>Catalog Number</b>	<b>Date</b>	<b>CPU Firmware Version</b>	<b>Ethernet Firmware Version</b>
IC698CRE020-HL	Aug. 2007	5.00	5.00
IC698CRE020-HK	Jul. 2007	4.02	4.00
IC698CRE020-GK	Dec. 2006	4.02	4.00
IC698CRE020-GJ	Oct. 2006	4.01	4.00
IC698CRE020-GH	Sep. 2006	4.00	4.00
IC698CRE020-GG	May 2006	3.81	3.81
IC698CRE020-FF	Apr. 2006	3.80	3.60
IC698CRE020-FE	Nov. 2005	2.05	3.60
IC698CRE020-DD	Apr. 2005	2.04	3.00
IC698CRE020-DC	Nov. 2004	2.04	2.57
IC698CRE020-AB	Sep. 2004	2.03	2.00
IC698CRE020-AB	Jun. 2004	2.02	2.00
IC698CRE020-AB	Jun. 2004	2.01	2.00
IC698CRE020-AA (initial release)	May 2004	2.00	2.00

## CPU Functional Compatibility

<b>Subject</b>	<b>Description</b>
<b>Extended operation with dissimilar CPU models is not allowed</b>	<p>During normal operation, the primary and secondary units in an HSB redundancy system must have the same CPU model type. Extended operation with dissimilar CPU types is <b>not allowed</b>.</p> <p>The primary and secondary units with dissimilar CPU model types can be synchronized for a limited time, for the purpose of system upgrade only. Fail wait times for the higher performance CPU in a dissimilar redundant pair may need to be increased to allow synchronization. Either model can be in the primary or secondary unit.</p>
<b>Programmer Version Requirements</b>	<ul style="list-style-type: none"> <li>■ Proficy™ Machine Edition Logic Developer PLC 5.7 or later must be used for Release 5.00 new features.</li> <li>■ Proficy Machine Edition Logic Developer PLC 5.5 Service Pack 2 or later must be used for Release 4.00 new features.</li> <li>■ Proficy Machine Edition Logic Developer PLC 5.5 or later must be used for Release 3.50 new features.</li> <li>■ Proficy Machine Edition Logic Developer PLC 5.0 Service Pack 3 HotFix 3 or later must be used for Release 3.10 new features.</li> <li>■ Proficy Machine Edition Logic Developer PLC 5.0 Service Pack 3 or later must be used for Release 3.00 new features.</li> <li>■ Proficy Machine Edition Logic Developer PLC 4.5 or later must be used for Release 2.56 new features.</li> <li>■ Proficy Machine Edition Logic Developer PLC 4.0 SP3 Special 2 or later must be used for Release 1.50 new features.</li> <li>■ Proficy Machine Edition Logic Developer PLC 4.0 or later must be used to configure and program the RX7i.</li> </ul>

Subject	Description
<b>C Toolkit Compatibility</b>	<ul style="list-style-type: none"> <li>■ The C Toolkit Release 5.00 Build 16C1, distributed with Machine Edition Logic Developer PLC 5.7 or greater, is required for use with PACSystems Release 5.00. Note that all C blocks must be recompiled using the new toolkit before downloading to a PLC that contains Release 5.00 firmware.</li> <li>■ The C Toolkit Release 3.50 Build 34A1 is required for new features in PACSystems Release 3.80. (Use of symbolic variables in C Blocks).</li> <li>■ C Toolkit Release 3.50 Build 34A1 is required for new features in PACSystems Release 3.50 (Use of variables in C Blocks).</li> <li>■ The C Toolkit for PACSystems is distributed with Machine Edition Logic Developer 4.0 or greater. Toolkit Release 1.00 build 21A2 or later is required for use with the RX7i. Toolkit Release 2.00 build 47A1 or later is required for use with the Release 2.00 features. Please note: The Series 90-70 Toolkit (IC641SWP709/719) is not compatible with PACSystems RX7i.</li> </ul>
<b>Series 90-70 Expansion Rack Compatibility</b>	Series 90-70 expansion racks are supported by the PACSystems RX7i. PACSystems RX7i CPUs and the RX7i Ethernet Module do not operate in a Series 90-70 rack.
<b>Series 90-70 Main Rack Compatibility</b>	Series 90-70 Main Racks cannot be used in a PACSystems RX7i system. PACSystems RX7i CPUs and the RX7i Ethernet Module do not operate in a Series 90-70 rack.
<b>Series 90-70 Module Compatibility</b>	For a list of modules supported by the RX7i CPUs, refer to the <i>PACSystems RX7i Installation Manual</i> , GFK-2223.
<b>Insulating Strips for High Voltage Modules</b>	<p>An insulator strip is required on a high voltage module that is installed to the immediate right of a module with a metal faceplate. Insulating strips should be installed on the following modules that have versions earlier than:</p> <p style="margin-left: 40px;">IC697MDL240D    IC697MDL640E  IC697MDL241D    IC697MDL340G  IC697MDL250G    IC697MDL341E  IC697MDL251E    IC697MDL350F</p> <p><b>Note:</b> Current versions of these modules are shipped with the insulators installed. The strip is visible on the back of the printed wiring assembly. The RX7i rack is shipped with an Insulator Kit that includes enough parts to update three Series 90-70 I/O modules, a BEM713 (Bus Transmitter) module, and a BEM731 (Genius Bus Controller) module.</p>

## Ethernet Functional Compatibility

<b>Subject</b>	<b>Description</b>
<b>Programmer Version Requirements</b>	<p>Proficy™ Machine Edition Logic Developer PLC 5.7 or later must be used for Release 5.00 new features</p> <p>Proficy Machine Edition Logic Developer PLC 5.5 Service Pack 2 or later must be used for Release 4.00 new features.</p> <p>Proficy Machine Edition Logic Developer PLC 5.0 Service Pack 3 or later must be used to program the PLC CPU for Modbus/TCP Server operation.</p>
<b>SRTP and EGD performance differs from Series 90-70</b>	<p>SRTP and EGD performance in the RX7i differs slightly from the Series 90-70. Each RX7i Ethernet Interface supports a greater number of SRTP connections and EGD exchanges.</p> <p>Please also note that the RX7i currently has several SRTP and EGD operational restrictions when compared to the Series 90-70. When migrating Series 90-70 Ethernet applications to the RX7i, please carefully read the "Ethernet Operational Notes" section on page 22.</p>
<b>Series 90-70 LAN Interface Modules (IC697CMM741 and IC697CMM742) not supported by RX7i</b>	<p>Please note that the Series 90-70 LAN Interface Modules (IC697CMM741 and IC697CMM742) are not supported by the RX7i and should not be placed in an RX7i rack. The RX7i CPU contains an embedded Ethernet Interface. If additional Ethernet Interfaces are required, the RX7i Ethernet Module (IC698ETM001) should be used.</p>
<b>Programmer Version Requirements</b>	<p>Proficy™ Machine Edition Logic Developer PLC 5.0 Service Pack 3 or later must be used to program the PLC CPU for Modbus/TCP operation.</p>
<b>CIMPLICITY® Plant Edition Version Requirements</b>	<p>CIMPLICITY® Plant Edition 6.1 Service Pack 1a with Update 040204_s90tcp_6101 or Service Pack 2 or later must be used for Ethernet communications with PACSystems.</p>

## Important Product Information for this Release

Firmware release 5.00 contains the new features listed in "New CPU Features and Enhancements" and "New Ethernet Features and Enhancements" on page 9 and corrects the issues listed below. This release supports Proficy Process Systems Release 1.00.

### Updates

An IC698CRE020-Ax, Bx, Cx, Dx, Ex, Fx, Gx, Hx can be field upgraded to an IC698CRE020-xL using the firmware upgrade utility and upgrade kit 44A752281-G13. The hardware is not field upgradeable.

Firmware upgrade kits can be downloaded at no cost from <http://www.gefanuc.com> or purchased.

**Note:** Web server users should download the new web pages supplied in the upgrade kit

### CPU Problems Resolved in Release 5.00

<b>Subject</b>	<b>Description</b>
<b>PLC Total Used Memory showed used memory greater than available memory.</b>	In certain rare occasions after repeated stores of user logic or Run-Mode-Stores of user logic, the PLC would indicate that the Total Used memory exceeds the available User memory in the PLC. The PLC subsequently rejected any store requests with an error message indicating that there was not enough memory available, even after clearing User memory. This behavior has been corrected.
<b>Reference data not loaded from flash</b>	In rare instances, during a power up, reference table data was preserved in RAM even if "Load from Flash" was specified and a good battery was connected to the CPU. This failure only occurred if the CPU had been powered down while loading reference tables from flash during a previous power up with the battery connected. With this release (5.0), a "Controller Sequence Store Failure" Fault appears in the PLC fault table and the PLC enters STOP FAULT mode when this condition occurs.
<b>Redundancy synchronization not achieved for some projects</b>	Some projects containing a very large number of symbolic bits did not achieve synchronization between the primary and secondary systems. The error "Fail wait time exceeded" and "Redundancy link communication failure" occurred. This behavior has been corrected.
<b>Deleting many blocks in a run mode store caused watchdog expiration</b>	Deleting a large number of blocks (approximately 100 or more) could cause the watchdog timer to expire at the default setting. The number of blocks required to cause this increases as the watchdog timeout is increased. This problem has been resolved in version 5.00.
<b>VME Modules in main rack not reset when lost</b>	Previously, if a VME module in an RX7i rack experienced a loss of module fault, the CPU sometimes failed to reset it. Now, the module will be reset, resulting in a "lights out" condition on the module.
<b>Some very large writes to flash would fail</b>	In previous releases, a very large target (for example, a 64 MB target), especially one that contains a large %W memory table, may not write to flash successfully. During the download, Proficy Machine Edition would automatically disconnect and the CPU entered STOP HALT mode. The error "Fatal Store Failure – User Flash has been cleared" will appear in the fault table. A power cycle recovers the PLC to a normal state. This behavior has been corrected.
<b>Download of projects with many EGD variables could fail</b>	A project containing a large number of EGD produced exchanges with large (more than 200) variables per exchange could not be successfully downloaded to the PLC. The PLC fault table displayed a "Controller sequence store failure". This behavior has been corrected.
<b>Extraneous fault bits may be set for remote (GNIU, GR7) loss-of-rack faults.</b>	In earlier releases, when a remote rack was lost, all fault locating references for the entire local rack would be set. With this release, only the appropriate bits are set.
<b>"Address out of range" message is vague</b>	A new error code (59) has been added to the application faults (group 22). It occurs when a parameterized subroutine block is called by a block whose %L or %P memory is not large enough.

*Ethernet Problems Resolved by Release 5.00*

<b>Subject</b>	<b>Description</b>
<b>PLC and IO Fault Table web pages incorrectly report the date/time of the last update</b>	When displayed on a PC via a web browser, the PLC Fault Table and IO Fault Table pages showed the time/date from the local PC instead of the PLC that the page was last updated. These web pages now correctly display the PLC time value.
<b>Reference Table web page incorrectly displayed with Netscape 4.7</b>	With the Netscape 4.7 web browser running under Windows 2000, the columns displayed in the Reference Table page were not the proper size. The first column was too wide; the remaining columns were too small. This page now displays proper column widths.
<b>Incorrect exchange identification in "Invalid PVN" EGD exception log event</b>	When an EGD exchange was received from the network with an invalid Protocol Version Number (PVN), the resulting exception log event 28H, Entry 2 = 1bH always contained incorrect Producer ID = 238.238.238.238 and Exchange ID = 61166. This exception log event now correctly identifies the received exchange.
<b>TCP Keep-alive timer did not follow AUP parameters</b>	The TCP keep-alive timeout interval did not follow the TCP Advanced User Parameter (AUP) values, leading to unexpected TCP lifetime upon network disconnection. The keep-alive interval is now correctly computed from the configured AUP parameter values.
<b>Reference Table web page did not display time value</b>	When displayed in a web browser, the "PLC Time" field on the Reference Table page was blank. This web page now correctly displays the PLC date/time.
<b>Cfg Mismatch Fault when "Modbus Address Space Mapping Type" was configured as Standard Modbus Addressing</b>	An "Unsupported feature fault" followed by a "System config mismatch fault" for the Ethernet interface occurred at power up. These faults occurred only when the "Modbus Address Space Mapping Type" CPU parameter was configured as "Standard Modbus Addressing", and the PLC maintained its configuration in battery-backed memory (not Flash). This problem now does not occur.
<b>PLC and IO Fault Table web pages did not work with Netscape 4.8 web browser</b>	When attempting to display PLC Fault Table or IO Fault Table pages on Netscape 4.8 web browser, a JavaScript error occurred when initializing the browser. This problem now does not occur.
<b>Log Events on Ethernet daughterboard after improper redundancy interconnection</b>	The Ethernet exception log on the Ethernet daughterboard could show any of the following when the RMX redundancy link between the redundant PLCs was either missing or improperly connected: Event 8, Entry 2 = 0004, 0016, or 0017. These log events now do not occur.
<b>Station Manager "stat g" command displayed incorrect EGD exchange status value for consumed exchanges</b>	The "stat g" Station Manager command displayed a status value 0 for consumed exchanges instead of the exchange status value used in PLC reference memory. The "stat g" now correctly displays the actual exchange status value.
<b>In a non-HSB redundancy system, the PLC consumed EGD exchanges at the Redundant IP address when Redundant IP was inactive</b>	When using the Redundant IP feature in a non-HSB redundancy system, the Ethernet interface consumed incoming EGD exchanges addressed to the Redundant IP address even when the PLC was in Backup mode (i.e., when the Redundant IP was not active). The Ethernet interface now correctly ignores such EGD exchanges when it does not own the Redundant IP address.
<b>Reference Table web page stopped working after numerous updates</b>	After updating the Reference Table page 20 to 30 times via the web browser, PLC reference memory values were no longer displayed, and the PLC time was not updated. The Ethernet exception log recorded an Event 2cH, Entry 2 = 0014H. All further attempts also failed. This problem has been corrected.
<b>EGD exchanges not produced after PLC is powered up</b>	Intermittently, one or more EGD exchanges did not begin production after PLC power was turned on and PLC outputs enabled; the produced exchanges remained in STOP state. All produced exchanges now go to PRODUCING state when PLC outputs are enabled.
<b>A 2fH/21eH Ethernet log event occurred when terminating a Modbus/TCP server connection via "killms" Station Manager command</b>	An Ethernet exception (Event 2fH, Entry 2 = 21eH) was intermittently logged when using the "killms" Station Manager command to manually terminate an open Modbus/TCP server connection. This error, now corrected, did not prevent termination, nor affect subsequent Modbus/TCP connections.
<b>2bH/01H Ethernet log event put the PLC into STOP FAULT during power cycling</b>	Intermittently, the Ethernet firmware generated a log event (Entry 2bH, Entry 2 = 0001H) when PLC power was cycled. This error, now corrected, generated a FATAL PLC Fault and put the PLC into STOP FAULT condition.



<b>Subject</b>	<b>Description</b>
<b>COMMREQ Length Error</b>	The COMMREQ Status Word value 8190H (= "COMMREQ is too short") may also be reported for EGD Command COMMREQs that are too long (contain more words than expected).
<b>Ethernet module stops producing EGD</b>	When the PLC transitions from Stop to Run mode, the Ethernet module may not begin producing EGD. To recover the PLC must be put back into stop mode and then transitioned to Run mode.

### *New CPU Features and Enhancements*

**Scan Set I/O** – The SCAN\_SET\_IO function block scans the I/O of a specified scan set number. Modules are assigned to scan sets in hardware configuration. An operand of the block specifies whether the Inputs and/or Outputs of the associated scan set will be scanned. The Scan Set IO function skips modules that do not support DO\_IO scanning.

**Quality Function Blocks** – This group of instructions adds capabilities to determine the quality of the data that is used in an application. The quality functions will determine whether a data item was transmitted without error from an input device into an I/O module or from an I/O module to an output device.

**Optional Parameters in UDFBs** - The ArgPresent function allows logic inside a UDFB or PSB to know if an input argument for a particular parameter was present or not present. This is useful for optional parameters.

**IEC Transitionals** - The IEC 61131-3 PLC programming standard defines two edge detector function blocks. The “Rising edge trigger” R\_TRIG and “Falling edge trigger” F\_TRIG detect the changing state of a Boolean signal.

**Synchronizing the High-resolution Time of Day Clock to an SNTP Network Time Server** - See “New Ethernet Features and Enhancements” below.

### *New Ethernet Features and Enhancements*

**Synchronizing the High-resolution Time of Day Clock to an SNTP Network Time Server** - Synchronizing the CPU TOD clock to an SNTP server allows you to set a consistent time across multiple systems. Once the CPU TOD clock is synchronized with the SNTP time, all produced EGD exchanges will use the CPU’s TOD for the time stamp. TOD clock synchronization is enabled on an Ethernet module by the advanced user parameter (AUP), *ncpu\_sync*. The CPU must also use a COMMREQ in user logic to select an Ethernet module as the time master. For additional information, refer to “Timestamping of Ethernet Global Data Exchanges” in chapter 4 of *TCP/IP Communications for PACSystems*, GFK-2224.

Use of this feature requires both CPU firmware release 5.00 or later and Ethernet firmware release 5.00 or later.

**Supernets** - PACSystems Ethernet interfaces now support “supernetting,” a technique of configuring the subnet mask to allow communication to multiple subnets. “Supernetting” is also called “Classless IP Addressing.”

### *CPU Restrictions and Open Issues*

<b>Subject</b>	<b>Description</b>
<b>Battery Installation</b>	When installing a new battery, when there currently is no battery installed, the battery must be installed while the CPU has power. Failing to follow this procedure could result in the CPU not powering up.  If a battery is installed while power is off (and there was no battery previously installed), and the CPU fails to power up, simply remove the battery, power cycle the CPU and then install the battery.
<b>Ethernet Disconnect During Word for Word Change</b>	If the Ethernet connection is broken during a word-for-word change, the programmer may not allow a subsequent word-for-word change after reconnecting due to the fact that it thinks another programmer is currently attached. If this occurs, you should go offline and then back online again.

<b>Subject</b>	<b>Description</b>																																				
<b>Non-GE Fanuc VME Modules Operating as VME Masters</b>	Non-GE Fanuc VME modules operating as VME bus masters have not been tested with the RX7i. Users interested in integrating this type of functionality should contact technical support.																																				
<b>Store of Hardware Configuration with Multiple GBCs</b>	Storing a hardware configuration containing two or more Series 90-70 GBCs twice may cause one GBC to fail configuration. Clearing the hardware configuration between stores will prevent this fault from being generated. (Note: This issue does not affect Series 90-30 GBCs.)																																				
<b>Simultaneous Clears, Loads and Stores Not Supported</b>	Currently, the RX7i does not support multiple programmers changing CPU contents at the same time. The programming software may generate an error during the operation.																																				
<b>Fault Reporting With Analog Expanders</b>	<p>For fault reporting when an analog expander is used in a Series 90-70 Expansion Rack, a special case exists when the ALG230 base module is in slot 2 and an expander module is present in slot 9. In this case, if any expander module loses communication with the base module, then the fault reports for all 16 channels for that expander display the slot number as 0. The circuit number will be a value from 9 to 120, as shown in the following table. The I/O reference address for each channel is displayed as blank.</p> <table border="1"> <thead> <tr> <th>SLOT</th> <th>EXPANDER</th> <th>CIRCUIT NUMBERS</th> </tr> </thead> <tbody> <tr> <td>3</td> <td>1</td> <td>9-24</td> </tr> <tr> <td>4</td> <td>2</td> <td>25-40</td> </tr> <tr> <td>5</td> <td>3</td> <td>41-56</td> </tr> <tr> <td>6</td> <td>4</td> <td>57-72</td> </tr> <tr> <td>7</td> <td>5</td> <td>73-88</td> </tr> <tr> <td>8</td> <td>6</td> <td>89-104</td> </tr> <tr> <td>9</td> <td>7</td> <td>105-120</td> </tr> </tbody> </table> <p>For fault reporting when an analog expander is used in a PACSystems RX7i rack, a special case exists when the base is in slot 4 and an expander is present in slot 11. In this case, the slot number for a faulty expander is always displayed as slot 2, and the circuit number will display according to the slot used for the expander, as shown in the following table. The I/O reference address for each channel is displayed as blank.</p> <table border="1"> <thead> <tr> <th>SLOT</th> <th>CIRCUIT NUMBERS</th> </tr> </thead> <tbody> <tr> <td>6</td> <td>25-40</td> </tr> <tr> <td>7</td> <td>41-56</td> </tr> <tr> <td>8</td> <td>57-72</td> </tr> <tr> <td>9</td> <td>73-88</td> </tr> <tr> <td>11</td> <td>105-120</td> </tr> </tbody> </table>	SLOT	EXPANDER	CIRCUIT NUMBERS	3	1	9-24	4	2	25-40	5	3	41-56	6	4	57-72	7	5	73-88	8	6	89-104	9	7	105-120	SLOT	CIRCUIT NUMBERS	6	25-40	7	41-56	8	57-72	9	73-88	11	105-120
SLOT	EXPANDER	CIRCUIT NUMBERS																																			
3	1	9-24																																			
4	2	25-40																																			
5	3	41-56																																			
6	4	57-72																																			
7	5	73-88																																			
8	6	89-104																																			
9	7	105-120																																			
SLOT	CIRCUIT NUMBERS																																				
6	25-40																																				
7	41-56																																				
8	57-72																																				
9	73-88																																				
11	105-120																																				
<b>Power Cycle During Write to Flash</b>	If the CPU is power cycled during the process of writing to flash, and is configured to power up from flash, a fault will be generated on power up.																																				
<b>Hardware Configuration Not Equal After Changing Target Name</b>	If the user stores a hardware configuration to flash which indicates that "Logic/Config Power up Source" is set to "Always Flash" or "Conditional Flash" and then subsequently changes the name of the target in the programming software, the hardware configuration will go Not Equal and will not Verify as equal.																																				
<b>PLC and IO Fault Tables May Need to be Cleared Twice to Clear Faulted State</b>	Both PLC and IO fault tables need to be cleared to take the CPU out of Stop/Fault mode. If one of the tables contains a recurring fault, the order in which the tables are cleared may be significant. If the CPU is still in Stop/Fault mode after both tables are cleared, try clearing the fault tables again.																																				

<b>Subject</b>	<b>Description</b>
<b>VME Modules Using Program Type AM Codes</b>	<p>When Block Transfers are enabled with a VME memory region that uses one of the program type AM Codes, the Rx7i CPU sometimes generates block transfer (BLT &amp; MBLT) cycles to access the associated VME memory. Therefore, if you have a VME memory region configured to use one of the program type AM Codes (AM Codes 3Ah, 3Eh, 0Ah, or 0Eh), be sure to follow at least one of these two rules:</p> <p>a) The memory region's Interface Type parameter must <u>not</u> be set to "Qword Access (64-bit)", and the VME Block Transfer parameter must be set to "Disabled".</p> <p style="text-align: center;">-OR-</p> <p>b) The system may not contain any "program" and "data" VME memory regions with overlapping VME addresses. (If more than one VME module were to respond to a BLT or MBLT cycle, a system error could result.)</p>
<b>Setting Force On/Off by Storing Initial Value</b>	<p>Once a force on or force off has been stored to the PLC, the user cannot switch from force on to force off or vice-versa directly by downloading initial values. The user can turn off the force by doing a download, and then change the force on or off by another download.</p>
<b>CMM COMMREQ Restriction</b>	<p>Due to an issue in the CMM firmware, the SNP COMM_REQ Read System Memory (7202) executed on a CMM module does not execute correctly for lengths greater than 760 words. Incorrect data is written to the SNP Master. Users should not use lengths greater than 760 words.</p>
<b>Number of Active Programs Returned as Zero</b>	<p>The SNP request Return Controller Type and ID currently returns the number of active programs as zero.</p>
<b>Serial I/O Failure at 115K During Heavy Interrupt Load</b>	<p>Rare data corruption errors have been seen on serial communications when running at 115K under heavy interrupt load on the PLC. Under heavy load applications, users should restrict serial communications to 57K or lower.</p>
<b>Synchronized Backup Unit May Log Over Sweep Faults In Constant Sweep Mode</b>	<p>A synchronized backup unit may report over sweep faults in constant sweep mode regardless of the amount of time spent servicing IO, logic, and communications in the sweep.</p>
<b>Bus Read or Write May Return Status of 5 Instead of 4</b>	<p>In some cases, the Bus Read/Write Status Word returned may be 4 instead of 5 when the ending address is out of range.</p>
<b>Hardware Configuration and Initial Values May Not Load From Flash</b>	<p>If no user logic exists in the CPU RAM when a write to flash is performed, the CPU may not properly load from flash after a power cycle. In order to guarantee proper power up from flash, insure that both hardware configuration and logic have been stored to RAM before writing to flash.</p>
<b>CPU Sweep Time Increases During Overtemp Operation</b>	<p>When the operating temperature of the CPU exceeds the normal operating temperature, system variable #OVR_TMP (%SA8) turns ON (Fault group 24, error code 0x0001). When this occurs the sweep time periodically increases because the CPU executes a new task to read the actual temperature reported by a temperature sensor. This increase can be as much as 2 ms.</p>
<b>GBC in Expansion Rack May Fail to Power Up</b>	<p>Occasionally, a Series 90-70 GBC module located in an expansion rack may fail to power up when power to that rack is cycled off/on. The module's OK light will flash and then all module lights will go off. Power cycle the rack again to recover. (Note: This issue does not affect 90-30 GBCs.)</p>
<b>Possible ME inability to connect</b>	<p>Infrequently, an attempt to connect a programmer to a PLC via Ethernet will be unsuccessful. The normal connection retry dialog will not be displayed. Rebooting the computer that is running the programmer will resolve the behavior.</p>
<b>Don't use multiple targets</b>	<p>In a system in which the hardware configuration is stored from one target and logic is stored from a different target, powering-up from flash will not work. The observed behavior is that, following a power up from flash, ME reports hardware configuration and logic "not equal".</p>
<b>Sequence Store Failure</b>	<p>In systems with very large hardware configuration, it is possible to encounter a "PLC Sequence Store Failure" error when writing the configuration to flash. To workaround this error, either:</p> <p>Perform an explicit clear of flash prior to performing the write.</p> <p>Increase the operation timeout used by ME prior to performing the write.</p>

<b>Subject</b>	<b>Description</b>
<b>Thermocouple Module Fails to Power Up Correctly</b>	After some power loss events, the Horner Thermocouple module (HE697THM160) may fail to power up successfully. After failure, the AI data will not be updated correctly and will continue to return zero values. There are no module fault indicators for this event. The user should power cycle again to restore normal function.
<b>C Toolkit PlcMemCopy Documentation Incorrect</b>	This routine does allow the destination and source pointers to be outside of reference memory. If the destination points to discrete reference memory, overrides and transitions will be honored. Note that the header for PlcMemCopy has been updated in Release 3.50 of the C toolkit.
<b>Fault Contacts on Modules in Expansion Rack</b>	When an expansion rack powers up, the slot fault contacts will prematurely indicate that the modules in the expansion rack are not faulted <i>before</i> they complete their power up. Use I/O point fault contacts to verify validity of the I/O.
<b>Fault Contacts on Remote I/O Station</b>	If multiple faults exist in a Series 90-70 Remote I/O Station and one of them is corrected, a FAULT contact that uses the Remote I/O Station's module reference will incorrectly indicate that no faults exist at the Remote I/O Station.
<b>BIT_SEQ Function Block DIR Parameter</b>	The BIT_SEQ Function Block should require the user to flow BOOLEAN logic into the DIR parameter, but currently does not. If no DIR parameter is present, the BIT_SEQ will increment by default.
<b>Flash clear operation may fail unexpectedly</b>	Occasionally flash clears may fail when the CPU is configured to load hardware config and logic from flash with a battery attached. If this occurs, remove the battery and power cycle to resolve the issue.
<b>WinLoader may stop operating</b>	On computers running Windows 2000 and using some versions of Symantec Antivirus protection, WinLoader will fail if used in advanced mode. Recovery requires cycling the computer's power.
<b>Storing a Configuration with EGD to mismatched module prevents future store</b>	Storing a configuration that causes a mismatch for an Ethernet module with EGD configured causes the CPU to get into a state where all future stores will fail. The remedy is pulling the battery and power cycling.

### *Ethernet Restrictions and Open Issues*

<b>Subject</b>	<b>Description</b>
<b>Number of SRTP Requests Tallied May Vary</b>	When running multiple SRTP client channels, the number of requests, as reported by the client and the server, may differ between the connections.
<b>Reporting of Duplicate IP Address</b>	The RX7i does not log an exception or a fault in the PLC Fault Table when it detects a duplicate IP address on the network.
<b>REPP Does Not Save Results of Aborted PING</b>	The station manager REPP command does not retain the results of a PING that is aborted due to error. The PING results are reported when the PING is aborted, but subsequent REPP commands give the results of the last successfully terminated PING.
<b>Multiple Log Events</b>	The Ethernet Interface sometimes generates multiple exception log events and PLC Fault Table entries when a single error condition occurs. Under repetitive error conditions, the exception log and/or PLC Fault Table can be completely filled with repetitive error messages.
<b>Intermittent SNTP Loss of Synchronization</b>	Under moderately heavy EGD traffic load, the Ethernet Interface may occasionally lose synchronization with its SNTP time server and generate exception log event 29, entry 2=bH.
<b>SRTP Communication Delays</b>	Average latency of communications on SRTP channels may vary considerably due to TCP retransmissions. SRTP client applications should be designed to take this variance into account. In particular, SRTP client applications migrating from Series 90-70 SRTP Servers to RX7i may need to lengthen SRTP timeout parameters.
<b>Spurious 'Ethernet Failure' Error</b>	On rare occasions, the error "Module hardware fault" may be reported on the Ethernet daughterboard. The corresponding fault in the exception log is Event = 1, followed by text "Ethernet failure". This fault is a nuisance fault and may be ignored.

<i>Subject</i>	<i>Description</i>
<b>Web Server Failure Under Heavy Load</b>	After several hours of heavy load on the web server, the web server may fail to return pages and may cause a LAN system-software fault to be logged. The web server will resume serving pages when the load is reduced.
<b>Reference Table Web Page Restriction</b>	After the user selects a user defined table, if the user then tries to go back to the pre-defined table of %R1-%R60, an error message may be displayed stating "An error was detected when trying to retrieve setting from PC cookie".
<b>Fault Table Web Page Restriction</b>	On both the I/O and PLC Fault Table web pages, the PLC program name is not currently displayed in the area provided.
<b>Cannot Set FTP Password</b>	The CHPARAM TPASSWORD Station Manager command fails. Processing an AUP File containing parameter "tpassword" generates an error.
<b>Reference Table Web Page Format</b>	When using Netscape 4.7 to view the reference table web page, the size of the columns is incorrect. The first column is much wider than the others.
<b>Spurious Ethernet Fault</b>	In rare instances, after power cycle, the Ethernet Interface may log the following fault, Event = 28H, Entry 2 = 000eH. This fault can be safely ignored.
<b>Release 2.00 PLC Faults Are Not Identified on Web Page</b>	When any PLC Fault Table entries defined for Release 2.00 or later are displayed using the Ethernet interface web server, the PLC Fault description contains only a generic message instead of the proper fault text.
<b>Very Heavy EGD Production/Consumption at Server May Cause EGD Command Timeouts</b>	Very heavy EGD production and/or consumption at a server device may cause EGD command timeout errors when another device attempts to send EGD commands to that server. If EGD commands must preempt normal production, you may set the "gcmd_pri" Advanced User Parameter to 2 (see GFK-2224, Appendix A). Note that by doing so, EGD exchange production may be delayed.
<b>Unexpected EGD COMMREQ Status</b>	EGD Commands may return COMMREQ Status 9590H (= internal error) instead of the expected B190H (= Can't locate remote node) when unable to locate a remote device on the network.
<b>SRTP Server Errors Can Cause Timeouts at Channels Client</b>	<p>The SRTP Server in the PACSystems Ethernet Interface can encounter various errors when the remote Series 90 PLC client takes down an SRTP connection and then establishes a new connection. This can cause unexpected channel timeout errors 0190H or 0290H at the client.</p> <p>The SRTP server errors in the Ethernet exception log are identified as Event = 2; Entry 2 may be 001cH, or 0021H.</p>
<b>EGD Command Range Failure Can Write Partial To PLC Bit Memory</b>	<p>When an EGD Command attempts a write operation to a bit-mode PLC reference memory range (%I, %Q; %T, %M, %SA, %SB, %SC) where the amount of data to be written exceeds the configured size of that reference memory, the command will return failure status but partial data may be written into the reference memory. The amount of partial data written depends upon the starting bit memory location and the data length as follows:</p> <ul style="list-style-type: none"> <li>- If data starts on a byte boundary (location = (8*n) + 1), no partial data is written.</li> <li>- If data does not start on a byte boundary (location = (8*n)+1) and data exceeds the configured reference memory by 8 or more bits, partial data is written from the starting location to the next byte boundary after the starting location.</li> <li>- If data does not start on a byte boundary (location = (8*n)+1) and data exceeds the configured reference memory by less than 8 bits, partial data is written from the starting location to the end of configured reference memory.</li> <li>- For a Write PLC Memory command, this can occur when writing data into the target PLC. For Read PLC Memory or Read Exchange commands, this can occur when writing data received from the target PLC into the local PLC memory. The logic application must not use any data returned to the local PLC if the EGD command status indicates failure.</li> <li>- To avoid writing partial data to the local or remote PLC, be sure that bit memory data transfers do not exceed the configured reference memory sizes at the appropriate PLC.</li> </ul>

GFK-2320P

<b>Subject</b>	<b>Description</b>
<b>Usage of New IP/Subnet Mask Configuration</b>	Because the Ethernet interface operates using a retained set of IP address + subnet mask information, a change to these values does not take effect until a restart of the module or power cycle of the rack containing the module. The user should be aware when altering these configuration values that their effect is not immediate.
<b>Cannot Change EGD Class 2 UDP Port Number</b>	Processing an Advanced User Parameter File containing parameter "gctl_port" does not actually change the value.
<b>No CPU fault logged when Ethernet Interface in fatal blink code</b>	The CPU does not log any PLC or I/O Faults when the Ethernet Interface has a fatal blink code. The user's application should monitor the LAN interface OK status bit to detect loss of module.
<b>EGD I/O has unexpected variability under heavy load</b>	EGD I/O has intermittent unexpected variability under heavy load. For a Produced Exchange, EGD samples may occasionally be delayed by as much as a production period or more.
<b>Clear of large hardware configurations may cause log event 08/20</b>	A Log event 08/20 may occur when very large hardware configurations are cleared and transfers are active on other Server connections. This log event can be safely ignored.
<b>COMMREQ Status Word of 0x54A0 occasionally returned for EGD commands</b>	Occasional COMMREQ Status Word values of 0x54A0 are returned to COMMREQs for EGD commands when the previously transferred command has experienced retries in the network. Executing the COMMREQ again results in successful transfer of the command.
<b>Modbus/TCP channel aborted during power cycle</b>	After powering up a PLC running Modbus/TCP client channels, the establish connection occasionally fails because the server occasionally rejects the "open" from the client. The connection will then succeed if the application retries the open when it sees a 0x9690, 0xAA90, or B490H response to an open request or to the first write request.
<b>Abrupt Termination of SRTP Connections Causes Nuisance Faults in Fault Log</b>	In conditions where SRTP connections are terminated abruptly (as by a TCP reset, or Redundant IP connection termination), several nuisance faults may be generated in the Ethernet exception log and PLC Fault Table. These Ethernet log events can be ignored. These Ethernet log events include: Event 8, Entry 2 = 6 "Backplane communications with PLC Fault; lost request." A mailbox message (other than COMMREQ) was received from the PLC CPU for an unknown or unregistered BPD User task. Event 8, Entry 2 = 4 "Backplane communications with PLC Fault; lost request" Mailbox packets were received from the PLC CPU in wrong order. Event 8, Entry 2 = 17 "LAN system-software fault; resuming" Error sending a mailbox transfer to a BPD User task. Event 8, Entry 2 = 16 "LAN system-software fault; resuming" Error receiving a mailbox transfer from the PLC CPU.
<b>PLC response timeout errors (8/08) in Ethernet exception log under extremely heavy SRTP traffic</b>	Under extremely heavy SRTP traffic conditions, the Ethernet Interface may log an event in the Ethernet exception log (Event 8, Entry 2 = 08H) indicating an overload condition. This error terminates the SRTP connection. If this event appears, either the traffic load should be reduced, or the application should use an alternate communications method to verify that critical data transfers were not lost due to the overload.
<b>SRTP channel transfers may take up to 20 seconds after power cycle</b>	When SRTP communications are interrupted by a power cycle, the Ethernet interface may require up to 20 seconds to reestablish TCP connection used for SRTP communications.
<b>"rmdir" Station Manager command does not work for multi-level directory path</b>	The "rmdir" Station Manager command does not operate properly with a multi-level directory path. Instead, first change to the parent directory, then delete the target directory without specifying a path. For example, the "rmdir dir1/dir2" results in "RMDIR Failed, dir1/dir2 does not exist". Instead, first do "cd dir1" and then "rmdir dir2".
<b>Intermittent Ethernet log event 8H/15H after power cycle</b>	When starting after a power cycle, the Ethernet Interface may intermittently log an exception (entry 8H, Entry 2 = 15H, Entry 3 = 0000H, Entry 4 = 00aaH). This exception is benign and may be ignored.

<b>Subject</b>	<b>Description</b>
<b>Clicking web page update buttons multiple times causes Ethernet log events</b>	When updating the Reference Table, PLC Fault Table, or IO Fault Table page at the web browser, clicking the update button several times may cause the errors (Event 2c, Entry 2 = 0006H or 0008H) in the Ethernet exception log. These errors are benign and may be ignored.
<b>Intermittent Modbus/TCP Server log events when using "killms" Station Manager command</b>	When using the "killms" Station Manager command to manually terminate an active Modbus/TCP server connection, the following Modbus/TCP errors may occur in the Ethernet exception log: Event 2fH, Entry 2 = 209H, 212H, 21bH, or 221H. These errors may be ignored.
<b>Ethernet interface may lock up when clearing hardware configuration containing produced EGD exchange</b>	When clearing or replacing a hardware configuration that contains produced EGD exchanges, the Ethernet interface may very intermittently lock up. In this condition, the Ethernet interface still responds to ping from the network; Ethernet port LEDs still indicate activity. However EGD, SRTP, Modbus/TCP and Station Manager are inoperative. Existing Programmer, SRTP, or Modbus/TCP connections are lost and will time out. There is no corresponding "Loss of module" entry in the PLC Fault Table. To recover, press the Ethernet Restart pushbutton twice, or cycle power to the PLC.

## CPU Operational Notes

<b>Subject</b>	<b>Description</b>
<b>Transfer List Validation not compatible with Release 2.0x CRE020</b>	Redundant transfer lists generated using CPU Firmware release 2.0x or earlier are not compatible with the release 3.80 and later transfer lists. Redundant controllers that are running release 2.0x will not be able to synchronize with controllers that are running release 3.80 or later firmware.
<b>Length of Serial I/O buffer</b>	(Release 5.0 or later) The "Set Up Input Buffer Function" will always allocate a buffer containing 2049 bytes. This is one byte more than previous PACSystems releases.
<b>Only one BTM allowed in main rack</b>	Only one BTM is allowed in the main rack. Multiple BTMs in the main rack will result in undefined operation.
<b>Logic executed in row major instead of column major</b>	Logic execution in PACSystems RX7i is performed in row major order (similar to the Series 90-30) instead of column major (similar to the Series 90-70). This means that some complicated rungs may execute slightly differently on PACSystems RX7i and Series 90-70. For specific examples, see the programming software on-line help.
<b>Upgrading firmware with modules in rack</b>	The process of upgrading the CPU firmware with the WinLoader utility may fail when multiple IO modules are in the main, remote or expansion racks, due to the time it takes to power cycle the rack system. If the upgrade process fails, move the CPU to a rack without IO modules and restart the upgrade process.
<b>NaN handled differently than in Series 90-70</b>	The PACSystems RX7i CPU may return slightly different values for Not A Number as compared to Series 90-70 CPUs. In these exception cases (e.g., 0.0/0.0), power flow out of the function block is identical to Series 90-70 operation and the computed value is still Not A Number.
<b>PID algorithm improved</b>	<p>The PID algorithm used in PACSystems RX7i has been improved and therefore PID will function slightly differently on PACSystems RX7i than on the Series 90-70. The differences are:</p> <ol style="list-style-type: none"> <li>1. The elapsed time is computed in 100 <math>\mu</math>S instead of 10 mS units. This smoothes the output characteristic, eliminating periodic adjustments that occurred when the remainder accumulated to 10mS.</li> <li>2. Also, previous non-linear behavior when the integral gain is changed from some value to 1 repeat/second was eliminated.</li> </ol>
<b>Service Request 13 command block must contain zero</b>	When the Service Request function block is used to invoke Service Request #13, the first word of the command block sets the number of last scans to be executed. If the value of that word is -1 (or 0xFFFF), then the number of last scans is set to the value in the configuration.
<b>Changing IP address of Ethernet interface while connected</b>	Storing a hardware configuration with a new IP address to the RX7i while connected via Ethernet will succeed, then immediately disconnect because the RX7i is now using a different IP address than the Programmer. You must enter a new IP address in the Target Properties in the CME Inspector window before reconnecting.
<b>Stack allocation for folders converted from Series 90-70 must be increased</b>	Series 90-70 folders are converted to PACSystems RX7i with the same stack allocation. PACSystems RX7i uses more stack space than the Series 90-70, so some folders may not run after conversion. To increase the stack space, right click the _MAIN block and select Properties. Stack Size is listed at the bottom of the Properties page. The default stack size in new PACSystems RX7i folders is 64KB. Folders with a large number of nested calls may need more stack space. As a general rule, the stack for the converted PACSystems RX7i folder should be set to approximately three times the stack size of the Series 90-70 version of the folder. A diagnostic fault will be displayed if the folder runs out of stack space.
<b>Duplicate station address for Modbus will conflict with other nodes</b>	The default serial protocol for the RX7i is Modbus RTU. The default Station Address is 1. If the PLC is added to a multi-drop network, care must be taken that the PLC is configured with a unique Station Address. Nodes with duplicate Station Addresses on the same network will not work correctly.



<i>Subject</i>	<i>Description</i>
<b>#FST_EXE no longer represented by %S121</b>	<p>The PACSystems RX7i implementation of #FST_EXE is different from the Series 90-70 implementation. #FST_EXE is no longer stored in %S (%S121) memory. Instead, it is stored in a local memory that is not accessible to the user. You can reference #FST_EXE only by using its name (similar to referencing a symbolic variable).</p> <p>The #FST_EXE system variable can be accessed (read) in the logic of any block. Just as in the Series 90-70, PSB blocks and C blocks inherit the #FST_EXE value of their calling block. Again, as in the Series 90-70, #FST_EXE cannot be written.</p>
<b>Format for fault locating references changed</b>	<p>Compared to the Series 90-70 CPU, syntax for the fault locating references has changed as follows:</p> <ul style="list-style-type: none"> <li>#RACK_00r is now #RACK_000r.</li> <li>#SLOT_rss is now #SLOT_0rss.</li> <li>#BUS_rssb is now #BUS_0rssb.</li> <li>#M_rssbmm is now #M_rssbmmm (adds support for 256 modules).</li> </ul> <p>Existence of old style (Series 90-70) fault locating references will cause errors to be generated during logic validation. The error will have the following format: "Error 9618: Invalid reference type for operand [LD Block, '_MAIN': Rung 7]"</p>
<b>Slot restrictions for analog expander module in RX7i rack</b>	<p>The following restrictions apply to Analog Expansion Modules in a PACSystems RX7i rack:</p> <ul style="list-style-type: none"> <li>■ The base module must be in a slot no lower than Slot 4.</li> <li>■ The expander module must be in a slot no higher than Slot 11.</li> <li>■ No expander module may be in a slot lower than the base module.</li> </ul> <p>Because of these restrictions, and because the 90-70 modules occupy two slots in the PACSystems RX7i rack, a maximum of three expanders are possible. (Base in Slot 4, Expanders in Slots 6, 8, and 10 or Base in Slot 5, Expanders in Slots 7, 9, and 11.) Please note that these restrictions do not apply to Analog Expansion Modules in Series 90-70 expansion racks.</p>
<b>Genius Bus Controller restrictions</b>	<p>The following restrictions apply to GBCs in PACSystems RX7i:</p> <ul style="list-style-type: none"> <li>■ The minimum CPU sweep time will be gated by the time it takes the GBC to refresh its outputs and collect its inputs + 500 microseconds. To obtain a smaller sweep time, use the SUSIO function block or place the GBCs in a scan set that has non-default characteristics.</li> <li>■ If a %W reference address is used for COMMREQ status or return data, it must be in the range %W00001 - %W65536.</li> <li>■ Storing or clearing a hardware configuration containing two GBCs attached to the same Genius network may cause a Loss of Device fault for one of the GBCs. This is caused by the GBCs clearing their SBAs asynchronously. The user can safely ignore the Loss of Device fault.</li> </ul>


<i>Subject</i>	<i>Description</i>
<b>Communication Coprocessor Module restrictions</b>	<p>PACSystems RX7i CPUs with firmware versions 1.50 or later support IC697CMM711 modules with firmware versions 4.20 or later. You must ensure that you are using the correct firmware version of the CMM because the CPU cannot check the CMM's firmware version. (The module's firmware version can be found on a label attached to the module's EEPROM.)</p> <p>PACSystems does not support the following for an IC697CMM711:</p> <ul style="list-style-type: none"> <li>■ Connecting to Machine Edition to the CPU through the CMM's serial ports.</li> <li>■ Access to Symbolic variables memory.</li> <li>■ WAIT mode COMMREQs.</li> <li>■ Permanent datagrams.</li> </ul> <p>The following restrictions apply when using the IC697CMM711 with PACSystems:</p> <ul style="list-style-type: none"> <li>■ Access to %W memory references is partially supported. Only offsets 0—65535 of %W can be accessed via the CMM.</li> <li>■ The Program Name is currently always LDPROG1 for PACSystems.</li> <li>■ Reads and writes beyond currently configured reference table limits will report a minor code error of 90 (REF_OUT_OF_RANGE) instead of F4 (INVALID_PARAMETER) as reported on the Series 90-70.</li> <li>■ In case of ERROR NACK, the Control Program number, privilege level and other piggyback status data will be set to 0.</li> <li>■ PACSystems CPUs return the major/minor type of the 90-70 CPX935 (major type 12, minor type 35) to the CMM scratch pad memory when communicating with a CMM.</li> <li>■ Control Program Number will be returned as 01 in PACSystems instead of FF as reported on the Series 90-70.</li> <li>■ If your RX7i application program needs to access the dual port memory of a CMM, use the BUS READ and WRITE functions. When accessing the CMM, set the Region parameter on the function block to 1. (For the CMM, region 1 is predefined to be the module's entire dual port memory.)</li> </ul> <p><b>Note:</b> For details on operation of the IC697CMM711, refer to the <i>Serial Communications User's Manual</i>, GFK-0582.</p>

<i>Subject</i>	<i>Description</i>
<b>Programmable Coprocessor Module restrictions</b>	<p>PACSystems RX7i CPUs with firmware versions 1.50 or later support IC697PCM711 modules with firmware versions 4.05 or later. You must ensure that you are using the correct firmware version of the PCM because the CPU cannot check the PCM's firmware version. (The module's firmware version can be found on a label attached to the EEPROM.)</p> <p>PACSystems does not support the following for IC697PCM711:</p> <ul style="list-style-type: none"> <li>■ Connecting Machine Edition to the CPU through the IC697PCM711 module's serial ports.</li> <li>■ Access to Symbolic variables.</li> <li>■ WAIT mode COMMREQs.</li> <li>■ The following C functions are not supported: <ul style="list-style-type: none"> <li>chk_genius_bus</li> <li>chk_genius_device</li> <li>get_cpu_type_rev</li> <li>get_memtype_sizes</li> <li>get_one_rackfault</li> <li>get_rack_slot_faults</li> </ul> </li> <li>■ The C function write_dev will not write to read only reference tables (%S references, transition bits, and override bits). If this is attempted, the call will fail at run time and return an error code.</li> </ul> <p>The following restrictions apply when using the IC697PCM711 with PACSystems:</p> <ul style="list-style-type: none"> <li>■ %W memory partially supported. Only offsets 0-65535 of %W can be accessed via the PCM.</li> <li>■ The Program Name is currently always LDPROG1 for PACSystems.</li> <li>■ In case of ERROR NACK, the Control Program number, privilege level and other piggyback status data will be set to 0.</li> <li>■ If an application program running on the PCM accesses the VME bus, the VME addresses being used by that program must be updated to agree with the PACSystems RX7i VME addressing assignments. PACSystems RX7i VME address assignments are described in the <i>PACSystems RX7i User's Guide to Integration of VME Modules</i>, GFK-2235.</li> <li>■ PACSystems CPUs return the major/minor type of the Series 90-70 CPX935 (major type 12, minor type 35) to the PCM scratch pad memory when communicating with a PCM.</li> <li>■ If your RX7i application program needs to access the PCM's dual port memory, use the BUS READ and WRITE functions. When accessing the PCM, set the Region parameter on the function block to 1. (For the PCM, region 1 is predefined to be the module's entire dual port memory.)</li> </ul> <p><b>Note:</b> For details on operation of the IC697PCM711, refer to the <i>Programmable Coprocessor Module and Support Software User's Manual</i>, GFK-0255.</p>

Subject	Description																																																																																																																																																								
<p><b>PCM (to CPU) communications timeout</b></p>	<p>The PCM has a default backplane communications timeout value of 5 seconds. After the PCM has sent a request to the CPU, the PCM applies this timeout while waiting on a response back from the CPU. In most cases, the CPU will respond well within the 5-second timeout; however, in certain instances the CPU can take longer than 5 seconds to respond. <i>These cases are limited to LOADs or STOREs of program and/or configuration -especially if blocks in the program are larger than 8 KBytes. Folders containing EXE blocks (again with *.EXE files &gt;8 KBytes) are most likely to cause problems.</i> To ensure that the PCMs do not observe backplane timeouts, a file must be loaded (using <i>termf</i>) to the PCM. The file must be a binary file named <i>CPU.ENV</i>. The contents of this file are as below (all values are specified in hexadecimal):</p> <p>Once the binary file <i>CPU.ENV</i> (below) is created, use <i>termf</i> to load <i>CPU.ENV</i> to the PCM. Then execute a soft reset of the PCM. After executing the soft reset, the PCM's backplane communications timeout should be 10 seconds.</p> <p><b>Note:</b> A copy of the above <i>CPU.ENV</i> file can be obtained from <a href="http://www.geindustrial.com/cwc/gefanuc/support/ControllersIO/s9070-d.htm">http://www.geindustrial.com/cwc/gefanuc/support/ControllersIO/s9070-d.htm</a>.</p> <p style="text-align: center;"><b>CAUTION</b></p> <p><b>The <i>CPU.ENV</i> file will not be used when a hard reset is performed on the PCM. With the <i>CPU.ENV</i> file resident in the PCM, a soft reset must be performed after every hard reset of the PCM. Be aware that it is possible to issue a soft reset COMMREQ from the Ladder Diagram application; therefore, the application can be modified to handle the required reset of PCMs after a power cycle of the PLC system.</b></p>																																																																																																																																																								
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 10%;">File Offset</th> <th colspan="15">Data</th> </tr> </thead> <tbody> <tr> <td>0000</td> <td>4C</td><td>5A</td><td>01</td><td>01</td><td>00</td><td>00</td><td>00</td><td>00-00</td><td>00</td><td>00</td><td>00</td><td>01</td><td>00</td><td>00</td><td>00</td><td>LZ.....</td> </tr> <tr> <td>0010</td> <td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00-00</td><td>00</td><td>43</td><td>50</td><td>55</td><td>4C</td><td>49</td><td>4E</td><td>.....CPULIN</td> </tr> <tr> <td>0020</td> <td>4B</td><td>2E</td><td>43</td><td>4F</td><td>44</td><td>00</td><td>2D</td><td>62-00</td><td>36</td><td>34</td><td>00</td><td>2D</td><td>74</td><td>00</td><td>32</td><td>K.COD.-b.64.-t.2</td> </tr> <tr> <td>0030</td> <td>30</td><td>30</td><td>00</td><td>00</td><td>43</td><td>50</td><td>55</td><td>4C-49</td><td>4E</td><td>4B</td><td>2E</td><td>44</td><td>43</td><td>42</td><td>00</td><td>00..CPULINK.DCB</td> </tr> <tr> <td>0040</td> <td>00</td><td>4E</td><td>55</td><td>4C</td><td>4C</td><td>3A</td><td>00</td><td>4E-55</td><td>4C</td><td>4C</td><td>3A</td><td>00</td><td>4E</td><td>55</td><td>4C</td><td>.NULL:.NULL:.NULL</td> </tr> <tr> <td>0050</td> <td>4C</td><td>3A</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00-00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>L:.....</td> </tr> <tr> <td>0060</td> <td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00-00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>.....</td> </tr> <tr> <td>0070</td> <td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00-00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>00</td><td>.....</td> </tr> </tbody> </table>		File Offset	Data															0000	4C	5A	01	01	00	00	00	00-00	00	00	00	01	00	00	00	LZ.....	0010	00	00	00	00	00	00	00	00-00	00	43	50	55	4C	49	4E	.....CPULIN	0020	4B	2E	43	4F	44	00	2D	62-00	36	34	00	2D	74	00	32	K.COD.-b.64.-t.2	0030	30	30	00	00	43	50	55	4C-49	4E	4B	2E	44	43	42	00	00..CPULINK.DCB	0040	00	4E	55	4C	4C	3A	00	4E-55	4C	4C	3A	00	4E	55	4C	.NULL:.NULL:.NULL	0050	4C	3A	00	00	00	00	00	00-00	00	00	00	00	00	00	00	L:.....	0060	00	00	00	00	00	00	00	00-00	00	00	00	00	00	00	00	.....	0070	00	00	00	00	00	00	00	00-00	00	00	00	00	00	00	00	.....
File Offset	Data																																																																																																																																																								
0000	4C	5A	01	01	00	00	00	00-00	00	00	00	01	00	00	00	LZ.....																																																																																																																																									
0010	00	00	00	00	00	00	00	00-00	00	43	50	55	4C	49	4E	.....CPULIN																																																																																																																																									
0020	4B	2E	43	4F	44	00	2D	62-00	36	34	00	2D	74	00	32	K.COD.-b.64.-t.2																																																																																																																																									
0030	30	30	00	00	43	50	55	4C-49	4E	4B	2E	44	43	42	00	00..CPULINK.DCB																																																																																																																																									
0040	00	4E	55	4C	4C	3A	00	4E-55	4C	4C	3A	00	4E	55	4C	.NULL:.NULL:.NULL																																																																																																																																									
0050	4C	3A	00	00	00	00	00	00-00	00	00	00	00	00	00	00	L:.....																																																																																																																																									
0060	00	00	00	00	00	00	00	00-00	00	00	00	00	00	00	00	.....																																																																																																																																									
0070	00	00	00	00	00	00	00	00-00	00	00	00	00	00	00	00	.....																																																																																																																																									
<p><b>DLAN/DLAN+ (Drives Local Area Network) interface restrictions</b></p>	<p>PACSystems RX7i CPUs with firmware versions 1.50 or later support DLAN Interface, IC697BEM763 modules with firmware versions 3.00 or later. You must ensure that you are using a valid version of the DLAN firmware because the CPU cannot check the DLAN's firmware version. (The module's firmware version can be found on a label attached to the EEPROM.)</p> <p>If your RX7i application program needs to access the DLAN's dual port memory, use the BUS READ and WRITE functions. When accessing a DLAN module, set the Region parameter on the function block to 1. (For the DLAN module, region 1 is predefined to be the module's entire dual port memory.)</p> <p>The DLAN is only supported in the main RX7i rack. It is not supported in expansion racks.</p> <p><b>Note:</b> The DLAN Interface module is a specialty module with limited availability. If you have a DLAN system, refer to the DLAN/DLAN+ Interface Module User's Manual, GFK-0729 for details.</p>																																																																																																																																																								
<p><b>Backplane Comm window setting and Genius redundancy</b></p>	<p>When using Genius Redundancy, do not set the backplane communications window timer to 0. Also be sure to allow enough time for the backplane communications window to run when using Constant Sweep mode. Ample backplane communications window time must be available for the GBCs to exchange information about Genius devices that are lost and added.</p>																																																																																																																																																								

<i>Subject</i>	<i>Description</i>
<b>Expansion rack ID</b>	Series 90-70 expansion racks are shipped with the rack ID strapped for rack 0 (the main rack). If the rack jumper is not changed the PLC CPU will not recognize the rack at all and may not properly identify the error.
<b>Expansion rack cable</b>	Connection and disconnection of an expansion rack cable while the CPU is running should not be attempted. This will cause the PLC to go to the STOP/HALT state.
<b>Expansion rack power</b>	Expansion racks should be powered up at the same time the main rack is powered up or they should be powered up after the main rack has completed its power up initialization. Do not power up an expansion rack while the PLC CPU is running power-up diagnostics.
<b>Timer operation</b>	<p>Care should be taken when timers (ONDTR, TMR, and OFDTR) are used in program blocks that are NOT called every sweep. The timers accumulate time across calls to the sub-block unless they are reset. This means that they function like timers operating in a program with a much slower sweep than the timers in the main program block. For program blocks that are inactive for large periods of time, the timers should be programmed in such a manner as to account for this catch up feature.</p> <p>Related to this are timers that are skipped because of the use of the JUMP instruction. Timers that are skipped will NOT catch up and will therefore not accumulate time in the same manner as if they were executed every sweep.</p>
<b>Constant sweep</b>	Constant Sweep time, when used, should be set at least 10 milliseconds greater than the normal sweep time to avoid any over-sweep conditions when monitoring or performing on-line changes with the programmer. Window completion faults will occur if the constant sweep setting is not high enough. A consistent over sweep condition can cause the programmer to lose communications with the PLC.
<b>Large number of COMMREQs sent to module in one sweep causes faults</b>	A large number of COMMREQs (typically greater than eight) sent to a given board in the same sweep may cause Module Software faults to be logged in the PLC fault table. The fault group is MOD_OTHR_SOFTWR (16t, 10h) and the error code is COMMREQ_MB_FULL_START (2). When this occurs, the "FT" output of the function block will also be set. To prevent this situation, COMMREQs issued to a given board should be spread across multiple sweeps so that only a limited number (typically 8 or less) of COMMREQs are sent to a given board in each sweep. In addition, the FT output parameter should be checked for errors. If the FT output is set (meaning an error has been detected), the COMMREQ could be re-issued by the application logic.
<b>C block standard math functions do not set errno</b>	In C Blocks, standard math functions (e.g. sqrt, pow, asin, acos) do not set errno to the correct value and do not return the correct value if an invalid input is provided.
<b>Loss of VDD100 or VAL132 after multiple power cycles</b>	<p>In rare instances, a VDD100 or VAL132 module may not configure after power has cycled repeatedly in a very brief period of time. A Loss of IO Module fault will be generated.</p> <p>In extremely rare instances, this may also cause other modules to fail to configure, without generating additional loss of module faults. These additional failures may cause communication with the Ethernet Interface to fail.</p> <p>The user can recover from either of these cases by turning off power for at least 5 seconds and then restoring power. This will provide sufficient "off-time" to ensure that all modules can powerup properly.</p>
<b>Modules Not Reset During Firmware Upgrades</b>	The RX7i currently does not reset any other modules in the system after a firmware upgrade. This may result in Loss of module faults being generated for smart modules.
<b>Unable To Communicate Through Some Third Party Serial Cards</b>	PACS Systems serial ports do not work with some third party serial cards.
<b>Incorrect COMMREQ Status For Invalid Program Name</b>	The program name for PACSystems is always "LDPROG1". When another program name is used in a COMMREQ accessing %L memory, the error that is generated is a 05D5, which is an invalid block name.

## Ethernet Operational Notes

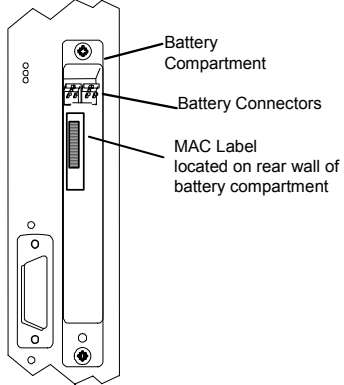Subject	Description
<p><b>MAC address</b></p>	<p>A label on the rear wall inside the CPU's battery compartment identifies the MAC address assigned to the CPU's embedded Ethernet Interface.</p> 
<p><b>Configuration of IP address is required before using Ethernet communications</b></p>	<p>The Ethernet Interface within the CPU module cannot operate on a network until a valid IP address is configured. The necessary Ethernet addressing information must be configured prior to actual network operation, or to recover from inadvertent changes to the Ethernet addressing data at the Ethernet Interface. Use one of the following methods to initially assign an IP address:</p> <ul style="list-style-type: none"> <li>■ Connect a serial terminal to the Station Manager port of the PACSystems RX7i. Then use the CHSOSW command to enter the desired IP address. For details, see the <i>PACSystems TCP/IP Communications Station Manager</i> manual, GFK-2225.</li> <li>■ Temporarily assign an IP address to the module using the SetIP tool over the Ethernet network. For details, see <i>TCP/IP Ethernet Communications for PACSystems</i>, GFK-2224.</li> <li>■ The Ethernet Interface automatically obtains a temporary IP Address from a BOOTP server on the network. For details, see <i>TCP/IP Ethernet Communications for PACSystems</i>, GFK-2224.</li> </ul> <p>Once a temporary IP address has been set up, the Ethernet Interface can be accessed over the network (such as by the Machine Edition programming software). The programmer should then be used to configure the proper IP address for the Ethernet Interface.</p>
<p><b>Proper IP addressing is always essential</b></p>	<p>The PACSystems RX7i CPU's embedded Ethernet Interface must be configured with the correct IP Address for proper operation in a TCP/IP Ethernet network. Use of incorrect IP addresses can disrupt network operation for the PACSystems RX7i and other nodes on the network. Refer to <i>TCP/IP Ethernet Communications for the PACSystems RX7i</i>, GFK-2224 for important information on IP addressing. When storing a new HW configuration to the RX7i, be sure that the hardware configuration contains the proper Ethernet addressing data (IP Address, Subnet Mask, and Gateway IP Address) for the RX7i.</p> <p><b>Note:</b> Machine Edition programming software maintains the target IP address (used to connect the programmer to the target) independent of the contents of the HW Configuration for that target. The target IP address is set in the Target Properties in the CME Inspector window. Storing a HW Configuration whose Ethernet addressing data contains an IP Address that is different from the RX7i target IP address will change the IP address used by the target RX7i as soon as the Store operation is completed; this will break the Programmer connection. Before attempting to reconnect the Programmer, you must change the target IP address in the Target Properties in the CME Inspector window to use the new IP address. To regain communication at the former IP address, use the manual corrective action described above.</p> <p>Storing a HW Configuration containing default (0.0.0.0) or incorrect Ethernet addressing data to the PACSystems RX7i will result in loss of the Programmer connection and will require manual corrective action as described above.</p>
<p><b>Default IP address (0.0.0.0) attempts to set IP address via BOOTP</b></p>	<p>The default IP address value (0.0.0.0), whether obtained from HW Configuration or backup configuration, causes the Ethernet Interface to request a temporary IP address from a BOOTP server device on the network.</p>
<p><b>LAN must be tree, not ring</b></p>	<p>The two Ethernet network ports on the PACSystems RX7i Ethernet Interface must not be connected, directly or indirectly, to the same network device. The hub or switch connections in an Ethernet network must form a tree and not a ring; otherwise duplication of packets and network overload may result. In this situation, the RX7i Ethernet modules will continually reset.</p>

<b>Subject</b>	<b>Description</b>
<b>Reporting of duplicate IP address</b>	The PACSystems RX7i does not log an exception or a fault in the PLC Fault Table when it detects a duplicate IP address on the network.
<b>Multiple zero period EGD exchanges may not produce similar numbers of samples</b>	If more than one EGD produced exchange is configured for a production period of zero, the exchanges may not produce similar numbers of samples. Due to the way that scheduling occurs when multiple exchanges are scheduled "as fast as possible," some zero period exchanges may produce significantly more samples than others. For more consistent EGD production, configure the produced EGD exchanges with non-zero production periods.
<b>Changing IP address while SRTP connection open may generate log events</b>	Open SRTP Server connections established with a remote SRTP client are not terminated as expected when the RX7i's IP address is changed (typically by storing a new HW Configuration to the RX7i). A Series 90 SRTP client ("SRTP channels") reports either a 9690H or 0190H status; the SRTP connection may remain open until the connection is terminated as a result of a client timeout.
<b>Series 90-70 datagrams are not supported</b>	Series 90-70 datagrams are not supported. This means that Series 90-70 - format variable list requests from Host Comm Toolkit applications will fail. (Series 90-30 - format datagrams are supported, but cannot access %P or %L memory in the RX7i.)
<b>AUP parameter should not be changed</b>	The Advanced User Parameter "wsnd_buf" should not be changed by the user. Changing the value of this parameter may cause the LAN LED to go out and the Ethernet Interface to drop connection.
<b>Heavy load can block station manager</b>	A heavy EGD and/or SRTP load can block Station Manager operation. For details, see the <i>TCP/IP Communications for PACSystems Station Manager Manual</i> , GFK-2225.
<b>One-time delay of EGD Production (and possibly Consumption) if more than 24 SRTP server connections are started simultaneously</b>	If more than 24 SRTP Server connections are established simultaneously, EGD Production may be briefly delayed for each connection after the 24 <sup>th</sup> when the connections are first made after power is applied. If EGD consume acceleration has been disabled, then EGD Consumption will also be delayed. The delay only occurs once when the SRTP Server connection is established for the first time after Powerup. No delay is experienced for the first 24 SRTP Server connections.
<b>Web server browser restrictions</b>	Internet Explorer version 4.0 running on Windows 98 will give an error when the reference table web page is accessed. Web Server operation has been verified with Internet Explorer version 5.0
<b>Very heavy EGD production/consumption at server may cause EGD command timeouts</b>	Very heavy EGD production and/or consumption at a server device may cause EGD command timeout errors when another device attempts to send EGD commands to that server. If EGD commands must preempt normal production, you may set the "gcmd_pri" Advanced User Parameter to 2 (see GFK-2224, Appendix A). Note that by doing so, EGD exchange production may be delayed.
<b>AUP Parameter Name Change</b>	Beginning with Release 2.00, the following Advanced User Parameters have been renamed to match the Ethernet hardware port identification: "lduplex1" is changed to "lduplex1a" (Ethernet Port 1A duplex state) "lduplex2" is changed to "lduplex1b" (Ethernet Port 1B duplex state) "lspeed1" is changed to "lspeed1a" (Ethernet Port 1A network speed) "lspeed2" is changed to "lspeed1b" (Ethernet Port 1B network speed) The old parameter names are no longer supported; use of an obsolete parameter name will result in a configuration processing error and an Ethernet exception (Entry = 2, Entry 2 = 06). Existing AUP files using the obsolete parameter names will have to be changed to use the new parameter names.
<b>SRTP application timeouts must accommodate network connection overhead</b>	The application timeouts within SRTP Channels also include the time needed to establish and maintain the underlying network and SRTP connection. Examples are establishing the TCP connection for a new channel, establishing communication with the remote device, and TCP retransmissions during Channel operations. If the time needed for TCP connection establishment or maintenance exceeds the user-specified channel application timeout values, an application timeout will occur. Channel application timeouts are temporary errors; the channel continues to run.

<b>Subject</b>	<b>Description</b>
<b>Client channels TCP resource management</b>	<p>The OS Network stack hangs on to the TCP resources associated with a connection for a period of time after the connection is closed. This time period applies to the initiator of the close, which is almost always the client side. This time is referred to as the "TCP Linger Period". Once the TCP Linger Period expires (60 seconds in the current OS implementation), the TCP resources are released. Application developers using client channels need to be aware of this behavior when designing their logic. A finite number of TCP resources are allocated to client channels, and if channel connections are brought up and down so fast that these resources are depleted, then the application may have to wait until a TCP resource frees up in order to establish another client channel (a COMMREQ Status of 0xA890 is returned if no TCP resources are currently available; application should wait and try again).</p> <p>SRTP Client Channels provides features that help the user preserve TCP connections. These include a period time where one can establish an SRTP Channel and specify the channel to run at a given interval, or run as fast as possible. One can also specify a number of iterations, or allow the channel to run forever. Additionally, SRTP Channels allows channel re-tasking of an active channel to the same remote device, where the parameters of an active channel, such as changing the channel command type (Read/Write), number of repetitions, time periods, local memory address, remote memory address, etc. can be changed. SRTP Channels also allows channel re-tasking of an active channel to a different remote device (changing the remote device's IP address, etc.). However, re-tasking to a different remote device will neither conserve TCP connections, nor save on the time it takes to create a channel.</p>
<b>Client Channels and Redundant IP</b>	<p>In a Redundancy System, Client Channel COMMREQs can only be initiated from the unit that owns the Redundant IP address. Therefore, the user application logic should use Bit 6 in the LAN Interface Status bit area, "Redundant IP Active" as part of their enabling logic that drives a client channel COMMREQ.</p>
<b>Idle Modbus/TCP connection between a Series 90 and a PACSystems may be prematurely terminated</b>	<p>An idle Modbus/TCP connection between a Series 90 and a PACSystems may be prematurely terminated. There is an incompatibility between the TCP "Keep-Alive" timer values on the PACSystems Ethernet Interfaces and Series 90 Ethernet Interfaces. The issue is that the default value of the keep-alive timer for the Series 90 modules is set to a much higher value than for the PACSystems.</p> <p>To keep TCP connections open between a Series 90 Ethernet Interface and a PACSystems Ethernet Interface, the Series 90 Interface Advanced User Parameter <code>wkal_time</code> should be set to the value 750 to match that of the PACSystems. With this change, TCP connections remain open indefinitely. Note that this same issue occurs for SRTP Client Channels that have infrequent traffic and can be resolved by using the same technique.</p>
<b>An attempt to open 17 or more Modbus server connections may appear successful</b>	<p>If more than the maximum 16 supported Modbus Server Connections are attempted, the TCP connection may succeed, but no data may be subsequently transferred.</p>
<b>SRTP connections remain open after IP address changed</b>	<p>The Ethernet Interface does not terminate all open SRTP connections before changing its IP address. Once the local IP address has changed, any existing open TCP connections are unable to normally terminate. This can leave SRTP connections open until their underlying TCP connections time out. If quicker recovery of the SRTP connection is needed, modify the "wkal_idle" Advanced User Parameter to reduce the TCP keep alive timer down to the desired maximum time for holding open the broken connection. Refer to <i>TCP/IP Ethernet Communications for PACSystems</i>, GFK-2224, for details.</p>
<b>PLC CPU Time Used for Produced EGD Timestamps</b>	<p>Changing the Ethernet interface time via the CHTIME command does not affect the timestamp value within EGD exchanges produced from this Ethernet interface. The EGD timestamp value reflects the current PLC CPU time. In Series 90-70 products and the Series 90-30 CPU364, EGD timestamps are taken from the Ethernet interface and do reflect CHTIME modifications.</p>



## Ordering Information

<i>Description</i>	<i>Catalog Number</i>
RX7i VME 700MHz CPU with Redundancy	IC698CRE020
Lithium Battery pack	IC698ACC701
Auxiliary Battery Module (optional)	IC693ACC302
Redundancy Memory Xchange Module	IC698RMX016
Rack Fan Assembly, 120VAC	IC697ACC721
Rack Fan Assembly, 240VAC	IC697ACC724
Rack Fan Assembly, 24VDC	IC697ACC744
RX7i PLC Power Supply, 85 to 264 VAC at 47 to 63 Hz Input, 100 watt output	IC698PSA100
RX7i PLC Power Supply, 85 to 264 VAC at 47 to 63 Hz Input, 350 watt output	IC698PSA350
RX7i PLC Power Supply: 24 VDC Input, 300 watt output	IC698PSD300
[Optional] RS-232 cable; also Station Manager cable for Ethernet interface	IC200CBL001

**Note:** An IC698CPE020 can be converted to a CRE020 by installing different firmware and moving a jumper. Detailed instructions are included in the firmware upgrade kit for CRE020.

**Note:** For Conformal Coat option, please consult the factory for price and availability.

## Product Documentation

*PACSystems RX7i CPU Reference Manual, GFK-2222*

*PACSystems RX7i Installation Manual, GFK-2223*

*TCP/IP Ethernet Communications for PACSystems, GFK-2224*

*PACSystems TCP/IP Station Manager Manual, GFK-2225*

*PACSystems RX7i User's Guide to Integration of VME Modules, GFK-2235*

*PACSystems RX7i C Toolkit User's Guide, GFK-2259*

*PACSystems Hot Standby CPU Redundancy User's Guide, GFK-2308*

*PACSystems RX7i Memory Xchange Modules, GFK-2300*

*Proficy™ Machine Edition Getting Started, GFK-1868*

*Logic Developer – PLC Programming Software Getting Started, GFK-1918*

*Auxiliary Battery Module, GFK-2124*

## Installation in Hazardous Locations

**The following information is for products bearing the UL marking for Hazardous Locations:**

- WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2;
- WARNING - EXPLOSION HAZARD - WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES; AND
- WARNING - EXPLOSION HAZARD - DO NOT CONNECT OR DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS.
- EQUIPMENT LABELED WITH REFERENCE TO CLASS I, GROUPS A, B, C, & D, DIV. 2 HAZARDOUS LOCATIONS IS SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C, D OR NON-HAZARDOUS LOCATIONS ONLY.