



User Manual



Designed/Manufactured by Austin Hughes and Distributed by Eclipse Rackmount, Inc.

Legal Information

First English printing, October 2002

Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. We are not liable for any injury or loss that results from the use of this equipment.

Safety Instructions

Please read all of these instructions carefully before you use the device. Save this manual for future reference.

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 40° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing dam age to other equipment or injury to persons nearby.
- When the equipment is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labeled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent being dam aged by transient over-voltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, f re or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equipment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.

What the warranty does not cover

- Any product, on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:

Accident, misuse, neglect, fre, water, lightning, or other acts of nature, unauthorized product modification, or
failure to follow instructions supplied with the product.
Repair or attempted repair by anyone not authorized by us.
Any damage of the product due to shipment.
Removal or installation of the product.
Causes external to the product, such as electric power fuctuation or failure.
Use of supplies or parts not meeting our specif cations.

- Normal wear and tear.Any other causes which does not relate to a product defect.
- Removal, installation, and set-up service charges.

Regulatory Notices Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Contents

< Part. 1 >	KD2-N / KD2-B	
1.1	Package Contents	P.1
1.2	Structure Diagram & Dimensions	P.1 - 2
1.3	Installation	P.3
1.4	Connection	P.4
< Part. 2 >	Specifications	
2.1	Keyboard / Mouse Specifications	P.5 - 7

Before Installation

- It is very important to mount the equipment in a suitable cabinet or on a stable surface.
- Make sure the place has a good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.

Unpacking

The equipment comes with the standard parts shown in package content. Check and make sure they are included and in good condition. If anything is missing, or damaged, contact the supplier immediately.

How To Clean Your LCD Monitor



Caution :

- To avoid the risk of electric shock, make sure your hands are dry before unplugging your monitor from or plugging your monitor into an electrical outlet.
- When you clean your monitor, do not press down on the LCD screen. Pressing down on the screen can scratch or damage your display. Pressure damage is not covered under warranty.
- Use only cleansers made specifically for cleaning monitors and monitor screens. Cleansers not made to clean monitors and monitor screens can scratch the LCD display or strip off the f nish.
- Do not spray any kind of liquid directly onto the screen or case of your monitor. Spraying liquids directly onto the screen or case can cause damage which is not covered under warranty.
- Do not use paper towels or abrasive pads to clean your monitor. Using an abrasive pad or any wood based paper product such as paper towels can scratch your LCD screen.

Cleaning Your Monitor

To clean your LCD safely, please follow these steps:

- ① Disconnect the power cord.
- ② Gently wipe the surface using a clean, dry microf ber cloth. Use as little pressure as possible.

Cleaning Tough Marks and Smudges

To remove tough marks and smudges, please follow these steps:

- ① Disconnect the power cord.
- 2 Spray a small amount of non-abrasive cleanser on a microf ber cloth.
- Caution: Do not spray or apply any liquids directly onto the monitor. Always apply the solution to your microf ber cloth f rst, not directly on the parts you are cleaning.
- Gently wipe the surface. Use as little pressure as possible.
- Wait until your monitor is completely dry before plugging it in and powering it up.


< 1.1 > Package Contents



KD2-N or KD2-B unit X1


- EKC-3 6ft Combo keyboard mouse cable X 1
- M6 screw, cage nut & cup washer X8

< 1.2 > Structure Diagram

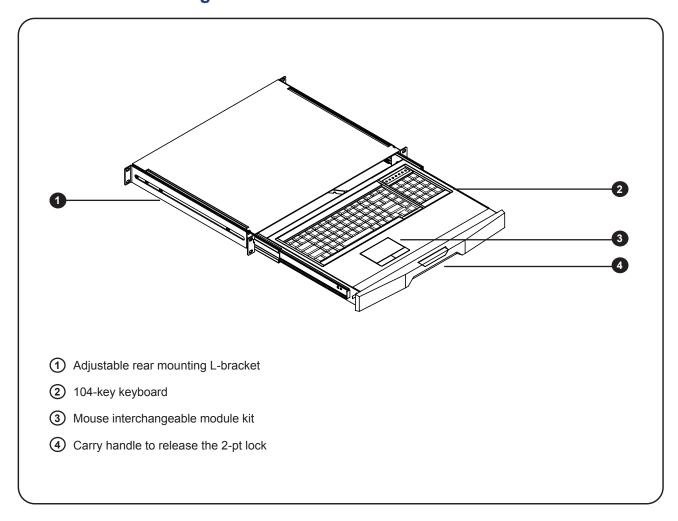


< 1.2 > Dimensions

 Front View




Side View

 
UNIT : mm 1mm = 0.03937 inch




Top View

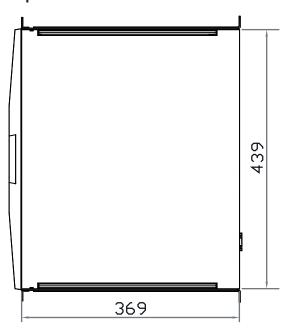


Model	Product Dimension	Packing Dimension	Net	Gross
	(W x D x H)	(W x D x H)	Weight	Weight
KD2-N / KD2-B	439 x 369 x 44 mm	582 x 500 x 100 mm	7.4 kg	9.5 kg
	17.3 x 14.5 x 1.73"	22.9 x 19.7 x 3.9"	16.3 lb	20.9 lb

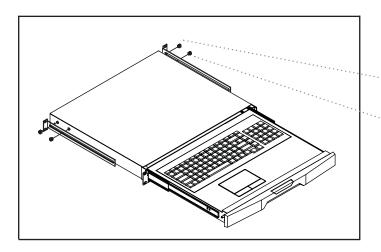



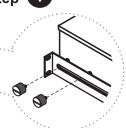


- Install left & right rear L-brackets with two fasteners shown above.
- Leave the fasteners slightly loose.

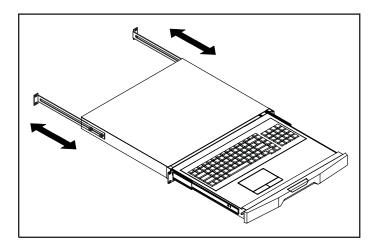

Step 2

- Measure the depth of the front and rear mounting
- Align each rear L-bracket to a suitable length and tighten the fasteners.

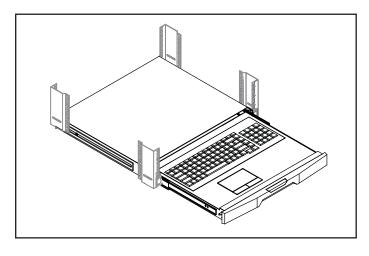


Step 3

Fix the keyboard drawer into the rack.




M6 mounting screws & cage nuts are not provided.

< 1.4 > Connection to PS/2 or USB Server

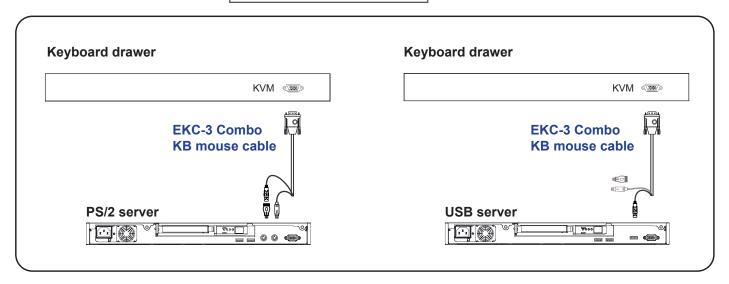

< 1.4 > Connection to External KVM

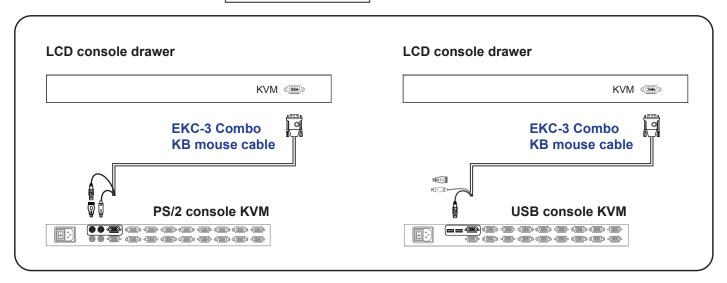




Caution: The keyboard drawer is hot-pluggable, but components of connected devices, such as the servers and KVM switch, may not be hot-pluggable. Plugging and unplugging cables while servers and KVM are powered on may cause irreversible damage to the servers, KVM and keyboard drawer. Before attempting to connect anything to the keyboard drawer , we suggest turning off the power to all devices. Apply power to connected devices again only after the keyboard drawer is receiving power. ERI is not responsible for damage caused in this way


< 2.1 > Standard Keyboard / Mouse Specifications

Gn G keyboard integrated with touch pad

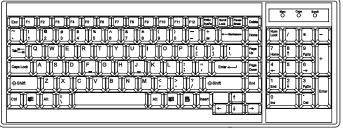



Gb G keyboard integrated with track ball

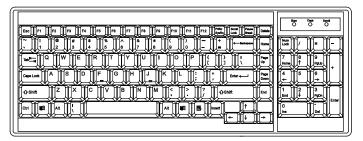



Key force	55 ± 5g
Travelling distance	3 ± 0.3mm
Switch life	> 10 million life cycle time
Software support	MS Windows 7 / 2008 / 2003 / 2000 / XP / ME / 98 / DOC Linux / Mac


Supporting layouts


America



America	United States				
	United Kingdom	Germany	France	Spain	Norway
EMEA	Italy	Russia	Switzerland	Netherlands	Portugal
Asia	China	Japan	«• » Korea	Arabia	C ∗ Turkey

< 2.1 > MAC Keyboard / Mouse Options

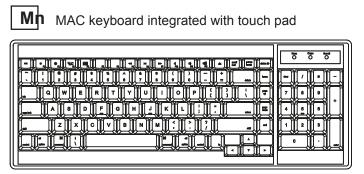

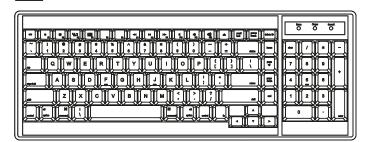

MAC keyboard integrated with track ball





Mb


Supporting layouts

America




How to Use "MAC" Keyboard

Keyboard Features

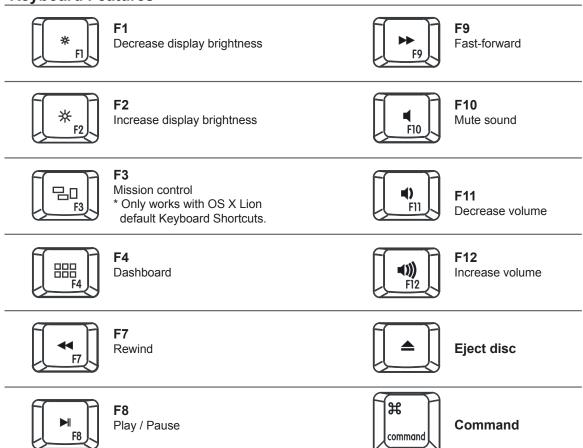


GSn

GS keyboard integrated with touch pad

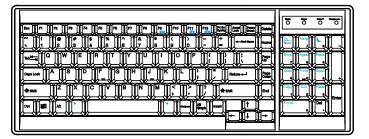

GSb GS keyboard integrated with track ball

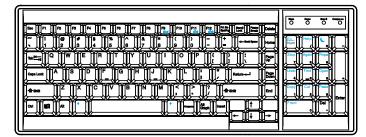








GS keyboard integrated with touch pad / track ball SOLARIS®


- Incorporates SUN keys, including Stop, Cut, Paste, Compose, Copy and Help
- 104 key notepad keyboard with full numerical pad and SUN function
- USB interface
- US layout only

How to Use "GS" Keyboard

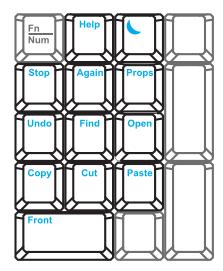

Num LED in Off mode

Keypad behaves as a SUN Solaris system administration command mode

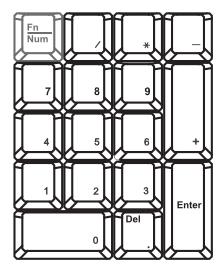

Num LED in Green mode

Keypad behaves as a normal keypad

Audio / Display Keys

* Please ask your supplier for full details



F9

Audio : Mute Display : Degauss



F11

Audio : Decrease volume Display : Decrease contrast



F12

Audio : Increase volume Display : Increase contrast

