

Electro Magnetic Levitating ZOpid[®]

Picture Frame

HF-ZF903H

SAFETY AND GENERAL INFORMATION

READ THIS INFORMATION BEFORE USING THIS PRODUCT.

Users are not permitted to make changes or modify the device in any way. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Electromagnetic Interference

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your device in any facility where posted notices instruct you to do so.

Hospitals or health care facilities may be using equipment that is sensitive to EMI.

Medical Devices

If you use any personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from EMI.

OTHER SAFETY INSTRUCTIONS

- The picture frame should not be put near a computer or other electronic device due to its magnetic field.
- Do not drop the picture frame on a hard surface. Dropping the picture frame may damage it or its internal magnets.
- If there is something wrong, please check the magnet first. There is 1 magnet

inside the picture frame.

- If the magnets are not in position, the picture frame will not work properly.
- **THIS IS NOT A TOY. NOT SUITABLE FOR CHILDREN UNDER 12 YEARS OLD.**
- **FOR INDOOR USE ONLY.**
- Use only A/C adapter provided with the device to avoid any damage – match power specifications on the A/C adapter to the power specifications on the device.
- Connect A/C adapter to the right power source, according to the power specifications listed on the AC adapter, to avoid damage to the device or A/C adapter
- Do not disassemble the product or try to repair or replace any parts
- The device should be used in a safe location out of reach of children
- Do not use or store the devices in a high temperature environment
- Use the product within a temperature range of +10°C- +65°C
- Do not insert other objects inside the product
- Do not damage the wire of AC adapter, do not pull it hard or use it in high temperature environment
- Do not put the product near a window or water source
- If the product falls into water, unplug it immediately and do not reach into the water while it's still plugged in
- Wet hands can cause electric shock. Do not operate or connect the product with wet hands
- Do not use damaged cord, as this may cause an electric shock
- Do not place or store the product in a high temperature environment,
- Use the product within a temperature range of +10 degree C- +65 degree C
- Please unplug the product before moving it

INCLUDED IN THE PACKAGE

Outer Frame

Picture Holder

AC Adapter

Instruction Manual

OPERATING INSTRUCTIONS

- Remove Plastic cover from the heart-shaped Picture-holder and use it to draw outline on the pictures(s) you want to place in the Picture-Holder - small magnets hold the picture and plastic cover down
- Use scissors to Cut along the outline on the picture
- Insert the cut picture in the Picture-holder and put the plastic cover back on the frame (small magnets hold the picture and cover down)
- Repeat these steps to cut a picture to place on the other side of the heart-shaped Picture-holder.
- Place the Outer Frame on a flat leveled surface. If the surface is not flat and leveled, the Picture-holder will not levitate.
- Plug-in the AC adapter – red lights on the inside of the Outer-frame will turn on (this will also turn-on the electro-magnet in the Outer -frame)
- Hold Picture-holder from two sides as shown in illustration below.



- While holding the Picture-holder, position it about 1/4 of an inch below the outer-frame. This is the floating distance. When the picture frame is in the proper position, you will feel a strong force holding the picture frame (you may also feel slight vibration and hear very high frequency sound – indicating correct distance to make the Picture-holder float)
- Release the Picture-holder gently.

NOTE: If the Picture-holder gets stuck to the top of the Outer-frame or drops then that indicates the Picture-holder was not released at the proper distance. In which case, repeat the last two steps

LIMITED 90-DAY WARRANTY

Coverage: Hi-Tech Trading (USA), Inc. (“HiTT”) warrants this product (“product”) against defects in materials and workmanship under normal consumer use for 90 days from the date of purchase. HiTT, at its option, will at no charge repair, replace or refund the purchase price of this product should it not conform to this warranty. This limited warranty is a consumer’s exclusive remedy, extends only to the first consumer purchaser, is not transferable and is valid only on products purchased by consumers in the United States or Canada.

EXCLUSIONS:

Normal Wear and Tear: Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Miscellaneous: This warranty does NOT cover defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the Product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Product for commercial purposes or subjecting the Product to abnormal usage or conditions; (d) service, installation, alteration, or modification in any way by someone other than HiTT and, (e) other acts which are not the fault of HiTT.

Obtaining Service: To obtain service or information, please send email to help@hittusa.com. You will receive instructions on how to ship the Product, at your expense, to a HiTT Service Center. To obtain service, you must include a copy of your receipt.

DISTRIBUTED BY
Hi-Tech Trading USA, Inc.
P.O. Box 179
Woodbury, NY 11797 U.S.A.

ZOpid[®]
HF-ZF903H

CUSTOMER SERVICE
Web: www.hittusa.com
Email: help@hittusa.com

ZOpid and the Stylized Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© 2010 Hi-Tech Trading USA, Inc.

The information contained in this User Manual is believed to be correct at the time of printing. HiTT reserves the right to change or modify any information or specifications without notice. The contents of this User Manual are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.