



Instruction Manual Environmental Monitoring Unit with Output Relay

Watchdog 100 Series Firmware Version 3



Contents

Contents	2
Specifications	3
Overview	3
Environmental	3
Electrical	3
Output Relay Contact Ratings	3
Networking	4
Data Formats	4
EMC Verification	4
Installation	5
Guidelines	5
Mounting	5
Network Overview	6
Default IP Address	6
Initial Setup	6
Web Interface	8
Overview	8
Sensors Page	8
Logging Page	9
Display Page	10
Alarms Page	11
Control Page	11
Configuration Page	12
Unit Configuration	13
Network	13
Time and Date	13
E-Mail	14
SNMP	15
User Accounts	15
Admin Information	16
Camera Configuration	16
Relay Control	17
Relay Contact Ratings	17
Relay Settings	17
Manual Override	17
Acknowledgments	17
Alarms	18
Alarm Notifications	18
Alarm Types	18
Alarm Removal	18
Thresholds	18
Sensors	20
Overview	20
Internal Sensors	20
I/O Sensors	20
Remote Sensors	21
Accessories	23
IP-Addressable Network Cameras	23
RSC Integration	23
Alternate Data Formats	23
Technical Support	24
Firmware Version	24
Firmware Updates	24
Resetting the Unit	24
Service and Maintenance	24
More Technical Support	24
Table of Figures	25
Revision History	26

Specifications

Overview

The Watchdog 100 provides remote environmental monitoring and alarming capability needed to detect climate conditions in data centers. Additionally, the Watchdog 100 provides one output relay that can be operated remotely or set to automatically open or close based on alarm conditions. The Watchdog 100 is equipped with a built-in web server with a 10/100 Mbps connection speed. Web pages are generated by the unit to monitor local environmental conditions. No software other than a web browser is required for operation and several data formats are available. The Watchdog 100 has a built-in sensor to monitor temperature, humidity and dew point, as well as one port for adding remote sensors. The Watchdog 100 also has four I/O ports for connecting additional external 5Vdc sensors such as Water and Door Sensors. The Watchdog 100 can be optionally configured at the factory to support Power-Over-Ethernet (PoE).

Environmental

Temperature

Operating:	10°C (50°F) min	45°C (104°F) max
Storage:	-25°C (-13°F) min	65°C (149°F) max

Humidity

Operating:	5% min	95% max	(non-condensing)
Storage:	5% min	95% max	(non-condensing)

Elevation

Operating:	0 m (0 ft) min	2000 m (6561 ft) max
Storage:	0 m (0 ft) min	15240 m (50000 ft) max

Electrical

6-12 Volts DC, 2 Amps

Output Relay Contact Ratings

The output relay contacts are intended to carry low voltage signals only. Do not exceed the following ratings on the output relay contacts:

DC: 60 V, 30 W

AC: 30 Vrms, 1 A

Warning: Consideration should be given to lockout-tagout and other procedures required for servicing external devices controlled by the Watchdog 100 output relays. Appropriate safety precautions must always be taken when operating or maintaining equipment connected to the Watchdog 100. Geist Manufacturing assumes no responsibility or liability for any injury or damage to any persons or property resulting from improper operation or maintenance of a device connected to the Watchdog 100.

Caution: The Watchdog 100 unit has not been evaluated for and should not be used in any application in which the failure of the hardware could lead to death, personal injury or severe physical or property damage or environmental damage (collectively, "High-Risk Applications"), including but not limited to the operation of nuclear facilities, mass transit systems, aircraft navigation or aircraft communication systems, air traffic control, weapon systems and direct life support machines. Geist expressly disclaims any express or implied warranty or condition of fitness for High-Risk Applications.

Networking

Protocols

HTTP, HTTPS (SSL/TLS), SMTP, POP3, ICMP, DHCP, TCP/IP, NTP, Telnet, Syslog

Ethernet Link Speed

10/100 Mbps; full duplex

Data Formats

HTML, SNMP, CSV/Plain Text, XML

EMC Verification

This Class A device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Installation

Guidelines

- If the Watchdog 100 is installed in a cabinet the ambient temperature of the rack should be no greater than 45°C.
- Install the Watchdog 100 such that the amount of airflow required for safe operation of equipment is not compromised.
- Mount the Watchdog 100 so that a hazardous condition is not achieved due to uneven mechanical loading.

Mounting

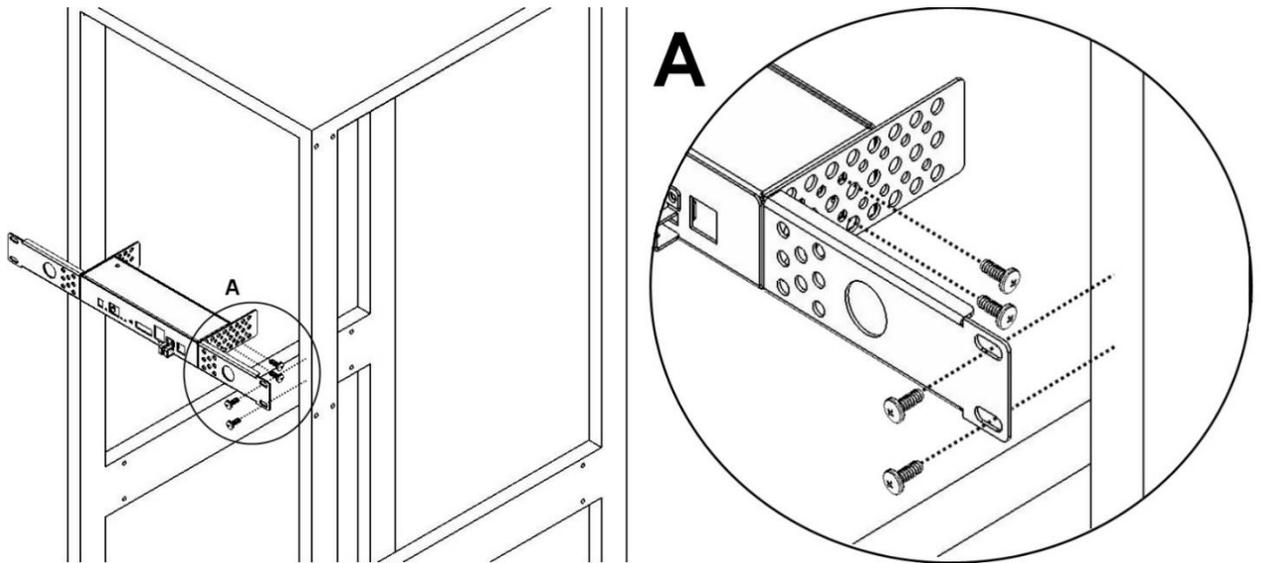


Figure 1: Watchdog 100 Mounting Options

Using the 19" horizontal/panel mount brackets, attach unit to rack as shown.

Network Overview

This product comes preconfigured with a default IP address set. Simply connect to the Environmental Monitoring Unit and access the web page with your browser.

Default IP Address

Watchdog 100 units have a default IP address for initial setup and access to the unit if the assigned address is lost or forgotten. Once an IP address is assigned to a unit, the default IP address is no longer active. To restore the default IP address, press the reset button located beside the network connector and hold for approximately 20 seconds. The idle and activity lights near the network connector will both light up when the IP address has been reset.

Note: Pressing the reset button will restore the default IP address and will also clear all password settings.

The Configuration page allows you to assign the network properties or use DHCP to connect to your network. Access to the unit requires the IP address to be known, so use of a Static IP or reserved DHCP is recommended. The default address is shown on the front of the unit:

- **IP Address:** 192.168.123.123
- **Subnet Mask:** 255.255.255.0
- **Gateway:** 192.168.123.1

Initial Setup

Connect the Watchdog 100 to your computer using a crossover cable or hub/switch.

Windows OS

Navigate to the Local Area Network Adapter Connections Properties and change the Internet Protocol Version 4 (TCP/IPv4) Properties. Select "Use the following IP address". Use these settings:

- **IP Address:** 192.168.123.1
- **Subnet Mask:** 255.255.255.0
- **Gateway:** Leave blank

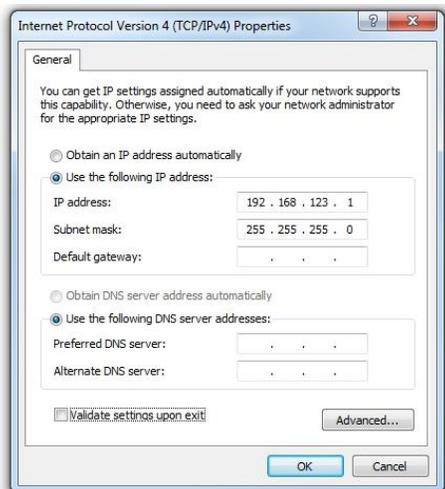


Figure 2: Network settings for initial setup. Images varies depending on Windows versions.

Save changes.

The unit should now be accessible in a web browser via the unit's permanent IP address: <http://192.168.123.123/>. See Unit Configuration (page 13) for details.

Mac OS

Open System Preferences via the Dock or the Apple menu.

Select "Network" under "Internet & Network."

Select "Ethernet" from the list on the left side of the window and enter these settings on the right side of the window:

- **Configure:** Manually
- **IP Address:** 192.168.123.1
- **Subnet Mask:** 255.255.255.0
- **Router:** Leave blank

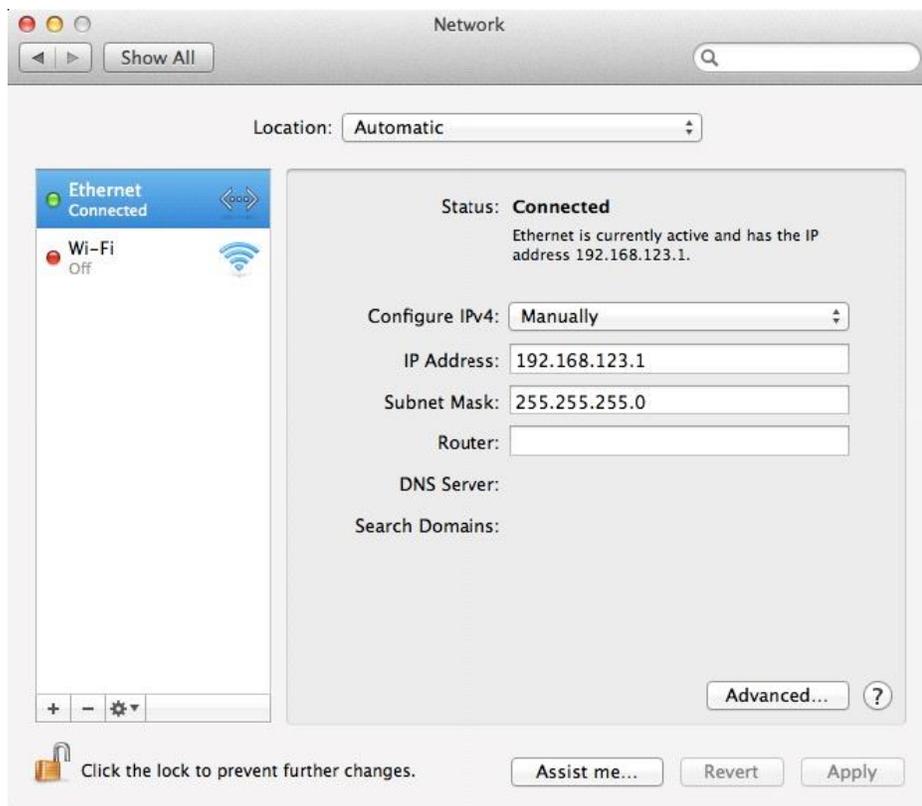


Figure 3: Mac OS network settings for initial setup. Image varies depending on Mac versions.

Apply changes.

The unit should now be accessible in a web browser via the unit's permanent IP address: <http://192.168.123.123/>. See Unit Configuration (page 13) for details.

Web Interface

Overview

The unit is accessible via a standard, unencrypted HTTP connection as well as an encrypted HTTPS (SSL) connection. The following web pages are available:

Sensors Page

The front page, *Sensors*, gives a real time view of the unit's data. Readings for the internal temperature, humidity and dew point sensors along with all I/O ports and external sensors will be shown.

Optional cameras may be added and their live snapshots are shown on this page. Plug-and-play external sensors appear below the internal sensors when attached.

The menu bar allows access to the rest of the Environmental Monitoring Unit's functionality.

The screenshot displays the GEIST Watchdog 100 web interface. At the top, the header includes the GEIST logo, the unit name "Watchdog 100 [TestRack]", IP Address "192.168.140.236", Local Time "2015-02-16 11:53:16", Firmware Version "v1.6.0", and Alarm Status "All is well: 1 Alarms Monitored".

The main content area is titled "Overview" and contains a table of sensor readings:

Watchdog 100 [TestRack]	
Temperature	76.22 °F
Humidity	31 %
Dewpoint	43.36 °F
AI1	98.72
AI2	99.21
AI3	98.91
AI4	99.21

Below the main table is a "Temp Sensor" section showing "Temperature" at 80.15 °F.

At the bottom, there is a "Cameras" section with a live video feed of the unit's interior, showing a temperature of 67.79.205.89.

Annotations in the image point to various features: "Friendly Name" points to the unit name; "Alarm Status" points to the "All is well" message; "Real-Time Sensor Readings" points to the main data table; "Internal Sensors" points to the AI1-AI4 rows; "Alternate Formats" points to the "XML | MIB" links; and "External Sensors" points to the "Temp Sensor" section.

The footer contains the following information:

Unit Location:
Unit Description: Environment Monitor
Admin: or Call

Support: Manuals, support@geistglobal.com or Call 800.432.3219 / +1.402.474.3400
Copyright © 2003-2013 Geist All Rights Reserved.

Figure 4: Sensors Page – Sensor and I/O Data

Logging Page

The *Logging* page allows the user to access historical data recorded by the unit. Please note that although data is logged once per minute, all sensor data used in the real time display and alarm functions is read at least once every 5 seconds for internal sensors and once every 30 seconds for external sensors. Recorded data is available for download in a comma-separated values (CSV) file.

Click the "Clear Logs" check box and select "Save Changes" to clear the historical data stored in the device.

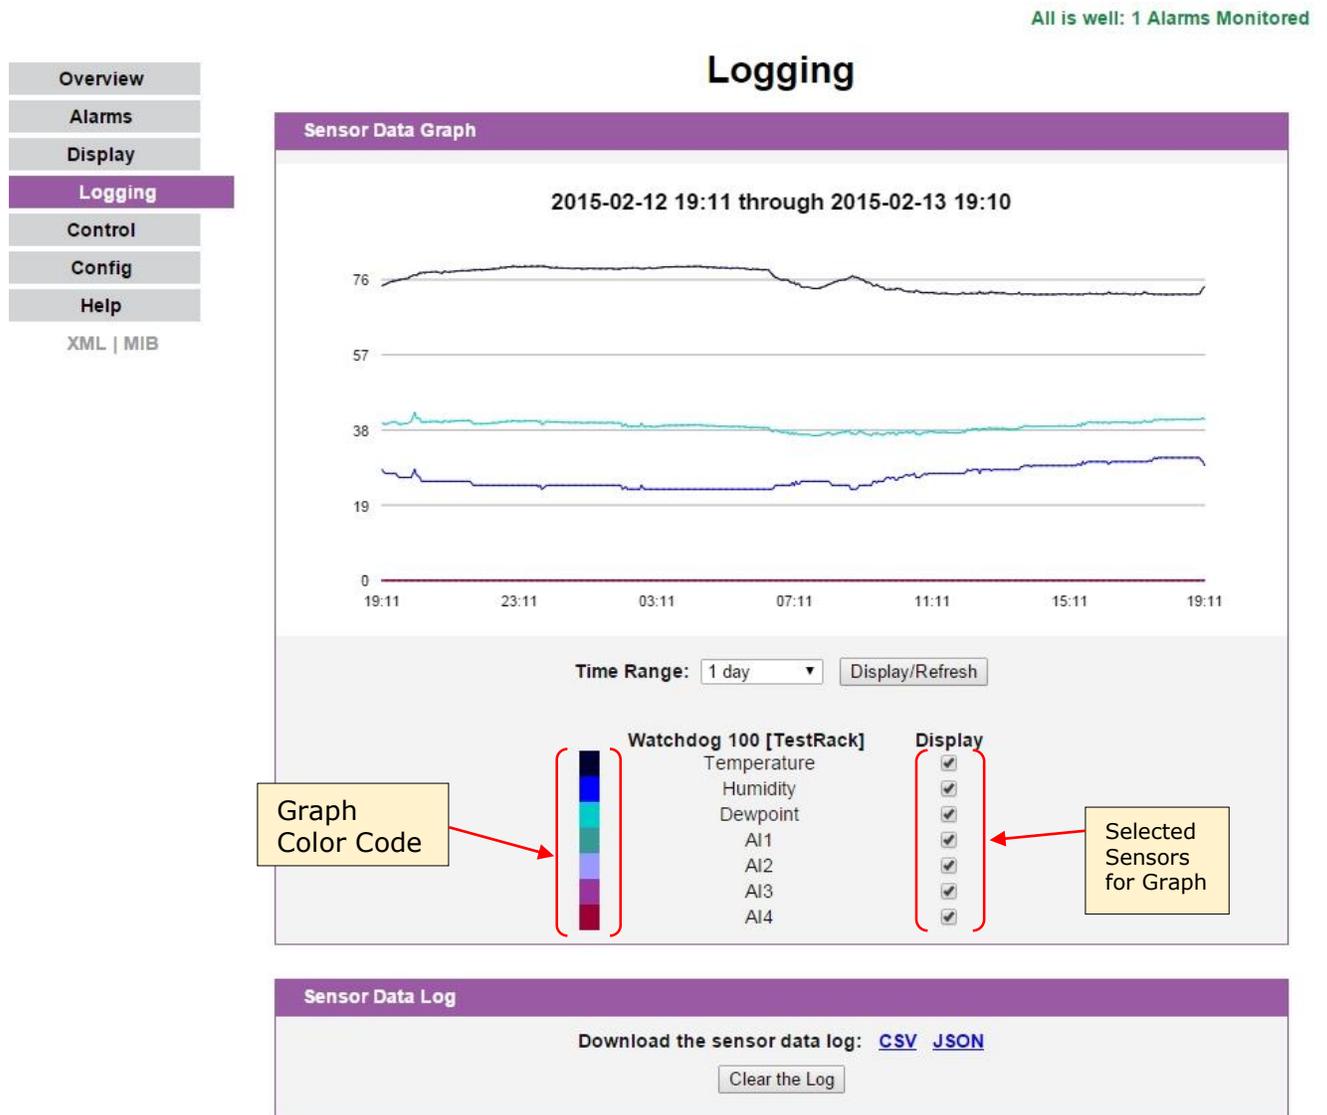


Figure 5: Logging Page

Display Page

The *Display* page allows the user to assign friendly names to internal and attached sensors as well as change the default temperature unit of measure for sensors. The 5Vdc, internal, analog sensors can also be adjusted to show what every range is necessary for the user. There is a linear mapping of 0-5Vdc to the range entered by the user. Additionally, a unit label may be added to make the numbers more meaningful.

All is well: 1 Alarms Monitored

Display

- Overview
- Alarms
- Display**
- Logging
- Control
- Config
- Help

XML | MIB

General

Temperature Unit:

Internal Temperature Offset:

Devices

Device ID	Device Type	Friendly Name
FD0004A315320CC3	Watchdog 100	<input type="text" value="Watchdog 100 [TestRack]"/>

Remove all unplugged devices

Analog Sensors

Sensor	Friendly Name	Scaled Value		Unit
		at 0V	at 5V	
Analog 1	<input type="text" value="AI1"/>	<input type="text" value="0.00"/>	<input type="text" value="100.00"/>	<input type="text"/>
Analog 2	<input type="text" value="AI2"/>	<input type="text" value="0.00"/>	<input type="text" value="100.00"/>	<input type="text"/>
Analog 3	<input type="text" value="AI3"/>	<input type="text" value="0.00"/>	<input type="text" value="100.00"/>	<input type="text"/>
Analog 4	<input type="text" value="AI4"/>	<input type="text" value="0.00"/>	<input type="text" value="100.00"/>	<input type="text"/>

Analog Scale Adjustment

Figure 6: Display Page

Alarms Page

The *Alarms* page allows the user to establish alarm conditions for each sensor reading. Alarm conditions can be established with either high or low trip thresholds. The alarms are displayed in different sections based on the sensor the alarm is associated with. Alarm options include relays, Email and SNMP Traps. See Alarms (page 17) for details.

All is well: 1 Alarms Monitored

Overview

Alarms

Display

Logging

Control

Config

Help

XML | MIB

Alarm settings

Watchdog 100 [TestRack]

Temperature ▼

Trips if ▼

limit -40.00

CLEAR

Alarm must remain tripped for

0 (min) before notification

Repeat every: 0 (min)

E-mail

(Email 1)

(Email 2)

(Email 3)

(Email 4)

(Email 5)

Temp Sensor

Figure 7: Alarms Page

Control Page

The *Control* page allows the user to control the relay settings for the unit. The Watchdog 100 has one relay that can be operated remotely or set to automatically open or close based on alarm conditions. Friendly names for the relay give the option of changing the state name from "Energized/De-energized" to something more meaningful to the user. For more information see Relay Control (page 17).

All is well: 1 Alarms Monitored

Overview

Alarms

Display

Logging

Control

Config

Help

XML | MIB

Control

Relay Settings

Relay	Relay Name	Energized	De-energized	Mode
Relay-1	<input type="text" value="Relay1"/>	<input type="text" value="Energized"/>	<input type="text" value="De-energized"/>	<input type="checkbox"/> Latching

Manual Override

Relay	Status	Action
Relay1	De-energized	(Do Nothing) ▼
<input type="button" value="Execute"/>		

Figure 8: Control Configuration Page

Configuration Page

The *Configuration* page contains many of the settings for the device. Sections for *Network*, *Time*, *Email*, *SNMP*, *User Accounts*, *Administration Information*, *Cameras* and *Diagnostics* are all housed on this page. Each section contains a “Save Changes” to allow for saving the newest settings within that section only. See Unit Configuration (page 13) for more details.

All is well: 1 Alarms Monitored

The screenshot displays the Configuration page with a sidebar on the left containing navigation links: Overview, Alarms, Display, Logging, Control, Config (highlighted), and Help. Below the sidebar are links for XML and MIB. The main content area is titled 'Configuration' and is divided into three sections: General, Network, and Time.

General

- Restore System Default Values
- Restore Network and Account Default Values

Network

- MAC Address: 00:04:A3:15:32:0C
- Enable DHCP
- IP Address: 192.168.140.236
- Subnet Mask: 255.255.255.0
- Gateway: 192.168.140.254
- Primary DNS: 8.8.8.8
- Secondary DNS: 192.168.140.20
- Save Changes

Time

- Current time: 2015-02-16 15:01:32
- Mode: NTP
- UTC Offset: -5:00
- Year: 15 (yy)
- Month: 2
- Day: 16
- Hour: 20 (0-23)
- Minutes: 1 (0-59)
- Seconds: 32 (0-59)
- Server: pool.ntp.org
- Sync Period: 1800 seconds
- Save Changes


Figure 9: Configuration Page

Unit Configuration

Network

The unit's network configuration is set on the *Network* section of the *Configuration* page. Settings pertaining to the unit's network connection are:

- **DHCP:** Allows the unit to request a dynamic IP address from a server on the network.
- **Static IP Address/Net Mask/Gateway:** When not using a dynamic address, enter static network configuration information here.
- **DNS Servers:** Allows the unit to resolve host names for Email, NTP and SNMP servers as well as cameras.

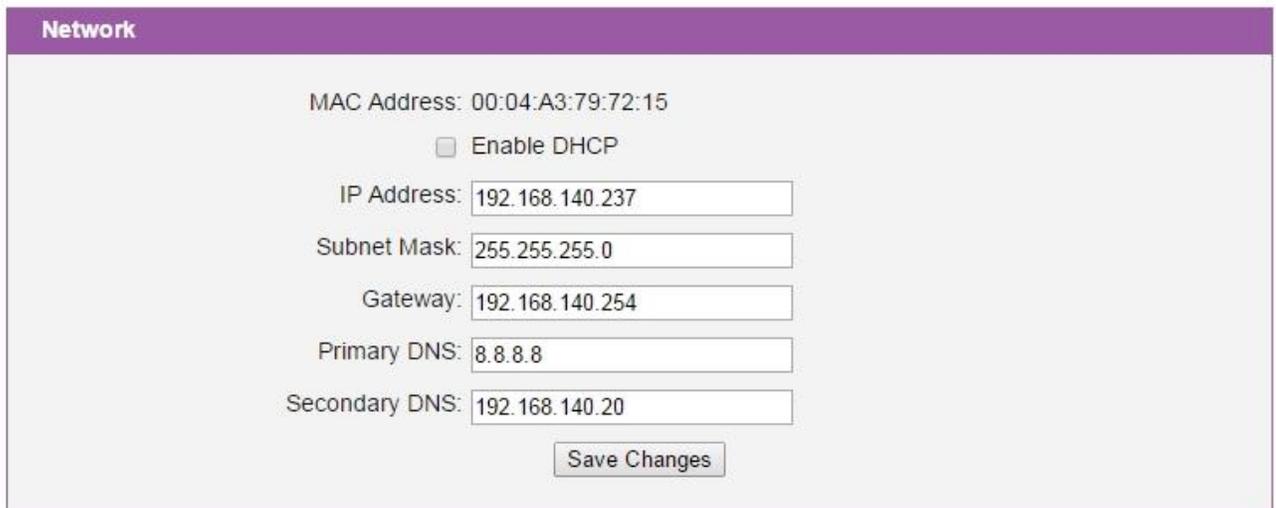


The screenshot shows the 'Network' configuration page. At the top, the MAC Address is 00:04:A3:79:72:15. There is an unchecked checkbox for 'Enable DHCP'. Below that are input fields for IP Address (192.168.140.237), Subnet Mask (255.255.255.0), Gateway (192.168.140.254), Primary DNS (8.8.8.8), and Secondary DNS (192.168.140.20). A 'Save Changes' button is located at the bottom right.

Figure 10: Network Configuration Section

Time and Date

The system clock is set on the *Admin* section of the *Configuration* page. The unit comes preconfigured with the IP addresses of two NIST time servers and is set to the Central Time Zone (-0500 GMT). Should a local time server be preferred, enter its IP address into the "Server" box and click the "Save Changes" button. Clearing the time server addresses and clicking "Save Changes" will set the time servers back to the defaults. The unit attempts to contact the time servers during boot up and periodically while running. Until a time server is contacted or the system clock is manually set, all log time stamps will present time as the number of seconds since the unit was powered up.

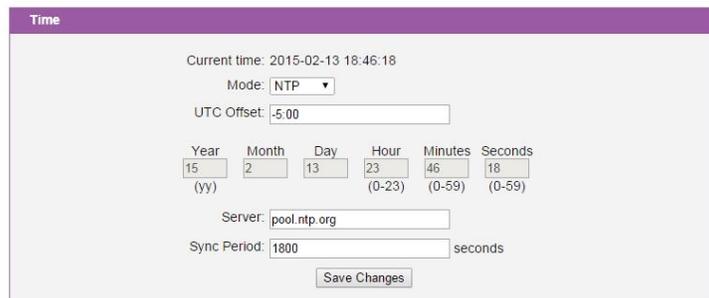

The screenshot shows the 'Time' configuration page. It displays the current time as 2015-02-13 18:46:18. The Mode is set to NTP. The UTC Offset is -5:00. There are input fields for Year (15), Month (2), Day (13), Hour (23), Minutes (46), and Seconds (18). The Server is set to pool.ntp.org. The Sync Period is 1800 seconds. A 'Save Changes' button is located at the bottom.

Figure 11: Time Configuration Section

The time, date, IP address and friendly name of the unit are displayed in the top of each web page.

Watchdog 100 [TestRack]
IP Address: 192.168.140.236
Local Time: 2015-02-16 15:01:32

Note: The time and date are not adjusted for daylight savings time. Setting the time zone offset forward and backward an hour will cause a gap or overwriting of logs, respectively.

E-Mail

The unit is capable of sending e-mail to as many as three addresses at once. Most SMTP and ESMTP servers are compatible. Authentication options are None, POP3 (POP-before-SMTP) or ESMTP. The e-mail configuration is set on the *Email* section of the *Configuration* page.

An SMTP server as well as "Sender" and "Destination" addresses are required to send e-mails. Some mail servers may require a username and password. In most cases, the username does not have to match the "Sender" address, but does need to be a valid user on the authenticating server. Microsoft Exchange servers will have to be set to allow SMTP relay from the IP address of the unit. In addition, a test email can be sent from the bottom of this section.

Note: The unit cannot receive e-mails. The POP3 server is used strictly for authentication and is not required when using None or ESMTP.


The screenshot shows the 'Email' configuration page. It features a purple header with the word 'Email' in white. Below the header, there are several input fields and a checkbox. The 'Server' field contains 'smtp.gmail.com', 'Port' is '465', and the 'Use SSL' checkbox is checked. The 'Sender' field is 'diggertest5@gmail.com', 'User Name' is also 'diggertest5@gmail.com', and 'Password' is masked with seven dots. There are five 'Destination' fields; the first contains 'rrosas@itwatchdogs.com' and the others are empty. At the bottom, the 'Email Status' is 'OK', and there are two buttons: 'Save Changes' and 'Send Test Email'.

Figure 12: Email Configuration Section

SNMP

The unit supports retrieval of all data via Simple Network Management Protocol (SNMP) v1 and v2c. In addition, alarm traps can be sent to up to two IP addresses. The SNMP configuration is entered on the *SNMP* section of the *Configuration* page.

The default read community string is "public" and the MIB is downloadable via a link on the unit's web page.

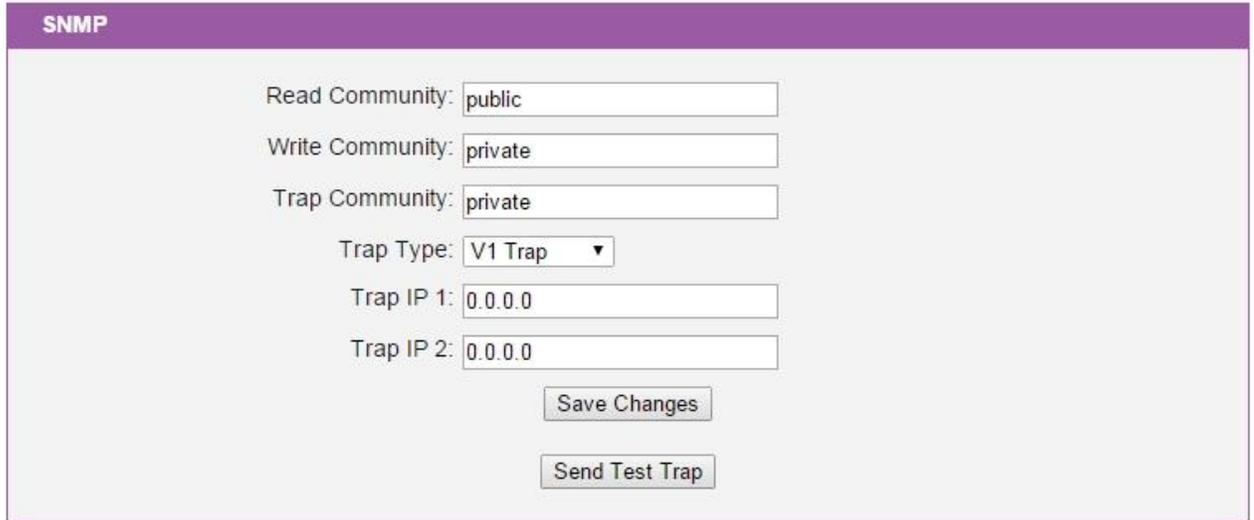


The image shows a screenshot of the SNMP configuration section of a web interface. The section is titled "SNMP" in a purple header. Below the header, there are several input fields and a dropdown menu. The "Read Community" field contains the text "public". The "Write Community" field contains the text "private". The "Trap Community" field contains the text "private". The "Trap Type" dropdown menu is set to "V1 Trap". The "Trap IP 1" field contains the text "0.0.0.0". The "Trap IP 2" field contains the text "0.0.0.0". At the bottom of the form, there are two buttons: "Save Changes" and "Send Test Trap".

Figure 13: SNMP Configuration Section

User Accounts

Watchdog 100 Series offer account security options that are entered on the *User Accounts* section of the *Configuration* page. There are three levels of account security:

- **Administrator:** Password protects the Display, Alarms and Configuration pages.
- **Control User:** Password protects the Control Actions and Control Settings pages.
- **View User:** Password protects the Sensors, PDA, WAP and XML pages.

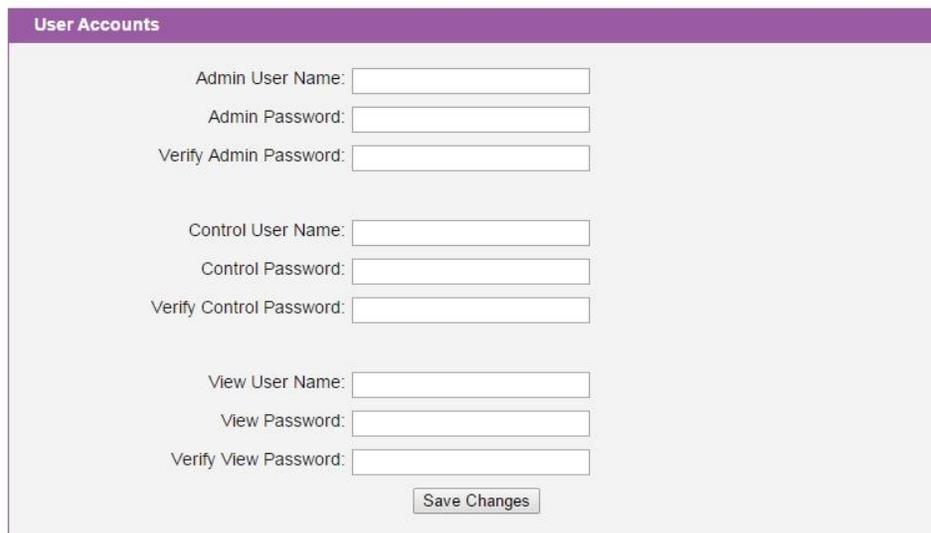

The image shows a screenshot of the User Accounts configuration section of a web interface. The section is titled "User Accounts" in a purple header. Below the header, there are three sets of input fields for different user levels. The first set is for the Admin user, with fields for "Admin User Name:", "Admin Password:", and "Verify Admin Password:". The second set is for the Control user, with fields for "Control User Name:", "Control Password:", and "Verify Control Password:". The third set is for the View user, with fields for "View User Name:", "View Password:", and "Verify View Password:". At the bottom of the form, there is a "Save Changes" button.

Figure 14: User Accounts Configuration Section

User account names may include alphanumeric characters, spaces and underscores. Passwords may include alphanumeric characters and underscores.

Note: The Administrator account must be active to enable the Control Access and View-Only accounts.

Note: The Control Access account must be active to enable the View-Only account.

Note: The account names "root" and "admin" are disabled for security reasons and cannot be re-enabled.

Warning: Record your passwords. To reset lost passwords, follow the instructions for resetting the unit's IP address and passwords given in the Default IP Address section (page 6).

Admin Information

Information entered in the *Admin Info* section of the *Admin* tab of the *Configuration* page will show up at the bottom of the unit's web interface.

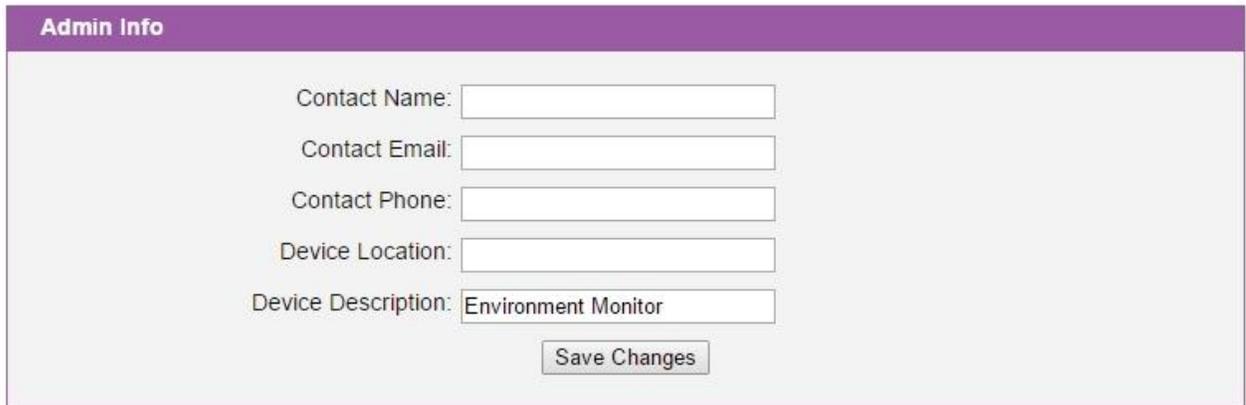


Figure 15: Admin Information Configuration Section

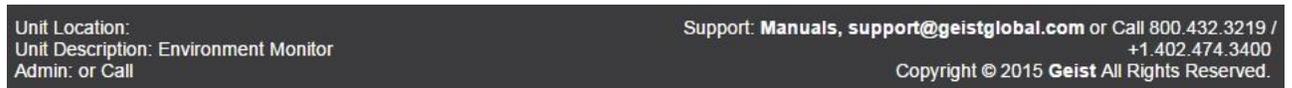


Figure 16: Admin Information Display

Camera Configuration

Enter the domain names/IP addresses and models of up to four IP-addressable network cameras in the *Cameras* section on the *Configuration* page. The unit will present a linked snapshot from each camera on the *Sensors* page.

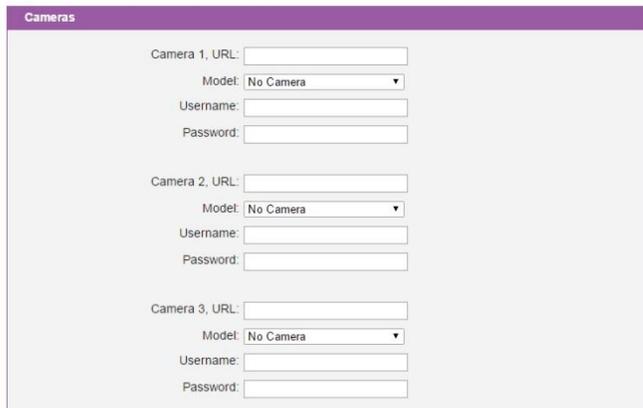


Figure 17: Cameras Configuration Section

Note: Each camera must be set to allow anonymous access to enable this feature.

Relay Control

Relay Contact Ratings

The output relay contacts are intended to carry low voltage signals only. Do not exceed the following ratings on the output relay contacts:

DC: 60 V, 30 W

AC: 30 Vrms, 1 A

Relay Settings

The Watchdog 100 Series units provide one output relay that can be operated remotely or set to automatically open or close based on alarm conditions. A relay in non-latching mode will automatically energize and de-energize as its associated alarms trip and clear. A relay in latching mode will similarly energize on an alarm trip, but will only de-energize when acknowledged by the user. See *Alarms* (page 18) for additional information on associating an alarm condition with one of the output relays.

Manual Override

The output relay can be operated remotely through the *Manual Override* section of the *Control* page. The user can force the relay to energize or de-energize by selecting the desired action in a drop down menu and clicking the execute button. The current relay status is displayed in the *Manual Override* section of the *Control* page. The word “forced” is displayed next to any relay that has been manually forced to a given state. Any forced relay will not change state based on alarm status. Relays can be released from a forced energized or forced de-energized state by selecting the Release Override option in the drop down menu.

Acknowledgments

Any relay in latching mode will change from de-energized to energized if it receives an alarm trip; however, the relay will not change from energized to de-energized when the alarm status returns to normal until the user acknowledges the pending change. Similarly, any relay in latching mode will change from de-energized to energized if it receives a manual override Force Energized command; however, the relay will not change from energized to de-energized when the Release Override command is issued until the user acknowledges the pending change. The user must check the Acknowledge and De-energize box on the *Control* page for a latched relay to de-energize.

The image shows a screenshot of a web interface for relay control, divided into two main sections: "Relay Settings" and "Manual Override".

Relay Settings: This section contains a table with columns for "Relay", "Relay Name", "Energized", "De-energized", and "Mode". The "Relay" column shows "Relay-1". The "Relay Name" column has a text input field containing "Relay1". The "Energized" column has a text input field containing "Energized". The "De-energized" column has a text input field containing "De-energized". The "Mode" column has a checkbox labeled "Latching" which is currently unchecked. A "Save Changes" button is located below the table. A yellow callout box labeled "Relay Friendly Names" points to the "Relay Name" input field. Another yellow callout box labeled "Latching Mode Select" points to the "Latching" checkbox.

Manual Override: This section contains a table with columns for "Relay", "Status", and "Action". The "Relay" column shows "Relay1". The "Status" column shows "De-energized". The "Action" column has a dropdown menu currently set to "(Do Nothing)". An "Execute" button is located below the table. A yellow callout box labeled "Override Selections" points to the "Action" dropdown menu.

Figure 18: Relay Control Options

Alarms

Alarm Notifications

The Watchdog 100 supports three types of alarm notification:

- **Relay:** The unit can be configured to energize/de-energize one control relay.
- **E-Mail:** The unit can be configured to send alarm e-mails to up to three recipients.
- **SNMP:** The unit can be configured to send SNMP traps to up to two trap servers.

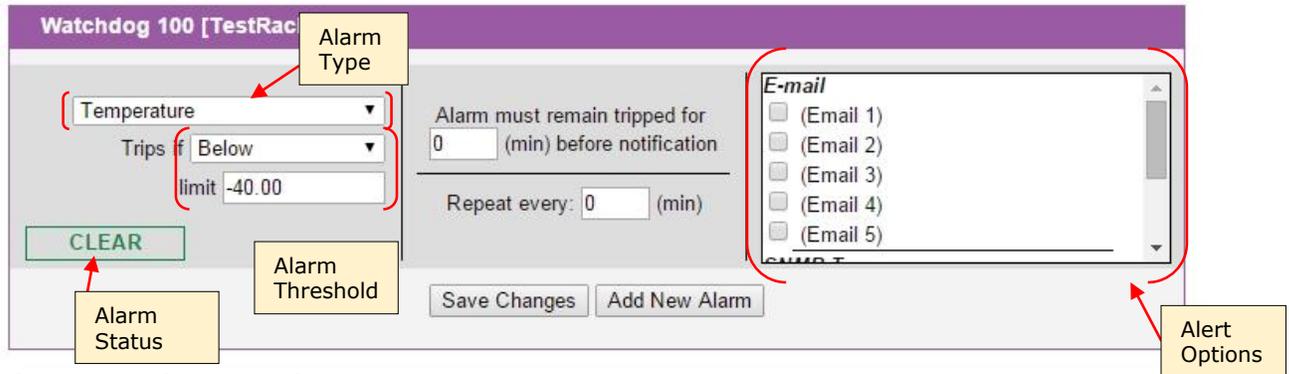


Figure 19: Alarms Options

The unit is capable of any combination of the above alarms at once. Alarm type combinations are selected per alarm via the check boxes which are displayed for each alarm on the *Alarms* page.

Alarm Types

The Watchdog 100 provides three types of alarm messages via E-Mail and SNMP:

- **Trip:** Occurs when a sensor value goes above a high trip threshold or below a low trip threshold.
- **Clear:** Occurs when a sensor already in the Tripped or Unplugged state goes back into its normal range.
- **Unplugged:** Occurs when a sensor with an alarm set loses contact with the main unit due to the sensor being physically unplugged or another communications error.

Alarms can be added for each internal device or external sensor displayed on the Alarms page. An alarm is added by pressing the "Add New Alarm" button and selecting the sensor value to be monitored from a drop down menu.

Alarm Removal

To remove an alarm, select "REMOVE ALARM" from the sensor type drop-down menu then click the "Save Changes" button.

Thresholds

The user must set a trip threshold and type for each alarm that is added to the Alarms page. The threshold type is chosen as "Trips if" either "Above" or "Below" from a drop down menu when the alarm is created. The threshold value is typed into a data window when the alarm is created.

Alarms are triggered based on the selected sensor's data and the trip threshold type and value. Alarm settings can be edited or deleted at any time.

Analysis of each unit is recommended before setting alarm thresholds as some of the values monitored by the unit are relative values whose scale will differ slightly between units. Allow each unit to operate under normal, steady-state conditions for several hours before setting alarm thresholds. By allowing the sensors to operate for several hours, the user can better understand what the normal variations are; thereby allowing the user to choose alarm thresholds that will not trigger numerous false alarms.

Note: Changes in settings take a few moments to become active. Rapidly resetting alarm values may not provide the desired results. Allow up to 2 minutes after changing a setting before modifying it again.

Sensors

Overview

All internal sensors are measured every 5 seconds. External sensors are measured every 10 to 30 seconds, depending on the number of devices connected. Sensor data collected by Watchdog 100 units provides useful trend analysis data. While all values are not absolute in relation to a known unit, trend analysis of the data allows users to view changes and draw useful conclusions about what is happening over time in the monitored environment.

Internal Sensors

Watchdog 100 units contain the following onboard sensors:

- **Temperature:** Measures temperature and can be displayed in °C or °F. The accuracy is ± 1 °F from -50 °F to 185 °F. Note: This sensor may be heated by internal circuitry in the unit; a temperature offset is available to re-calibrate.
- **Humidity:** Measures the percent of water vapor in the air within $\pm 5\%$.
- **Dew Point:** Calculated measurement of temperature at which moisture in the air will turn to water based on the humidity and temperature measurements.
- **AI1:** Scales 0 to 5 Vdc input to 0-99, dry contacts may be used.
- **AI2:** Scales 0 to 5 Vdc input to 0-99, dry contacts may be used.
- **AI3:** Scales 0 to 5 Vdc input to 0-99, dry contacts may be used.
- **AI4:** Scales 0 to 5 Vdc input to 0-99, dry contacts may be used.

I/O Sensors

The Watchdog 100 units come equipped with four I/O ports for connecting additional external sensors such as Water and Door Sensors. The four ports are designed to accept a 0-5 Vdc analog input; alternatively, an internal 100K pull up resistor to 5 V allows for the use of dry contacts. The I/O port input is converted to a digital number ranging from 0 to 99 and is displayed on the *Sensors* page. Unused I/O ports will display a value of 99. This range can be adjusted on the display page allowing the user to modify the value to make it more meaningful to the user.

Water sensors act as conductivity bridges. Moisture across the contacts causes the value to drop. Door switches can be wired in a serial connection; if the chain is broken the entire group is classified as open. The limiting factor on the I/O ports is the length of the wire, found to be around 400 feet.

Water Sensors

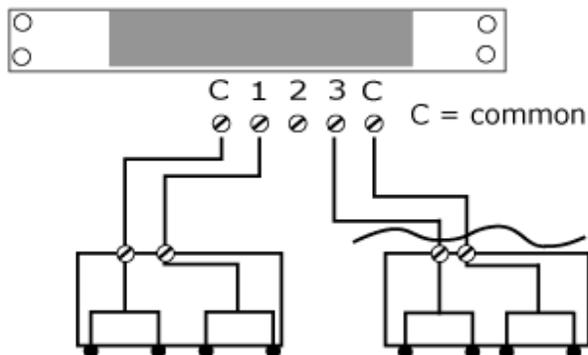


Figure 20: Water Sensor Wiring Example

Door Switches - Extended

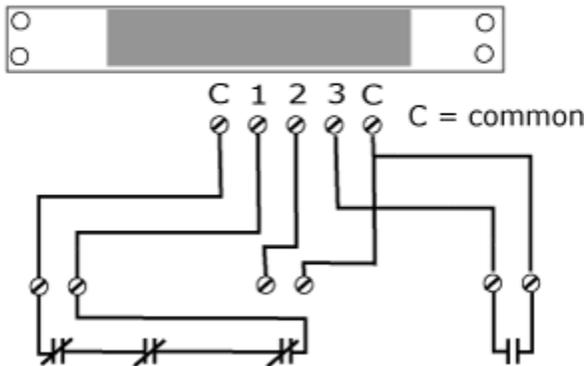


Figure 21: Door Sensor Wiring Example

Additional Optional I/O Sensors

- **RWS:** Water Sensor
- **RDPS:** Door Sensor
- **SA-1:** Smoke Alarm
- **RCP-2:** 125 V City Power Monitor
- **WSK-10:** 10' Water Sensing Cable Kit
- **WSK-40:** 40' Water Sensing Cable Kit
- **-48 VDCM:** Power Monitor
- **30 VDCM:** Power Monitor

Remote Sensors

Available Sensors

- **RT:** Temperature
- **GTHD:** Temperature / Humidity / Dew Point
- **GT3HD:** Temperature / Humidity / Dew Point with ability to add two RT sensors
- **RTAFHD3:** Temperature / Air Flow / Humidity / Dew Point
- **CCAT:** Converts analog I/O Sensors to Remote Digital Sensors
- **RS2:** Remote power monitoring and switching

RTAFHD3 Compatibility

The (G)RTAFHD3 sensor cannot be utilized in combination with the discontinued (G)RTAF and (G)RTAFH sensors or (G)RTHD sensors built prior to 2010. If you desire to add (G)RTAFHD3 sensors to an existing installation currently utilizing incompatible sensors, please contact Customer Service for installation options.

Connecting Remote Sensors

Plug-and-play remote sensors may be attached to the unit at any time via the RJ-12 connectors on the face of the unit. In some cases splitters may be required to add additional sensors. Each sensor has a unique serial number and is automatically discovered and added to the web page. Up to four sensors may be connected to the Watchdog 100.

The display order of the sensors on the web page is determined by the serial number of each sensor. Friendly names for each sensor can be customized on the *Display* page.

Note: The sensor uses Cat. 3 wire and RJ12 connectors. Wiring must be straight-through: reverse polarity will temporarily disable all sensors until corrected.

Note: The sensors use a serial communication protocol and are subject to network signaling constraints dependent on shielding, environmental noise, and length of wire. Typical installations allow runs of up to 600 feet of sensor wire.

Accessories

IP-Addressable Network Cameras

The unit is able to interface with up to four IP-addressable network cameras. A live snapshot from each camera will be displayed on the unit's *Sensors* page underneath the main unit's graph. Clicking on a snapshot opens the camera's website in a new browser window.



Figure 22: Camera Images

Camera model and IP address are entered on the *Monitoring* tab of the *Configuration* page.

Note: Some cameras require additional software downloads to display live video in a web browser.

RSC Integration

For users with multiple units, Geist RSC software offers:

- Convenient, single-window monitoring of multiple units via simple web-based interface
- Streamlined firmware updating
- Consolidation of alarm settings

See <http://www.geistglobal.com> for more information.

Alternate Data Formats

In addition to the full access, control and configuration available via a desktop web browser, Watchdog 100 Series products present data in multiple formats for easy integration with other monitoring systems. Data formats available via links on the unit's web page are:

XML | MIB

Figure 23: Alternate Format Links

- **XML:** Extensible Markup Language. Presents data in a structured tree for use with automated scripts and monitoring systems.
- **MIB:** Management Information Base. Downloads the MIB for use with SNMP monitoring tools.

Technical Support

Firmware Version

The firmware version is located in the upper right section of the web interface header, represented by v3.y.xx. Before contacting support, it is recommended that the Watchdog 100 unit first be updated to the latest firmware version. If this is not possible, please have the unit's existing firmware version number available when contacting technical support.



Figure 24: Web Page Header

Firmware Updates

Keep your unit updated with the latest firmware releases or sign up for notifications at the following website: <http://www.geistglobal.com/support>.

Resetting the Unit

Should the Watchdog 100 unit lose communication; the processor may be manually rebooted by pressing the 'Reboot' button on the face of the unit.

Service and Maintenance

No service or maintenance is required. Do not attempt to open the unit or you may void the warranty. No serviceable parts inside.

More Technical Support

<http://www.geistglobal.com>
(800) 432-3219
Email: support@geistglobal.com
Or contact your distributor.

Table of Figures

Figure 1: Watchdog 100 Mounting Options	5
Figure 2: Network settings for initial setup. Images varies depending on Windows versions.	6
Figure 3: Mac OS network settings for initial setup. Image varies depending on Mac versions.	7
Figure 4: Sensors Page – Sensor and I/O Data	8
Figure 5: Logging Page	9
Figure 6: Display Page	10
Figure 7: Alarms Page	11
Figure 8: Control Configuration Page	11
Figure 9: Configuration Page	12
Figure 10: Network Configuration Section	13
Figure 11: Time Configuration Section	13
Figure 12: Email Configuration Section	14
Figure 13: SNMP Configuration Section	15
Figure 14: User Accounts Configuration Section	15
Figure 15: Admin Information Configuration Section	16
Figure 16: Admin Information Display	16
Figure 17: Cameras Configuration Section	16
Figure 18: Relay Control Options.....	17
Figure 19: Alarms Options.....	18
Figure 20: Water Sensor Wiring Example	20
Figure 21: Door Sensor Wiring Example	21
Figure 22: Camera Images	23
Figure 23: Alternate Format Links	23
Figure 24: Web Page Header	24

Revision History

Revision	Date	Notes	Approved By
1.0	9/12/2011	Initial Version	CG, AK
1.1	4/27/2012	Added GTHD and GT3HD	CG
1.2	6/22/2012	Changed logo and web address	SR
1.3	6/26/2013	Added 'G' to part number	SR
2.0	2/16/2015	Changed product names and screenshots.	QN