



Digital Photo Frame User's Manual



Questions? Need some help?

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



Or visit
www.polaroid.com/support

Controls and Basic Instructions

CONGRATULATIONS on your purchase of a Polaroid Digital Photo Frame. Please read carefully and follow all instructions in the manual and those marked on the product before first use. Failing to follow these warnings could result in personal injury or damage to the device. Also, remember to keep this User's Manual in a convenient location for future reference.

Important: Save the original box and all packing material for future shipping needs.

Controls



AUTO:

Press it means exit. Hold for 2 seconds to start a Slide show.

MENU:

Press to enter or select.
Hold for 2 seconds to enter the SETUP menu.

UP ARROW

Press to move up or select Previous.


DOWN ARROW

Press to move down or select Next.

POWER:

Turns power on or off.

Installing a Flash Media Card

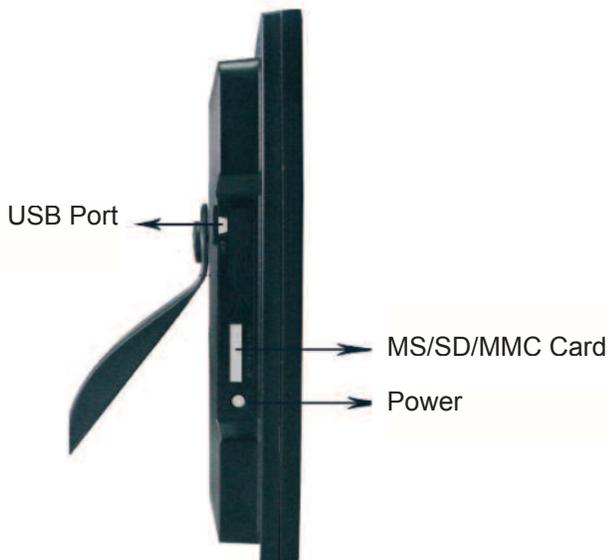

1. Find the slot that fits your flash media card.
2. Insert the card in the correct slot.
3. To remove the card, simply pull it out from the card slot.

Note: Do not remove any memory card from its slot while pictures are playing. Doing so could damage the frame or memory card. Always turn the power off before removing the memory card.


Controls and Basic Instructions

Replacing the Remote Control Battery


1. Remove the battery compartment by pulling the cover in the direction of the arrow.
2. Remove old battery and dispose of correctly.
3. Insert new battery taking note of correct polarity (+/-).
4. Replace cover.

Caution:

1. Only use a 3V CR2025 battery.
2. Dispose of used batteries according to local ordinance regulations.
3. Remove the battery when not using the Flash Player for prolonged periods.

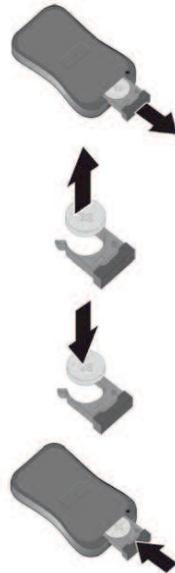

Buttons on the Remote Control

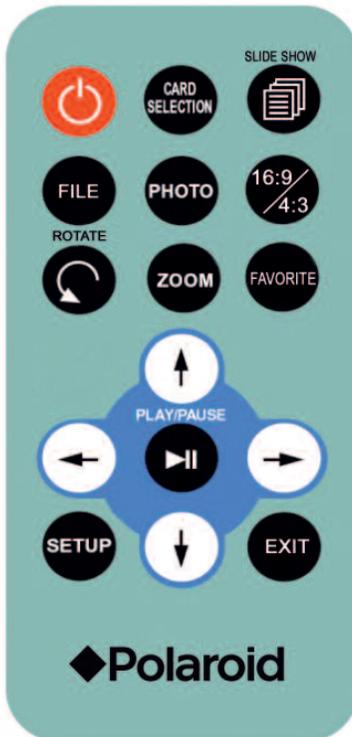

	POWER button: Press to turn player on or off.
	SETUP button: Press to open menu for changing settings.
	CARD SELECTION button: Press to choose a different memory card.
	FILE button: Press to choose different files.
	PHOTO button: Press to go to and display photo files.
	ROTATE button: Press to rotate photos 90 degrees clockwise on screen.
	ZOOM button: Press to zoom up to 4x (on photos only).
	SLIDE SHOW button: Press to start/stop a photo slide show.
	FAVORITE button: Press to choose the favorite photo.
	16:9/4:3 button: Press to choose the screen ratio.
	↑ button: Press to move up when selecting files on your screen.
	← button: Press to move left when selecting files on your screen.
	▶ PLAY/PAUSE button: Press to confirm selections on your screen.
	→ button: Press to move right when selecting files on your screen.
	↓ button: Press to move down when selecting files on your screen.
	EXIT button: Press to exit your current object.

Controls and Basic Instructions

Setup menu	Sub-menus	Description
Separate windows	On	Creates additional frames to view more than one picture at a time with a maximum of four pictures at once.
	Off	
Slide show effect	Off	Each picture in a slide show will be shown one after another. Choose a transition to be used between those images.
	Fade	
	Shutter	
	Cross Combo	
	Mask	
	Brick	
	Dissolve	
	Bar	
	Expansion	
	Silk	
	Random	
Slide show speed	5 ~ 30 seconds	Choose from different slide show speeds.
Slide show shuffle	On	Lets you display photos in a random order.
	Off	
Set favorite or select		A small check mark will appear on the thumbnail image. To view your favorite image, press the slide show button on the remote.
Reset settings	Yes	Resets all your settings back to the factory default.
	No	
Full screen	On	View images at full screen.
	Off	
Language		Select the language of your choice: English, Italian, German, French, Spanish, Russian, Dutch, Greek, Turkish, Polish.
Copy file		Copy files to the media card.
Delete file		Delete files.
Brightness/contrast	Degree bar	Adjusts these settings.
Color/tint	Degree bar	Adjusts these settings.
Auto slide setting	Off 30 seconds 60 seconds 5 minutes 15 minutes	Automatically turns on a slide show when the frame or remote is untouched for this period of time.

Specifications and Set Up

Specifications

Unit	8" Digital Photo Frame
Unit Size	290mm x 220mm x 40mm
Weight	1.2 kg
Resolution	800 x 480
Brightness	300cd/m ²
Contrast Ratio	300:1
Card Type	SD, MMC, MS
Input	Mini USB
Auto Start Mode	Auto slide show (JPEG)
Photo Playback Mode	1. Rotate, zoom in
	2. Auto slide show
	3. Interval time setup
	4. Transition setup

Setting up the Digital Photo Frame

1. Plug the appropriate end of the AC adapter into a power outlet and the other end into the Digital Photo Frame.
2. After you've stored content on a flash media card (not included), insert the card into the proper slot (see page 2).

Connecting a USB Device to the Digital Photo Frame

1. The Digital Picture Frame has a built-in mini-USB port. If you would like to connect the USB device (such as a USB flash drive) to the Digital Picture Frame with a full-size port, please use the USB Connection Cable" included with the digital picture frame. This included cable has a male mini-size USB port and a female full-size USB port.
2. It is recommended that you turn off your USB device and the Digital Picture Frame before connecting the USB device.
3. This Digital Picture Frame cannot be connected to a computer.

NOTE: DO NOT TAKE THE MEMORY CARD OUT OF THE SLOT WHILE THE PICTURES ARE STILL PLAYING OR WHEN THE POWER IS STILL ON. THIS COULD DAMAGE THE FRAME OR THE MEMORY CARD. ALWAYS TURN THE POWER OFF BEFORE REMOVING THE MEMORY CARD.

Navigating in the Digital Photo Frame


Slide show Screen

Turning the digital photo frame on will initiate a photo slide show, provided the inserted memory card has photo files.



Select Card Screen

Press the CARD SELECTION button on the remote to return "Select card" menu:

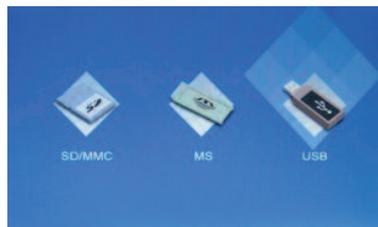

Select Function Screen

Select a source disk, then press the OK key on the product, or press the PLAY/PAUSE button on the remote to enter the "Select Function" menu as below:



Photo Browse Screen



Select the Photo icon, then press the OK key on the product, or press the PLAY/PAUSE button on the remote to enter the Photo Browse Screen as below:



Navigating in the Digital Photo Frame

File Operation Screen

Select the File icon, then press the OK key on the product, or press the PLAY/PAUSE button on the remote to enter the File Operation Screen as below:

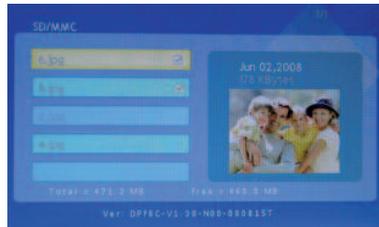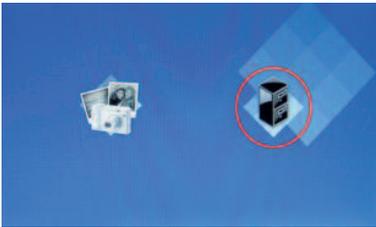


Setting Language

Press the Setup button on the remote to access the setting language menu, select the language you wish to use. The menu language will change in this order: English>Italian>German>French>Spanish>Russian>Dutch>Greek>Turkish>Polish.

Set Favorite Photo

Using your remote control, select the photo view mode, depending on whether you want to set a photo as your favorite. Select the photo you want to set as a favorite. Press set favorite on the remote control. You may select photos by repeating these steps. To enter a slide show, press the slide show key on the remote.

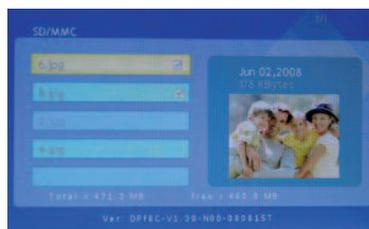



Navigating in the Digital Photo Frame

How to Delete Files

- a) In Select Card Screen or Select Function Screen, press the SETUP button on the remote control, the setting menu will pop-up. Select Delete File will delete all the photo in the current card.



 - b) In File Operation Screen, press the SETUP button on the remote control, the setting menu will pop-up. Select Delete File, it will delete the photo you select.

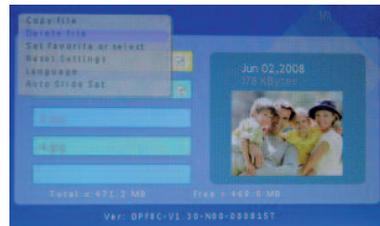



Select file:



- A. In File Operation Screen, press the Favorite button
B. In the Setting menu, select Set Favorite

How to Copy Files

 - a) In Select Card Screen or Select Function Screen, press the SETUP button on the remote control, the setting menu will pop-up. Select Copy File, it will copy all photo on the current card to the other card.

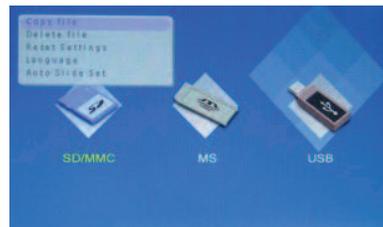

 - b) In the File Operation Screen, press the SETUP button on the remote control, the setting menu will pop-up. Select Copy File, it will copy the photo which you selected to the other card.

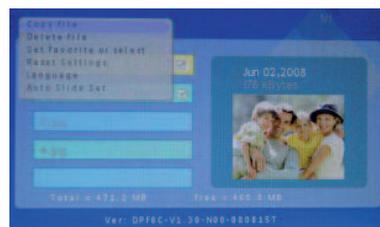

Select file:

- C. In File Operation Screen, the Favorite button
D. In the Setting menu, select Set Favorite

Recycling


Questions? Need some help?

Call our help line found on the insert with this icon:



Or visit www.polaroid.com

*Get to the
Fun Faster™*

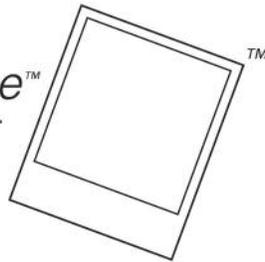

RoHS

WEEE (WASTE ELECTRICAL AND ELECTRIC EQUIPMENT)

This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to www.polaroid.com and click on “**Company**” or call the customer service number for your country listed in the instruction manual.

“Polaroid” and “Polaroid and Pixel” are trademarks of Polaroid Corporation.

For service, support and warranty information, visit www.polaroid.com