



# MAG AA AUTOMATIC AIR-ASSISTED AIRLESS SPRAY GUN (FOR UV HIGH SOLIDS COATINGS)



The following instructions provide the necessary information for the proper operation and preventive maintenance of the Binks MAG AA Automatic Manifold Mounted Air-Assisted Airless Spray Gun. Please read and understand all information in this document in order to get the maximum performance from your new MAG AA Automatic spray gun.

In the MAG AA Automatic spray gun, the paint or other material to be sprayed is preatomized and forced through the carbide tip by the typical 1,500-3,800 psi fluid pressure (with capabilities up to 4,000 psi/275 bar). As a result of the preatomizing, the final shaping air supplied by the air cap produces an exceptionally fine and even spray pattern. The result of this spray pattern is an even finish that lends itself to products that need an exceptionally fine finish with reduced overspray and VOC emissions.



## SPECIFICATIONS:

Max. Air Pressure:	100 psi/6.8 bar
For HVLP compliance:	20 psi inlet pressure delivers 10 psi air cap pressure at 8 cfm air volume
Max. Fluid Pressure:	4000 psi/275 bar
Min./Max. Cylinder Actuating Pressure:	50 psi/3.4 bar (min.), 100 psi/6.8 bar (max.)
Gun Body:	Stainless Steel, Aluminum
Fluid Path:	Stainless Steel
Fluid Shut Off Type:	UHMW Seat (std.), Tungsten Carbide Seat (opt.)
Fluid Inlet and Outlet Size:	1/4" NPT(F) thread
Air Inlet Size:	<b>Atomizing Air:</b> 1/4" NPT(F) manifold body, 1/4" NPT x 1/4" NPS(M) fitting <b>Fan Air:</b> 1/4" NPT(F) manifold body, 1/4" soc head plug (M) fitting <b>Cylinder Air:</b> 1/8" NPT(F) manifold body, 1/8" NPT x 1/4" O.D. tube fitting
Gun Weight:	2.5 lbs. (1.1 kg)
Gun Mounting Hole:	1/2" diameter

## NOTE

Please be sure to read the warnings on page 2.

The MAG AA Automatic spray gun uses high pressure to spray paints and solvents. Since liquids sprayed at high pressure can cause injuries, and some paints and solvents can be toxic or cause explosions and fires under certain conditions, your safety and the safety of others depend on your reading the information on this Part Sheet.

The MAG AA is approved to ATEX level II 2 G X and is suitable for use in zones 1 and 2.

If you have any questions or do not understand the information presented, call your nearest service representative.

Replaces  
Part Sheet  
77-2848R-1

Part  
Sheet  
77-2848R-2

# ⚠ WARNING



HIGH PRESSURE CAN CAUSE SERIOUS INJURY IF EQUIPMENT IS INSTALLED OR USED INCORRECTLY—

**READ, UNDERSTAND, AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL.**

**OPERATE EQUIPMENT ONLY AFTER ALL INSTRUCTIONS ARE CLEARLY UNDERSTOOD.**

In this part sheet, the words **WARNING**, **CAUTION** and **NOTE** are used to emphasize important safety information as follows:

**⚠ WARNING**  
Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.

**⚠ CAUTION**  
Hazards or unsafe practices which could result in minor personal injury, product or property damage.

**NOTE**  
Important installation, operation or maintenance information.

### INJECTION HAZARD

Spray from the gun, hose leaks, or ruptured components can inject fluid into your body and cause extremely serious injury, including poisoning or the need for amputation. Splashing fluid in eyes or on skin can also cause a serious injury.

- Fluid injected into the skin might look like just a cut, but is a serious injury and should be treated as such. GET IMMEDIATE MEDICAL ATTENTION. INFORM THE PHYSICIAN WHAT TYPE OF MATERIAL WAS INJECTED.
- Do not point the spray gun at anyone or any part of the body.
- Do not put fingers or hand over the spray tip.
- Do not stop or detect fluid leaks with a rag, hand, body or glove.
- Do not use a rag to blow back fluid. THIS IS NOT AN AIR SPRAY GUN.
- Engage the gun safety when not spraying.
- ALWAYS RELIEVE THE PRESSURE WHENEVER WORKING ON THE SPRAY GUN.
- Tighten all fluid connections before operating equipment.
- Check all hoses, tubes, and couplings daily. Replace all worn, damaged, or loose parts immediately.

Hazardous fluids or toxic fumes can cause serious injury or death if splashed on skin or in the eyes, swallowed or inhaled.

### TOXIC FLUID HAZARD

- Know the specific hazards of the fluid you are using. This information is on the MSDS for the material being used. Read all fluid manufacturer's warnings.
- Store hazardous fluids in approved containers only. Dispose of all hazardous fluids in accordance with all state, local and national guidelines.
- Wear the appropriate protective clothing, gloves, eyewear and respirator.

Equipment misuse can cause the equipment to fail, malfunction, or start unexpectedly and result in serious injury.

### EQUIPMENT MISUSE HAZARD

- This equipment is for professional use only.
- Read and understand all instructional manuals, tags, and labels before operating equipment.

- Use the equipment only for its intended purpose. If you are unsure about its purpose call your local Binks distributor.
- Do not alter or modify this equipment. Use only genuine Binks parts.
- Do not exceed the maximum working pressure of the lowest rated system component. THE MAXIMUM RATING OF THE MAG AA Automatic IS 4000 PSI (275 BAR) FLUID PRESSURE. DO NOT EXCEED THE FLUID PRESSURE RATING.
- Route all hoses away from all sharp edges, moving parts, hot surfaces and high traffic areas.
- Do not use hoses to pull the equipment.
- Use only Binks approved hoses. Do not remove spring guards from hoses, these are on the hoses to prevent rupture from kinking at the connectors.
- Use only solvents compatible with hoses and wetted parts of the equipment used.
- Comply with all applicable local state and national fire, electrical, and other safety regulations.

Improper grounding, poor air ventilation, open flames, or sparks can cause a hazardous condition and result in fire or explosion and cause serious injury.

### FIRE AND EXPLOSION HAZARD

- Ground the equipment and object being sprayed.
- Provide fresh air ventilation to avoid the build up of flammable fumes from the material being sprayed or from solvent.
- Extinguish all open flames or pilot lights in spray area.
- Electrically disconnect all equipment in the spray area.
- Keep the spray area free from all debris, including solvent rags.
- If there is any static sparking while using the equipment, STOP SPRAYING IMMEDIATELY. Identify and correct problem.

### NOISE LEVELS

- The A-weighted sound level of spray guns may exceed 85 dB(A) depending on the setup being used. It is recommended that ear protection is worn at all times when spraying.

The automatic Spray Gun models listed in the following declaration of conformity may be used in some potentially explosive atmospheres ONLY when the special conditions for safe installation and operation have been followed as expressed in this user manual (Part Sheet). These models are approved to ATEX regulations 94/9/EC, protection level: II 2 G X: Suitable for use in Zones 1 and 2.

<b>EC Declaration of Conformity</b>		CE
Manuf. By:	ITW Industrial Finishing 195 Internationale Blvd. Glendale Heights, IL 60139	
Type/Series:	Manifold Mounted Automatic Spray Guns	
Model:	MAG AA: 4003-, 4004-	
The equipment to which this document relates is in conformance with the following standards or other normative references:		
EN ISO 12100-1&2:2003 and BS EN 1953:1999 and thereby conform to the protection requirements of Council Directive 98/37/EC relating to Machinery Safety Directive, and;		
EN 13463-1:2001, Council Directive 94/9/EC relating to Equipment and Protective Systems for use in Potentially Explosive Atmospheres, protection level II 2 G X.		
Approved By:	 Chuck McCulloch, ITW Industrial Finishing	Date: April 17, 2006

---

## MAG AA AUTOMATIC SPRAY GUN SET-UP INSTRUCTIONS — SPRAY INSTRUCTIONS

### TO CHANGE FROM COMBINED FAN AND ATOMIZING AIR TO SEPARATE FAN AND ATOMIZING AIR.

1. Remove item (31) side port control by turning counter-clockwise with a 9/16 wrench.
2. Install item (32) set screw into thread at the bottom of tapered cavity of where the side port was.
3. Install item (33) side port plug into the upper part of the threaded cavity of where the side port was.
4. Remove item (29) 1/4 npt plug from the fan air port and replace it with item (35) D.M. nipple.

### SET UP FOR SPRAYING

Safe connection.

Verify that the gun is grounded per the automated machine manufacturer's recommendations.

Connecting gun to the material hose.

Gun should be connected by a suitable length of 3/8" diameter material hose fitted with a the appropriate connector that mounts to the 1/4" npt female thread of the fluid inlet portion of the manifold. 1/4" diameter hose is recommended for use with low viscosity materials. (Fluid hoses of different composition are available for special fluids.)

Connecting atomizing air to the manifold.

Guns should be connected by a suitable length of 5/16" diameter air hose fitted with a connector that accommodates a 1/4" nps (m) fitting and should connected the atomizing air port.

Connecting air cylinder to the manifold.

Connect 1/4" O.D. tubing to the air cylinder fitting located on the manifold.

Controlling the material flow.

When fed from a pressure supply, an increase in material pressure will increase the rate of flow. Correct fluid tip size ensures correct material flow rate.

Adjusting the spray pattern.

Utilizing the AA4 air cap and adjusting side port control you can get a 20% range of pattern Adjustment.

With the gun set up to operate with remote fan air you can accommodate a 40% reduction in pattern width by increasing air pressure to the fan port.

### GENERAL SPRAY INSTRUCTIONS

1. Have at least 55-60 psi air pressure for the cylinder operating air.
2. To reduce overspray and obtain maximum efficiency, always spray with the lowest possible fluid/air pressure that produces an acceptable pattern.
3. The air line to a three way valve should be as short as possible for rapid operation.
4. All the air used in the gun should be dirt and moisture free. This is accomplished by using an oil and water extractor.
5. Shut off all the fluid and air lines to the gun if the gun is to stand idle for any length of time. This is to prevent build-up or accumulation of minute leaks in the system from turning the gun on.
6. The distance between gun and surface should be 6 to 12 inches depending on material and the atomizing pressure. The material deposited should always be even and wet. Lap each stroke over the proceeding stroke to obtain a uniform finish.
7. Set the fluid pressure to achieve low pressure airless pattern with tails approximately 300 to 500 psi.
8. Open the side port control knob.
9. Set the atomizing pressure to 5 psi and increase until the tails have been removed from the pattern and proper atomization has been achieved. If more than 30 psi of atomizing air is required, increase fluid pressure instead of atomizing air.
10. Note: Excessive fluid/air pressure will distort the spray pattern and produce excessive overspray. The "hourglass" and "tails" on a spray patterns indicate too low of fluid/air pressure or materials is too thick or viscous. A worn or clogged tip can also cause spray pattern distortion.

---

### FLUID TIP SELECTION

Factors to consider in selecting a fluid tip for an air-assisted airless spray gun include (1) the size of the parts being sprayed; (2) the production line speed; (3) the material flow rate and film thickness; (4) the viscosity of the material applied; (5) the type of material applied; and

(6) the quality of atomization of the coating required. The selection of a fluid tip necessary to perform a specific spraying job is best determined through a combination of experimentation and expert advice from your material and equipment suppliers.

## TROUBLESHOOTING DEFECTIVE SPRAY PATTERNS

The following procedure summarizes the steps that an operator must immediately take when the first signs of a defective spray pattern emerge.

1. Check the external portion of the fluid tip for material buildup. If buildup has occurred, secure the gun trigger safety switch and clean the gun fluid tip with a non-metal soft brush.
2. If the spray pattern exhibits signs of tails at the top or bottom ends of the pattern, increase the air pressure gradually until the tails disappear.
3. If increasing air pressure does not dissipate the tails, the fluid tip may be worn and may need to be replaced. Another sign of the need to replace a worn tip is a gradual decline in spraying pattern width.

4. If cleaning or replacing the fluid tip does not dissipate the tails; the spraying defect is most likely due to the material temperature and/or viscosity.
5. If pattern pulsation or blinking occurs, check the pressure regulators, all downstream regulators, and the pump. These may require further adjustment or even repairs.

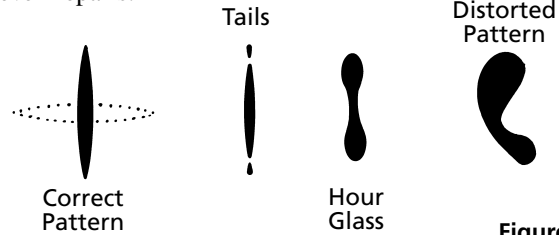


Figure 3

## SPRAY PATTERN TROUBLESHOOTING

PROBLEM	CAUSE	ACTION
<b>Fluttering Spray Pattern</b> 	Insufficient fluid supply.  Air in paint supply line.	Adjust fluid regulator or fill fluid supply tanks.  Check and tighten pump siphon hose connections, bleed air from paint line.
<b>Striping Spray – Fingers</b> 	Tip partially plugged.	Clean or replace tip assembly.
<b>Irregular Pattern</b> 	Fluid builds up on tip, or tip partially plugged.  On defective side of pattern, air horn holes are plugged.	Clean tip.  Clean air horn holes with solvent and a soft brush.
<b>Pattern pushed to one side, same side of air cap gets dirty</b> 	On defective side of pattern, air horn holes are plugged.	Clean air horn holes with solvent and a soft brush or toothpick.

### IMPORTANT REGULATORY NOTE

The MAG AA Automatic manifold mounted air-assisted automatic spray gun combines the proven efficiency of the Binks compliant spray guns with air-assisted atomization to yield a reliable, carefully engineered compliant spray gun. With 25' of 5/16" I.D. air hose and regulator set at only 20 p.s.i. the compliant air cap registers 10 p.s.i. of atomization air to shape and soften the spray pattern. The MAG AA Automatic manifold mounted air-assisted automatic spray gun operates at high transfer efficiencies and fully complies with all government regulations for H.V.L.P. spray guns.

	Max. Fluid Input:	4000 p.s.i.
Max. static air pressure at regulator with 25' of hose to inlet:		20 p.s.i.
Max. Dynamic Gun Inlet Air Pressure:		15 p.s.i.
	Gun Body:	Stainless Steel, Aluminum
	Fluid Path:	Stainless Steel

## MAG AA AUTOMATIC MANIFOLD MOUNTED AIR ASSISTED AIRLESS SPRAY GUN MAINTENANCE/TROUBLESHOOTING AND SERVICE INSTRUCTIONS

### NOTE

Disassemble spray gun and remove all o-rings before immersing gun in or subjecting it to a flood-wash of cleaning solvent. Contact with solvents may induce o-ring swelling beyond their specification sizes and cause subsequent malfunction of the gun.

Use **PTFE** (Cooper #540 395) based grease to lubricate all o-rings and moving parts before reassembly into the gun body.

To further protect the environment, avoid storing solvents or solvent-soaked wipes, such as those used for surface preparation and cleanup, in open or absorbent containers.

### TROUBLESHOOTING

Numbers in parentheses refer to individual items shown in the “exploded” drawing on page 7.

### ⚠ CAUTION

Never use metal instruments to clean or scrape fluid or air nozzles. These parts have been carefully machined and altering their shape will cause faulty spray.

### ⚠ CAUTION

Never use lubricants containing silicone since these lubricants can cause finish defects.

### ⚠ WARNING

Be sure to follow all safety precautions described on page 2 before working on the spray gun. Never work on the spray gun until fluid pressure has been relieved throughout the system and the power or air supply for the fluid pump has been disconnected. Always test the repaired gun for leaks with low pressure fluid before use.

### SERVICING/REPLACING AIR CAP, CARBIDE TIP AND FLUID SEAT ASSEMBLY

#### Service symptoms:

- Build-up on air cap or clogged carbide tip
- Fluid seat assembly not sealing properly

1. Turn retaining ring (16) counterclockwise and remove.
2. Remove air cap (17) and carbide tip assembly (18) from fluid seat assembly (19). With the air cap facing up, apply pressure to carbide tip (18) and remove from air cap (17).
3. Turn fluid seat assembly (19) counterclockwise and remove.
4. Service or replace and reassemble in reverse order.

### NOTE

Carbide fluid tip needs to be oriented properly in the air cap. The alignment pin in the air cap is to be properly positioned to the slot in the carbide tip.

### REPLACING FLUID CARTRIDGE AND FLUID NEEDLE

#### Service symptoms:

- Fluid leaking from weeps port

1. Turn end cap (1) counterclockwise and remove the piston return spring from the piston body (23) and needle return spring (38).
2. With two 5/16" wrenches (not supplied with gun), loosen collet locknut (9) from collet (10).
3. Using a pair of pliers, grip collet (10) and remove piston assembly (5).
4. Place the 3/8" deep socket (supplied with gun) over cartridge assembly (15) and turn counterclockwise.
5. Replace fluid needle (15a) or fluid cartridge assembly (15b) and reassemble in reverse order using the new components as required.

### NOTE

Piston assembly (5) must be bottomed out on the piston housing (23) with collet (10) and locknut (9) positioned such that the e-clip (12) is resting against the piston assembly.

### NOTE

If the piston is not positioned correctly, the fluid-to-air timing will not work correctly. See pictorial view on page 6.

6. After the piston assembly has been positioned properly, tighten locknut (9) to collet (10) “wrench tight”.

### REPLACING O-RINGS ON PISTON ASSEMBLY

#### Service symptoms:

- Atomizing air not cycling off
- Air not actuating fluid

1. Turn end cap (1) counterclockwise and remove the piston return spring from the piston body (23) and needle return spring (38).
2. With two 5/16" wrenches (not supplied with gun), loosen collet locknut (9) from collet (10).
3. Using a pair of pliers, grip collet (10) and remove piston assembly (5).
4. Replace o-rings (7, 8, 13 & 14) using Standard Piston O-ring Repair Kit 54-5303 or High Performance Piston O-ring Repair Kit 54-5307.
5. Apply 41-4458 **PTFE**-based lubricant provided in the o-ring repair kits to o-rings and reassemble in reverse order.

### NOTE

Piston assembly (5) must be bottomed out on the piston housing (23) with collet (10) and locknut (9) positioned such that the e-clip (12) is resting against the piston assembly.

### NOTE

If the piston is not positioned correctly, the fluid-to-air timing will not work correctly. See pictorial view on page 6.

6. After the piston assembly has been positioned properly, tighten locknut (9) to collet (10) “wrench tight”.

### SERVICING/REPLACING FILTER

#### Service symptoms:

- Fluid tip clogging or restriction in fluid flow

1. Using a 3/4" inch wrench, turn filter retainer (27) counterclockwise and remove.
2. Place a standard screwdriver inside the cavity where the filter (30) is housed and dislodge it by lifting up with the screwdriver. Remove filter and clean or replace as required. Most of the time you can dislodge the filter using your finger.
3. Reassemble in reverse order.

### NOTE

O-ring (28) does not require replacement when servicing filter. Replace o-ring (28) if a leak develops around filter retainer (27).

### REMOVING/REPLACING GUN ASSEMBLY MODULE ONLY FROM INLET MANIFOLD ASSEMBLY


1. Using a 9/64" Allen wrench (supplied with gun), turn retaining cap screw (20) counterclockwise typical 4 places and remove gun sub module.

### NOTE

O-rings (22 & 24) must be replaced when replacing gun sub module.

2. Mount the new gun module, tightening the retaining screws (20) “wrench tight”. This will allow fluid and air passages to seal with no contamination.


## MAG AA AUTOMATIC MOUNTING SPECIFICATIONS

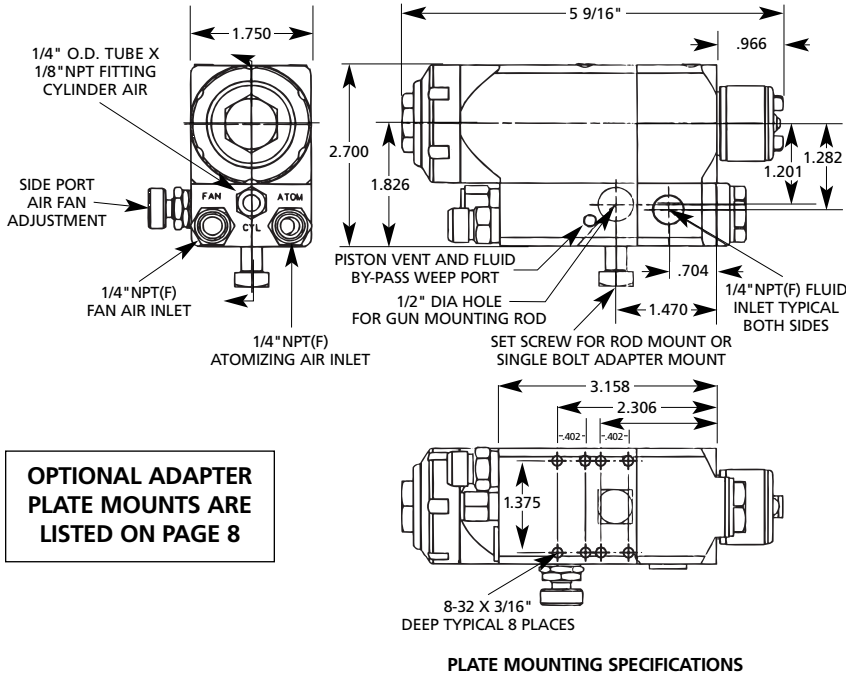


## MAG AA AUTOMATIC PISTON POSITIONING




Install piston assembly into piston housing. Be sure all o-rings are properly lubricated with 41-4458 PTFE-based lubricant provided with o-ring repair kits.

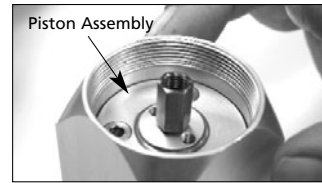


Piston assembly must be bottomed out in the piston housing (approximately 5/8" from the top of the piston housing).

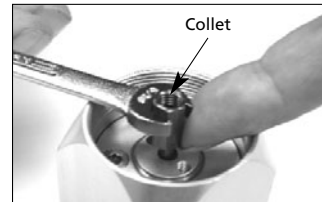

Lift the collet until it stops and hold in an upright position while inserting a 5/16" wrench onto the collet.

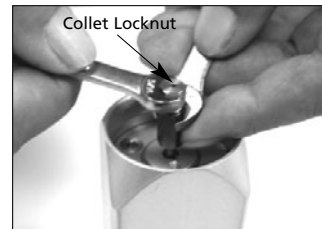

Insert and tighten the collet locknut using a second 5/16" wrench and "wrench tighten".

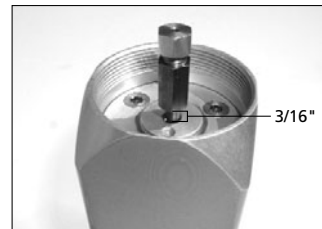


If properly assembled, bottom of collet should be 3/16" from the top of the piston assembly.

**NOTE**


The gun will leak air if the piston is not adjusted correctly.

## MAG AA AUTOMATIC HOSE HOOK-UPS


### Hose Hook-Up with Atomizing/Fan Air COMBINED

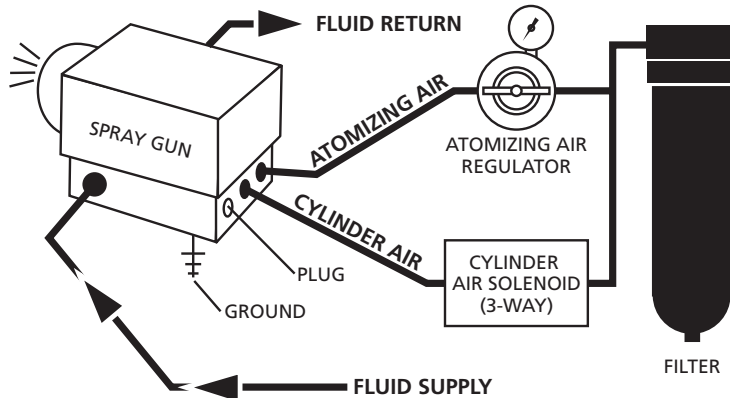

### Hose Hook-Up with Atomizing/Fan Air SEPARATED

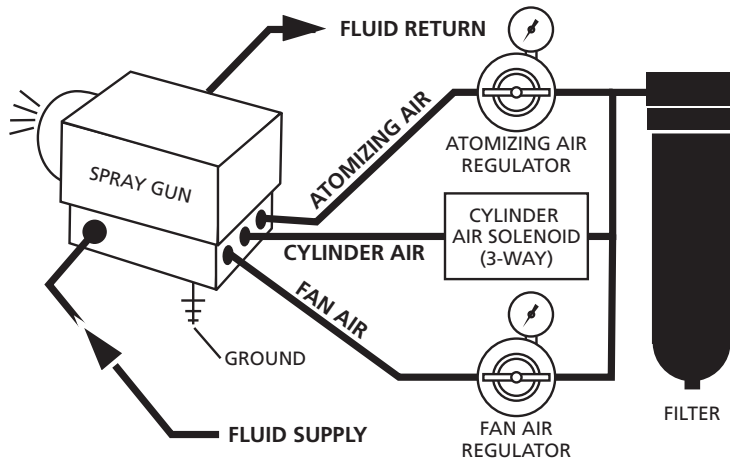

# MAG AA AUTOMATIC MANIFOLD MOUNTED AIR ASSISTED AIRLESS SPRAY GUN

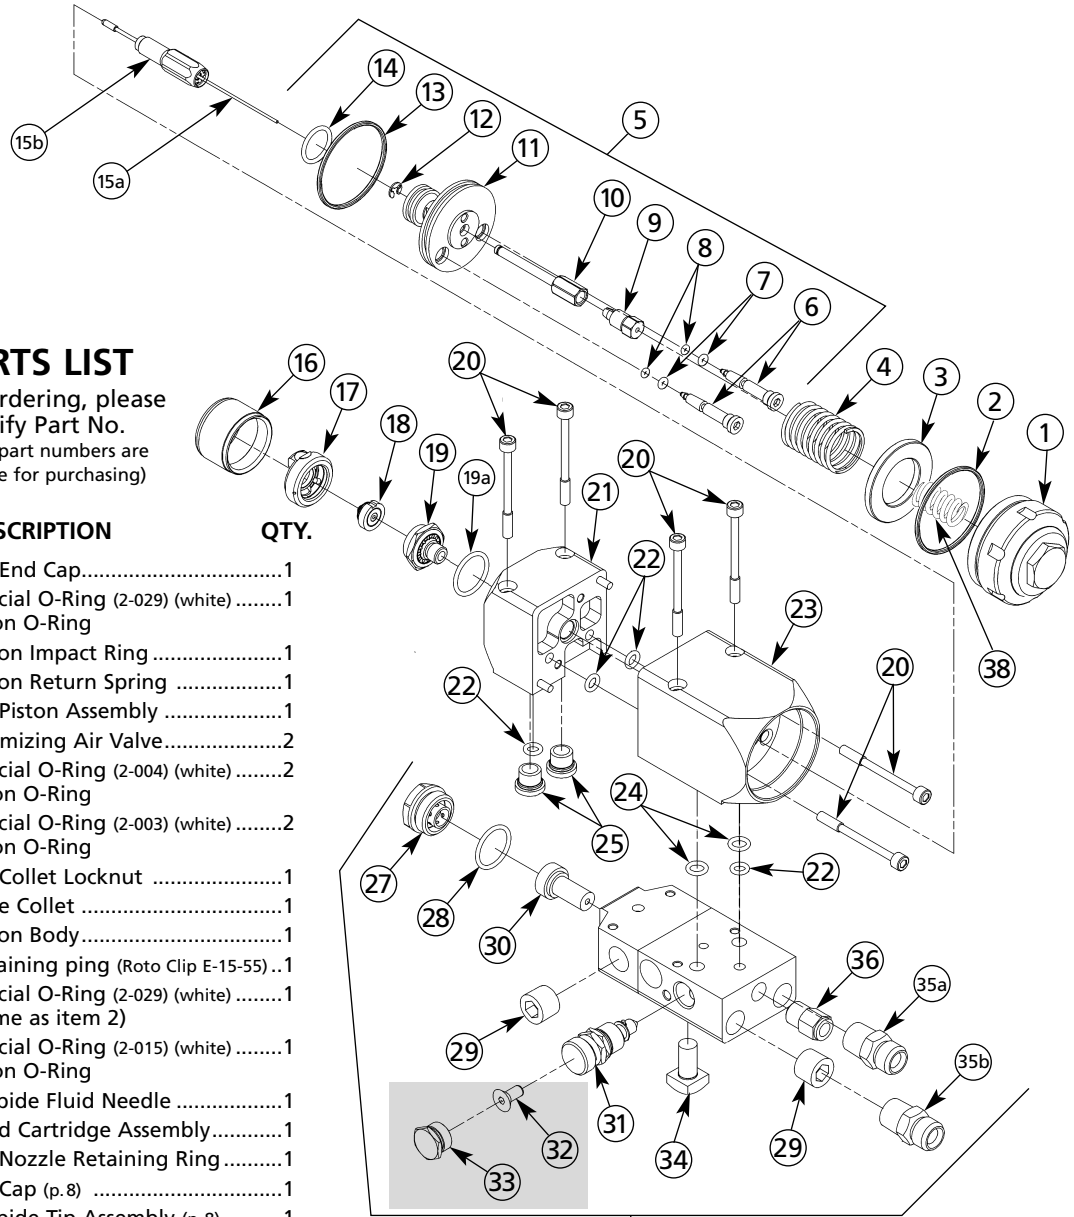

## PARTS LIST

When ordering, please specify Part No.  
(Not all part numbers are available for purchasing)

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	54-5386	UV End Cap.....	1
2	20-6783▲	Special O-Ring (2-029) (white) .....	1
	20-6747	Viton O-Ring	
3	54-5331•	Piston Impact Ring .....	1
4	54-5332	Piston Return Spring .....	1
5	54-5380	UV Piston Assembly .....	1
6	54-5318▲	Atomizing Air Valve.....	2
7	20-6785▲	Special O-Ring (2-004) (white) .....	2
	20-6746	Viton O-Ring	
8	20-6786	Special O-Ring (2-003) (white) .....	2
	20-5520	Viton O-Ring	
9	54-5387+	UV Collet Locknut .....	1
10	54-5317+	Wire Collet .....	1
11	54-5320▲	Piston Body.....	1
12	20-6757+	Retaining ping (Roto Clip E-15-55) ..	1
13	20-6783▲	Special O-Ring (2-029) (white) .....	1
		(Same as item 2)	
14	20-6784▲	Special O-Ring (2-015) (white) .....	1
	20-3541	Viton O-Ring	
15a	54-5378	Carbide Fluid Needle .....	1
15b	54-5376	Fluid Cartridge Assembly.....	1
16	54-4955	Air Nozzle Retaining Ring .....	1
17	—◆	Air Cap (p.8) .....	1
18	—	Carbide Tip Assembly (p.8) .....	1
19	54-4960	Fluid Seat Assembly (Carbide) .....	1
19a	20-6037■	O-Ring <b>PTFE</b> .....	1
20	54-5333‡	Retaining Cap Screw .....	4
21	54-5325	Gun Head Assembly.....	1
22	20-4615-5**	O-Ring (2-008) <b>PTFE</b> (Qty. Pak) ....	1
23	54-5324	Automatic Piston Housing.....	1
24	20-3467**	O-Ring (2-010) <b>PTFE</b> .....	2
25	54-5326	Fluid Manifold Port Plug .....	2
26	54-5335	Air/Fluid Inlet Manifold Assembly .....	1
27	54-5340	Filter Retainer Assembly .....	1
28	20-5921**	O-Ring (2-017) <b>PTFE</b> .....	1
29	20-6131	1/4 NPT Plug Hex Socket HD S.S. ....	2
30	54-1835	100 Mesh Filter Assembly .....	1
31	54-3720	Side Port Assembly.....	1
32	20-6748★	Screw 10-32 x 1/4 Flathead Allan HD Pltd .....	1
33	102-2839★	Side Port Plug.....	1
34	20-1359-1	Screw Sq HD 5/16-18 x 5/8 .....	1
35a	57-13	1/4 NPS x 1/4 NPT DM Nipple ....	2
35b	57-13★	Optional Setup (Same as 35a)	

OPTIONAL SETUP: ITEMS 32 AND 33 MAY REPLACE ITEM 31 (SIDE PORT ASSEMBLY) WHEN ITEM 31 IS NOT REQUIRED.

ITEM NO.	PART NO.	DESCRIPTION	QTY.
36	54-4945-10	Tube Connector (Qty. Pak) (1/8 NPT(W) x 1/4 Tubing) .....	1
37	20-6782‡	Allen Skt HD 8-32 x 1-3/4 Lg .....	2
38	54-5379	Needle Return Spring .....	1

**Tools provided with spray gun:**  
20-3586 ALLEN WRENCH (9/64")  
20-6571 SOCKET WRENCH (3/8")

- Available as part of Rebuild Kit 54-5307. High Performance Seal Kit.
- ▲ Available as part of Piston Assembly 54-5355. 54-5355 is a part of 54-5315 and is available separately.
- ‡ Available as part of Piston Collet Repair Kit 54-5396.
- ◆ Also available: 20-6750-K10 (Kit of 10 O-rings for AA4 Aircap).
- Available as part of 20-6037-K10 Soft Seal Kit (10 rings).
- ‡ Available as part of 54-5333-K6.
- ★ Item Nos. 32, 33 and 35b are provided in a separate bag.
- \*\* Available as part of Rebuild Kit 54-5303 Standard Performance Seal Kit.



# MAG AA AUTOMATIC MANIFOLD MOUNTED AIR ASSISTED AIRLESS SPRAY GUN

## REPAIR, CLEANING & MOUNTING KITS

PART NO.	DESCRIPTION
20-6750-K10	Kit of 10 O-rings (for AA4 air cap)
54-4994	Cleaning Kit : includes one standard stiff nylon pipe cleaning brush, full-size nylon brush, tip cleaner, and Binks Gunners Mate Lubricant
54-5303	Standard Performance Seal Kit
54-5396	Piston Collet Repair Kit
54-5307	High Performance Seal Kit
54-5305	Optional Mount "K" Kit: includes adapter plate assembly
54-5306	CEFLA Fluid Fitting Kit
54-5315	Piston Assembly AA Gun
54-5399	Single Bolt CEFLA Adapter Kit
54-5300	MAG UV Conversion Kit

## FLUID SEATS

PART NO.	DESCRIPTION
54-4960	Standard UHMW Fluid Seat
54-4926	Optional Tungsten Carbide Fluid Seat

## FLUID FILTER

PART NO.	DESCRIPTION
54-1835	100 Mesh Filter

## AIR CAPS

PART NO.	DESCRIPTION
AA-2 - 54-4980	Thin to Medium Materials
AA-4 - 54-4978	Medium to Heavy Materials
AA-10 - 54-5346	Medium to High Solids

## ACCESSORIES

PART NO.	DESCRIPTION
41-4458	<b>PTFE</b> O-ring Lube
54-4997	HVLP Test Gauge AA2
54-5022	HVLP Test Gauge AA4
54-380	Gun Mounting Bracket
54-3691	Gun Covers (Package of 20)

## HOW TO ORDER THE MAG AA AUTOMATIC SPRAY GUN WITH MANIFOLD

4003-0000-0	MAG AA Automatic Spray Gun WITH MANIFOLD, less Air Cap and Spray Tip
4003-0000-2	MAG AA Automatic Spray Gun WITH MANIFOLD & AA2 AIR CAP, less Spray Tip
4003-0000-4	MAG AA Automatic Spray Gun WITH MANIFOLD & AA4 AIR CAP, less Spray Tip
4003-0000-10	MAG AA Automatic Spray Gun WITH MANIFOLD & AA10 AIR CAP, less Spray Tip

## HOW TO ORDER THE MAG AA AUTOMATIC SPRAY GUN WITHOUT MANIFOLD

4004-0000-0	MAG AA Automatic Spray Gun WITHOUT MANIFOLD, less Air Cap and Spray Tip
4004-0000-2	MAG AA Automatic Spray Gun WITHOUT MANIFOLD, WITH AA2 AIR CAP, less Spray Tip
4004-0000-4	MAG AA Automatic Spray Gun WITHOUT MANIFOLD, WITH AA4 AIR CAP, less Spray Tip
4004-0000-10	MAG AA Automatic Spray Gun WITHOUT MANIFOLD, WITH AA10 AIR CAP, less Spray Tip

Spray tips must be ordered separately. Use the spray tip selection chart to determine orifice size and fan size required.

## SPRAY TIP SELECTION CHARTS

Fan width based on 1000 PSI with water. Actual results may vary, depending on material viscosity.

PART NUMBER	DESCRIPTION	ORIFICE	FAN WIDTH (IN.)	GPM CAPACITY @500 PSI WATER
114-00702	TIP ASSEMBLY	.007	2	.028
114-00704	TIP ASSEMBLY	.007	4	.028
114-00706	TIP ASSEMBLY	.007	6	.028
114-00707	TIP ASSEMBLY	.007	8	.028
114-00902	TIP ASSEMBLY	.009	2	.039
114-00904	TIP ASSEMBLY	.009	4	.039
114-00906	TIP ASSEMBLY	.009	6	.039
114-00908	TIP ASSEMBLY	.009	8	.039
114-00910	TIP ASSEMBLY	.009	10	.039
114-00912	TIP ASSEMBLY	.009	12	.039
114-01104	TIP ASSEMBLY	.011	4	.060
114-01106	TIP ASSEMBLY	.011	6	.060
114-01108	TIP ASSEMBLY	.011	8	.060
114-01110	TIP ASSEMBLY	.011	10	.060
114-01112	TIP ASSEMBLY	.011	12	.060
114-01114	TIP ASSEMBLY	.011	14	.060
114-01304	TIP ASSEMBLY	.013	4	.090
114-01306	TIP ASSEMBLY	.013	6	.090
114-01308	TIP ASSEMBLY	.013	8	.090
114-01310	TIP ASSEMBLY	.013	10	.090
114-01312	TIP ASSEMBLY	.013	12	.090
114-01314	TIP ASSEMBLY	.013	14	.090
114-01316	TIP ASSEMBLY	.013	16	.090
114-01506	TIP ASSEMBLY	.015	6	.120
114-01508	TIP ASSEMBLY	.015	8	.120
114-01510	TIP ASSEMBLY	.015	10	.120
114-01512	TIP ASSEMBLY	.015	12	.120
114-01514	TIP ASSEMBLY	.015	14	.120
114-01516	TIP ASSEMBLY	.015	16	.120
114-01518	TIP ASSEMBLY	.015	18	.120
114-01706	TIP ASSEMBLY	.017	6	.160
114-01708	TIP ASSEMBLY	.017	8	.160
114-01710	TIP ASSEMBLY	.017	10	.160
114-01712	TIP ASSEMBLY	.017	12	.160
114-01714	TIP ASSEMBLY	.017	14	.160
114-01716	TIP ASSEMBLY	.017	16	.160
114-01718	TIP ASSEMBLY	.017	18	.160
114-01906	TIP ASSEMBLY	.019	6	.190
114-01908	TIP ASSEMBLY	.019	8	.190
114-01910	TIP ASSEMBLY	.019	10	.190
114-01912	TIP ASSEMBLY	.019	12	.190
114-01914	TIP ASSEMBLY	.019	14	.190
114-01916	TIP ASSEMBLY	.019	16	.190
114-01918	TIP ASSEMBLY	.019	18	.190
114-02110	TIP ASSEMBLY	.021	10	.240
114-02112	TIP ASSEMBLY	.021	12	.240
114-02114	TIP ASSEMBLY	.021	14	.240
114-02116	TIP ASSEMBLY	.021	16	.240
114-02118	TIP ASSEMBLY	.021	18	.240
114-02410	TIP ASSEMBLY	.024	10	.310
114-02412	TIP ASSEMBLY	.024	12	.310
114-02414	TIP ASSEMBLY	.024	14	.310
114-02416	TIP ASSEMBLY	.024	16	.310
114-02418	TIP ASSEMBLY	.024	18	.310
114-02710	TIP ASSEMBLY	.027	10	.385
114-02712	TIP ASSEMBLY	.027	12	.385
114-02714	TIP ASSEMBLY	.027	14	.385
114-02716	TIP ASSEMBLY	.027	16	.385
114-02718	TIP ASSEMBLY	.027	18	.385

## ITW Industrial Finishing

Binks has authorized distributors throughout the world. For technical assistance or the distributor nearest you, see listing below.

### U.S./Canada Technical Service Office:

195 Internationale Blvd., Glendale Heights, IL 60139  
Toll-Free Telephone: 1-888-992-4657 (U.S.A. and Canada only)  
Toll-Free Fax: 1-888-246-5732



An Illinois Tool Works Company

## WARRANTY

This product is covered by Binks' 1 Year Limited Warranty.

Binks Worldwide Sales and Service Listing: [www.binks.com](http://www.binks.com)

77-2848R-2 Revisions: (P5) Edited text; (P6) Edited Piston Positioning instructions; (P7) Updated Parts List; (P8) Edited Accessories, replaced Spray Tip Selection Charts.