

# aquaris E 1 ()

Complete User Manual

### Aquaris E10 / Aquaris E10 3G

The bq team would like to thank you for purchasing your new tablet Aquaris E10/Aquaris E10 3G. We hope you enjoy using it.

With this device you can browse the internet, check your email, play games, use apps (which you can download directly onto the device), read e-books, transfer files via Bluetooth®, record audio, watch movies, take photos and videos, listen to music, chat with your friends and family.

#### About This Manual

- To make sure that you use your tablet correctly, please read this manual carefully you start using it.
- Some of the images and screenshots shown in this manual may differ slightly from those of the final product.
- Due to firmware updates, it is possible that some of the information in this manual does not correspond exactly to the operation of your device. To obtain the most up-to-date version of this manual, please go to <u>www.bq.com</u>.
- bq shall not be held liable for any issues relating to performance or compatibility resulting from modification of the registry settings by the user. Nor shall it be held liable for any incompatibility issues with third-party applications available through the app stores.

#### Icon guide



**Danger:** This icon indicates situations that could pose a risk to personal safety or health.



**Warning:** Situations which pose no risk to personal safety or health, but could pose a risk to the correct functioning of the device.

Tip: Additional information to help you get the best out of your device.

#### Trademarks

The Bq logo is a registered trademark of Mundo Reader, S.L. The Android and Google Search<sup>™</sup> are registered trademarks of Google Inc. Wi-Fi® is a registered trademark of the Wi-Fi Alliance. Bluetooth® is a registered trademark of Bluetooth SIG, Inc. MicroSD<sup>™</sup> and the corresponding logo are registered trademarks of SD-3D, LLC. Dolby and the double-D symbol are registered trademarks of Dolby Laboratories. All other trademarks are the property of their respective owners. All rights reserved.

#### Contents

- 8 BEFORE YOU START
- 8 Box Contents
- 9 Product Overview
- 10 GETTING STARTED
- 10 Inserting a Micro-SIM Card\*
- 11 Inserting and Removing the MicroSD
- 12 Switching the Device On and Off
- 13 Charging the Tablet and Transferring Files
- 15 Setup Wizard
- 16 HOME SCREEN
- 16 Screen Lock
- 17 Home Screen
- 18 Extending the Home Screen
- 18 Adjusting Screen Rotation
- 19 Customising the Home Screen
- **19** Moving and Deleting Icons on the Home Screen
- 19 Creating App Folders
- 20 Taking Screenshots
- 20 Making Screen Recordings
- 20 Learning to Use the Multi-Touch Screen
- 23 Buttons and Icons
- 23 Status Bar
- 24 Notifications Bar
- 26 Keyboard

\* Only on the Aquaris E10 3G model

- 27 PHONE\*
- 27 Managing Contacts
- 27 Adding a Contact
- 28 Editing an Existing Contact
- 28 Using a Contact
- 29 Create a Group of Contacts
- 30 Contacts to Display
- 30 Importing and Exporting Contacts
- 31 Blocking a Contact
- 31 Calls
- 33 Options Available During a Phone Call
- 34 Hiding Your Caller ID
- **Restricting Calls** 34
- 35 SMS and MMS
- 35 Message Settings
- 37 **SETTINGS**
- 37 WIRELESS SETTINGS
- SIM Management\* 37
- 38 Wi-Fi
- 39 Bluetooth
- 40 Data Usage
- 40 More...
- 42 **DEVICE SETTINGS**
- 42 Audio Profiles
- 43 Display
- 45 Storage
- 46 Battery
- 46 Apps
- 46 Users
- 47 **PERSONAL SETTINGS**
- 47 Location
- 48 Security
- Language and Text Input 49
- 50 Backup & reset

- 51 ACCOUNTS
- 52 SYSTEM SETTINGS
- 52 Date and Time
- 52 Scheduled Power On and Off
- 53 Accessibility
- 56 Printing
- 56 About Tablet
- 56 Developer Options
- 58 PERFORMANCE SETTINGS
- 58 Optimising Battery Life
- 58 Monitoring Battery Usage Information
- 59 EMAIL
- 59 Setting Up a Gmail Account
- 60 Setting Up Other Email Accounts
- 61 Sending an Email
- 61 Replying to an Email
- 62 MULTIMEDIA
- 62 Camera
- 63 Photo and Video Settings
- 66 Preset Image Modes
- 67 Image Gallery
- 68 Playing Music
- 69 Playing Videos
- 70 APPLICATIONS
- 70 App Store
- 70 Apps from Unknown Sources
- 71 Preinstalled Apps
- 71 Internet Browser
- 72 Chat
- 73 Text Editor, Spreadsheets and Presentations
- 73 Calendar
- 74 Maps and GPS Navigation
- 74 File Explorer
- 75 Dolby
- 76 News & Weather (Genie Widget)

- 77 TOOLS
- Calculator 77
- 77 Clock
- 78 Sound Recorder
- 78 FM Radio
- 79 Voice Search
- 80 APPENDICES
- 80 APPENDIX A: OTA Updates
- **APPENDIX B: Technical Specifications** 81
- APPENDIX C: Cleaning and Safety 82
- APPENDIX D: Information on Exposure to Radio Waves and 85 the SAR Information on Exposure to Radio Waves and SAR (Specific Absorption Rate)
- APPENDIX E: Disposing of his Product Correctly 86
- 87 **APPENDIX F: Declaration of Conformity**


#### **BEFORE YOU START**

#### **Box Contents**

Before using your bq device for the first time, please check the contents of the box. If any of the following items are missing, contact the retailer that sold you the device.

- ✓ Aquaris E10 / Aquaris E10 3G
- ✓ USB to micro-USB cable
- $\checkmark$  Mains charger
- ✓ SIM key (only with Aquaris E10 3G model)
- ✓ Documentation: Quick Start Guide
   Warranty and Safety Manual bq Accessories

#### **Product Overview**

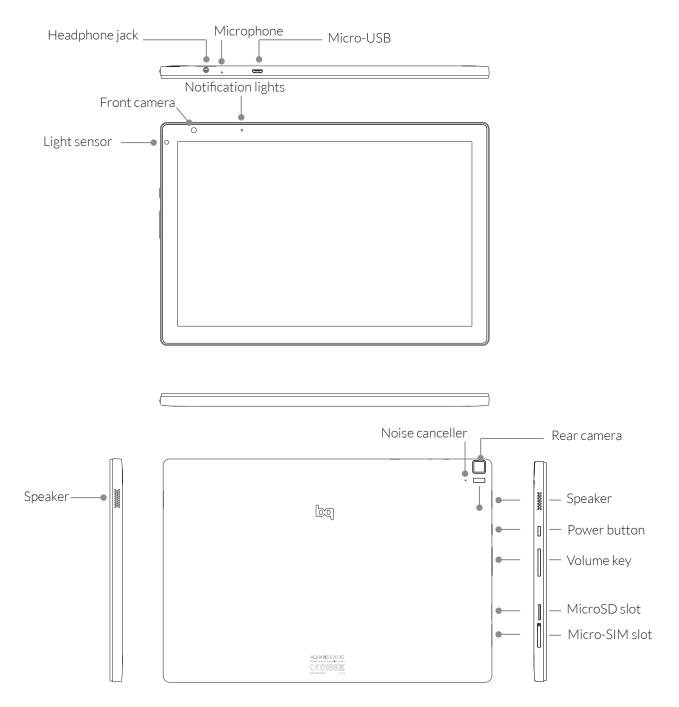

\* SIM card slot only available on the Aquaris E10 3G model.

Do not attempt to remove the rear cover of your Bq Aquaris E10 / Aquaris E10 3G, as this may damage the device.

Do not remove the battery by any means. Removing it may invalidate the warranty.

Do not insert any pointed objects into the opening as this may damage the microphone.


#### GETTING STARTED
 
#### Inserting a Micro-SIM card\*


Your Bq Aquaris E10 3G takes a micro-SIM card. The SIM tray is accessed from the exterior of the device. The rear cover should not be removed under any circumstances.

The following steps will help you to insert the card into your tablet before you start using it.


You will find a SIM key included in the box, together with the envelope containing the device documentation.




Ensure that the device is switched off and insert the end of the SIM key into the hole of the SIM slot.

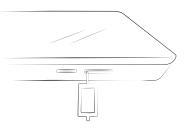

 Place your SIM card in the tray. Make sure it is in the correct position by using the notch on the corner to guide you (see image).



Put the tray back into the slot after mounting the SIM card.

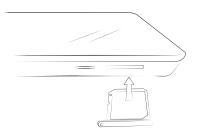

\* SIM card slot only available on the Aquaris E10 3G model.


AQUARIS E10

#### Inserting and Removing the MicroSD

 Your Bq Aquaris E10 / Aquaris E10 3G has an internal memory that can be expanded to 32 GB by using a MicroSD card.


To insert a MicroSD card, follow these steps:

Insert the MicroSD card into the slot, making sure the metal pins are at the bottom and facing backwards (i.e. towards the back of the device).



Push the card in until you hear a slight click, which indicates that it has been inserted correctly. If the card is not inserted correctly, the device may not recognise it and its content will not be available.

¡CLICK!

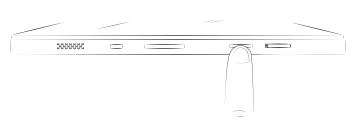

To remove the MicroSD card, follow the steps above in reverse, bearing in mind the following recommendations:

a. For greater security, switch the device off before removing the MicroSD card.

b. If you need to remove the MicroSD card while the device is switched on, unmount it first to avoid damaging the card and losing any data.

To unmount the card, open the Settings menu on your device and go to *Storage > Remove SD card*.


Push the card in until you hear a slight click to indicate that the card has been released. When you remove your finger, the card will slide partially out of the slot, allowing you to remove it completely.




You can choose whether to store your multimedia files on the tablet's internal memory or directly onto the MicroSD card. Remember that any content stored on the MicroSD card will not be available when the card is removed, and any apps stored on there will no longer function.

#### Switching the Device On and Off

 To switch on your Bq Aquaris E10 / Aquaris E10 3G, press and hold down (for a few seconds) the power button located on the side of the tablet.



To switch off the device, press and hold down the power button until a pop-up menu appears, containing a number of different options. Select the **Power off** option in order to switch your device off completely.

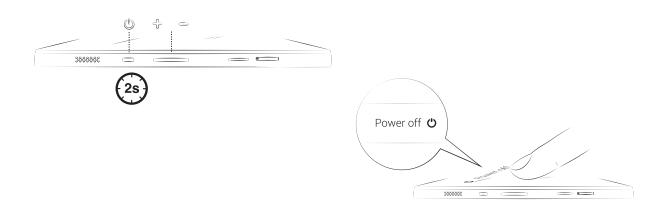



#### Charging the Tablet and Transferring Files

Your tablet has a rechargeable (non-removable) battery 8680 mAh which is charged via the micro-USB port at the bottom of the device. A USB to micro-USB cable and mains adapter are provided with the tablet. To charge it, follow these simple steps:

- A) Using the mains adapter:
  - **1.** Plug the USB cable into the mains adapter.
  - 2. Connect the mains adapter to any standard plug socket (220 V/50 Hz).
  - **3.** Plug the other end of the cable into the micro-USB port on your tablet.



- Using a laptop or desktop computer: B)
  - **1.** Plug the USB cable into a compatible USB port on your computer.
  - 2. Plug the other end of the cable into the micro-USB port on your tablet.



The battery in your bq Aquaris E10 / Aquaris E10 3G mini is non-removable. If it is removed by anyone other than our Technical Support staff, your device could be damaged and the warranty invalidated



Allowing the battery to charge fully is recommended when you charge it for the first time as this will help calibrate the battery meter. Bear in mind that some batteries perform better after a number of full charge/discharge cycles.




The time required to charge your device may vary slightly depending on whether it is charged via the mains adapter or via a computer USB port.

If you connect your tablet to a computer using the USB cable, you can also **transfer** files between the two devices (to/from the internal memory, or the MicroSD card, if one is in use). This will allow you to use, copy or store images, videos, music, text documents, etc. on one or both devices.

You can select the file transfer mode when you connect your bg Aguaris E10 / Aquaris E10 3G to a computer. Swipe down (with a single finger) from the top of the screen in order to display the various options for **USB computer connection**. The tablet will be connected as a **Media** device (MTP) by default or you can also connect it as a Camera (PTP).

There are a number of ways to transfer files. The steps below will show you how to transfer them via USB:

- 1. Connect your bg Aquaris E10 / Aquaris E10 3G to a computer using the micro-USB to USB cable supplied. Insert the micro-USB connector into the corresponding port on the device, and the generic USB connector into the corresponding port on the computer.
- 2. Select and copy the desired files onto your tablet or computer. Remember that you can store them on either the internal memory or on the MicroSD card if you are using one.

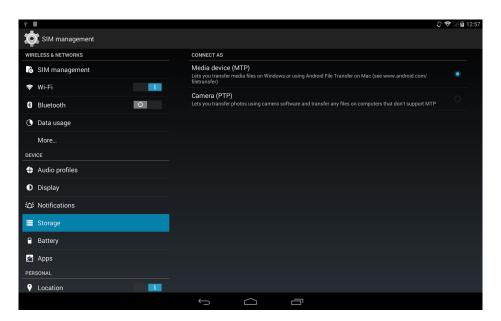



To transfer files in MTP or PTP mode from your tablet (internal memory or MicroSD card) onto a computer running Mac OS (and vice versa), you will need to download and install the free Android File Transfer app onto your computer: www.android.com/filetransfer/.



Do not disconnect the cable while files are being transferred.

#### Setup Wizard

The first time you switch on your bq Aquaris E10 / Aquaris E10 3G, a setup wizard will help you to configure the basic settings for your device:

- · Language
- Wi-Finetwork
- · Google account
- · Location and Google settings
- $\cdot$  Device name
- · bq Protection Plus

Deutsch (Österreich)	NextDinlight25 Secured with WPA2	<b>®</b>
nglish (United Kingdom)	test	କ୍ଷ
English (United States)	Secured with 802.1x HARDWARETEST	- -
	Secured with WPA2 mexap2	
	Secured with WPA2 STARTIC, CORP	
	Secured with WPA2	<b>1</b>
		<b>*</b>
	+ Other network	
		Skip
♥1	ب ج ۲	
s. Google services	• • This tablet belongs to	
● BACKUP & RESTORE	v	
BACKUP & RESTORE     Back up your data to a Google Account. Restore previous backups to this device.	This tablet belongs to	
BACKUP & RESTORE     Back up your data to a Google Account. Restore previous backups to this device.     Data includes appl, age settings, system settings and W-P pacewords.	• This tablet belongs to The tablet uses your name to personalise some apps.	
BACKUP & RESTORE     Back up your data to a Google Account. Restore previous backups to this device.	• This tablet belongs to The tablet uses your name to personalise some apps.	
BACKUP & RESTORE     Back up your data to a Google Account. Restore previous backups to this device.      Lika includes agait, agai antitrigs, system settings and Wi-P parameters.     LocAttion	• This tablet belongs to The tablet uses your name to personalise some apps.	7 I 0 P
BACKUP & RESTORE     Back up your data to a Google Account. Restore previous backups to this device.      Data includes agai, aga intrings, syntem intrings and Winf parameters.     LocATION     LoCATION     LocATION	This tablet belongs to The tablet uses your name to personalise some apps. Marketing	
BACKUP & RESTORE     Back up your data to a Google Account. Restore previous backups to this device.      that includes agait, agait strating, syntem settings and Wirk paramodes.     LOCATION     LocATION     Just apps better determine your location. Anonymous location data will be collected and sent to Google.     For improved accuracy and other purposes, scan for WirFinetworks, even when WirFile off.	This tablet belongs to The tablet uses your name to personalise some apps. Marketing	<sup>7</sup> I00P JKL



#### HOME SCREEN

#### Screen Lock

Your tablet screen will lock itself after a prolonged period of inactivity. To configure the screen timeout interval, press the Menu button 🕮, go to Settings > Display > Sleep and select the desired time interval. To switch the screen off manually, briefly press the power button.

To unlock the screen, press (but do not hold down) the power button and the screen will come on, displaying the unlock option. To change the unlock option, press the Menu button, go to Settings > Security > Screen lock and choose from the following options: None, Slide, Face Unlock, Voice Unlock, Pattern, PIN and Password. For more information on each of these options, go to Settings > Security.



 $\overline{\mathbb{N}}$ 

If you forget how to unlock the screen, after various wrong attempts, the Forgot pattern message will appear at the bottom of the screen. If you press this message you will be asked to enter the email address and password used to set up your tablet. The screen lock will then be removed.

Your Aquaris E10 / Aquaris E10 3G includes a new feature that enables you to lock and unlock your tablet via double tap control. Simply tap any part of the screen twice in quick succession so that it lights up and requests the unlock pattern. When the screen is activated, a double-tap anywhere in the notifications bar will lock and deactivate it.

This feature is disabled by default, so in order to use it you will need to activate it by going to Settings > Display > Double tap control.

¥ ∎ 		🖋 🖬 🖬 23:0
SIM management		
👌 SIM management	Wallpaper Default	
🗢 Wi-Fi	Deraurt DISPLAY	
Bluetooth	Brightness	
O Data usage		
More	Auto-rotate screen	
DEVICE	Sleep After 2 minutes of inactivity	
Audio profiles	Daydream	
🕐 Display	Clock	
込 Notifications	Font size Small	
Storage	MHL settings Click to configure MHL	
Battery		
🖾 Apps	Double tap control	
PERSONAL	Cast screen	
Location		
	5 <u>0</u> a	

#### Home Screen

The **Home screen**, or Start screen, is your main access route to the tools and apps installed on your device. From here, you can check the status of your device, visit websites, open apps, and much more.



- **Status and Notifications bar.** Displays the time, the Wi-Fi, 3G\* (Aquaris E10 3G model only) and Bluetooth connection status, the sound profile and the remaining battery life. Slide the bar downwards from the left to check your notifications, or from the right to access the quick settings menu.
- 2 **Google search.** Press the search bar to enter the text you want to search for on the internet. You can also carry out a voice search.
- 3 Shortcuts. These give you quick access to the apps you use most frequently.
- App menu. Here you can access all the apps installed on your device.

From the **Home screen** you can also press the Menu button, or touch and hold an empty area of the screen, to bring up the customisation options. These options consist of the following:

- Wallpaper: You can select which image to use as a background for the **Home screen** and extended screens.
- Widgets: You can add different widgets to the **Home screen**. Widgets are small apps or programs whose main function is to provide quick and easy access to the tablet's features, and to display information on various subjects such as the news, weather, etc.
- $\cdot\,$  Settings: This option takes you directly to the device's Settings menu, which can also be accessed via the Notifications bar and the App menu.

As well as widgets, you can also add shortcuts to your Home screen that give you direct access to apps, contacts, etc. To do this, go to the App menu, touch and hold the app you want to create a shortcut for, and drag it into the desired position onto the Home screen.

#### Extending the Home Screen

The **Home Screen** has a screen that can expand up to four desktops more, which you can customise with shortcuts, applications or widgets. To scroll through the **Home screen** and **extended screens**, simply slide the screen to the left or right using your finger.

#### Adjusting Screen Rotation

For some apps, the screen will rotate automatically from portrait (vertical) into landscape (horizontal) mode and vice versa, depending on how you are holding your device. If you want to stop the screen from rotating, press the **Menu** button, go to *Settings > Display* and untick the **Auto-rotate screen** option.

You can also activate and deactivate automatic screen rotation via the corresponding option (Auto-Rotate) in the Quick Settings menu.

AQUARIS E10

#### Customising the Home Screen

You can customise your tablet's **Home screen** and **Extended screens** by using your own images as wallpaper, adding icons, widgets and shortcuts to your favourite apps, etc.

To change the wallpaper or add a widget, press briefly on the background image of the **Home screen** or any of the **Extended screens**. A pop-up window will appear enabling you to choose between **Wallpapers**, **Widgets** or **Settings**.

If you click on the **Wallpapers** option, you can select your desired image and then press **Set wallpaper** to confirm your choice. If you have selected a large image, you will need to crop it accordingly.

#### Moving and Deleting Icons on the Home Screen

To move an element on the **Home screen**, press down to detach it from the background, then drag it to the desired position and release. You can also move icons from one extended screen to another by dragging them to the edge.

To delete an icon, drag it to the top of the screen until an X and the word "**Remove**" appear. When the icon turns red, release it to delete.

#### **Creating App Folders**

To create a folder, drag one icon on top of another that you want to store in the same folder. A folder will automatically be created and the icons placed inside it. You can add more icons to the folder by simply dragging them into it. To name a folder (or rename an existing one), press briefly on it and then on the "Unnamed folder" option. You can remove icons from the folder by opening it and dragging them out.

#### **Taking Screenshots**

You can take a screenshot at any time by simply pressing and holding the lower volume button and the power button down simultaneously. The screenshot will be automatically saved in the Gallery, in the Screenshot folder. If you are accessing the tablet via your computer, go to Pictures > Screenshots.

#### **Making Screen Recordings**

Making a screen recording is very similar to taking a screenshot. Press the upper volume button and the power button at the same time in order to start recording, and press them again to stop. The video will be saved in the same folder as the screenshots.



You can also take screenshots and make screen recordings by pulling down the Notifications bar with two fingers and selecting the corresponding option from the pull-down menu.

#### Learning to Use the Multi-Touch Screen


Your tablet has a capacitive multi-touch screen with five simultaneous detection points. Different movements can be made over these points which are linked to different functions:

**Touch.** Touch the screen briefly to select an icon, open an app, activate a text-entry box. etc.

**Touch and hold.** Touch the screen (on either a clear area or on an icon) with your finger and hold for approximately 2 seconds to bring up a menu of available options.




**Drag.** To move an icon, press and hold down, drag it to the desired position and then release.

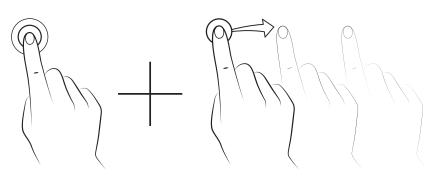

**Swipe or slide.** On the **Home screen**, slide your finger left or right across the screen to access the extended screens, or slide your finger up and down the screen to scroll through a webpage, list or menu



Pinch. Place two fingers on the screen at the same time and move them towards one.

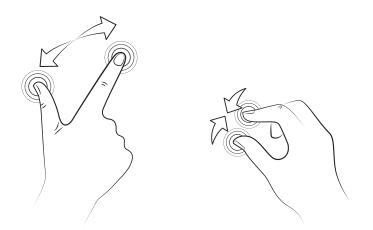

**Double-tap.** Tap the screen twice in quick succession to increase the zoom. Repeat the action to zoom out again. You can also use it to activate the screen.



AQUARIS E10

#### Buttons and Icons

Below is a short description of the different buttons and icons, along with recommendations for how to use them.

While you are using an app, you can return to the previous screen by pressing the **Back** button —.

You can go to the Home screen at any time by pressing the **Home** button  $\bigcirc$ . You can also touch and hold to access the Google Now application.

You can access the options menu for an app by pressing the **Menu** button  $\square$ .

#### Status Bar

The Status bar contains important information and is always visible at the top of the screen.

The main icons it displays include the following:

- 8
  - Battery almost empty.
- Battery charging.
- Battery fully charged.
- Wi-Fi enabled and connected to a network.
- Sound off and vibrate on.
- 🖋 Sound and vibrate off.
- → Aeroplane mode activated.
- Data services enabled (this could be G, E, 3G, H or H+ according to the type of data connection and the transfer speed).
- $\Psi$  USB connected.
- Bluetooth enabled.



#### Notifications Bar

Pull the bar down from the top left of the screen to view the notifications. Delete all notifications by pressing the 🚅 icon, or delete each one by swiping it to the side of the screen. Pull the bar down from the top right of the screen to view the Quick Settings.



The list of options provide quick and easy access to many different settings, such as the screen brightness and connections, etc.

The options that can be enabled and disabled from the Quick Settings menu (accessed by pulling down the Status bar from the top left) include:



**Brightness:** You can select from automatic or manual brightness adjustment and set the desired level.



**Settings:** Opens the general Settings menu.



Wi-Fi: Enables/disables the Wi-Fi connection.

**Coverage bar:** Displays the level of network coverage. You can choose to connect via 2G and/or 3G technology.



**Volume:** Enables control of the audio volume (**General, Notifications, Multimedia** and **Alarms**).

Battery: Provides direct access to Settings > Battery.

Auto-Rotation: Enables/disables automatic rotation of the screen.

**Contion:** Enables/disables GPS on your tablet.

Aeroplane mode: Enables/disables the signal.

 $\Psi$  **Tethering:** Access to the tethering and Wi-Fi zone settings.

(a) Lock/Sleep: Activates the screen lock.

Sync: Enables/disables automatic syncing of the device.

**◄ Audio Profiles:** Select from General, Silent, Meeting or Outdoor.

**Cast screen:** Enables detection of remote screens for sending images and sound.

Data connection: Enables/disables your data connection.



**Screen record:** Enables you to make a real-time video recording of what is being shown on the screen.



**Screenshot:** Take a picture of the screen via the pull-down menu.

**U** Shutdown: Enables power-off via the pull-down menu.





**OO** Sound record: Gives you access to the app for making audio recordings.


You can access advanced settings for certain functions such as Wi-Fi and Bluetooth by touching and holding the corresponding icon on the list.



When automatic brightness is deactivated, you can adjust the brightness level of the screen by sliding your finger to the left or right.

#### Keyboard

Pressing on any text field will bring up the virtual keyboard.

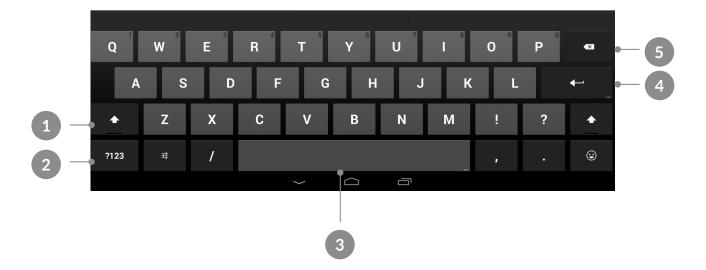

- Enable/disable Caps lock. 1
- 2 Open/close the number and symbol keyboard.
- 3 Space bar.
- 4 Enter/return.
- 5 Delete.



The keys with "..." in the bottom right-hand corner provide access to additional features when you touch and hold them.



You can find more information on the keyboard settings and languages for text entry via Settings > Personal > Language & input.

Complete User Manual AQUARIS E10

#### PHONE\*

#### Managing Contacts

The **Contacts** application provides access to all of your saved contacts on your SIM card, the internal memory of your device and any online accounts you have set up.

Using this application you can:

- · Create new contacts
- Update existing contacts
- · Create a group of contacts
- · Select the lists to be displayed
- Make phone calls or send SMS
- · Blocking Contacts

#### Adding a Contact

You can add a new contact manually to your list via the **Contacts** app or via the **Call** history.

To add a contact manually:

- 1. Open the **Contacts** app via the **Home screen**.
- 2. Press the  $\square_{+}$  icon and the list of available accounts will appear on screen.
- 3. Fill in the fields as desired:
  - a. Name and surname
  - b. Organisation
  - c. Phone numbers
  - d. Fmail
  - e. Postal address
  - f. Add another field
- 4. Press Done to save the contact.

<sup>\*</sup> Only on the Aquaris E10 3G model.

To add a contact via call history, press the **Contacts** icon to the left of the number you want to add (pressing directly on the number will call it) and then press the **Create new contact** icon on the right. You can also select an existing contact if you want to add a new number. Then select the account where you want to store the new contact, and fill in the details as described above.



We recommend that you always save contacts to your Google account, so that you always have a backup copy if your device is lost or stolen. This will also give you remote access to your contacts from any other device.

#### Editing an Existing Contact

- 1. Open the Contacts app via the Home screen.
- 2. Select the contact you want to edit.
- 3. Press on the **i**con to see more options and select **Edit**.
- 4. Press one of the existing fields to edit it, or select Add another field to save new information.
- 5. Press Done to save the changes.

#### Using a Contact

You can use the **Contacts** app to make a call, send a text message or communicate via other channels with the contacts you have added to the list.

Simply press the name of the person you want to contact and select the corresponding option. You can also press on the contact photo to bring up a quick menu. From here you can:

- · Make a phone call
  - Press on the number you want to call.
- · Make a video call
  - Press the Licon and select which SIM card you want to use to make the video call.
- · Send an SMS
  - Click on the er icon and you type your message.

Complete User Manual AQUARIS E10

- · Send an email
  - Press on the desired email address.
  - Select the desired email client (Email, Gmail, etc.).
- · Other options (press the icon in the top right corner)
  - Share: Share this contact with another of your contacts.
  - Delete contact
  - Print
  - Set ringtone: Enables you to assign a different ringtone for a specific contact
  - Block incoming calls: Restrict incoming calls from a contact.
  - Add to Home screen: Select a page to appear as your home page on opening the browser.

#### **Create a Group of Contacts**

The **Contacts** app also allows you to create groups, so that you can organise your contacts quickly and easily. For example, you can have different groups for friends, colleagues, family, etc.

To create a group:

- 1. Select the 🙅 tab on your contacts list.
- 2. Press the 🙅 icon at the top of the screen.
- 3. You can choose to store the contact to your Google account or the tablet.
- 4. Enter the group name and the contacts will be added to it.
- 5. Press OK to save it and it will appear in the list of groups.

When you save a contact on the tablet, you can set a special ringtone or notification for the entire group so that you can easily recognise incoming calls and messages from members of that group.

#### Contacts to Display

This is a very useful option that allows you to choose which contacts are shown on your contacts list. Select from those saved to your Gmail account, your phone, your Facebook contacts and other lists.

To do this, follow these instructions:

- 1. Open the contacts list and press the icon.
- 2. Select the Contacts to display option.
- 3. Select which contact groups you want to be displayed:
  - a. All contacts.
  - b. Gmail contacts.
  - c. Tablet contacts.
  - d. Customise: Select sub-groups from within any of the previous options

(family, friends, etc.)

#### Importing and Exporting Contacts

This option allows you to copy a series of contacts from one source and paste it onto another account or app or the internal device memory. To do this:

- 1. Press the icon from the contact list.
- 2. Press on Import/Export.
- 3. Select the location for copying contacts.
- 4. Select the destination for pasting them.
- 5. Select the contacts to be copied.
- 6. Press OK to start the process.

Complete User Manual AQUARIS E10

#### **Blocking a Contact**

- 1. Open you entry for the contact you want to block by pressing on the image.
- 2. Press the icon to access more options.
- 3. Tick the Block incoming calls option.

#### Calls

Press on the phone 📞 icon on the Home screen to access the call menu. This menu enables you to:

- · View the contacts that you call the most
- · View the incoming and outgoing call history
- Make calls

From this menu, you can view your list by pressing All contacts, or by pressing the icon followed by Contacts.

Press the (1) icon to display your call history, where you can see a chronological list of all the calls you have made and received (ordered by most recent).

There are a number of ways to make a phone call:

#### Via your list of contacts

- 1. Access the list by any of the above methods.
- 2. Press the name of the contact you want to call.
- 3. Press on the number to call.

#### Via call history


- 1. Press the phone 📞 icon on the Home screen.
- 2. Press the clock ( )icon.
- 3. Press on the 📞 phone icon next to the contact that you want to call.

#### Open the keypad.

- 1. Press the phone **C** icon on the **Home screen**.
- 2. Press the **III** icon to display the keypad.
- 3. Enter the number you want to call.
- 4. Press the phone **\$** icon at the bottom of the screen to call the number you have entered.

When you receive an incoming call, you can choose to answer it, reject it or respond via text message.

When your tablet is ringing, the screen will display the phone number calling you and a circle of blinking dots.

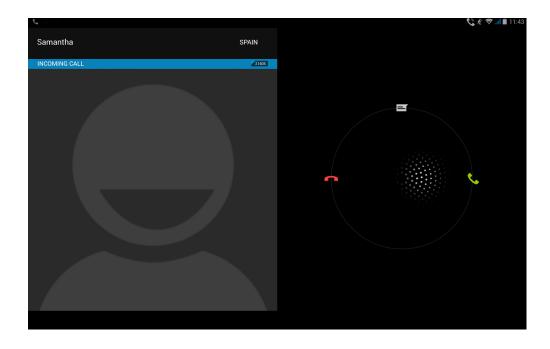

Choose from the following options:


- 1. Press the circle and drag it to the left to reject the call.
- 2. Press the circle and drag it to the right to answer the call.
- 3. Press the circle and drag it upwards to respond with a text message.

#### **Options Available During a Phone Call**

If you have answered the call, the top of the screen will show the caller's name (if stored on your lists of contacts), the phone number (mobile and/or landline), the country they are calling from and the SIM card network in use for this call.

Various options will be displayed at the bottom of the screen during the call:

- Open the keypad.
- Activate the external speaker (useful for hands-free operation).
- **J** Mute the internal microphone.
- Pause the call and place the caller on hold.
- End the call by pressing the red phone icon.
- To add another contact to the call in progress:
- First place the call in progress on hold, and call the contact you want to add.
- When you are connected to the new contact, you will have the option of alternating the conversations or combining them in a conference call.

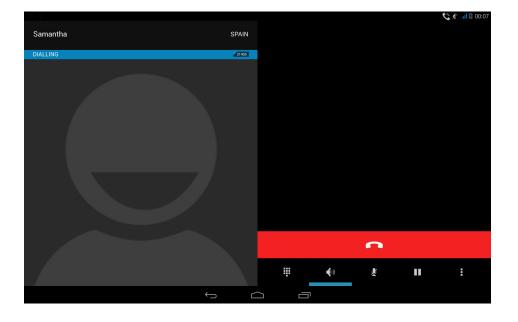

You can also hide your number for outgoing calls, so that the person you are calling won't see your number.

#### **Hiding Your Caller ID**

- 1. Open the Call menu by pressing the 🔪 icon on the Home screen.
- 2. Press the icon and select Settings.
- 3. Go to Voice call > Additional settings.
- 4. Press Caller ID.
- 5. Select the Hide number option.



Making a test call is recommended to check that you have hidden your number correctly. Some network operators do not allow hidden numbers and your number may still be displayed on outgoing calls.

#### **Restricting Calls**

It might be useful to restrict certain call types from time to time, whether incoming or outgoing. To do this you will need to access the call barring menu:

- 1. Open the call application by pressing the 📞 icon on the Home screen.
- 2. Press the icon and select Settings.
- 3. Select Voice call.
- 4. Press on Call barring.
- 5. Select the type of calls to be restricted from these options (any restrictions will be applied for all calls, individual numbers cannot be restricted):
  - a. All outgoing calls
  - b. International outgoing calls
  - c. International outgoing calls except to home PLMN
  - d. All incoming calls
  - e. Incoming calls while roaming

To restrict incoming calls from individual numbers, follow the instructions in the previous section on Blocking a contact.

## Complete User Manual AQUARIS E10

#### SMS and MMS

To send an SMS (text message), go to Messaging via the apps menu or via the shortcut on the Home screen.

You can then specify the recipient(s) by entering their name(s) in the To field at the top of the screen or by pressing the  $\square_1$  icon to the right to select a name from your contact list. If the recipient's number is not stored on your contact list you can type it in directly.

You also have to option to send an MMS (multimedia message). Simply press the + icon located on the bottom right. On pressing this icon, a variety of multimedia options will appear for attaching files to the MMS:

- · Capture picture
- · Capture video
- · Record audio
- · Contact
- · Pictures
- · Video
- · Audio
- Slideshow

Text messages are limited to a maximum of 140 characters per message. You can write longer texts which will be sent as a single message, however, for billing purposes, your network operator will treat them as several messages. In contrast, there is no limit to the text you can send with an MMS after attaching the multimedia file.

Once you have added the recipient, the text and the MMS file, simply press the Send  $\triangleright$  icon located to the right of the text and your message will be sent.

#### Message Settings

Via the Messaging app you can configure various options for sending and receiving SMS and MMS. Press the icon and go to **Settings**:

- SMS Enabled: Touch to change your default SMS app **Messaging (**by default) or **Hangouts.**
- Text messages (SMS):
  - Delivery reports: Request a message to confirm that your SMS has been received by the recipient
  - Manage SIM card messages
  - Edit quick text: edit the list of default responses to suit your needs
  - SMS service centre
  - SMS storage location
- Multimedia messages (MMS):
  - Group messaging
  - Delivery reports
  - Read reports
  - Send read report
  - Auto-retrieve.
    - \* National
    - \* Roaming auto-retrieve
  - Creation mode
  - Size limit: the maximum size for MMS messages.
  - Priority
- · Notifications:
  - Mute
  - Select ringtone
  - Vibrate
  - Pop-up notification
- $\cdot\,$  General: adjust how messages and chat are displayed within the app.



### **SETTINGS**

#### WIRELESS SETTINGS

## SIM Management\*

You can select and deselect the SIM card for phone calls, video calls, sending messages and the data connection. You can edit the SIM name, enter the phone number, set the background colour and the display numbers.

Under General settings, you can configure the Roaming settings if you use your tablet abroad, as well as the **SIM card detection** settings.

Ý 🖬 📗	🗘 🗢 🕅 🖬 12:4
SIM management	
👌 SIM management	SIM INFORMATION
🕏 Wi-Fi	Crange
8 Bluetooth	DEFAULT SETTINGS
🕚 Data usage	Data connection     Orange
More	CENERAL SETTINGS
DEVICE	Roaming
Audio profiles	
Display	
泣: Notifications	
Storage	
Battery	
🖄 Apps	
PERSONAL	
Location	

\*Only on the Aquaris E10 3G model.

# 📚 Wi-Fi

Before browsing the internet via Wi-Fi, you will need to connect to a Wi-Fi network and configure it in some cases. To do this, go to *Settings > Wireless and Networks*.

If Wi-Fi is disabled, move the selector to the right. Press on **Wi-Fi** and your device will automatically search for and display a list of available Wi-Fi networks, which updates automatically.

⊈ <b>Ⅲ</b>		🕺 📶 🖬 22:56
SIM management		<b>()</b> + :
诸 SIM management	Wi-Fi_1 Secured with WPA	Scan
🗢 Wi-Fi	Wi-Fi_2	WPS Pin Entry
8 Bluetooth	Secured with 802.1x	Wi-Fi Direct
Data usage	Wi-Fi_3 Secured with WPA/WPA2	Advanced
More	Wi-Fi_4 Secured with WPA (WPS available)	<b>F</b>
DEVICE	Wi-Fi_5	
Audio profiles	Secured with WPA (WPS available)	<b>T</b>
🗘 Display	Wi-Fi_6 Secured with WEP	7
迎 Notifications	Wi-Fi_7	
🚍 Storage	Secured with WPA/WPA2	· <b>_</b>
Battery	Wi-Fi_8 Secured with WPA/WPA2	
🖄 Apps	Wi-Fi_9 Secured with WPA2	7
PERSONAL	Wi-Fi_10	
Location	Secured with WPA/WPA2	<b>7</b>
	1 (1)	

Press the name of the network you want to connect to, enter the password if necessary and press **Connect**. If the tablet connects successfully, **Connected** will appear below the name of the network.

There is a time limit for entering the Wi-Fi password, after which the Wi-Fi will be disabled. Selecting the **Show password** option is recommended before entering the password, to ensure you can enter it quickly and correctly.

When Wi-Fi is enabled, the device will automatically connect to the chosen network. If your device detects a network that has never been configured, it will notify you.

To access the Scan, WPS Pin Entry, Wi-Fi Direct and Advanced settings for the network, go to *Settings > Wireless and networks > Wi-Fi*, then press the Menu button .

anual AQUARIS E10

WPS PIN. Depending on the router you are using, this tool enables you to connect to your Wi-Fi network more easily and securely. You can connect and sync your tablet with your router by pressing the (), icon on your device (or going to *Menu* > *WPS PIN*) and the physical WPS PIN on your router simultaneously.

Advanced settings. Here you can request to be notified when networks are available, adjust the settings for Wi-Fi on sleep mode, optimise battery usage and access the IPv4/IPv6 and MAC addresses (the unique ID numbers assigned to each device).



## Bluetooth

To connect to and share files with other Bluetooth devices, you will need to enable it. Go to *Settings > Bluetooth* and slide the tab to the right.

Ŷ						🕺 📶 🖻 22:57
Ŕ	🕻 SIM management					SEARCH FOR DEVICES
6	SIM management					Rename tablet
¢	Wi-Fi					Visibility timeout
*	Bluetooth	0				Show files received
0	Data usage					Advanced settings
	More					
DEV	ICE					
\$	Audio profiles					
0	Display				To see devices, turn Bluetooth on.	
<u>ک</u>	Notifications					
0 0 0	Storage					
î	Battery					
2	Apps					
PER	SONAL					
Ŷ	Location					
2	<b>^</b> '			~		
			Ĵ	$\Box$		

# AQUARIS E10 Complete User Manual Settings

To configure the visibility timeout, rename your tablet, show received files or access the advanced settings, press the **Menu** button .

To connect your tablet to other devices, go to *Settings > Wireless and networks > Bluetooth* and select the name that corresponds to your device. Your device will then be visible to other devices for a period of 2 minutes.

To connect to another device, provided that both devices are visible, simply press the name of the device you want to connect to. A pop-up window will appear on your screen with a **Bluetooth pairing request**; accept the request and then synchronise it with the other device. Press Pair on your Bq and confirm on the other device to sync them.



## Data Usage

In this section, you can view the statistics of each application for data transfers via Wi-Fi or mobile internet<sup>\*</sup>. Under the **Overview tab**, you will see the data traffic for today and in total, whereas under Wi-Fi, you can view the data traffic statistics for each application.

ቁ III					🕺 📶 🖬 22:58
🔯 SIM management					
SIM management		OVE	RVIEW	ORANGE	
🕏 Wi-Fi	∧ Mobile				
8 Bluetooth O					
🕚 Data usage	Orange				0.00B
More	~ Wi-Fi				
DEVICE					
Audio profiles					
Display					
泣: Notifications					
Storage					
Battery					
🖄 Apps					
PERSONAL					
Location					
<b>0</b> • • •					
	Ĵ	$\Box$	Ū		

### More...

Here you can activate **Aeroplane mode**, manage Tethering and the virtual private network (**VPN**) settings on your device.

\* Only on the Aquaris E10 3G model.

AOUARIS E10

약 <b>III</b>		🕺 📶 🖻 23:00
SIM management		
SIM management	Aeroplane mode	
🕏 Wi-Fi	Default SMS app	
8 Bluetooth	Messaging	
🕚 Data usage	Tethering & portable hotspot	
More	VPN	
DEVICE		
Audio profiles	Mobile networks	
Display		
泣: Notifications		
Storage		
Battery		
🖄 Apps		
PERSONAL		
Location		
0.0		

Aeroplane mode: Selecting this option will disable all wireless connections..

Default SMS app: Determine the application for sending SMS.

**Tethering and portable hotspots:** First make sure that your data connection service is be enabled under **Mobile networks.** Then go to **Tethering** and **portable hotspot** and enable the **Wi-Fi hotspot**.

Under *Wi-Fi hotspot > Set up Wi-Fi hotspot*, you can check your device's **SSID network** name and view your password (by ticking the **Show password** box). The same settings must be entered on the device you want to connect to your shared Wi-Fi network. You can limit it so that only specific users can connect.

To share your connection via USB, connect your tablet to a computer using the cable and select the **USB tethering** option.

To share your connection via Bluetooth, select the **Bluetooth Tethering** option. To share your device's network with a computer, Bluetooth must be enabled on both devices.

**VPN:** This option enables you to configure a virtual private network.

This option enables users of the Aquaris E10 3G model to manage the **mobile networks.** You can enable or disable the modem, enable data via the mobile network, view the APN of your operator, set the connection for data roaming services, limit the use of 2G networks and select a network operator.

### **DEVICE SETTINGS**

# Audio Profiles

You can adjust the settings of the **General profile**. The other 3 profiles available are: **Silent** (no sound or vibration), **Meeting** (vibration only) and **Outdoor** (maximum volume and vibration).

ψ <b></b>		🕺 📶 🖻 23:01
SIM management		+ add + Reset
👌 SIM management	PREDEFINED PROFILES	
🕏 Wi-Fi	⊖ General <sub>Ring</sub>	ᅷ
8 Bluetooth O	<ul> <li>Silent</li> <li>Silent only</li> </ul>	
O Data usage	Meeting	
More	Vibrate only	
DEVICE	Outdoor Loudest ring and vibrate	
🕂 Audio profiles	DOLBY DIGITAL PLUS	
Display	Launch App	
汝 Notifications	Profile	
📕 Storage	Movie	
Battery		
🖄 Apps		
PERSONAL		
Cocation		
0.0		

You can also create a new profile by pressing on the Add button + in the top right corner, or you can also reset the default configuration by pressing the **Reset icon.** 

Under **General** or any new profile created, you can enable vibrate and select the tone for notifications and alarms. You can also enable or disable sounds and vibration alerts for system features such as: **Dial-pad touch tones, Touch sounds, Screen lock sounds** and **Vibrate on touch**.

You can also adjust the volume for **notifications** or **multimedia** content by pressing the **volume buttons**.

Under **Digital Dolby Plus**, you can **Launch App** to configure the application which is explained further on, or you can select a **Profile**.





Ŷ.		🖋 🔟 🖬 23:0
SIM management		
👌 SIM management	PERSONALIZE	
🕏 Wi-Fi	ClearMotion <sup>TM</sup> Video fluency enhancer	
8 Bluetooth	Lock screen notifications Show notifications on lock screen	
🕚 Data usage	Magnetic case sensor	
More	Enable/Disable the display with Duo Case	
DEVICE	Wallpaper Default	
Audio profiles	DISPLAY	
Display	Brightness	
え Notifications	Auto-rotate screen	
🗮 Storage		
Battery	Sleep After 2 minutes of inactivity	
🖄 Apps	Daydream <sub>Clock</sub>	
PERSONAL		
Location	Font size Small	
0.0	MUL cottingo	

**ClearMotion™:** Increases the number of frames and enhances the video fluency.

**Lock screen notifications:** Enable or disable this option to display the notifications received on your Bq when the screen is locked.

**Wallpaper:** Select an image or video to use as wallpaper. You can choose between live wallpaper, system wallpaper, photos from your Gallery or video images.

Brightness: Adjust the screen brightness level.

Auto-rotate screen: Enable or disable automatic screen rotation when turn your tablet sideways.

Sleep: Set the time delay before the screen automatically switches off.

Screensaver: Enable or disable this option.

Font Size: Choose from four different font sizes.


**MHL settings:** The MHL connection provides mobiles devices with 1080p Full HD digital output (sound at 192 kHz and 7.1, up to 8 digital audio channels), and allows portable electronic devices to be connected to high definition televisions (HDTV).

The MHL connection also helps to save battery power while the device is connected. Cable not included. **Double tap control:** Enable or disable this option so you can switch the display on or off by double tapping the screen.

**Notification lights:** You can set different notification LEDs for different applications, in terms of both colour and the blink speed.

This section enables you to set the colour of the LED for various applications that support customisation.

Simply press on the coloured circle and a pop-up window will appear enabling you to choose a colour and select the desired blink speed.

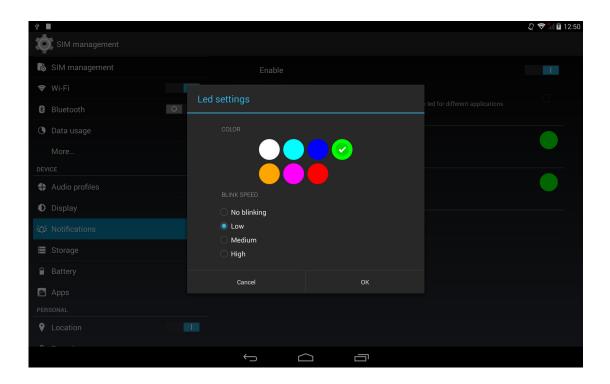

**Cast screen:** You can use your tablet to send an audio/video signal to a remote screen (another tablet, smartphone, television, etc.) using the Wi-Fi network to display its screen on both devices. The remote screen must be compatible with the Miracast/DLNA protocol in order to do this. Follow these steps to configure your Bq and duplicate your device's screen:

1. Switch on your compatible device and enable cast screen mode (the process will vary depending on the manufacturer).

Settings

**AQUARIS** E10

- 2. On your tablet, go to Settings > Device > Display.
- 3. Scroll down the list and select Cast screen.
- 4. Select the screen that you want to send audio/video from your tablet.
- 5. After a few seconds you will see your tablet screen duplicated on the other device in real time.

## **Storage**

Under this menu you can select the **Default write disk for your device**. You can also check the usage of the various storage units, unmount the SD card to remove it safely and erase all data from the SD card or internal memory.

If you remove the MicroSD card from your tablet and continue to use the device, some of your apps might not function until you reinsert it. Make sure you switch off the tablet or safely remove the MicroSD card (via the Storage menu) every time you remove it or insert it, otherwise the card could get damaged and data could be lost.

ΨI			🕺 📶 🖬 23:10
Ċ	SIM management		1
6	SIM management	internal storage	
		INTERNAL STORAGE	
()·	Wi-Fi		
*	Bluetooth		
	Determent	Total space	
0	Data usage	12.19GB	
	More	Available	
		11.86GB	
DEV	1CE	Apps (app data & media content)	
•	Audio profiles	304MB	
•0	Display	Pictures, videos 48.00KB	
÷Of	Notifications		
12,51		Audio (music, ringtones, podcasts, etc.)	
-	Storage	113MB	
		Downloads	i i
Ê	Battery	8.00КВ	
	4.5.5	Cached data	
ß	Apps	16.63MB	
PER	ISONAL		
•	Location	Misc. 68.00KB	
0	0	SD CARD	

# Battery

Here you can choose to display the remaining battery life as a percentage next to the meter in the status bar.

You can also view a graph showing battery duration and usage. Press the graph or the individual apps and resources on the list to view specific details on their usage.



# Apps

Here you can access all the apps on your tablet: downloaded apps, apps stored on the internal memory and MicroSD card, apps currently running and a list of all apps (to see these lists, slide the screen left or right). Press the name of an app or resource to find out more.



## Users\*

If you want to share this device with others you can create additional users.

Each user has their own space and they can personalise their applications, wallpapers and much more. Users can also adjust the settings of the tablet, such as the Wi-Fi connection, that affect all users prior to the configuration process.

Please note that any user can accept update app permissions on behalf of all users.


\* Only on the Aquaris E10 model.

## Settings AQUARIS E10

#### PERSONAL SETTINGS

## Location

Activating this option allows access to your location to apps that request it (such as preinstalled navigation maps). **The Power Control** widget also allows you to activate the **GPS satellites** option, or alternatively, it can be activated by pulling the **Notifications** bar down with two fingers and selecting the **Location** option.

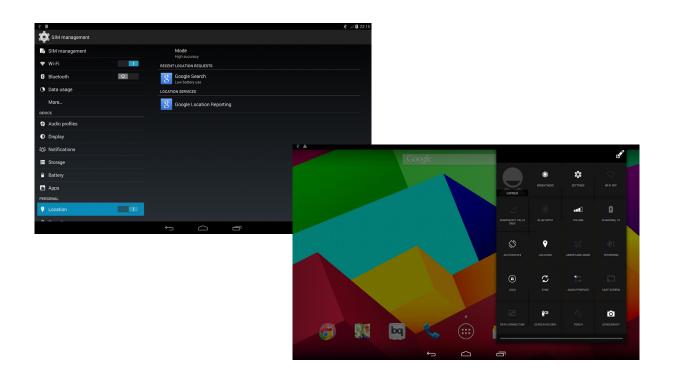

There are two ways of providing access to your location: **GPS satellites** and **Wi-Fi** & **mobile network** location.

Under Mode you can choose from:

- · High accuracy: GPS, Wi-Fi and mobile network
- · Battery saving: Only Wi-Fi and mobile network
- · Device only: GPS only

While the GPS function is always the most accurate, using your mobile network allows for faster positioning, making it easier to start navigating and to change direction.

Under the **Location** menu, you can also view a list of apps that have recently requested location access and the battery usage involved.

# Security

Here you can configure your tablet's **Screen lock** (i.e. the type of lock and the owner information to be displayed on the locked screen), activate the **Encrypt tablet** option with a PIN or password to access your device.

¥ ■			🕺 📶 🛿 22:28
SIM managem			
- onn manageme	···	SCREEN SECURITY	
🗢 Wi-Fi		Screen lock	
8 Bluetooth	0		
🕓 Data usage		Owner info	
More		ENCRYPTION	
DEVICE		Encrypt tablet Require a numerical PIN or password to decrypt your tablet each time that you turn it on	
Audio profiles		SIM CARD LOCK	
Display		Set up SIM card lock	
泣 Notifications		PASSWORDS	
🗮 Storage		Make passwords visible	<b>Z</b>
Battery		DEVICE ADMINISTRATION	
🖄 Apps		Device administrators	
PERSONAL		View or deactivate device administrators	
Cocation		Unknown sources Allow installation of apps from unknown sources	
🔒 Security		Verify apps Disallow or warn before installation of apps that may cause harm	
			🕺 📶 🖻 22:28
SIM managem			
🗢 Wi-Fi		PASSWORDS	
Bluetooth	0	Make passwords visible	<b>&gt;</b>
		DEVICE ADMINISTRATION	
C Data usage		Device administrators	
More		View or deactivate device administrators	
DEVICE		Unknown sources Allow installation of apps from unknown sources	
Audio profiles		Verify apps	<b>X</b>
Display		Disallow or warn before installation of apps that may cause harm	
必 Notifications		Storage type	
📰 Storage		Software only	
Battery		Trusted credentials Display trusted CA certificates	
🖄 Apps		Install from internal storage	
PERSONAL		Install certificates from internal storage	
Location			
Security			
		5 <u>6</u>	

Under **Device administration**, you can view or deactivate administrators, and enable or disable installation of apps from outside the preinstalled app store (to find out how to install such apps, see the **Apps** section of this manual). You can also manage the **Credential storage**, view trusted CA certificates and install certificates from your SD card.

# A Language and Text Input

Here you can set up the system language, activate spell checker and personal dictionary. You can also configure the keyboard, text input methods, voice typing and pointer speed.

ት 🔳		🕺 📶 🖪 22:29
SIM management		
Bluetooth	Language English (United Kingdom)	
🔇 Data usage	Spell checker	
More Device	Personal dictionary	
+ Audio profiles	KEYBOARD & INPUT METHODS	
🗘 Display	Default English (UK) - Google Keyboard	
泣 Notifications	Android Keyboard (AOSP) English (UK)	<u>+</u> +
E Storage	Google Keyboard English (UK)	
Battery	Accessibility Scan	
🖄 Apps	Accessibility scan English (GB)	
PERSONAL	Google voice typing	<u>+</u>
💡 Location	Automatic SPEECH	
Security	Voice Search	
🔺 Language & input		

The advanced settings for each method enable you to select options such as Vibrate or Sound on keypress.

¥ III			🕺 📶 🖻 22:32
Goog	gle Keyboa	ard Settings	
		Input languages English (UK)	
	GEN	NERAL	
		Auto-capitalisation	
		Vibrate on keypress	
		Sound on keypress	
	ТЕХ	(T CORRECTION	
		Personal dictionary	
		Add-on dictionaries	
		Block offensive words Do not suggest potentially offensive words	
		Auto-correction Correct mistyped words automatically with spacebar and punctuation	
		Show correction suggestions Always show	

\$ III		🖇 📶 🖬 22:31
Android Ke	yboard Settings (AOSP)	
	Sound on keypress	
	TEXT CORRECTION	
	Personal dictionary	
	Add-on dictionaries	
	Block offensive words Do not suggest potentially offensive words	
	Auto-correction Correct mistyped words automatically with spacebar and punctuation	
	Show correction suggestions Always show	
	OTHER OPTIONS	
	Next-word suggestions Use the previous word when making suggestions	
	Advanced settings Options for experts	

# Backup & reset

Here you can back up your app data and settings, Wi-Fi passwords, etc. on the Google data servers. (To back up your data, a Google account must be configured on your device).

Ŷ	W				🖋 📶 🖬 22:34		
¢	SIM management						
		BACKUP & RESTORE					
0	Data usage		Back up my data Back up app data, Wi-Fi passwords and other settings to Google servers				
	More	Back up :					
DE	VICE						
\$	Audio profiles						
0	Display						
	Notifications	PERSONAL DATA					
203	Notifications	DRM reset Deletes all DRM licences Factory data reset					
	Storage						
ŕ	Battery		ll data on tablet				
2	Apps						
PEF	RSONAL						
Ŷ	Location						
۵	Security						
Ą	Language & input						
Ð	Backup & reset						
		¢		a			

You can also carry out a factory data reset and delete all pending DRM (digital content protection) licences if you have already deleted the corresponding files.

Ξ


Carrying out a factory data reset will erase all the data on your tablet's internal SD and remove any additional programs and apps installed. Making backup copies of all your multimedia files is therefore recommended before restoring the factory settings.

AQUARIS E10

#### ACCOUNTS

Here you can choose which email accounts (POP, IMAP or Exchange) you want to sync with your tablet. To add a new account, press the **Add account** icon. Choose from Email, Corporate (linked to a Microsoft Exchange server) or Google.

Set up the account by following the instructions that appear on the screen. Then press on the email address to sync your email, contacts, calendar and other options (provided that syncing is permitted by the service provider).

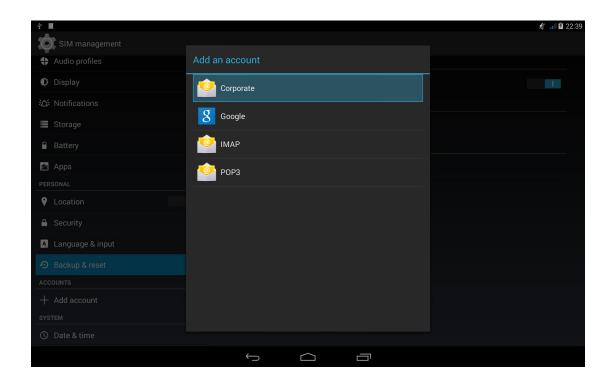

#### SYSTEM SETTINGS

후 🖩 (호) SIM management		<b>%</b> all
<ul> <li>Sim management</li> <li>Audio profiles</li> </ul>		
Display	Automatic date & time Use network-provided time	
② Notifications	Automatic time zone Use network-provided time zone	
🚍 Storage		
Battery		
🖄 Apps		
PERSONAL		
Location	Use 24-hour format	
Security	13:00	
🛕 Language & input	Choose date format 31/12/2014	
D Backup & reset		
ACCOUNTS		
+ Add account		
SYSTEM		

Automatic date & time: Adjust the time automatically based on location information or mobile network. Disabling this option will activate manual date and time configuration.

**Automatic time zone:** This option lets you enable/disable the automatic time zone provided by the network. Disabling this option will automatically activate the Select time zone option for manual configuration.

Use 24-hour format: Enable/disable the 24-hour time display format.

Choose date format: Select the format for displaying the date.

# Scheduled Power On & Off

Enables you to set times and days to automatically switch your device on or off.

AQUARIS E10

# Accessibility

Here you can access certain system services to facilitate access to the device, such as large text, spoken word, physical buttons as virtual buttons, spoken passwords, quick boot, etc.

4		23:4
🔯 SIM management		
Battery	SERVICES	
🖄 Apps	Accessibility Scan	
PERSONAL	TalkBack	
Location	off	
Security	SYSTEM	
A Language & input	Captions <sup>Off</sup>	
<ul> <li>Backup &amp; reset</li> </ul>	Magnification gestures	
ACCOUNTS		
+ Add account	Large text	
SYSTEM	Power button ends call	
① Date & time		
🕼 Scheduled power on & off	Auto-rotate screen	
🖐 Accessibility	Speak passwords	
🖶 Printing	Accessibility shortcut	
<ol> <li>About tablet</li> </ol>		

Your tablet also includes the TalkBack app, which offers spoken feedback and visual settings specially designed for visually impaired users.

When you open the app for the first time, a tutorial will guide you through the basic settings:

**Speech volume:** Adjusts the volume of speech in relation to multimedia volume.

Use pitch changes: Enables/disables the use of lower tones when a key is pressed.

**Keyboard echo:** This option speaks typed keys aloud. Speech is enabled/disabled when the screen is switched off.

**Speak when screen is off:** This option enables/disables voice notifications when the screen is off.

**Proximity sensor:** Enables/disables the proximity sensor to turn off speech whenever you want.

**Shake to start continuous reading:** Enable the continuous reading function by shaking your device.

# AQUARIS E10 Complete User Manual Settings

약 도 		23:43
SIM management		
Battery	orff	
🖄 Apps	Magnification gestures	
PERSONAL		
Location	Large text	
Security	Power button ends call	
🛕 Language & input		
D Backup & reset	Auto-rotate screen	
ACCOUNTS	Speak passwords	
+ Add account		
SYSTEM	Accessibility shortcut	
① Date & time	Text-to-speech output	
Cheduled power on & off		
	Touch & hold delay	
🖐 Accessibility	Short	
🖶 Printing	Quick boot Enable quick boot	
① About tablet		
	t) () ()	

**Vibration feedback:** Enables/disables vibration feedback when an option is selected.

**Sound:** Enables/disables sound feedback when an option is selected.

**Focus speech audio:** Enables/disables the option to reduce multimedia volume during a conversation.

**Sound volume:** Adjust the volume of speech in relation to multimedia volume.

**Explore by touch:** Enables/disables the touch explore feature which allows you to navigate through your tablet using gestures, by pressing once to select and twice to accept.

Automatically scroll list: Enables/disables automatic scrolling of lists.

**Single-tap selection:** Enables/disables the option to select with a single tap, when the option has been selected beforehand.

Launch 'Explore by touch' tutorial: Launches the tutorial for touch navigation.

Manage gestures: Modify and configure a range of gestures in order to access various accessibility options.

Manage customised labels: Edit the contents of your custom labels.

**Resume from suspend:** You can specify whether the program resumes when the screen is activated, when the screen is locked or only via the Notifications bar.

**Developer settings:** Settings for developers and advanced users.

Captions: Enables you to configure the captions. Standard options are:

Language: You can specify the language you want to view.

Text size: lets you increase or decrease the font size.

**Caption style:** You can select the default style or you can customise them.

Magnification gestures: This function enables you to zoom in or out of the screen. The gestures provided are as follows:

To zoom in, triple-tap the area you want to magnify.

To zoom out, triple-tap the magnified area.

To move normally around the screen, slide a finger left or right.

To scroll freely, slide two or more fingers across the screen.

To decrease the zoom, pinch the screen with two fingers or spread them apart to increase it.

To expand the content temporarily, triple-tap the area you want to expand and move around the page without lifting your finger off the screen.

Magnification will not affect the keyboard.

Large text: Enables/disables magnification of the system font size and the font size for apps to facilitate viewing of content.

Power button ends call: Enables/disables the option to end a call by pressing the power button.

Auto-rotate screen: Enables/disables automatic screen rotation when the screen is placed in a horizontal position. This option is not activated via the Home screen and the native Apps menu.

Speak passwords: Enables/disables the option to speak passwords when the TalkBack service is activated.

**Accessibility shortcut:** Using YES/NO commands, you can enable or disable direct access to accessibility features by pressing the power button until you hear a sound or feel a vibration. Then touch and hold the screen with two fingers until a confirmation is received.

**Text-to-speech output:** Direct access to options for text-to-speech output. The options to adjust the configuration can found in: *Settings > Language and text input > Text-to-speech output*.

**Touch & hold delay:** Configure the time delay between pressing and holding an option and displaying the corresponding options. You can choose Short (default), Medium or Long.

# Printing

Android 4.4 comes with wireless printing included as standard and the application also allows you to connect your printer to the internet (check compatibility with your printer manufacturer). This feature lets you wirelessly sync the printer with your smartphone, tablet or computer and print your documents from any location.

# i) About tablet

This section displays the status of the device (battery, network, serial number, etc.), legal information, Android version, model number, baseband and kernel versions and the build number. You can search manually for updates (for more information on firmware updates, see APPENDIX A at the end of this manual).

# { } Developer options

This section is only intended for advanced users, as it contains settings that are useful for app developers. These settings should not be modified if you are not an advanced user.

The menu includes various options, such as:

- Take bug report
- Stay awake
- Process stats
- USB debugging
- · Allow mock locations
- · Force GPU rendering
- · Show CPU usage
- · Background process limit

Complete User Manual Settings AQUARIS E10



The Developer options menu is hidden in Android by default. To enable it, go to The **Developer** options menu is muder in one of a by access. Settings > About tablet and press the last option (Build number) repeatedly until a message appears to say that you have correctly enabled it. You will then be able to access these options via the main **Settings** menu.

÷ II		<i>≰</i> ∠ 🖬 22:45	÷ II		<i>≸</i> ′⊿ 1⊒ 22
觉 SIM management			觉 SIM management		
Apps	Custom undeter		Apps	Custom undeter	
PERSONAL	System updates		PERSONAL	System updates	
Location	Status Status of the battery, network and other information		Location	Status Status of the battery, network and other information	
Security	Legal information		Security	Legal information	
A Language & input	 Model number		Language & input	Model number	
D Backup & reset	Aquaris E10.3G		D Backup & reset	Aquaris E10.3G	
CCOUNTS	Android version 442		ACCOUNTS	Android version 4.4.2	
+ Add account			+ Add account		
/STEM	Baseband version MODEM_39		SYSTEM	Baseband version MODEM_39	
Date & time	Kernel version 3.4.67		() Date & time	Kernel version 3.4.67	
Scheduled power on & off	3.4.67 Build number		C Scheduled power on & off	3.4.67 Build number	
Accessibility	Build number 1.1.0_20141216-1230		🖐 Accessibility	Build number 1.1.0_20141216-1230	
Printing			Printing		
Beveloper options			{ } Developer options		
About tablet			About tablet		
	5 6 6			5 A B	
SIM management		£ ⊿ 🖬 22:43	SIM management		# _ Q 2
Battery			Battery		
Apps	Take bug report		🖉 Apps	Simulate secondary displays	
	Desktop backup password Desktop full backups aren't currently protected		PERSONAL	HARDWARE ACCELERATED RENDERING	
Location	Stay awake	~	♥ Location	Force GPU rendering	
Security		<u> </u>	A Security	Force use of GPU for 2D drawing	
Language & input	Select runtime Use Dalvik		A Language & input	Show GPU view updates Flash views inside windows when drawn with the GPU	
) Backup & reset	Enable Bluetooth HCI snoop log Capture all Bluetooth HCI packets in a file	0	D Backup & reset	Show hardware layers updates Flash hardware layers green when they update	
COUNTS	Capture an elucitorin HC packets in a me Process Stats		ACCOUNTS	Debug GPU overdraw	
<ul> <li>Add account</li> </ul>	Geeky stats about running processes		+ Add account		
STEM	DEBUGGING		SYSTEM	Debug non-rectangular clip operations	
) Date & time	USB debugging Debug mode when USB is connected	<b></b>	() Date & time	Force 4x MSAA	
Scheduled power on & off	Revoke USB debugging authorisations		Cheduled power on & off		
Accessibility			🖐 Accessibility	Disable HW overlays Always use GPU for screen compositing	
Printing	Power menu bug reports Include option in power menu for taking a bug report		Printing	MONITORING	
} Developer options	Allow mock locations Allow mock locations		{ } Developer options	Strict mode enabled Flash screen when apps do long operations on main thread	

## PERFORMANCE SETTINGS

## **Optimising Battery Life**

You can prolong the life of your battery by disabling features you don't need. You can also can control how the application and system resources consume battery power. To optimise the configuration pressing **Menu** (1) and going to **Settings**.

- If you are not using Wi-Fi, Bluetooth or GPS, you can adjust your **Settings** accordingly, as explained earlier.
- Any **Maps** and **Navigation** apps that you are not using should be closed, as they require GPS access and consumer more power.
- Set your display brightness to **AUTO**. You can access these settings directly by pulling down the Notifications bar with two fingers.
- Select a short screen timeout interval, by going to *Settings > Display > Sleep*.
- Disable the auto-sync feature for certain apps, by going to Settings > Accounts. Note that you need to sync your email accounts manually, and you will not receive any notification when updates becoming available.
- Switch to Aeroplane mode by pressing and holding down the On/Off button until a pop-up window appears containing the corresponding option. Alternatively, access this option by pulling the Notifications bar down with two fingers.
- You can also enable Power save mode via the Setting menu, so that the standard CPU performance is reduced, offering adequate performance for most situations. Disable this option so that the CPU runs at maximum performance if you are playing games with 3D graphics or watching films in HD.

### Monitoring Battery Usage Information

To optimise your battery configuration, go to *Settings > Battery*. The list at the bottom of the screen shows battery use for the various apps and services on your tablet. Press the graph to access more detailed information. The screen showing use details for some apps also has buttons with recommendations on how to adjust your settings for maximum energy saving.

### EMAIL

### Setting Up a Gmail Account

You will need to set up a Gmail account the first time you switch your device on or whenever you carry out a factory data reset (deleting all data).

If you don't have an account already, the system will ask you to set one up to access certain features of the device. If you already have an account, you can use it for this initial setup process.

Some apps will not be available until you have correctly set up an account.

From within the app (which can be accessed via the Apps menu) you can access your inbox and configure a variety of different settings, such as how emails are displayed, how you can read and reply to them, and the notifications you receive. You can also group several different accounts together, so that you can receive emails from different addresses at the same time.

### Setting Up Other Email Accounts

The **Email** app allows you to send and receive emails from any other accounts you may have, regardless of provider. This app can be accessed via the App menu, or through the **Home screen**.

When you open this app for the first time you will be asked to enter an email address and password, as shown in this image.

- 1. Enter your email address. Then press Next.
- 2. Configure the account settings (syncing, notifications, etc.).
- 3. You can give the account an alias in order to identify it more easily..
- 4. Once the configuration is finished, syncing may take a few minutes to bring up all the emails on screen.

ψ <b>Ⅲ</b>			Q 🛜	12.40
Inbox 2 unread		(	<b>≤</b> , Q	:
marketing.pruebas@gm 2	Touch a sender image	to select that conversation.		X
INBOX	Alexandra	Meeting	4 Jan	☆
Inbox 2	A Alexandra	Meeting	3 Jan	☆
Starred	A Alexandra	Meeting	19/12/2014	삷
Unread 2	A Alexandra	Meeting	11/12/2014	삷
Outbox	A Alexandra	Meeting	@ 21/11/2014	Â
[Gmail]	A Alexandra	Meeting	13/03/2014	*
Sent	A Alexandra	Meeting	13/03/2014	\$
	A YouTube	Celebrities in disguise on YouTube	22/02/2014	☆
	A Alexandra	Meeting	20/11/2013	☆

F-Mail AQUARIS E10

### Sending an Email

- 1. Open the Email app and press Compose  $\square_+$ .
- 2. Enter the recipient's email address, add a subject heading and then write your message.
- 3. Press Send >.

To attach files, or add extra recipients (CC or BCC), press the icon and select the corresponding option from the list.

### Replying to an Email

You can reply to an email by using one of the following three options:

- **Reply:** Only the person that sent the message will receive your reply.
- **Reply all:** All the users listed as recipients of the last email will receive a copy of the answer.
- Forward: You can forward a copy of an email to different user.


The forward option on some email clients only allows the attached files of the previous email to be sent.

### MULTIMEDIA

### Camera

Your tablet has a front and a rear camera. To enable them, go to *Menu > Camera* or directly access the camera from the Home screen. To switch from one to other, press on the corresponding icon (), at the top right of the screen. Both cameras capture images and videos with different resolutions, with those of the rear camera being higher. The rear camera also has autofocus and flash.



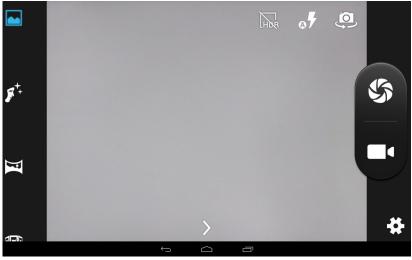

To select from image or video capture, press one of the two icons to the right of the screen; the shutter image S being for taking photos and the video camera image for recording.

One of the default shooting modes is not available when the using the front camera.

### Photo and Video Settings

To use the **zoom** function while taking photos or recording video, use the "pinch" gesture on the screen before pressing the shutter button or commencing recording.

By pressing the > icon, you will access the general settings and an icon to enable the front or rear camera:

**Exposure:** Adjust the level of the image contrast from 3 to -3. The default value is 0.

Colour effect: Add effects to your multimedia files.

**Scene mode:** Adjust the settings according to the current light conditions. The default setting is Auto.

White balance: Choose from seven types of light setting. The default setting is Auto.

Depending on the option selected, on pressing the **Settings** icon **‡** in the bottom right corner, a pop-up window will appear enabling you to adjust general, photo and video settings:

General settings -

**GPS location info:** Enablee this option to add information on where your multimedia file was created.




# AQUARIS E10 Complete User Manual Multimedia

**Image properties:** Set the sharpness, hue, saturation, brightness, and contrast levels at Low, Medium or High. The default setting is Auto.

**Anti-flicker:** Adjust the setting to eliminate moiré or flickering effects or you can also disable it.

Restore defaults: Restore the factory settings of the camera.

Photo Settings of

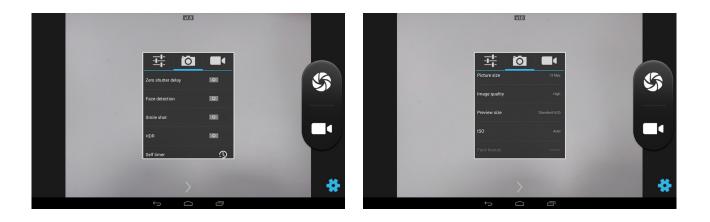

Zero shutter delay settings: Enable/disable image stabilisation.

Face detection: Enables/disables automatic face detection.

Smile shot: Enables/disables automatic smile detection.

**HDR:** High Dynamic Range is a photo mode that increases the image contrast by taking 3 shots with different exposures and superposing them onto one image.

Timer: Adjust the countdown timer (from 2s to 10s, or disable it).

**Continuous shot:** Set the number of shots taken if you hold down the shutter release continuously(40 or 99 shots).

**Picture size:** Set the image quality by choosing values ranging from 1 Mpx up to 8 Mpx.

**Preview size:** Adjust the size of images in preview mode. Select from Full screen or Standard (4:3).

**ISO:** Select the level of light sensitivity according to the current conditions. Select Auto mode or you can manually set the values from 100 to 1600.

**AQUARIS E10** 

**Face beauty:** Select the default Face beauty mode and it enables you to select various options.

Video camera settings



EIS: Enable/disable video stabilisation.

Microphone: Enable/disable audio recording.

Audio mode: Select Normal or Meeting (to record voices from points at various distances from the device). The microphone must be enabled in order to change the mode.

**Time lapse interval:** Set the time interval between each frame captured from 1s to 10s. Remember that 30 frames are required for each second of time-lapse video. Faster-moving scenes require shorter time intervals.

Video quality: Select from four video quality options.

#### Preset Image Modes

On the left side of the screen you will find shortcuts to the different default modes. You can scroll through the list by sliding your finger up and down. One of the key options is panoramic mode which enables you to capture panoramic shots at different angles.

Press the Panoramic icon and a progress bar will appear, to indicate how far you can pan your camera. Panoramic photos can be taken in portrait (vertical) as well as landscape (horizontal) format. As you pan your camera across, an arrow will guide its movement so that the different shots blend into one another to create the panoramic image. Once the progress bar is full (i.e. nine sequential photos have been taken), the panoramic image will be automatically created and saved. You can also make a panoramic image from less than nine images by simply pressing the Tick icon when you have finished panning the camera.

### Image Gallery

To view the images and videos stored on your device, press the **Gallery** icon located on the **Home screen.** (It can also be accessed from within the App menu).

The main screen of the **Gallery** allows you to browse the images and videos stored in the various different locations on your tablet.

Press a folder to access its content. Press on an image to view it. To view a video, press on it and the **Video Player** will open.

You can also access the Gallery directly after taking a photo or recording a video, by pressing the thumbnail of the photo or video that will subsequently appear in the top right corner of the screen.

While you are viewing an image you can also access the following options:

- Press the Menu button or the icon to display the following options: Delete, Slideshow, Edit, Rotate left/right, Crop, Set picture as, Details and Print.
- Press the < icon to display a list of various apps and social networks through which you can share the photo or video.
- Press the *icon* to open the image editor to add filters, frames and adjust the brightness, etc.

To zoom in on an image, simply double-tap the screen to magnify it and double-tap again to return to its original size. You can also pinch to zoom by spreading your fingers apart to zoom in, and moving them together to zoom out.



By default, Android does not allow new folders to be created within the Gallery or files to be moved from one folder to another. However, there are some free third-party apps that allow this, as well as other features. An example is the file explorer preinstalled on your tablet which can be accessed via the apps menu.

### **Playing Music**

Ξ.

Your tablet comes with a preinstalled audio player, enabling you to play your favourite music and audio tracks. It is also integrated with the app store so that you can buy and download new music and play whenever and wherever you like.

There are two ways you can load music onto your device:

- Connect your tablet to your computer in Mass storage mode and transfer the music to the internal memory. To do this, simply connect the tablet to the computer using the supplied USB cable, copy the files from your computer and paste them into the Music folder in your tablet's internal memory (you can also store the music on a MicroSD card if you are using one).
- Open the Play Music app and go to the Play Store (the icon located in the top left-hand corner on the main page). In the Store you can search for and browse a large quantity of artists and songs, purchase them and add them to your own music collection.

Once you have downloaded the music onto your tablet, you can find it by going to the main menu in the Play Music app and selecting the **My music** option. You can organise your music by genre, artist, album or song list.

The artist, album and other information used by the app to create the playlists can also be modified using your computer. Right-click on the file you wish to edit, then select *Properties > Details* in the pull-down and pop-up menus, respectively.

You can also conduct a keyword search within your music library in order to locate all the albums, songs, etc. that match the description you have entered.

Once you have selected a song, simply press it and a bar will scroll across the screen displaying information about the song currently playing. To open the panel of player options, press the bar located at the bottom of the screen. This panel gives you options such as continuous playback (press the icon on the left to play the list of selected songs again when it has finished), repeat the last song, pause, skip and random.

**AQUARIS** E10

On this screen you can also use the  $\checkmark$  and  $\clubsuit$  icons to rate the song. You can also press the the icon (located in the top right corner) to access more options, such as adding the current song to an existing playlist or creating a new playlist.

The main screen of the Play Music app also contains the Playlist option, where you can find all the playlists previously created, and the icon  $\checkmark$  to show a list of the songs.

### **Playing Videos**

Your tablet comes with a preinstalled video player. It gives you a list of all the videos stored on your device, and allows you to play them, edit them, and much more.

After opening the app you will see a list of available videos. If you press your chosen video, it will start playing automatically. On the bottom right of the screen, you will find an icon that lets you select viewing options such as zoom, original aspect ratio, full screen (stretching the image) and full screen (cropping the image).

Pressing the bar at the top of the screen also allows you to share the video via other apps, play the video on a loop and edit it. The Edit option lets you choose where the video starts and ends; press **Save** to store the edited file.

### APPLICATIONS

### App Store

The App store gives you access to a huge range of programs, games, music, movies, books, and more. Each category contains further sub-categories to help you find exactly what you are looking for.

**Important:** Be aware that not all downloads are free, and additional costs may be incurred. For paid downloads that are not free, the price will appear next to app description, and you will be asked to confirm before downloading to avoid being charged unintentionally.

### Apps from Unknown Sources

Occasionally you might want to download apps and/or games from an alternative app store, or directly from a website. In order to install these apps, which generally do not have an electronic signature, you will have to instruct the system to accept apps from unknown sources. Go to *Settings > Security* and tick the **Unknown sources** option, then press OK after reading the security warning. Remember to only install apps from trusted sources.

\$ III		🕺 📶 🖬 22:28
SIM management		
	SCREEN SECURITY	
🗢 Wi-Fi	Screen lock None	
Bluetooth	None	
O Data usage	Owner info	
More	ENCRYPTION	
	Encrypt tablet	
DEVICE	Require a numerical PIN or password to decrypt your tablet each time that you turn it on	
Audio profiles	SIM CARD LOCK	
Display	Set up SIM card lock	
泣 Notifications	PASSWORDS	
Storage	Make passwords visible	
a Battery	DEVICE ADMINISTRATION	
🖄 Apps	Device administrators	
	View or deactivate device administrators	
PERSONAL	Unknown sources	
♀ Location	Allow installation of apps from unknown sources	
Security	<b>Verify apps</b> Disallo <mark>w or warn before</mark> installation of apps that may cause harm	

AQUARIS E10

To install apps you have downloaded from outside the App store, you must be able to access the \*.apk file on your device. These types of apps have often been compressed using a program such as WinRAR, which means the downloaded file is a \*.rar file and will need to be unzipped using a computer, or a file management program such as **ES File Explorer** (already installed on your device).

Upon opening the \*.apk file, the system will ask you to confirm installation of the app.

After you press Accept, the app will then be installed.

### **Preinstalled Apps**

To access the list of preinstalled apps, press the 🐽 icon on the **Home screen** to be shown a list of all the apps installed on your device.

### **Internet Browser**

The browser allows you to surf the internet, with the option of opening several tabs to access various websites at the same time. Press the icon to select an active tab or create a new one. After you have created a new one, enter the website address manually in the white text field at the top of the screen, or press one of the suggested websites displayed in the centre of the screen (suggestions are based on the websites you visit most frequently).

Go back/forward  $\leftarrow \rightarrow$ : This option lets you return to webpages you have recently visited, and move forward again to the most recent page you viewed.

**Reload page C**: Update the current page to refresh its content.

Add bookmark/favourite  $\precsim$ : This option lets you bookmark a page so that you can easily return to it later. Bookmarks can be grouped into folders.

**Enable voice search**  $\clubsuit$  : Enable voice recognition in order to perform a Google search automatically.

To close a tab, simply press the tab icon and then press the X symbol on the tab you want to close.

Press the icon to access the following options:

- New tab: Opens a new tab so you can browse different websites at the same time.
- New incognito tab: Browse the internet in a private tab that is not be stored in the browser history.
- **Bookmarks:** Access the list of saved bookmarks.
- **Recent tabs:** Access the list of recently-closed tabs and restore them if desired.
- **History:** Provides a chronological list (most recent first) of the websites you have visited.
- Share: Enables you to share the current page with other users.
- Print: Enables you to print the current page to a compatible wireless printer.
- Find in page: Search for a specific word or phrase on the current page.
- Add to home screen: Select a page to appear as your home page on opening the browser.
- **Request desktop site:** By ticking this box, you will be able to view a website exactly as you would on a computer and eliminate special versions for mobile devices.
- Settings: Gives you access to the basic and advanced browser settings.
- Help & feedback: This option allows you to view feedback from other users, give your own opinion and access the Help section.

### Chat

The instant messaging app allows you to configure your email address and telephone number so that you can chat with your contacts. You can also set this app as the default choice for sending SMS.

**AQUARIS E10** 

#### Text Editor, Spreadsheets and Presentations

With this management tool you can create and publish documents, spreadsheets and presentations. You can also sync the application with Drive account, save your files in the cloud and access them remotely via any compatible device. It is compatible with Word, Excel and PowerPoint, and it also reads PDF files. From this application you can also directly attach files to emails.

#### Calendar

With the **Calendar** tool you can manage your daily tasks and sync them with your email account so that you can share appointments, meetings and events with your contacts. It also enables you to set up reminder alerts and notifications so that you never miss an appointment. The app also allows you to sync your calendar so that you can view it from any other mobile device.

You can create a new event by going to the icon at the right top or by selecting the + icon that appears when you press on any free day in the calendar. You can specify the date and time of the event, its location, the people invited, enable and disable alerts, add a description of the event and even configure the availability status that will be shown while you are attending the event.

## Maps and GPS Navigation

Your tablet has a preinstalled Maps app which enables you to find your current location on the map (for greater accuracy, activate the system GPS), view satellite images or even an actual view of a given location. You can also select the Navigation option to allow your device to give you instructions on how to reach your destination from your current position, whether travelling on foot or by car. It also provides a location service to identify affiliated companies and establishments.



Bear in mind that none of the above information (including the maps) is preloaded onto your device; therefore, whenever you use the navigation feature, the tablet will need to access your data connection, which could have cost implications depending on your network operator's mobile price plan and tariffs.



Important: The Aquaris E10 does not have this type of connection, to obtain it you will need wireless connectivity via an external device (for example a smartphone or USB router, which are not provided with your tablet).

## **File Explorer**

This app allows you to explore the folders stored in your tablet's internal memory and on the MicroSD card, if in use. It also allows you to copy and move files from one folder to another, unzip compressed files and extract their content, without the need to connect your tablet to a computer. Additionally, you can rename files and create new files and folders.



You can hide certain multimedia folders so that they are not shown in the Gallery. To do so, open the File explorer, go to the folder you want to hide and, from within the file path, press the New icon + select the File option, name the new file ".nomedia" and press OK to finish. You can access the hidden file and its contents via the File explorer app whenever you like. If you want to reverse the process and show the folder in the Gallery, simply delete the ".nomedia" file you created previously.

**AOUARIS E10** 

## Dolby

To access the **Dolby** app and improve your tablet's audio, go to **Menu > Dolby**.

You can choose any of the four preset modes from within the app, or select them directly by going to Settings > Audio profiles > Profile and choosing between Movie, Music, Game and Voice.

After selecting a mode you will be a shown a graphic equaliser, where you can directly adjust the audio settings by moving the equaliser tabs with your finger. Alternatively, you can choose one of the smart equalisers: Open, Rich, Focused and Customise. If you adjust any of the modes manually, an icon G will appear next to the name of the Smart equaliser you have selected (or next to the words Graphic equaliser: Custom if you have not selected a smart equaliser). Custom if you have not selected a smart equaliser). Pressing on this icon will restore the initial values and delete any manual settings you have selected.

Enable the Volume leveller function to provide a constant level of volume for all content and apps, in accordance with the volume setting defined by the tablet's physical volume controls.

Enable the **Dialogue Enhance**r function to make voices sound clearer when playing any multimedia content.

Enable the *Surround Virtualiser* function to generate a realistic surround sound effect, compatible with all stereo speakers or headphones (this function will only work with headphones or external speakers, not with the phone's own speaker).

When enabled the **Dolby** icon will be displayed on any video or music players you have installed. You can deactivate the app by pressing the **U** icon.



Using another application with its own equaliser will automatically disable Dolby  $\blacksquare$  in order to avoid conflict between the two equalisers.

## News & Weather (Genie Widget)

This app offers services such as real-time weather information, international news headlines, etc. Your tablet's Home screen can hold up to three different widgets, allowing you to access information quickly and easily. These three widgets include both weather and news; you can choose to display them both simultaneously if you want.

For more information on how to add widgets to your tablet, see the section on customising your **Home screen** in this manual.

Complete User Manual AQUARIS E10

## TOOLS

#### Calculator


Your tablet's tools include a practical calculator, which enables you to make basic as well as scientific/advanced calculations.



## Clock

Go to *Menu > Clock* and you will find the **Alarms** option, where you can manage all your alarms.

You can set up different alarms at the same time, and adjust settings such as the name of the alarm, the number of times it sounds, which days of the week it is repeated, the alarm tone and whether it vibrates when the alarm sounds.

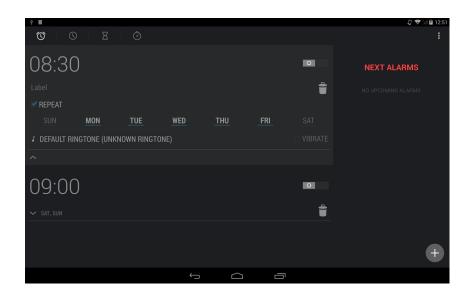

You can create new alarms and delete them as often as you want. To temporarily enable or disable an alarm (without deleting it), simply slide the icon located to the right of the alarm time over to the left.

The **Clock** app also allows you to view the local time in any location around the world, and contains other useful functions such as a fully configurable timer and a stopwatch with interval feature.

## Sound Recorder

Another of your tablet's tools is the **Voice Recorder**. This app enables you to record audio with ease, selecting from high or standard voice quality and **Normal, Meeting** or **Lecture** recording modes

To start recording, simply press the red icon located in the middle of the top part of the screen. The counter and gauge in the centre of the screen will then be activated. Use the icons at the bottom of the screen to pause or end the recording. After you have finished recording, you will be asked if you want to save or delete the audio file. If you decide to save it, you can access it again (with any other recordings you have made) by pressing the  $i \equiv i$  icon.

## FM Radio

You will also find an **FM radio** under the apps menu.

This app allows you to listen to your favourite radio programmes, and you can even record and store a broadcast on your internal tablet memory. To tune in the transmitter and move the dial  $\langle \rangle$  slide your finger over the dial to search manually, or press the buttons  $|\langle \rangle|$  to scan automatically. You can also search all the available frequencies by pressing More options the barbar.

You can select your favourite stations by pressing the designated icon **:** Once they are saved as favourites, you can also press and hold to edit the name so that you can find them more easily on the list.



The headphones must be connected to your device to be able to use the radio application, as the headphones themselves serve as the antenna.

Tools AQUARIS E10

From the More options menu, you can select the **Speaker** option so that the audio is played via your computer speakers instead of the headphones. You can also select the **Start Recording** option that enables you to save the current broadcast on your device.

## Voice Search

On the **Home screen** there is a widget containing a microphone icon, which will launch the Voice search app when pressed. This app allows you to quickly find information on any subject you search for, and gives you quick access to other apps such as maps

# APPENDICES

## **APPENDIX A: OTA Updates**

OTA stands for "Over the Air", which refers to the way that firmware updates are sent to your device; i.e. via your data connection, with minimal intervention required on the part of the user and without the need for complex update procedures.

You device will periodically check for new updates to the operating system, which usually include performance improvements or additional features for your tablet. When the system detects that an update is available, a pop-up window will notify you of this and will request confirmation to install it. Using a Wi-Fi connection to download the update package is recommended.

The system will guide you through the installation process, to ensure that it is completed as quickly and conveniently as possible.

You can also check for updates manually by going to *Settings > About tablet > System updates > Update.* A message will appear to tell you that the system is searching for available updates. If an update is found, the installation process is the same as described above.

AQUARIS E10

## **APPENDIX B: Technical Specifications**

You can find all the technical information for your device by visiting this link and selecting the corresponding model: <u>http://www.bq.com/gb/aquaris-e10</u>

After selecting your model, you can access the full description by clicking on **Specifications** in the bar at the top of the page.

In the table you will find information on the following:

- · Dimensions and weight
- · Display
- · Internal memory
- · Processor
- Battery
- · Operating system
- · Connectivity
- System functions

## APPENDIX C: Cleaning and Safety

#### Cleaning

Before cleaning your device, make sure you have switched it off and disconnected all cables. After cleaning, make sure the screen is completely dry before reconnecting any cables and switching the device back on. Do not pour or spray any liquids directly onto the tablet.

**Display:** Use a clean, soft, lint-free cloth to remove dust and dirt from the screen. To remove fingerprints and marks, you may apply a small amount of mild cleaning product to the cloth.

**Casing:** Use a soft cloth with a small amount of mild cleaning product. After cleaning, rinse the cloth in clean water, wring it out thoroughly and wipe the casing to remove any leftover cleaning product.

#### Security

To reduce the risk of an accident, follow these safety instructions:

- Do not use power cables, connectors or plugs that are damaged or contain loose wiring. Do not bend or damage the power cable. Do not touch the power cable with wet hands. Do not pull on the cable to unplug the charger.
- Do not use the device while it is charging. Do not touch it with wet hands.
- Do not hit the charger or cause it to fall. Do not charge the battery using chargers that have not been approved by the manufacturer.
- Do not use the device during electrical storms. Handle and dispose of the battery and charger with caution.
- · Do not handle Li-ion batteries that are damaged or leaking.
- Do not use the device in the vicinity of a pacemaker. If possible, try to use it at a distance of at least 15 cm from the pacemaker, as it could interfere with the pacemaker's operation.
- Do not use the device in a hospital or in the vicinity of any medical equipment that may be susceptible to radio frequency interference.
- If you regularly use medical equipment, make sure it is protected against radio frequency interference. If you wear a hearing aid, consult the manufacturer with regard to potential interference.

AOUARIS E10

- In potentially explosive environments, switch the device off. Always observe the site regulations, instructions and warning signs  $\bigwedge$ .
- Do not use the device in refuelling areas (e.g. petrol stations) or in the vicinity of flammable and/or explosive chemical products  $\bigwedge$ .
- Do not store or transport flammable liquids or gases or explosive materials in the vicinity of the device or any of its parts or accessories  $\bigwedge$ .
- Switch off the device upon boarding an aeroplane. The electronic components of a motor vehicle may malfunction as a result of radio frequency interference from the device.
- Prolonged exposure to high levels of sound pressure may cause permanent damage to hearing. It is recommended that you do not wear headphones while cycling, running or walking through areas with heavy traffic or excessive noise.
- Use of the device while driving: Some car manufacturers prohibit the use of mobile devices in their vehicles unless they are equipped with a hands-free kit and external antenna. Ask the vendor of your vehicle whether your mobile device or hands-free Bluetooth kit will interfere with your car's electrical systems. Always devote your full attention to the road while driving and respect the local regulations and laws on the use of wireless devices while at the wheel.
- Location/GPS-based functions: Location-based functions are offered "as is" and "for all corresponding effects". Mundo Reader, S.L. does not claim or in any way guarantee the accuracy of any location-based information.
- When the device is using location-based information, it may suffer from interruptions or failures and its dependence on network availability will increase. Note that functionality may be reduced or obstructed in certain areas, such as inside buildings or in areas close to buildings.
- Use the GPS function with caution, to make sure you are not distracted while driving.
- Antenna: Use of the device with an antenna other than that supplied by Mundo Reader, S.L. may damage it, impair its performance and generate SAR levels (see Appendix D) that exceed the limits established by law. Do not cover the antenna with your hand.

• Aeroplane mode: Use of Bluetooth and WLAN functions may be prohibited on aeroplanes and in other places where radio transmissions are not permitted. Ask for permission before enabling the Bluetooth or WLAN functions, including in Aeroplane mode.



**AOUARIS E10** 

# APPENDIX D: Information on Exposure to Radio Waves and the SAR (Specific Absorption Rate)

The design of this tablet complies with the current regulations governing exposure to radio waves. These regulations are based on scientific guidelines that include safety margins designed to ensure the safety of everyone, regardless of age or state of health.

The guidelines on exposure to radio waves use a unit of measurement known as the SAR (Specific Absorption Rate). SAR tests are carried out using standardised methods, with the tablet transmitting at the highest certified level of power on all the frequency bands it uses.

The maximum SAR levels recommended by the ICNIRP (International Commission on Non Ionizing Radiation Protection) is 2 W/kg, measured on 10 g of tissue.

The highest SAR levels recorded for this tablet are as follows:

	Aquaris E10	Aquaris E10 3G
When used in direct contact with the body	0.490 W/Kg (10 g)	0.359 W/Kg (10 g)

This device complies with the guidelines on exposure to radio frequency both when it is used in the normal position next to the ear and when it is positioned at least 1.5 cm from the body. In order to send data files or messages, this device requires an adequate network connection. On certain occasions, the transmission of data files or messages may be delayed until an adequate connection becomes available. Until the transmission has been completed, make sure you follow the instructions on the separation distance mentioned above.

# APPENDIX E: Disposing of this Product Correctly



Electrical and electronic waste).

(Applies within the European Union and in European countries with selective waste collection systems).

To prevent any damage to the environment or human health, separate these products from other types of waste and recycle them correctly. This will help promote the sustainable use of material resources.

Household users should contact the retailer that they purchased the product from or the relevant local authorities to find out how and where they can recycle this product safely, without harming the environment.

Business users should contact their supplier and consult the terms and conditions of the purchase agreement. This product and its electronic accessories should not be disposed of with other waste materials such as the box and non-electronic materials.



## **APPENDIX F: Declaration of Conformity**

Mundo Reader, S.L. Pol. Ind. Európolis Calle Sofía, 10 28232 - Las Rozas - Madrid (Spain) Tel. +34 91 787 58 59 Corporate tax ID (CIF): B85991941 Made in China

Declares that this tablet:

## bq Aquaris E10

complies with the provisions of Directive 1999/5/EC on Radio and Telecommunications Terminal Equipment (R&TTE), Directive 2006/95/EC on Electrical Safety for Low Voltage Equipment, and Directive 2004/108/EC on Electromagnetic Compatibility, in addition to the following harmonised standards:

EN 301489-1 V1.9.2, EN301489-3 V1.6.1, EN301489-17 V2.2.1, EN62479: 2010, EN 62311: 2008, EN 300328 V1.8.1, EN300440-2 V1.4.1, EN 50566: 2013, EN 62209-2: 2010, EN 55022:2010/AC:2011, EN 55024: 2010, EN 55013: 2013, EN 55020: 2007/A11: 2011, EN60950-1/A12:2011

You can request a copy of the Declaration of Conformity by writing to the above address.

Madrid, October 2014.

Alberto Méndez Peydró CEO



Mundo Reader, S.L. Pol. Ind. Európolis Calle Sofía, 10 28232 - Las Rozas - Madrid (España) Tel. +34 91 787 58 59 Corporate tax ID (CIF): B85991941 Made in China

Declares that this tablet:

## bq Aquaris E10 3G

complies with the provisions of Directive 1999/5/EC on Radio and Telecommunications Terminal Equipment (R&TTE), Directive 2006/95/EC on Electrical Safety for Low Voltage Equipment, and Directive 2004/108/EC on Electromagnetic Compatibility, in addition to the following harmonised standards:

EN 301489-1 V1.9.2, EN301489-3 V1.6.1, EN 301489-7 V1.3.1, EN301489-17 V2.2.1, EN 301489-24 V1.5.1, EN62479: 2010, EN 62311: 2008, EN 301908-1 V6.2.1, EN301 908-2 V5.4.1, EN 301511 V9.0.2, EN 300328 V1.8.1, EN300440-2 V1.4.1, EN60950-1/A12:2011, EN 50566: 2013, EN 62209-2: 2010, EN 55022:2010/AC:2011, EN 55024: 2010, EN 55013: 2013, EN 55020: 2007/A11: 2011.

You can request a copy of the Declaration of Conformity by writing to the above address.

Madrid, October 2014.

Alberto Méndez Peydró CEO



**Firmware version** bq Aquaris E10: 1.0.0\_20141113-1300 bq Aquaris E10 3G: 1.0.0\_20141111-1430



www.bq.com www.mibqyyo.com