

## OPERATING INSTRUCTIONS

## ESA-110 and ESA-111

## Professional Digital Satellite Receiver

## English







# design for TV

## Contents

- 1. Introduction
- 2. <u>Unpacking the unit</u>
- 3. Connections and indications
- 4. Settings with PALM PDA
- 5. <u>Settings with PC</u>
- 6. Installation
- 7. Technical specification
- 8. Declaration of Conformity

## 1. Introduction

Thank you for choosing an A2B Electronics product. We have made every effort to make you as a customer satisfied with the performance and features of the product for years to come.

The ESA-110 and the ESA-111 are high quality Professional Digital Satellite Receivers intended for use in any Cable-TV or SMATV head end. All functions are integrated in an extremely compact unit that easily can be mounted in different ways.

ESA-110 and ESA-111 incorporates Multi-CA capability (for ESA-110, embedded Conax, embedded NDS Videoguard and Common Interface, and for ESA-111; embedded Conax and Common Interface).

The ESA-110 and the ESA-111 can easily be connected to the CATV modulators EVA-200 and EVA-210.

This manual describes the installation and settings of the unit.

If you need further assistance when installing the unit contact your local dealer and you are always welcome to contact our technical support:

A2B Electronics AB Phone: +46 (0)141 229115 E-mail: <u>support@a2b.se</u>

Also visit our web site <u>www.a2b.se</u> for further support.

## 2. Unpacking the unit

ESA-110 and ESA-111 are delivered with all necessary software to enable all the installations. The files are on the included CD and a PC or PALM PDA can be used as a control unit.

Following parts are included in the package:

Description
Digital Satellite Receiver ESA-110 or ESA-111
CD-ROM with operating instructions and control software
This operating instruction in printed version
Front panel screws

Every unit is quality inspected by us before delivery and should any items be missing when unpacking please contact our support service (see page 3 for address).







English

## 3. Connections and indications



Power on indication	Green light indicates that the receiver is connected to power.
Error indication	Red colour indicates that the incoming signal contains errors.
Access indication	Indicates that smartcard is authorised. Red light indicates errors.
Reset	Reboots the hardware.
RS-232 port for control and settings	Serial port for connection of PALM PDA or PC (control software available on attached CD).
LNB in	Connect your outdoor unit (LNB) to this input.
Audio R out	Connect this source to corresponding R input of RF-modulator.
Audio L out	Connect this source to corresponding L input of RF-modulator.
Video out	Connect this CVBS video source to video input of RF-modulator.
DC in	Connect a DC voltage to this input (6-9 V 2A)

## 5 English

## 4. Settings with PALM PDA

This section describes how to make a quick installation following the step by step instructions below. See to that the control software files delivered on the CD-ROM are loaded into the PALM. For more information on how this is done, please consult your PALM user manual.

1. Connect the ESA-110/111 to a DC power supply (the ESP-100 or EPP-100). Then connect your PALM PDA to the ESA-110/111 with a PALM Hotsync cable to the RS-232 serial port on the front of ESA-110/111.



2. Tap the ESA icon in the A2B Control menu of the PALM.



3. A Welcome menu should appear if your PALM is in contact with the ESA-110/111. Click **[Next]**.

ESA-100/110/111	(i
Welcome	
Connect your handhe and press next to sta	eld to ESA irt setup.
Press (i) for help.	
Exit )	(Next »)



4. This menu contains settings of the tuner parameters and choice of LNB type. Enter appropriate values for transponder Frequency, Symbol rate and Polarization and click **[Next]**.

ESA-100/110	/111	i
LNB		
Frequency:	<ul> <li>Universo</li> </ul>	ıl
Tuner		
Frequency:	11276	MHz
Symbolrate:	24500	kS/s
Polarization: 🛪	<ul> <li>Vertical</li> </ul>	
(«Prev)		(Next »)

5. Now choose which service you would like to use. Click [Next].

ESA-100/	110/111	E
Service		
Service:	▼ CANAL+ FILM	1
Provider:	Telenor	
Name:	CANAL+ FILM	1
Type:	Digital TV	
Status:	Scrambled	
(«Prev)		(Next »

This menu gives you information about the name of chosen Service, Encryption etc.

6. Choose the language of the audio and video streams you want to use. Click **[Next]**.

ESA-100/110/1	11	<u>(i)</u>
Program		
Audio stream:	🕶 Any 👘	
Subtitle stream:	▼ None	
(«Prev)		(Next »)

7. The installation is now completed and audio and video from the correct program should be present on the output. Click **[Again]** if you want to modify the settings.

ESA-100/110/111	<u>(i)</u>
Completed	
If the results are not as press (i) for a troulbi guide.	expected, leshooting
(«Prev)	(Again)

Disconnect the PALM from the ESA-110/111 and the installation is ready.



English

8. For advanced settings click [Options] and [Country]



9. Under the menu **[Country]** you can change the language and regional settings from the default settings. Click **[OK]** and then **[Receiver]**.

ESR-100/110/111 (i)	Options Status
	Country
Completed Country 🔒	Receiver Decoder Modulator a not as expected,
Country: ▼ Sweden Language: ▼ Swedish	Smartcard CR module
Charset: ▼ Latin - 0 System: ▼ PAL B/G	Software About
Timezone: VET	(«Prev) (Again)

10. The **[Receiver]** menu allows you to choose LNB voltage, DiSEqC, and the IQ Convention (non-inverted, inverted or auto). Click **[OK]** and **[Decoder]**.

ESA-100/110/111	
Completed	
If the results are not as expected,	
Receiver 🚯	
LNB Voltage: 🗢 Auto	
DiSEqC: 🗢 Auto	
IQ Convention: 🔻 Auto	
<u>Ok</u>	

Options Sta	tus
Country Receiver Decoder Modulator	≥ not as expected,
Smartcard CA module Software	troubleshooting
(«Prev)	(Again)



11. This menu allows change of embedded CA system. Format conversion for picture aspect ratio, signalling of picture format (WSS), audio format (stereo or mono) and teletext subtitling can be selected or switched off. Click **[OK]** 

ESA-100/110/111		<b>(i)</b>
Dec	oder	0
Embedded CA:	➡ NDS	
16:9 Conversion:	ullet Letterbox	
WSS:	🕶 Auto	
Audio mode:	🕶 Stereo	
Audio level:	🗢 -3 dB	
Teletext:	🕶 Auto	
Subtitling:	🕶 Auto	
	k)	

**Note!** ESA-111 does not have embedded NDS Videoguard and thus NDS cannot be chosen for ESA-111.

12. Click [Options] and then [CA module].

Options St	atus
Country Receiver	
Modulator Smartcard CA module	≥ not as expected, troulbleshooting
Software About	j
(«Prev)	(Again)

13. If a CA-module is inserted into the CA-slot the CA parameters can be read in the **[CA module]** menu. Click **[Close]**. The menu **[Software]** gives information about the firmware version that is downloaded into the ESA-110/111. Hardware revision can also be read. The menu **[About]** shows information about the control software version. The **[Status]** menu gives relevant information about the received signal (BER, C/N and signal level). The received audio and video formats can also be read as well as smartcard and CA module status.

ESR-100/110/111	ESA-100/110/111	ESA-100/110/111 (j)
Status 🔁	Status 🚯	Status 🚯
Connected to ESA-111 R2 Software version 1.12 Restart 230, up 0:04 Smartcard: Inserted CA Module: Viaccess Serial # 01 50 00 70 30 80 00 01 Ok	Connected to ESR-111 R2 EbNo (C/N): 11.4 dB Input level: -37 dBm Input Bit-Error-Rate: 1.4e-3 Viterbi Bit-Error-Rate: 0 Reed-Solomon BER: 0 Ok	Connected to ESR-111 R2 Audio decoder: Running ISO/IEC 11172 2 ch, 48 kHz Video decoder: Running ISO/IEC 13818 25 Hz, 16:9

## 5. Settings with PC

This section describes how to make a first time installation for PC following the step by step instructions below. See to that the control software files delivered on the CD-ROM are installed on your PC.

Connect the ESA-110/111 to a DC power supply (the ESP-100 or EPP-100). Then connect your PC to the ESA-110/111 with a null modem cable from a serial port on the PC to the RS-232 port on ESA-110/111.

Receiver —			Decoder		Audio/Vi	deo	
LNB Setup			Service				
Universal/Fixed:	Universal		Discovery		-		
Horizontal/Vertical:	Horizontal		Type: Digital Te	levision	System:	PAL 625	-
LNB Power:	Auto		Provider: Telenor		16:9:	Letterbox	-
Inverted Spectrum	Auto		Language		WSS:	Auto	-
Transponder Fre 11229 MH: Symbol Frequenc 24500 kBa Input Level (dBm)	quency Eb z ;y iud/s   -43 1	)/No-	Audio: Subtitling: Subtitling Type: Subtitling Charset: CA Settings	Any None Auto Latin 0	Audio Volume: Mode:	-3 V Stereo	dB
Program	receiver		CA Module	Embedded	On/Off: System:	OFF B/G	-
System setting	js	<i></i>			Channel: Frequency	E22	MHz

Choose the correct COM port and press [OK] and following menu should appear.

**Note!** ESA-111 has only embedded Conax. For NDS Videoguard we recommend ESA-110.

#### **1. RECEIVER**

Choose if you have a fixed or universal LNB. Set the polarisation and if you have a universal LNB you should let the LNB power be set to auto. Inverted spectrum is sometimes used in C-band transmissions and can be selected or set to auto detection. Finally enter the correct transponder frequency and symbol frequency. We suggest that you consult <u>www.lyngsat.com</u> for correct parameters for the channels you intend to use. The input level should be higher than -60 dBm, preferably more than -50 dBm and Eb/No should read more than 10. Enter **[Program receiver]** to program the values to ESA-110/111.

#### 2. DECODER

The **[Service]** menu allows you to choose a program from the chosen Multiplex. Enter also audio and subtitling languages.

#### 3. AUDIO/VIDEO

The video menu allows for setting of transmission standard, picture aspect ratio (4:3, 16:9 or combined 14:9). **[WSS]** stands for Wide Screen Signalling and is a signal that is available in the video and signals to each TV-set which aspect ratio the TV-set should display. This is done automatically by most TV-sets. In the **[Teletext]** menu teletext or DVB-subtitling can be selected or disabled. **[Audio]** menu allows setting of audio output level and mode (mono, stereo).

#### 4. CA SETTINGS

Information about CA module and embedded CA system can be done in this menu. Appropriate smart cards needs to be inserted into the corresponding slots.

#### 5. SYSTEM SETTINGS

Set regional settings in this menu. Serial port (COM port) can also be changed in this menu.

#### 6. FIRMWARE

Click **[Firmware]** if a new software is available for your ESA-110/111. A dialog box will open that lets you browse for the firmware file to upgrade your ESA-110/111 with.

#### 7. [i] and [?]

Information and help menus that can be used for details of how to install and make settings. **[i]** shows information about the ESA-110/111 and the controller. The **[?]** menu will be accessible on later software revisions.

11

English

## 6. Installation

The ESA-110/111 can be installed either stand alone forming a complete channel or it can be installed in a base unit (EBU-100) together with any of our high quality VSB RF-modulators (EVA-200/210)

Before connecting power to ESA-110/111 make sure that all other connections are made. If a stereo RF-modulator such as the EVA-210 is available, connect Right and Left audio outputs to the corresponding inputs on the EVA-210.

Connect also the video source (CVBS) to the video input of the RF-modulator (EVA-200/210).

The signal from the LNB should be connected to the LNB input.

Connect power supply and make all necessary settings as described in section 4 and 5.



Installation in a base unit with 10 modules and common power supply.



Installation on wall as a stand alone unit with single power supply (ESP-100) and a wall mount plate.

#### **Accessories**



EPP-100 Power supply 100W 11 outputs





DC-cable for EPP-100



ESP-100 Power supply 15W 1 output



EBU-100 Base unit for 10 modules and power supply



## 7. Technical specification

### **ESA-110 and ESA-111** Professional digital satellite receiver

#### **QPSK Satellite Receiver**

Input Frequency	950 to 2150 MHz
LNB connector	Type F female, 75 $\Omega$
Input Level	-60 to -25 dBm <sup>1)</sup>
Spectral inversion	Manual/Auto selection
	(Ku-Band & C-Band)
DC at IF in	Auto, Off, +13,5V, +18,5V
	programmable
	(short circuit protected max 400mA)
22kHz to LNB	Auto, On or Off programmable
Symbol Rate	2 to 45 Mbaud/s
DVB compliant	DVB-S
Error correction	Viterbi (1/2, 2/3, 3/4, 5/6, 7/8)
	+Reed Solomon (188/204)
	+Interleave (I=12)
Max LNB freq. offset	+/- 3MHz (2-45 MSymb.)

 $^{1)}\,\rm QEF$  reception with test signal: 24,5 MSymb, 7/8 FEC, 8,4dB C/N

#### MPEG Decoder - Video

Output standards	PAL, SECAM or NTSC
Impedance	75 Ω
Output connectors	Phono, female (yellow)
Output level	1 Vpp @ 75 Ω
Aspect Ratio	Letterbox, Pan/Scan, or
•	conversion Combined (14:9)
	programmable
Teletext	Insertion in VBI
	Teletext or DVB subtitling
Decryption	Embedded Conax,
	plus Common Interface
	for other standards (tested with
	Viaccess, Irdeto, Cryptoworks,
	Aston (Mediaguard, Seca), Conax,
	Alphacrypt).
	Embedded NDS Videoguard
	0

(ESA-110 only)

#### Miscellaneous

Power supply	6-9 VDC (7.5 V nom.)	
Power	Typ. 4W without CAM and	
consumption	external load	
-	Typ. CAM <1W, type LNB <3W,	
	Max. LNB current at +18V	
	= 7.2W Max. current at	
	LNB in: 400 mA	
	Max power consumption 12 W	
Dimensions	165x105x20 mm (excl. contacts)	
Weight	Approx. 330 grams	
Controller	Palm PDA or PC	
	(software included)	
Control connector	9P D-sub, male	
Smartcard connect.	ISO 7816	
CAM connector	PCMCIA	
Indicator lights	"on", "transmission error",	
_	"access error"	
Operating temp.	0 to +50°C	

#### MPEG Decoder - Audio

Output	Stereo or Mono programmable
Output connector	Type Phono, female (R red, L white)
Impedance	< 100 Ω
Output level	Phono: Typ. 0dBm @ 600 Ω (0.77 Vrms)
Output level	
adjustable	+6 dB to -12 dB

This specification may be subject to change without notice.

## 8. Declaration of Conformity

#### **Declaration of Conformity**

EC Directives

ESA-110 and ESA-111 fulfill relevant parts of the directives and standards as below.

#### **Directives:**

- Electro magnetic compability directive (EMC) 89/339/EEC
- Low voltage directive (LVD) 73/23/EEC
- CE-marking directive 93/98/EEC

#### Standards:

EMC: Emission - EN61000-6-3:2001 Immunity - EN61000-6-1:2001

Safety: EN 60 950-1:2001

The document for Declaration of Conformity you will find at <u>www.a2b.se</u>.



Further information at <u>www.a2b.se.</u>



English

## Notes

· · · · · · · · · · · · · · · · · · ·			
			·····
<u> </u>			
<u> </u>			
			······
	· · · · · · · · · · · ·	· · · · · · · · · · ·	·····
			<del> </del>





# ANVÄNDARMANUAL

## ESA-110 och ESA-111

## Professionell Digital Satellitmottagare

## English







# design for TV

## Innehåll

- 1. Introduktion
- 2. <u>Uppackning av enheten</u>
- 3. Kontakter och indikeringar
- 4. Inställningar med PALM PDA
- 5. Inställningar med PC
- 6. Installation
- 7. Teknisk specifikation
- 8. Declaration of Conformity

## 1. Introduktion

Tack för att ni har valt en A2B Electronics produkt. Denna produkt är utvecklad för att ni som kund skall vara nöjd med dess prestanda och funktioner under många år.

ESA-110 och ESA-111 är högkvalitativa Professionella Digitala Satellitmottagare avsedd att användas i alla Kabel-TV och SMATV nät. Alla funktioner är integrerade i en extremt kompakt enhet. ESA-111 innehåller, inbyggd Conax och Common Interface.

ESA-110 innehåller dessutom även inbyggd NDS Videoguard.

ESA-110 och ESA-111 kan enkelt anslutas till våra professionella Kabel-TV VSB modulatorer EVA-200 och EVA-210.

Denna manual innehåller installations och inställningsanvisningar.

Om du behöver ytterligare assistans vid installationen kontakta din lokala handlare eller kontakta vår tekniska support på följande telefonnummer eller via e-post:

A2B Electronics AB Tel: +46(0)141 229115 E-post: <u>support@a2b.se</u>

Besök också vår hemsida på www.a2b.se för ytterligare support.

## 2. Uppackning av enheten

ESA-110 och ESA-111 levereras med all nödvändig mjukvara för att kunna göra alla inställningar. Filerna finns på den medföljande CD skivan och som kontrollenhet kan antingen en PC eller en PALM handdator användas.

Följande delar skall finnas i paketet:

Antal	Beskrivning
1	Digital satellitmottagare ESA-110 eller ESA-111
1	CD-ROM med bruksanvisning och kontrollmjukvara
1	Denna manual i tryckt version
4	Skruvar till frontpanelen

Varje enhet är kvalitetskontrollerad av oss före leverans men om något skulle fattas i paketet kontakta vår support service (se sidan 18 för kontakt).







Svenska

## 3. Kontakter och indikeringar



Spänningsindikator	Grön lampa anger att enheten är spänningssatt.
Felindikering	Röd lampa anger att insignalen innehåller fel.
Accessindikering	Släckt om smartcard är auktoriserat men ger rött sken om ingen auktorisation finns eller vid signalbortfall.
Reset	Återstartar hårdvaran.
RS-232 port för kontroll och inställningar	Serieport för anslutning av PALM PDA eller PC (mjukvara medföljer på bifogad CD).
LNB in	Anslut LNB-kabeln till denna ingång.
Audio H ut	Anslut denna till ingång för höger ljudkanal på modulatorn.
Audio V ut	Anslut denna till ingång för vänster ljudkanal på modulatorn.
Video ut	Anslut denna CVBS video till videoingången på modulatorn.
DC in	Anslutning av DC-spänningskälla (6-9 V 2A).

20 Svenska

## 4. Inställningar med PALM handdator

Detta avsnitt beskriver hur man gör en steg för steg inställning av mottagaren. Se till att de medföljande mjukvarorna är installerade på din PALM. För anvisningar om hur detta görs se manualen till din handdator.

1. Anslut ESA-110/111 till en DC spänningskälla (ESP-100 eller EPP-100). Anslut därefter din PALM handdator till ESA-110/111 med en PALM Hotsync kabel till RS-232 kontakten på ESA-110/111.



2. Klicka på ESA ikonen under A2B Control menyn på din PALM.



3. En välkomstmeny enligt nedan startar installationen. Klicka på [Next].

ESA-10071107111	(j)
Welcome	
Connect your handheld and press next to start	to ESA setup.
Press (i) for help.	
(Exit)	(Next »)



4. Denna meny innehåller tunerinställningar och val av LNB typ. Ange önskade värden för transponderfrekvens, symbolhastighet och polarisation och klicka på **[Next]**.

ESA-100/110	7111	(j)
LNB	- 11- 1	
Tuner	<ul> <li>Universo</li> </ul>	11
Frequency:	11276	MHz
Symbolrate:	24500	kS/s
Polarization: 🔻	<ul> <li>Vertical</li> </ul>	
(«Prev)		(Next »)

5. Ange nu vilken service (program) som önskas användas. Klicka på

ESA-10071	10/111	(i)
Service		
Service:	CANAL+ FILM	1
Provider:	Telenor	
Name:	CANAL+ FILM	1
Type:	Digital TV	
Status:	Scrambled	
(«Prev)		(Next»)

[Next].

Denna meny anger programmets namn och om det är krypterat etc.

6. Välj språk på ljud och textningsspråk. Klicka på [Next].



7. Installationen är nu klar och ljud och bild från rätt program skall finnas på mottagarens ljud och videoutgångar. Klicka på **[Again]** om du vill ändra dina inställningar.

ESA-100/110/111	<u>(</u> )
Completed If the results are no press (i) for a tra guide.	rt as expected, oulbleshooting
(«Prev)	(Again)

Koppla bort din PALM från ESA-110/111 och installationen är klar.



8. Dina inställningar är nu klara men du kan göra ytterligare inställningar under dessa mer avancerade inställningsmöjligheter. Klicka på **[Options]** och **[Country]** 



9. Under menyn **[Country]** kan du ändra språk och regionala inställningar från de som är förinställda. Klicka på **[OK]** och sedan **[Receiver]**.

ESR-100/110/111 (j)	Options Status
	Country
Completed Country ①	Receiver Decoder Modulator Enot as expected,
Country: ▼ Sweden Language: ▼ Swedish	Smartcard CA module
Charset: ▼ Latin - 0 System: ▼ PAL B/G	Software About
Timezone: VET	(«Prev) (Ragin)

10. **[Receiver]** menyn tillåter ändring av LNB spänning, DiSEqC och om signalen innehåller inverterat spektrum (IQ Convention) kan denna väljas manuellt alternativt automatiskt om läget Auto väljes. Klicka på **[OK]** och **[Decoder]**.

ESA-100/110/111	
Completed	
If the results are not as expected,	
Receiver <b>6</b>	
LNB Voltage: 🔻 Auto	
DiSEqC: 🗢 Auto	
IQ Convention: 🔻 Auto	
<u>Ok</u>	

	Options	Sto	itus
	Country. Receiver Decoder. Modulat Smartca CA modul Softwar About	or rd e	≥ not as expected, troulbleshooting
ζ	«Prev)		(Again)

11. I denna meny, **[Decoder]**, kan man välja mellan de inbyggda CA systemen. Format konvertering mellan olika bildgeometrier, signalering av bildformat (WSS), ljudformat (stereo eller mono) och teletext kan väljas eller väljas bort. Klicka på **[OK]** 

SR-100711071 Dec	oder 🚯
Embedded CA:	▼ NDS
16:9 Conversion:	▼ Letterbox
WSS:	🕶 Auto
Audio mode:	▼ Stereo
Audio level:	▼ -3 dB
Teletext:	🕶 Auto
Subtitling:	🕶 Auto
$\Box$	k)

**OBS!** ESA-111 har inte inbyggd NDS Videoguard, och därför kan NDS ej väljas för ESA-111.

12. Klicka på **[Options]** och därefter **[CA module]** eller **[Smartcard]**.

Options Sta	itus
Country Receiver Decoder Modulator Smartcard CA module Software About	≥ not as expected, troulbleshooting
«Prev)	(Again)

13. Om en CA modul har installerats i ESA-110/111 kan dess parametrar läsas ut i menyn **[CA module]**. Klicka på **[Close]**. Menyn **[Software]** anger vilken firmware version som finns nedladdad i ESA-110/111. Även hårdvaruversion kan läsas ut. Menyn **[About]** anger versionsinformation om kontrollmjukvaran. Under menyn **[Status]** finns information om status för den mottagna signalen, signalkvalitet, om CA modul eller program kort är installerat samt vilka audio och video format som för tillfället tas emot. Se nedan.

ESA-100/110/111	ESR-100/110/111	ESR-100/110/111
Status 🚯	Status 🚯	Status 🚯
Connected to ESA-111 R2 Software version 1.12 Restart 230, up 0:04 Smartcard: Inserted CA Module: Viaccess Serial # 01 50 00 70 30 80 00 01	Connected to ESA-111 R2         Audio decoder:       Running         ISO/IEC 11172       2 ch, 48 kHz         Video decoder:       Running         ISO/IEC 13818       25 Hz, 16:9	Connected to ESR-111 R2 EbNo (C/N): 11.4 dB Input level: -37 dBm Input Bit-Error-Rate: 1.4e-3 Viterbi Bit-Error-Rate: 0 Peed-Science REP: 0
OK	OK	



## 5. Inställningar med PC

Detta kapitel beskriver hur man gör alla inställningar av mottagaren med hjälp av en PC. Se till att filen för kontrollmjukvaran till PC finns nedladdade och installerade på din PC innan du börjar med inställningarna.

Anslut ESA-110/111 till en DC-spänning (ESP-100 eller EPP-100). Anslut sedan din PC till mottagaren med en s.k. nollmodem kabel från en serieport på din PC till RS-232 porten på ESA-110/111. Välj korrekt COM port varvid nedanstående meny skall visas på skärmen.

Receiver —			Decoder			Audio/Vid	eo	
-LNB Setup			Service			Video		
Universal/Fixed:	Universal	-	Discovery		-			
Horizontal/Vertical:	Horizontal		Type: Digital Te	levision		System:	PAL 625	
LNB Power:	Auto	-	Provider: Telenor			16:9:	Letterbox	
Inverted Spectrum:	Auto	-	Language			WSS:	Auto	-
Transponder Fred	quency Et	o/No	Audio: Subtitling:	Any None		Luma Trap:	Auto	-
Symbol Frequenc	:y		Subtitling Type: Subtitling Charset:	Auto Latin 0	•	Audio Volume:	3 🔻	dB
Input Level (dBm)	-43 1	1.4	CA Settings	a		Mode:	Stereo or	-
Program	receiver		CA Module	Embedde	d	On/Off:	OFF	
	alah distana					System:	B/G	-
System setting	js — —					Channel:	E22	-
Port: COM1 -	O Connecte	d	ESA-111	irmware	a	Frequency:	479.25	MHz
	1	-	Currentine -	Timazana: OE		Program	n Frequency	1

Notera att ESA-111 endast har inbyggd Conax avkryptering. För NDS Videoguard rekommenderar vi ESA-110.

Nedan finns beskrivning av de olika funktionerna under denna meny.

#### **1. RECEIVER**

Välj en fast LNB frekvens eller universal LNB. Välj sedan rätt polarisation för den transponder ni önskar ta emot och låt LNB Power vara inställd på Auto om ni har Universal LNB. Inverterat spektrum kan väljas manuellt eller automatiskt för vissa utsändningar (C-band). Slutligen välj korrekt transponderfrekvens och symbolfrekvens. Vi föreslår att ni hämtar uppgifter om transponderdata från <u>www.lyngsat.com</u>. Tillse att innivån är högre än -60 dBm (helst högre än -50 dBm) och att Eb/No värdet är högre än 10. **[Program receiver]** måste väljas varje gång nya värden skall läsas in i ESA-110/111.

#### 2. DECODER

**[Service]** menyn tillåter val av ett specifikt program ur en multiplex av flera olika program. Ljud och textningsspråk kan också väljas under denna meny.

#### 3. AUDIO/VIDEO

I videomenyn kan inställning av sändningsstandard, bildgeometri (4:3, 16:9, 14:9 combined) göras. **[WSS]** är en förkortning av Wide Screen Signalling och är en signalering som göres på videonivå och som signalerar till respektive TV-apparat vilken bildgeometri som den skall välja. Detta görs automatiskt av de flesta TV.

I [Teletext] menyn kan teletext textning slås av eller på.

I **[Audio]** menyn görs inställning av ljudnivå och om man vill ha mono eller stereoljud.

#### 4. CA SETTINGS

Information om den CA modul som användes samt om det inbyggda CA systemet kan läsas ut under denna meny. Programkort till respektive CA system måste vara installerade.

#### **5. SYSTEM SETTINGS**

Gör regionala inställningar under denna meny. Textnings- och språkinställningar kan göras och även val av serieport (COM port) görs här.

#### 6. FIRMWARE

Klicka på **[Firmware]** om ni har en ny mjukvara tillgänglig för ESA-110/111. Genom att klicka på denna knapp kan ni söka bland era kataloger och hämta filen från er dator.

#### 7. [i] and [?]

[i] visar informations- och hjälpmenyer till ESA-110/111. [?] menyn kommer att vara åtkomlig i senare mjukvaruversioner. 26

20

Svenska

## 6. Installation

ESA-110/111 kan installeras antingen som en helt fristående enhet som kan anslutas till existerande eller nya modulatorer. Den kan med fördel också monteras i en basenhet (EBU-100) tillsammans med någon av våra högkvalitativa RF-modulatorer (EVA-200/210). Innan ni ansluter matningsspänning till enheten tillse att alla övriga anslutningar är gjorda.

Om en RF-modulator med stereoingång såsom EVA-210 finns tillgänglig koppla höger och vänster kanal till motsvarande ingångar på EVA-210.

Koppla också videoutgången (CVBS) till videoingången på en modulator (EVA-200/210). Använd en antennkabel av god kvalitet med F-kontakt (hane) för anslutning till LNBingången.

Anslut matningsspänning och gör alla nödvändiga inställningar enligt kapitel 4 eller 5.



Installation i basenhet med 10 moduler och en gemensam nätdel.



Installation på vägg som fristående enhet med enkel nätdel (ESP-100) och ett väggfäste.

#### <u>Tillbehör</u>



EPP-100 Nätdel 100W 11 utgångar Väggfäste



DC-kabel för EPP-100



ESP-100 Nätdel 15W 1 utgång



EBU-100 Basenhet för 10 moduler och nätdel



## 7. Teknisk specifikation

### **ESA-110 och ESA-111** Professionell digital satellitmottagare

#### **QPSK Satellit Mottagare**

Frekvensområde	950 till 2150 MHz
LNB kontakt	Typ F hona, 75 $\Omega$
Innivåområde	-60 till -25 dBm <sup>1)</sup>
Inverterat spektrum	Manuell/auto val
_	(Ku-band & C-band)
LNB spänning	Auto, Av, +13,5V, +18,5V
	programmerbar
	(kortslutningsskyddad max 400mA)
22kHz till LNB	Auto, På eller Av programmerbar
Symbolhastighet	2 till 45 Mbaud/s
DVB standard	DVB-S
Felkorrektion	Viterbi (1/2, 2/3, 3/4, 5/6, 7/8)
	+Reed Solomon (188/204)
	+Interleave (I=12)
Max I NB freky offse	$x_{+} = -3MH_{7} (2-45 MSymb)$

Max LNB frekv. offset+/- 3MHz (2-45 MSymb.)

 $^{1)}\,\rm QEF$  mottagning med test signal: 24,5 MSymb, 7/8 FEC, 8,4dB C/N

#### MPEG Decoder - Video

Standarder	PAL, SECAM eller NTSC
Impedans	$75 \Omega$
Kontakter	Phono, hona (gul)
Utnivå	1 Vpp @ 75 Ω
Bildgeometri	Letterbox, Pan/Scan, eller
0	omvandling Combined (14:9)
	programmerbart
Teletext	Insättning på VBI
	Programtextning Teletext eller DVB
	subtitling
Avkodning	Inbyggd Conax och Common Interface
_	(testad med Viaccess, Irdeto,
	Cryptoworks, Aston (Mediaguard, Seca),
	Conax, Alphacrypt)

Inbyggd NDS Videoguard (endast ESA-110)

#### Övrigt

Matningsspänning	6-9 VDC (7,5 V nom.)
Effektförbrukning	Typ. <4 W utan CAM och extern last
	Typ. CAM $< 1W$
	Typ. LNB $< 3W$
	Max LNB 7,2 W (vid matning +18V
	och max 400 mA)
	Max effektförbrukning 12 W
Mått	160x105x20 mm (exklusive kontakter)
Vikt	C:a 330 gram
Kontrollenhet	Palm handdator eller PC
	(mjukvara bifogad)
Kontrollport	9P D-sub, hane
Smardcard anslutning	ISO 7816
CAM-anslutning	PCMCIA
Indikeringar	"on", "transmission error",
	"access error"
Driftstemperatur	0 till +50°C

#### MPEG Decoder - Audio

Utgång	Stereo eller Mono programmerbar
Kontakter	Typ Phono, hona (H röd, V vit)
Impedans	< 100 <b>Ω</b>
Utnivå	Phono: Typ. 0dBm @ 600 $\Omega$ (0.77 Vrms)
Utnivå justerbar	+6 dB till –12 dB

Denna specifikation kan komma att ändras utan föregående varning.



## 8. Declaration of Conformity

#### **Declaration of Conformity**

EC Directives

ESA-110 och ESA-111 uppfyller de relevanta delarna av nedanstående direktiv och standarder.

#### Direktiv:

- Electro magnetic compability directive (EMC) 89/339/EEC
- Low voltage directive (LVD) 73/23/EEC
- CE-marking directive 93/98/EEC

#### Standarder:

EMC: Emission - EN61000-6-3:2001 Immunity - EN61000-6-1:2001

Safety: EN 60 950-1:2001

Det fullständiga dokumentet för Declaration of Conformity återfinnes på www.a2b.se.



Se vidare på <u>www.a2b.se.</u>



## Noteringar

 	· · · · · · · · · · · · · · · · · · ·	 
 · · · · · · · · · ·	· · · · · · · · · ·	 
 	·····	 
 · · · · · · · · · · · ·		 

<sub>30</sub> Svenska

## Noteringar

	· · · · · · · · · · · · · · · · · · ·		
		· · · · · · · · · · · · · · · · · · ·	
			<u> </u>
· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · ·		
	· · · · · · · · · · · · · · · · · · ·		
			<u></u>

31 Svenska



## **A2B Electronics AB**

Södra Allén 23-25, 591 37 Motala P.O. Box 14, 591 21 Motala SWEDEN Phone +46 141 229100 Fax +46 141 229101 E-mail market@a2b.se

To view our full line of Professional E-series Products, visit our Web site

