

Mini iJust User Manual

Notice for Use

Thanks for choosing Eleaf product! Please read this manual carefully before use so that you can use it correctly. If you require more information or have questions about the product or its use, please consult your local agents, or visit our website at www.eleafworld.com.

Product Introduction

Mini iJust, a new e-cigarette launched by Eleaf, features the brand new BDC atomizer head, adjustable voltage(3.3-5.0V), lateral recharge, slim figure, transparent e-juice window, high power capacity and so on. BDC atomizer enhances its effective of vaporisation. The function of adjusting voltage brings you different experiences of puff-taking. Apart from these, its color and craft will also be a plus.

Standard configuration

- 2×iJust Mouthpiece
- 1×iJust Atomizer Tube
- 2×BDC Atomizer Head
- 1×Mini iJust Atomizer Base
- 1×Mouthpiece Cover
- 1×Mini iJust Battery
- 3×USB Port Cover
- 1×Mini iJust USB Cable
- 1×iJust Wall Charger
- 1×iJust User Manual


Quick Start

a) How to assemble:

Mount BDC atomizer head onto Mini iJust atomizer base and then put together base, tube and mouthpiece. Second, put battery into the battery tube. At last, assemble Mini iJust battery and Mini iJust atomizer.

b) How to use:

Quickly press the button five times to turn on Mini iJust and turn it off in the same way. Keeping on pressing the button of Mini iJust, take puffs at Mini iJust. At the same time, user can adjust the voltage to his taste by turning the knob around the button.

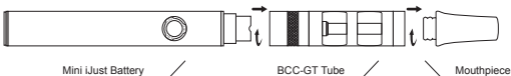

BDC atomizer head

BDC (bottom dual coil) atomizer head is introduced into Mini iJust again. It constitutes two coil (two kinds of resistance: 1.6 ohm and 1.8 ohm), a great deal enhancing the effectiveness of vaporisation and bringing you different experiences. BDC atomizer head ensures the large amount of vapor under low voltage, no burning taste under high voltage and no leakage. Additionally, BDC atomizer head is similar to BCC atomizer head in size and appearance, so it is able to fit into Mini BCC, Mega BCC and iKit.

Mini iJust Atomizer

Mini iJust Atomizer is the previous eLeaf BCC-GT atomizer. There are seven kinds of colors available for option, i.e. black, silver, white, pink, cherry red, purple and blue. BCC-GT atomizer, features a configuration with 14mm in diameter: Stainless steel with glass window. From the window, the volume of the e-juice is pretty open-and-shut. Its BCC-GT mouthpiece is pluggable. Additionally, the detachable, washable and changeable atomizer head of new type enables carbon deposits on the filaments to be easily cleaned.

Mini iJust Power Supply

- Three types of capacity: 650mAh, 900mAh, 1300mAh
- Two types of thread: 510 thread, eGo thread
- Color: black, silver, white, pink, cherry red, purple and blue

Properties of Mini iJust battery

- High-safety, high-capacity, high-magnification and high-stability lithium battery.
- The battery has an adjustable output voltage from 3.3-5.0V, and collects multi-functions in short circuit protection, over-charge and discharge protection, atomizer protection.

How to adjust voltage


One of obvious features of Mini iJust is its function of adjusting voltage. The voltage range varies from 3.3 V to 5.0 V. Through turning around the knob either in right direction or in left direction, user can adjust its voltage to his taste.

How to charge

Plug the USB charger into its charging port on the battery tube. While it is being charged, the LED turns red till it is full and LED goes out.

How to refill liquid

Unscrew Mini iJust atomizer out of the battery, unscrew the base, turn the atomizer down and then refill e-liquid into the atomizer. At last, Screw Mini iJust atomizer base onto the Mini iJust atomizer, then the Mini iJust battery. (See Picture)

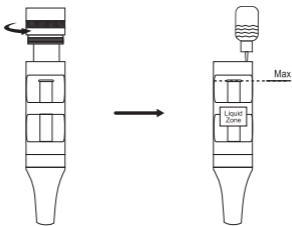

Attention:

- With less than 10% of e-liquid left in the tube, a slight burn taste may come out, which implies that you should refill it.
- In the process of using Mini iJust, carbonisation and impurities will accumulate around the mouthpiece. For this reason, periodical clean and replacement of mouthpiece are necessary.

Precautions

- Have your Mini iJust repaired only by Eleaf. Do not repair the unit by yourself as damage or personal injury may occur.
- Do not leave Mini iJust in high temperature or damp condition, otherwise its performance may abate. The appropriate operation temperature is between 0 °C and 45 °C and the appropriate charging temperature between -10 °C and 60 °C.
- Do not assemble Mini iJust with non-Eleaf parts. Any problem caused by this will invalidate your warranty and our company will not take on any responsibility.

Warranty

Please consult your Eleaf product warranty card. We are not responsible for any damages caused by human error. Our warranty is invalid for products purchased from third-party vendors.

Email: info@ismoka.com
Web: www.eleafworld.com



MADE IN CHINA
Manufactured by iSmoka