

Ascon Technologic S.r.l.
via Indipendenza 56,
27029 - Vigevano (PV), Italia
Tel.: +39 0381 69871,
Fax: +39 0381 698730
www.ascontecnologic.com

E

mod. IO-CB/DI-32LV-00

M.U. IO-CB/DI-32LV-2/07.07
Cod. J30-478-1ADI-32LV E

User manual

Contents

- Characteristics
- Functional Block Diagram
- PDOs used by the module
- Hardware Set-up
- Parameter configuration
- Commands
- Emergency messages
- Parameter Store/Restore
- Object Dictionary

CANopen I/O module

32 Isolated Digital Inputs mod. IO-CB/DI-32LV

32 optoisolated digital inputs with edge detect and interrupt functions



APPLICABLE STANDARDS

The DI-32LV module is suited for the CiA DS301 protocol [1] and implements the CiA DS401 standard Device Profile [2].

Characteristics


Technical data

Number of channels	32
Polarity (EN 61131-2 type 1)	Sink
UL (state 0)	-3...+11/5 Vdc
UT (transition)	5...11 Vdc
UH (state 1)	11...30 Vdc
Input impedance	5 kΩ
ON/OFF delay	5 ms
ON/OFF delay	<5 ms

WARNING

- 1) The product described in this manual should only be installed, operated and maintained by qualified application programmers and software engineers who are familiar with automation safety concepts and applicable national standards.
- 2) This product supports the Parameter defaults indicated by CiA standards, in addition, some parameters have a factory set (value present in the module when comes from the factory). The default values can be loaded with the restore command, but after the restore, factory set values are lost.

Functional Block Diagram

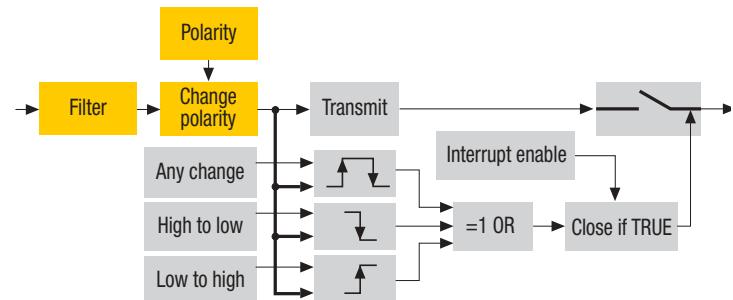


General

3 way isolation	Channel to Channel	No (note)
	Channel to Logic	800 Vp
	Logic to Serial Bus	800 Vp
	Power Supply to Logic	800 Vp
Power supply	24 Vdc; -15...+25%	
Power consumption	3 W	
Oversupply protection	40 Vdc	
Dimensions	L: 152; H: 110; W: 65	
Weight	350 g	
Safety regulations EN61010-1	Isolation class II (50Vrms), Installation category II, Pollution degree 2	
CE marking	EN61131-2	

Note: Two separated groups of 16 channels each

3 way
isolation
diagram

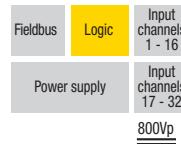

PDOs used by the module

TPDO	Properties	Mapped objects	Index	Sub-index
TPDO 1	COBID: 180h+ NodeID Transmission Type:01h *	DigInInput8_1 DigInInput8_2 DigInInput8_3 DigInInput8_4	6000h 6000h 6000h 6000h	01h 02h 03h 04h

Note: * The Transmission Type is configurable:


01h is the factory set (value present in the modules when come from the factory);
FFh is the default value.

Environment

	Operating	Storage
Temperature	-10...+65°C	-40...+85°C
Relative Humidity	5...95% non condensing Appropriate measures must be taken against humidity >85%	5...95% non condensing For a short period, slight condensation may appear on the housing
Mounting	Vertical, free air	
Protection	IP20	
Vibrations (3 axes)	10...57Hz 0.0375mm 57...150Hz 0.5g	
Shock (3 axes)	15g, 11ms half sine	

Hardware Set-up

Hexadecimal rotary switches, service and I/O LEDs

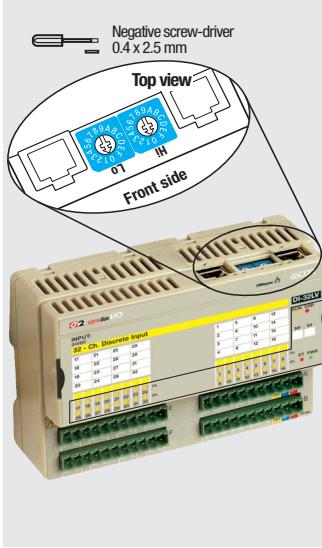

Service LEDs	Status	Meaning
RUN	ON	Operational
	Blinking	Pre-operational (CANopen)
	Single flash	STOPPED
	OFF	Device in RESET state
ERR	ON	BUS OFF
	Single flash	Warning limit reached
	Double flash	Error Control Event
	Triple flash	Sync Error (CANopen)
ST	OFF	No error. Device working
	ON	DIAG Error
	Blinking	INIT and DIAG running
	Single flash	Baud rate setting
PWR	OFF	Module OK and ready
	ON	Module Power Supply ON
I/O LEDs	Status	Meaning
IN 1..32	ON	Input active
	OFF	Input inactive

Bit Rate and Node ID configuration

Bit rate

Lo switch	Baud rate kbps	Bus length m
1	20	2500
2	50	1000
3	100	500
4	125	500
5	250	250
6 *	500	100
7	800	50
8	1000	25

Node ID

Hi switch	Lo switch	Valid ID Node
0	1	01h (address 1)
0	2	02h (address 2)
↓	↓	↓
7	F	7Fh (address 127D)

Notes: * Default value

Procedure for Node ID and Bit Rate configuration

The HI and LO hexadecimal rotary switches set the module's Bit Rate and CAN Node ID. During the configuration, the module must be **off line** and the CAN bus must be physically disconnected.

To configure the module, follow the procedure:

- 1 Turn the Power OFF
- 2 Set the **HI** switch to "F"
- 3 Select the desired Bit Rate value by setting the **LO** switch following the table (e.g. "8" for 1 Mbps)
- 4 Turn the Power ON
- 5 Shift the **HI** switch to "E" (all the module service LEDs should flash)
- 6 Turn the Power OFF. Now configure Node ID
- 7 Set the **HI** and **LO** switches to the desired valid Node ID following the table
- 8 Turn the Power ON.

Alternatively, at step 7 set the value 00h. Then, at the next Power ON, the last valid stored value will be resumed as Node ID.

Default values: Bit Rate = 500 kbps, Node ID = 127D

Index 6008h – Interrupt Mask High-to-Low 8-bit:

detection of a High-to-Low edge.

Index 6005h – Global Interrupt Enable:

the actual PDO transmission is performed if two initial conditions are met: the variable in Index 6005h should be "TRUE" and the PDO transmission type should be 255.

Module specific parameters

Index 3000h – Node Address

Current Module Node ID - Read only access


Index 3001h – Baudrate

Current Module Bit rate - Read only access

Commands

Index 200Ch – Operating mode

The device has its own internal state machine. It is possible to move through this by sending appropriate values to the Index 200Ch, following the table below.

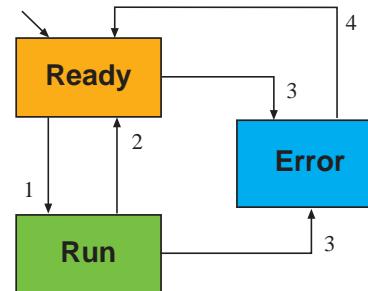

Transition	Operating mode value	Behaviour
Init	-	At Power-Up, the Device is in the "ready" state. Transition 1 is also executed if Index 200Ch - Operating Mode contains the default value 1
1	01h	Operating mode "RUN" is activated
2	00h	Return to the initialisation "ready" state. The transition is performed: <ul style="list-style-type: none"> following an operator's command after assigning a configuration parameter (2004h)
3	FFh	The "error" state is automatically assigned by the device (and the operating mode value is read only) when: <ul style="list-style-type: none"> an attempt is made to execute an unexpected command
4	00h	This value causes an exit from the "error" state, after the error condition is acknowledged. The only transition is to the "ready" state

Parameter configuration

Configuring the Input Channels

The functional block diagram for the Inputs is consistent with the standard profile CiA DS401 [2].

The digital signal is first filtered (**Index 6003h – Filter Constant Input 8-bit** and **Index 2004 – Filter Constant**), then polarised (**Index 6002 – Polarity Input 8-bit**) and finally assigned to the variable that contains its value (**Index 6000h – Read Input 8-bit**). The information is now ready to be transmitted on the CAN network via the TPDO1.

Other entries determine the trigger condition:

Index 6006h – Interrupt Mask Any Change 8-bit:

detection of any input level change.

Index 6007h – Interrupt Mask Low-to-High 8-bit:

detection of a Low-to-High edge.

Emergency messages

The module automatically sends emergency messages including error codes. The communication errors are described in CiA DS301 [1]. The error codes are expressed as a DEVICE SPECIFIC ERROR type of code. The codes indicating a specific condition are also inserted, following the table below:

Error code	Error
0000000000	No error – This code is generated when exiting an error condition, to notify the end of one of the error states
0000000007	Error Wrong Command – An attempt to execute a command from an illegal state

Emergency Message	01h	FFh	21h	00h	00h	00h	0y
COB - ID = [entry 1014h] + NodeID							

Error code

Parameter Store/Restore

This module allows parameters to be saved in a non volatile memory. In order to avoid storing parameters by mistake, storage is only executed when a specific signature is written to the appropriate subindex. The signature is “save”.

Similarly, the default values of parameters, according to the communication or device profile, are restored. On receipt of the correct signature in the appropriate subindex, the device restores the default parameters and then confirms the SDO transmission. The signature is “load”.

The new configuration becomes active after a reset, i.e. after a “Power OFF/Power ON cycle” or an NMT “Reset Node” message.

Byte	0	1	2	3	4	5	6	7
Store Parameter	22h	10h	10h	01h	73h	61h	76h	65h
COB – ID = 600h + NodeID								
Restore Parameter	22h	11h	10h	01h	6Ch	6Fh	61h	64h
COB – ID = 600h + NodeID								

SDO Messages

The entries of a device Object Dictionary are accessed through SDO (Service Data Object) messages. The basic SDO messages are as follows, as based on the Client – Server request and response model:

Byte	0	1	2	3	4	5	6	7
Read request	40h		Index	Sub-Index		Reserved		
COB – ID = 600h + NodeID								
Read response	4xh *		Index	Sub-Index		Data		
COB – ID = 580h + NodeID								
Write request	22h		Index	Sub-Index		Data		
COB – ID = 600h + NodeID								
Write response	60h		Index	Sub-Index		Reserved		
COB – ID = 580h + NodeID								

* This code is type dependant.

Please refer to the CIA DS301 Profile for more details.

Reference documents

List of CiA documents to which the user should refer:

- [1] CIA DS301 - CANopen Application Layer and Communication Profile;
- [2] CIA DS401 - CANopen Device Profile for generic I/O Modules.

Accessories, Spare Parts and Warranty

Power Supply 45W 24Vdc 2A	AP-S2/AL-DR45-24
Power Supply 120W 24Vdc 5A	AP-S2/AL-DR120-24
Additional Terminal Block 2x11	AP-S2/TB-211-1
Female Plug 11 Screw clamp	AP-S2/SPINA-V11
Female Plug 11 Spring clamp	AP-S2/SPINA-M11
RJ45 terminated cable 14cm	AP-S2/LOCAL-BUS76
RJ45 terminated cable 22cm	AP-S2/LOCAL-BUS152
CAN termination Adapter	AP-S2/TERM-CAN

Warranty: 3 years excluding defects due to improper use

Object Dictionary (with default values)

⚠ In order to configure the module, it is necessary to connect it to a PC with the CAN interface and the supervisory software installed. The configuration can be obtained by writing the desired values to the module's variables listed in the Object Dictionary.

Object Dictionary structure

Index (hex)	Sub Index	Object	Name	Default [hex]	Type	Acc. Attr.	MO	Index (hex)	Sub Index	Object	Name	Default [hex]	Type	Acc. Attr.	MO
1000		VAR	Device Type	00010191	UNSIGNED32	RO	M	200C		VAR	Operating Mode	01	UNSIGNED8	RW	O
1001		VAR	Error Register	00	UNSIGNED8	RO	M	3000		VAR	Node Address	7F	UNSIGNED8	RO	O
1003		ARRAY	Predefined error field	00000000	UNSIGNED32	RO	O	3001		VAR	Node Baudrate	06	UNSIGNED8	RO	O
1005		VAR	COB-ID SYNC	00000080	UNSIGNED32	RW	O	6000		ARRAY	Read Input 8 – bit		UNSIGNED8		M
1006		VAR	Communication cycle period	00000000	UNSIGNED32	RW	O	00h		VAR	Number of entries	04	UNSIGNED8	RO	
1007		VAR	Synchronous window length	00000000	UNSIGNED32	RW	O	01h		VAR	DigInPut8_1	00	UNSIGNED8	RO	
1008		VAR	Manufacturer Device Name	"32LV"	Vis-String	const	O	02h		VAR	DigInPut8_2	00	UNSIGNED8	RO	
1009		VAR	Manufacturer Hardware Version	"1.00"	Vis-String	const	O	03h		VAR	DigInPut8_3	00	UNSIGNED8	RO	
100A		VAR	Manufacturer Software Version	"1.00"	Vis-String	const	O	04h		VAR	DigInPut8_4	00	UNSIGNED8	RO	
100C		VAR	Guard Time	0000	UNSIGNED16	RW	O	6002		ARRAY	Polarity Input 8 – bit		UNSIGNED8		O
100D		VAR	Life Time Factor	00	UNSIGNED8	RW	O	00h		VAR	Number of entries	04	UNSIGNED8	RO	
1010		ARRAY	Store parameters		UNSIGNED32		O	01h		VAR	Polarity8_1	00	UNSIGNED8	RW	
00h		VAR	Largest subindex supported	01	UNSIGNED8	RO		02h		VAR	Polarity8_2	00	UNSIGNED8	RW	
01h		VAR	Save all parameters	03	UNSIGNED32	RW		03h		VAR	Polarity8_3	00	UNSIGNED8	RW	
1011		ARRAY	Restore Default Parameters		UNSIGNED32	RW	O	04h		VAR	Polarity8_4	00	UNSIGNED8	RW	
	00h	VAR	Largest subindex supported	01	UNSIGNED8	RO		6003		ARRAY	Filter Constant Input 8 – bit		UNSIGNED8		O
	01h	VAR	Restore all default parameters	01	UNSIGNED32	RW		00h		VAR	Number of entries	04	UNSIGNED8	RO	
1014		VAR	COB-ID EMCY	80+NodeID	UNSIGNED32	RW	O	01h		VAR	FilterConst8_1	00	UNSIGNED8	RW	
1015		VAR	Inhibit Time EMCY	0000	UNSIGNED16	RW	O	02h		VAR	FilterConst8_2	00	UNSIGNED8	RW	
1017		VAR	Producer heartbeat time	0000	UNSIGNED16	RW	O	03h		VAR	FilterConst8_3	00	UNSIGNED8	RW	
1018		RECORD	Identity Object				M	04h		VAR	FilterConst8_4	00	UNSIGNED8	RW	
	00h	VAR	Number of entries	01	UNSIGNED8	RO		6005		VAR	Global Interrupt Enable Digital	TRUE	BOOLEAN	RW	O
	01h	VAR	Vendor ID	000000E9	UNSIGNED32	RO		6006		ARRAY	Interrupt Mask Any Change 8 - bit		UNSIGNED8		O
1200		RECORD	Server SDO Param					00h		VAR	Number of entries	04	UNSIGNED8	RO	
	00h	VAR	Number of entries	02	UNSIGNED8	RO	O	01h		VAR	InterruptAnyChange8_1	FF	UNSIGNED8	RW	
	01h	VAR	COB-ID Client -> Server	600+NodeID	UNSIGNED32	RO		02h		VAR	InterruptAnyChange8_2	FF	UNSIGNED8	RW	
	02h	VAR	COB-ID Server -> Client	580+NodeID	UNSIGNED32	RO		03h		VAR	InterruptAnyChange8_3	FF	UNSIGNED8	RW	
1800		RECORD	1st Transmit PDO Comm Param.		PDO CommPar (20h)		M	04h		VAR	InterruptAnyChange8_4	FF	UNSIGNED8	RW	
	00h	VAR	Largest subindex supported	05	UNSIGNED8	RO		6007		ARRAY	Interrupt Mask Low to High 8 - bit		UNSIGNED8		O
	01h	VAR	COB-ID used	180+NodeID	UNSIGNED32	RW		00h		VAR	Number of entries	04	UNSIGNED8	RO	
	02h	VAR	Transmission type	FF *	UNSIGNED8	RW		01h		VAR	InterruptLowToHigh8_1	00	UNSIGNED8	RW	
	03h	VAR	Inhibit time	0000	UNSIGNED16	RW		02h		VAR	InterruptLowToHigh8_2	00	UNSIGNED8	RW	
	04h	VAR	Reserved		UNSIGNED8	RW		03h		VAR	InterruptLowToHigh8_3	00	UNSIGNED8	RW	
	05h	VAR	Event timer	0000	UNSIGNED16	RW		04h		VAR	InterruptLowToHigh8_4	00	UNSIGNED8	RW	
1A00		RECORD	1st Transmit PDO Mapping		PDO Mapping (21h)		M	6008		ARRAY	Interrupt Mask High to Low 8 - bit		UNSIGNED8		O
	00h	VAR	No. of mapped application obj.	04	UNSIGNED8	RO		00h		VAR	Number of entries	04	UNSIGNED8	RO	
	01h	VAR	DigInPut8_1	60000108	UNSIGNED32	RO		01h		VAR	InterruptHighToLow8_1	00	UNSIGNED8	RW	
	02h	VAR	DigInPut8_2	60000208	UNSIGNED32	RO		02h		VAR	InterruptHighToLow8_2	00	UNSIGNED8	RW	
	03h	VAR	DigInPut8_3	60000308	UNSIGNED32	RO		03h		VAR	InterruptHighToLow8_3	00	UNSIGNED8	RW	
	04h	VAR	DigInPut8_4	60000408	UNSIGNED32	RO	0	04h		VAR	InterruptHighToLow8_4	00	UNSIGNED8	RW	
2004		ARRAY	Filter Constant		UNSIGNED8										
	00h	VAR	Number of entries	20	UNSIGNED8	RO									
	01h	VAR	Filter Constant 1	00	UNSIGNED8	RW									
	02h	VAR	Filter Constant 2	00	UNSIGNED8	RW									
	03h	VAR	Filter Constant 3	00	UNSIGNED8	RW									
	04h	VAR	Filter Constant 4	00	UNSIGNED8	RW									
	05h	VAR	Filter Constant 5	00	UNSIGNED8	RW									
	06h	VAR	Filter Constant 6	00	UNSIGNED8	RW									
	07h	VAR	Filter Constant 7	00	UNSIGNED8	RW									
	08h	VAR	Filter Constant 8	00	UNSIGNED8	RW									
	09h	VAR	Filter Constant 9	00	UNSIGNED8	RW									
	0Ah	VAR	Filter Constant 10	00	UNSIGNED8	RW									
	0Bh	VAR	Filter Constant 11	00	UNSIGNED8	RW									
	0Ch	VAR	Filter Constant 12	00	UNSIGNED8	RW									
	0Dh	VAR	Filter Constant 13	00	UNSIGNED8	RW									
	0Eh	VAR	Filter Constant 14	00	UNSIGNED8	RW									
	0Fh	VAR	Filter Constant 15	00	UNSIGNED8	RW									
	10h	VAR	Filter Constant 16	00	UNSIGNED8	RW									
	11h	VAR	Filter Constant 17	00	UNSIGNED8	RW									
	12h	VAR	Filter Constant 18	00	UNSIGNED8	RW									
	13h	VAR	Filter Constant 19	00	UNSIGNED8	RW									
	14h	VAR	Filter Constant 20	00	UNSIGNED8	RW									
	15h	VAR	Filter Constant 21	00	UNSIGNED8	RW									
	16h	VAR	Filter Constant 22	00	UNSIGNED8	RW									
	17h	VAR	Filter Constant 23	00	UNSIGNED8	RW									
	18h	VAR	Filter Constant 24	00	UNSIGNED8	RW									
	19h	VAR	Filter Constant 25	00	UNSIGNED8	RW									
	1Ah	VAR	Filter Constant 26	00	UNSIGNED8	RW									
	1Bh	VAR	Filter Constant 27	00	UNSIGNED8	RW									
	1Ch	VAR	Filter Constant 28	00	UNSIGNED8	RW									
	1Dh	VAR	Filter Constant 29	00	UNSIGNED8	RW									
	1Eh	VAR	Filter Constant 30	00	UNSIGNED8	RW									
	1Fh	VAR	Filter Constant 31	00	UNSIGNED8	RW									
	20h	VAR	Filter Constant 32	00	UNSIGNED8	RW									

* The factory set (value present in the modules when new) for the transmission type is: **01h**.