

# *INVERTEK®*

Combi 3

PURE SINE WAVE INVERTER /  
ATS / BATTERY CHARGER



## USER MANUAL



# **CONTENTS**

|   |                |
|---|----------------|
| <b>Introduction .....</b>   | <b>.....</b>   |
| <b>Specification.....</b>   | <b>.....</b>   |
| <b>Dimension .....</b>  | <b>.....</b>   |
| <br><b>Chapter 1 Installation.....</b>                                | <br><b>1-1</b> |
| <b>1.1 Box Contents.....</b>  | <b>1-1</b>     |
| <b>1.2 Location .....</b>   | <b>1-1</b>     |
| <b>1.3 Requirements.....</b>  | <b>1-1</b>     |
| <b>1.4 Connection of Battery Cables .....</b>                         | <b>1-2</b>     |
| <b>1.5 Connection of AC Cabling .....</b>                             | <b>1-2</b>     |
| <b>1.6 Optional Connections .....</b>                                 | <b>1-3</b>     |
| <b>1.7 Grounding.....</b>   | <b>1-3</b>     |
| <b>1.8 Remote Control Panel (RCP-3) .....</b>                         | <b>1-3</b>     |
| <br><b>Chapter 2 Settings.....</b>                                    | <br><b>2-1</b> |
| <b>2.1 Four Control Modes Application .....</b>                       | <b>2-1</b>     |
| <b>Auto 1: AC Power as Priority Support.....</b>                      | <b>2-1</b>     |
| <b>Auto 2: AC Generator Support with Dynamic Power Shifting .....</b> | <b>2-4</b>     |
| <b>Inverter Only Mode .....</b>                                       | <b>2-6</b>     |
| <b>Charger Only Mode.....</b>   | <b>2-8</b>     |
| <br><b>Chapter 3 Wiring .....</b>                                     | <br><b>3-1</b> |
| <b>3.1 Front Panel Display .....</b>                                  | <b>3-1</b>     |
| <b>3.2 Panel Connection .....</b>                                     | <b>3-4</b>     |
| <b>3.3 Battery Connection .....</b>                                   | <b>3-6</b>     |
| <br><b>Capter 4 User Constants .....</b>                              | <br><b>4-1</b> |
| <b>4.1 Structure of User Constants.....</b>                           | <b>4-2</b>     |
| <b>4.2 Operation Flow.....</b>  | <b>4-6</b>     |

|   |                |
|---|----------------|
| <b>Chapter 5 Constants List.....</b>                            | <b>5-1</b>     |
| <b>U Group: Monitor.....</b>                                    | <b>5-1</b>     |
| <b>A Group: Initialize.....</b>                                 | <b>5-2</b>     |
| <b>B Group: General .....</b>                                   | <b>5-2</b>     |
| <b>C Group: Inverter.....</b>                                   | <b>5-3</b>     |
| <b>D Group: Charger.....</b>                                    | <b>5-3</b>     |
| <b>E Group: Aux-Relay .....</b>                                 | <b>5-3</b>     |
| <b>O Group: Operator.....</b>                                   | <b>5-8</b>     |
| <br><b>Chapter 6 Programming Constants .....</b>                | <br><b>6-1</b> |
| <b>A Group: Initialize.....</b>                                 | <b>6-1</b>     |
| <b>B Group: General .....</b>                                   | <b>6-3</b>     |
| <b>C Group: Inverter.....</b>                                   | <b>6-8</b>     |
| <b>D Group: Charger.....</b>                                    | <b>6-10</b>    |
| <b>E Group: Aux-Relay .....</b>                                 | <b>6-13</b>    |
| <b>O Group: Operator.....</b>                                   | <b>6-19</b>    |
| <b>U Group: Monitor.....</b>                                    | <b>6-21</b>    |
| <br><b>Chapter 7 Trouble Shooting Table.....</b>                | <br><b>7-1</b> |
| <br><b>Appendix A: EMC for Wall-Mounting/Vertical Combi 3</b>   |                |
| <b>Appendix B: LVD for Wall-Mounting/Vertical Combi 3</b>       |                |
| <b>Appendix C: C-Tick for Wall-Mounting/Vertical Combi 3</b>    |                |
| <b>Appendix D: EMC for Table-Mounting/Horizontal Combi 3</b>    |                |
| <b>Appendix E: LVD for Table-Mounting/Horizontal Combi 3</b>    |                |
| <b>Appendix F: C-Tick for Table-Mounting/Horizontal Combi 3</b> |                |

## Introduction

### General

- Multi-functional Feature

The “Combi 3” is a powerful true sine wave inverter, a sophisticated battery charger that features adaptive charge technology and a high-speed AC Auto Transfer Switch (ATS) in a single compact enclosure. Besides these primary functions, however, the Combi 3 has several advanced features that provide a range of new applications as outlined below:

- Uninterrupted AC Power

In the event of a grid failure, or shore or generator power being disconnected, the inverter within the Combi 3 is automatically activated and takes over supply to the connected loads. This happens so fast (less than 10 milliseconds) that computers and other electronic equipment will continue to operate without disruption.

- Power Control-Dealing with limited generator or shore side power

The “Combi 3” is a very powerful battery charger. It will therefore draw a lot of current from the generator or shore side power. A maximum generator or shore current can be set (B2-05). The “Combi 3” will then take account of other AC loads and use whatever is extra for charging thus preventing the generator or shore supply from overload.

- Power Assist-Boosting the capacity of shore or generator power

This feature takes the principle of Power Control to a farther dimension allowing the “Combi 3” to supplement the capacity of the alternative source. Where peak power is so often required only for a limited period; it is possible to reduce the size of generator needed or conversely enable more to be achieved from typically limited shore connection. When the load reduces, the spare power is used to recharge the battery.

### Battery Charger

- Adaptive 4-stage charge characteristic: Bulk-Absorption-Float-Equalize

The “Combi 3” features a microprocessor controlled “adaptive” battery management system that can be preset to suit different types of batteries. The “adaptive” feature will automatically optimize the process relative to the way the battery is being used.

- The right amount of charge: Variable Absorption Time

When only shallow discharges occur (a yacht connected to shore power for example), the absorption time is kept in order to prevent overcharging of the battery. After a deep discharge, the absorption time is automatically increased to make sure that the battery is completely

recharged.

- Preventing damage due to excessive gassing: The Battery Safe Mode

If, in order to quickly charge a battery, a high charge current in combination with a high absorption voltage has been chosen. The “Combi 3” will prevent damage due to excessive gassing by automatically limiting the rate of voltage increase once the gassing voltage has been reached.

- Less maintenance and aging when the battery is not in use: The Equalize Mode

The equalize mode kicks in whenever the battery has not been subjected to discharge during 24 hours. In the equalize mode, float voltage is reduced to 2.2V/cell (13.2V for 12V battery) to minimize gassing and corrosion of the positive plate. Once a week, the voltage is raised back to absorption level to “equalize” the battery. This feature prevents stratification of the electrolyte and sulphation, a major cause of early battery failure.

- 2 outputs to charge 2 battery banks

The “Combi 3” features 2 outputs, of which 1 can carry the full output current. The second output, limited to approximately 4A and with a slightly lower output voltage, is intended to top up a starter battery.

- To increase battery life: Temperature Compensation

Every “Combi 3” can come with an optional battery temperature sensor (BTS-3) when connected, charge voltage will automatically decrease with increasing battery temperature. This feature is especially recommended for sealed batteries and/or when important fluctuation of battery temperature is expected.

- Battery Voltage Sense

In order to compensate for voltage loss due to cable resistance, the “Combi 3” is provided with a voltage sense facility so that the battery always receives the correct charge voltage.

## Specification

| MODEL                                | 12 Volt System             | C3-1500-12X (1)        | C3-3000-12X (1) |
|--------------------------------------|----------------------------|------------------------|-----------------|
|                                      | 24 Volt System             | C3-1500-24X            | C3-3000-24X     |
|                                      | 48 Volt System             | C3-1500-48X            | C3-3000-48X     |
|                                      |                            |                        |                 |
| <b>GENERAL</b>                       |                            |                        |                 |
| Ventilation                          | Forced cooling             | Forced cooling         |                 |
| Temperature – Operation              | -20 ~ +70                  | -20 ~ +70              |                 |
| – Storage                            | -25 ~ +80                  | -25 ~ +80              |                 |
| Protection                           |                            |                        |                 |
| a. Output short circuit              | ✓                          | ✓                      |                 |
| b. Over load                         | ✓                          | ✓                      |                 |
| c. Battery voltage too high          | ✓                          | ✓                      |                 |
| d. Battery voltage too low           | ✓                          | ✓                      |                 |
| e. DC voltage ripple too high        | ✓                          | ✓                      |                 |
| f. Temperature Sensor                |                            |                        |                 |
| Transformer                          | ✓ (105 °)                  | ✓ (105 °)              |                 |
| Electronic & Powerstage              | ✓ (70 °)                   | ✓ (70 °)               |                 |
| BTS-3                                | ✓ (50 °)                   | ✓ (50 °)               |                 |
| Humidity                             | 0~95% (non condensing)     | 0~95% (non condensing) |                 |
| Power control Function               | ✓                          | ✓                      |                 |
| Power assist Function                | ✓                          | ✓                      |                 |
| Uninterrupted AC power               | ✓ (less than 10 msec)      | ✓ (less than 10 msec)  |                 |
| Adaptive 4-stage charge              | ✓                          | ✓                      |                 |
| Two output to charge 2 battery banks | ✓                          | ✓                      |                 |
| Auxiliary Relay                      | X 3                        | X 3                    |                 |
| Battery voltage sensor               | ✓                          | ✓                      |                 |
| Battery Temperature sensor (BTS-3)   | ✓                          | ✓                      |                 |
| Remote control port                  | ✓                          | ✓                      |                 |
| <b>INVERTER</b>                      |                            |                        |                 |
| Input Voltage Range (VDC)            | 9.5 -16V / 19-32V / 38-64V |                        |                 |
| Output Voltage (VAC)                 | 185~240 VAC / 90~120 VAC   |                        |                 |
| Output Frequency                     | 50Hz /60Hz ± 0.1%          |                        |                 |
| Output Waveform                      | Pure sinewave              |                        |                 |
| Output Voltage THD                   | < 5%                       |                        |                 |
| Power Factor (All Loads)             | ✓                          |                        |                 |




|   |   |   |
|---|---|---|
| No linger load, crest factor                  | 3: 1  |   |
| Cont. Power Output (W)<br>Under 70 (cos =1.0) | 1500W<br>(No derate)                                  | 3000W<br>(No derate)                                  |
| Cont. Power Output (W)<br>Over 70 (cos =1.0)  | 0W<br>(Shutdown)                                      | 0W<br>(Shutdown)                                      |
| Maximum Power (W)                             | 3000W   | 6000W   |
| Maximum Efficiency (%)                        | 82/84/85  | 84/86/89  |
| Zero-load Power (W)                           | 12W   | 18W   |
| CHARGER                                       |   |   |
| Input Voltage Range (VAC)                     | 200~250 VAC / 100~125 VAC                             |   |
| Input Frequency                               | 45-55Hz /55-65 Hz                                     |   |
| Power Factor                                  | 1   |   |
| Charge Characteristic                         | 4-stage adaptive / Bulk-Absorption-Float-Equalize     |   |
| Maximum DC Voltage Ripple (Vrms)              | < 1.25 V  |   |
| Charge Current House Battery (A)              | 70A/40A/20A   | 140A/70A/40A  |
| Charge Current Starter Battery (A)            | 4A  |   |
| Absorption Voltage Default (VDC)              | 14.4V / 28.8V / 57.6V                                 |   |
| Float voltage Default (VDC)                   | 13.8V / 27.6V / 55.2V                                 |   |
| Equalize Voltage default (VDC)                | 13.2V / 26.4V / 52.8V                                 |   |
| Output Charge Voltage (min ~ max)             | 8V~16V / 11V~32V / 22V~64V                            |   |
| Battery Temperature sensor                    | BTS-3   |   |
| AC INPUT SWITCH                               |   |   |
| AC IN Terminal Circuit Breaker                | 30A (110V) /15A (220V)                                | 60A (110V) /30A (220V)                                |
| Switch-over Time                              |   |   |
| a. inverter to AC input                       | 0 msec.   |   |
| b. AC input to inverter                       | 0 msec.   |   |
| Detection Time AC Input Fault                 | 4 ~10 msec.   |   |
| Trip Level AC Input to Inverter               | 90 VAC / 180 VAC                                      |   |
| Trip Level Inverter to AC Input               | 94 VAC / 187 VAC                                      |   |
| Min.~ Max. Frequency Range                    | 45-55 Hz / 55-65 Hz                                   |   |
| MECHANICAL                                    |   |   |
| Cabinet / Protecting Class                    | Aluminum / IP20                                       |   |
| Dimension (HXWXD)                             | Wall: 298 x 256 x 368 mm<br>Table: 189 x 285 x 494 mm | Wall: 355 x 256 x 368 mm<br>Table: 189 x 285 x 708 mm |
| Weight (kgs)                                  | 30 kgs  | 35 kgs  |

(1) X should be 1, output voltage = 90~120 VAC or 2, output voltage = 185~240 VAC

## Dimension for Wall Mounting/Vertical Combi 3 1500W

C3-1500W-12/24

Unit: mm

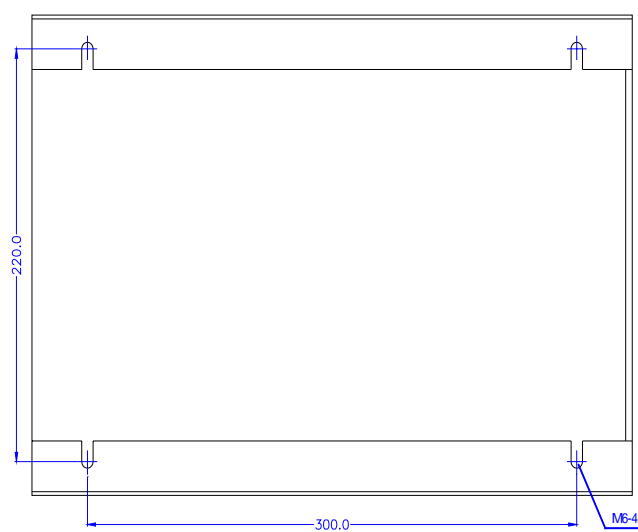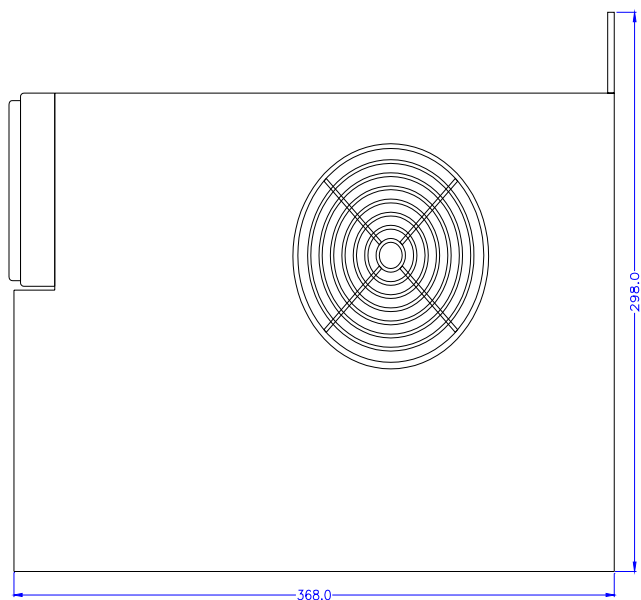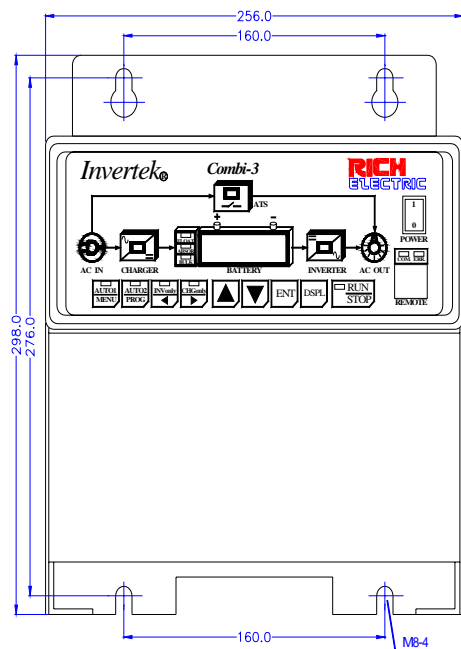




## Dimension for Wall Mounting/Vertical Combi 3 3000W

C3-3000W-12/24


Unit: mm

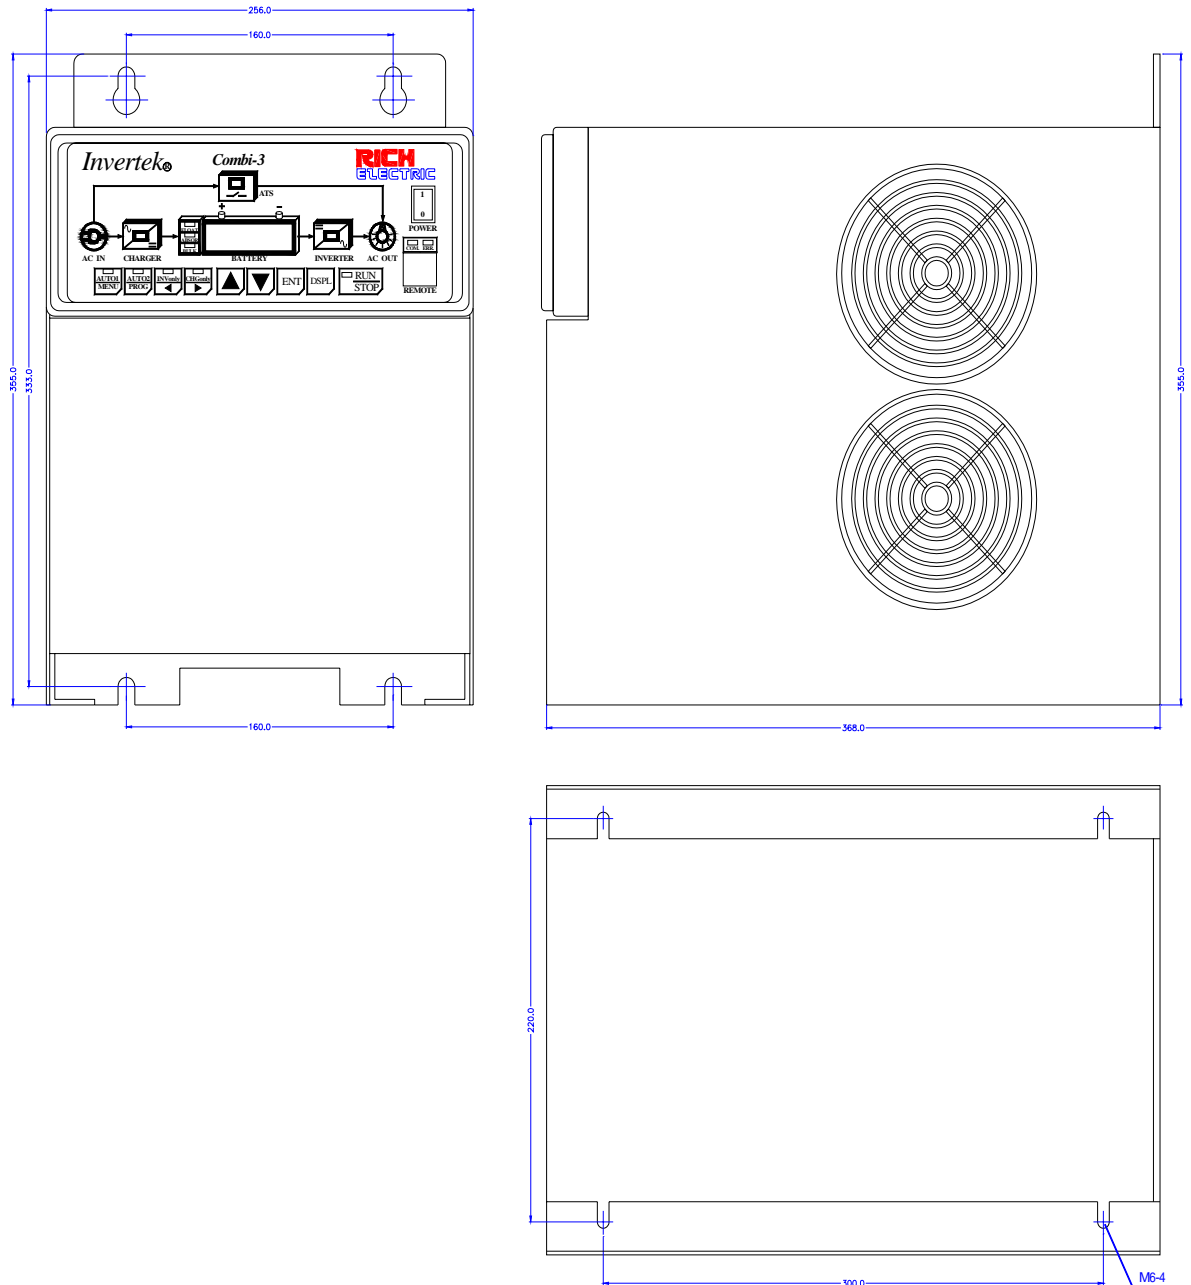

## Dimension for Table Mounting/Horizontal Combi 3 1500W


C3-1500W-12/24

Unit: mm

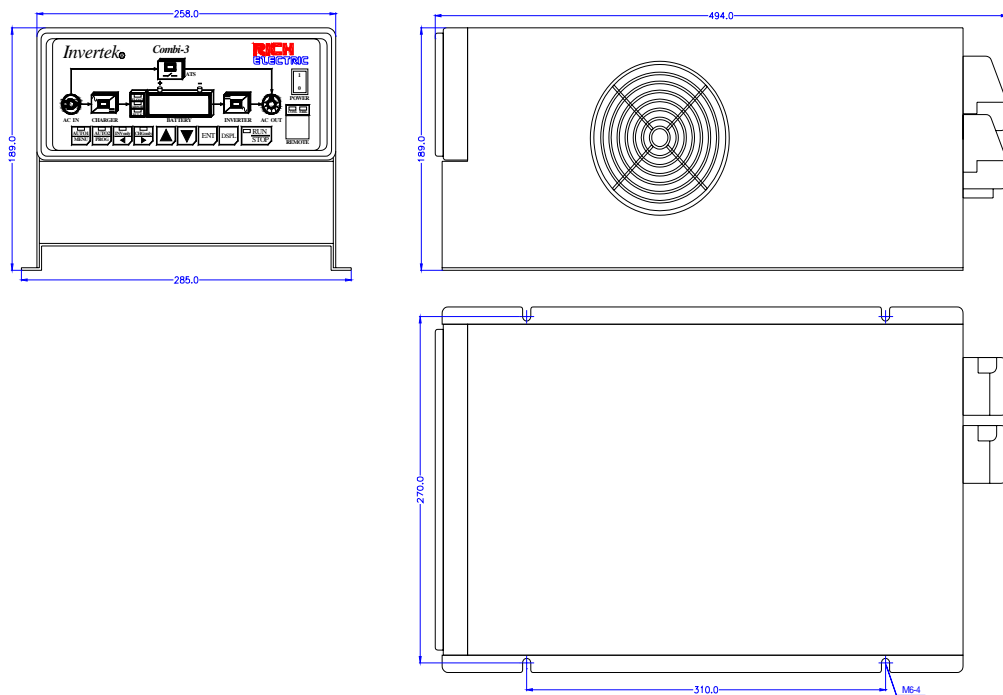

## Dimension for Table Mounting/Horizontal Combi 3 3000W

C3-3000W-12/24

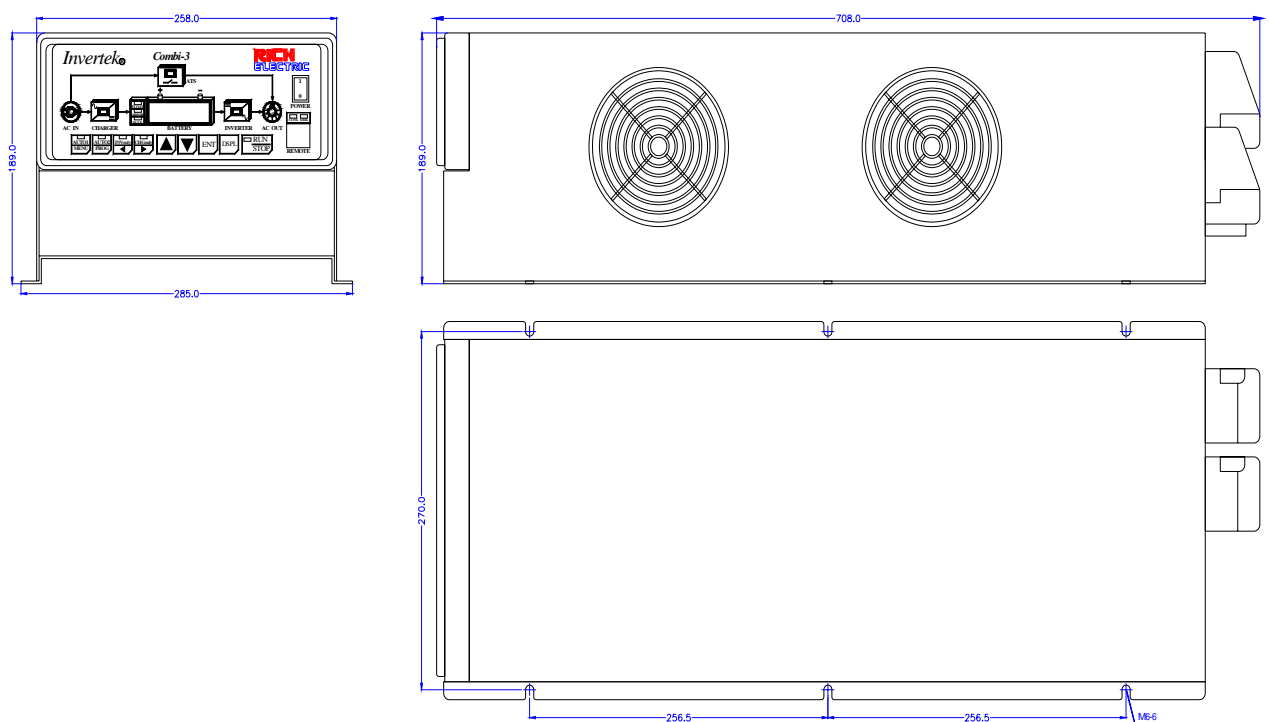

# Chapter 1 Installation



This product should be installed by a qualified electrician.

## 1.1 Box Contents

- Combi 3
- USER MANUAL
- Bag Containing connection items, ie:
  - Four M8 nuts (including spring washers)
  - Four terminals and casing

## 1.2 Location

The product must be installed in a dry and well-ventilated area, as close as possible to batteries. There should be a clear space of at least 20 cm around the appliance for cooling.



Excessively high ambient temperature will result in the following

- Reduced service life
- Reduced charge current
- Reduced peak capacity or shutdown of the inverter

Never position the appliance directly above the batteries.

Vertical Combi 3 is suitable for wall mounting. The back and the bottom of the enclosure has holes for wall mounting purposes, read page VIII and IX. Horizontal Combi 3 is suitable for table mounting. The bottom of the enclosure has the holes for table mounting purposes, read page X.

The appliance can be mounted horizontally as well as vertically; vertical mounting is preferable. The vertical position offers optimum cooling.



The interior of the product must remain accessible after installation. Ensure the AC and DC input cables are fitted with fuses and circuit breakers. Try and keep the distance between the product and battery to a minimum in order to minimize cable voltage losses.



For safety purpose, this product should be installed in a heat-resistant environment if it is used with equipment where a substantial amount of power is to be converted. You should prevent the presence of e.g. chemicals, synthetic components, curtains or textiles, etc. in the immediate vicinity.

## 1.3 Requirements

- Screwdrivers for removing the lower-front panel and connecting AC loads.

- 2 battery cables (maximum length 6 meters)
- Including battery terminals and cable ends.
- Insulated box spanner (13 mm) for securing the DC terminal nuts.
- Three-wire cable for AC cabling.

#### 1.4 Connection of Battery Cables

In order to fully utilize the full capacity of the product, batteries with sufficient capacity and battery cables with sufficient cross section should be used, please see table:

| Model<br>Item                                      | C3-1500-12X        | C3-1500-24X        | C3-3000-12X        | C3-3000-24X        |
|--|--------------------|--------------------|--------------------|--------------------|
| Recommended battery capacity (Ah)                  | 200~700            | 100~400            | 400~1200           | 200~700            |
| Recommended cross section (mm <sup>2</sup> )(0~6m) | 50 mm <sup>2</sup> | 38 mm <sup>2</sup> | 80 mm <sup>2</sup> | 50 mm <sup>2</sup> |

Remark: Internal resistance is the important factor when working with low capacity batteries. Consult your supplier.

Procedure:

Proceed as follows to connect the battery cables:



Use an insulated box spanner in order to avoid shorting the battery.

Avoid shorting the battery cables:

- Undo the four screws at the lower-front panel of the enclosure and remove the panel.
- Connect the battery cable: the + (red) on the right and the – (black) on the left. Please see page 3-4 and 3-5.
- Don't reverse the (+) and (-) of the battery. This may cause internal damage.
- Tighten the connections after positioning the fastening items supplied with product.
- Secure the nuts tightly in order to reduce the contact resistance as much as possible.

#### 1.5 Connection of AC Cabling



The enclosure must be grounded for safety purpose. An earth screw has been fitted at the bottom side of the enclosure.

The terminal block can be found at lower-front panel of the enclosure: The shore or mains (AC IN) cable must be connected to AC IN terminals, use a three-wire cable and a cross section of 4~10 mm<sup>2</sup>.

Procedure:

Proceed as follows to connect the AC cables.

- The AC output cable can be connected directly to terminal block containing the word “AC OUT”. The terminal points are indicated clearly. From left to right: “G” (earth), “N” (neutral), and “L” (phase).
- The AC input cable can be connected to the terminal block containing the word “AC IN”, the terminal points are indicated clearly from left to right “L” (phase), “N” (neutral), and “G” (earth).



The current which is switched through to the output (AC OUT) is not fused. External fuses or current limiters have to be installed.

## 1.6 Optional Connections

A number of operational connections are possible:

### 1.6.1 Second Battery

The “Combi 3” has a connection for charging a starter battery.

For connection, see page 3-4 and 3-5.

### 1.6.2 Voltage Sense

Two sense wires may be connected to compensate possible battery cable losses during charging. Use wires of at least 0.75 mm<sup>2</sup>. For connection, see page 3-4 and 3-5.

### 1.6.3 Battery Temperature Sensor (BTS-3)

The battery temperature sensor supplied with the product may be used for temperature compensated charging, see page 3-4 and 3-5.

The sensor is insulated and must be mounted on the batteries minus pole.

### 1.6.4 3 Sets of Auxiliary Relay (RY1, RY2, RY3) Output

The “Combi 3” provides 3 sets of Auxiliary Relays for users to connect to other appliances or to output the alarm signals. 3 sets of relays can be programmed for respective function. (E Group Constants) and can be practically applied which is one of the greatest features.

## 1.7 Grounding

When the input voltage of the Combi 3 is not switched through, the neutral of “AC OUT” is connected to ground by means of a relay. This function can be disabled by constant B2-07 (B2-07=0 Disconnect)

## 1.8 Remote Control Panel (RCP-3)

The product can be operated remotely from remote port with the aid of a remote control panel. For connection of a remote control panel, see page 3-1.

Note: The display panel and operation flow of the remote control panel is exactly the same as the upper-front display panel.

## Chapter 2 Settings

- Settings may only be changed by a qualified engineer.
- Carefully read the user manual before any change is made.
- When setting the charger, all connections to the battery must be disconnected from the Combi 3.
- Do not use non-rechargeable batteries.
- Batteries should be placed in a dry and well-ventilated area during charging.
- The product default settings are for charging gel batteries. For the recommended battery voltage initial settings, see D1 (Charger) Group parameters.


### 2.1 Four Control Modes Applications

#### AUTO 1: AC Power as Priority Support (Example of C3-3000-242)

When Combi 3 enters to AUTO 1, B2-09 (AC IN DynaCur Limit)=0 (Disable) and the value of B2-18 (AUTO 1: ACINCurrent Lmt) will be loaded to B2-05.

##### 1. INVERTER Mode:


- When AC IN=0 A, AC OUT load is completely supplied by INVERTER. It goes to the inverter mode.

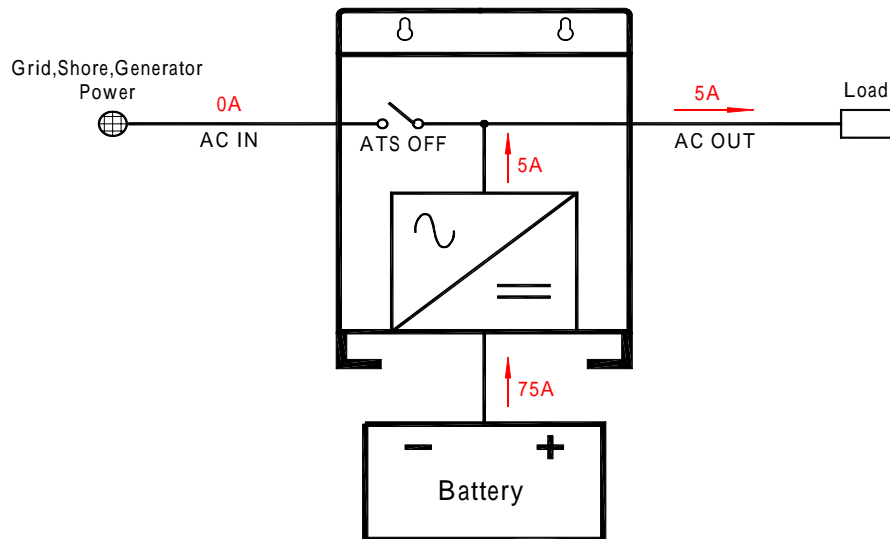

## 2. Power Control Mode (a)

- In this example:


All AC loads are off, with the “Combi 3” constant B2-05=5A (AC IN Current Limit), the AC CHARGER will not take more than 5A with limits to battery charge current to 75A.

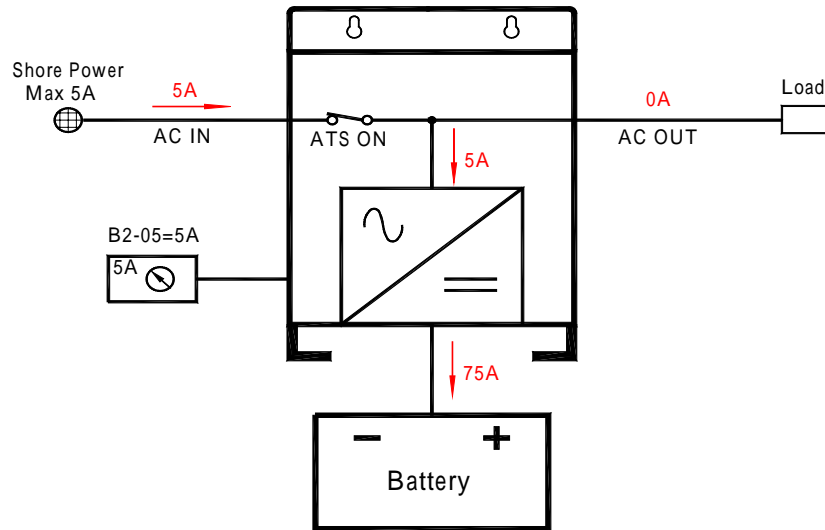

## 3. Power Control Mode (b)


- Now some small loads are switched on and load increase to 3A. Only  $5-3=2A$  is left to charge the batteries and charge current is reduced to about 30A.

Note: Shore current is automatically limited to 5A and the AC input circuit breaker will not trip!

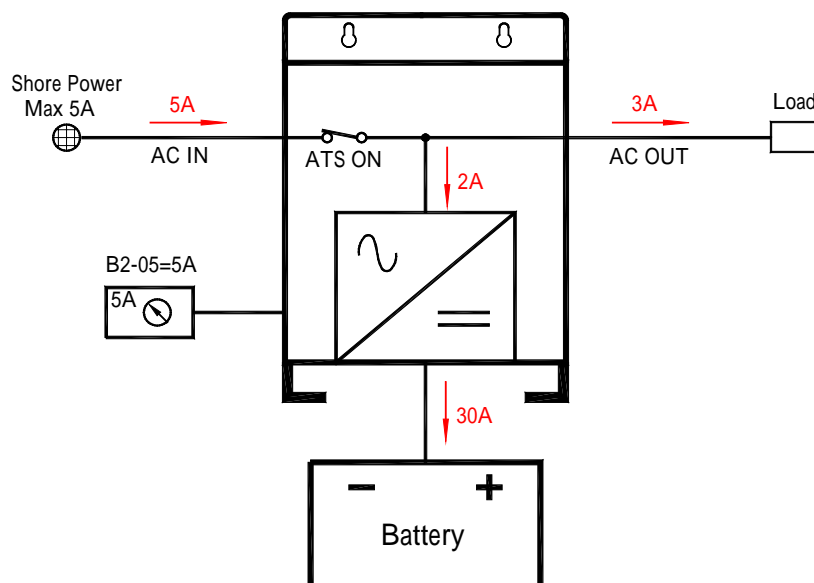


#### 4. Power Control Mode (c)

- The load is switched on and current consumption increase to 5A. Nothing is left to charge the battery.
- The charge current is automatically reduced to 0A, and the AC input circuit breaker does not trip!

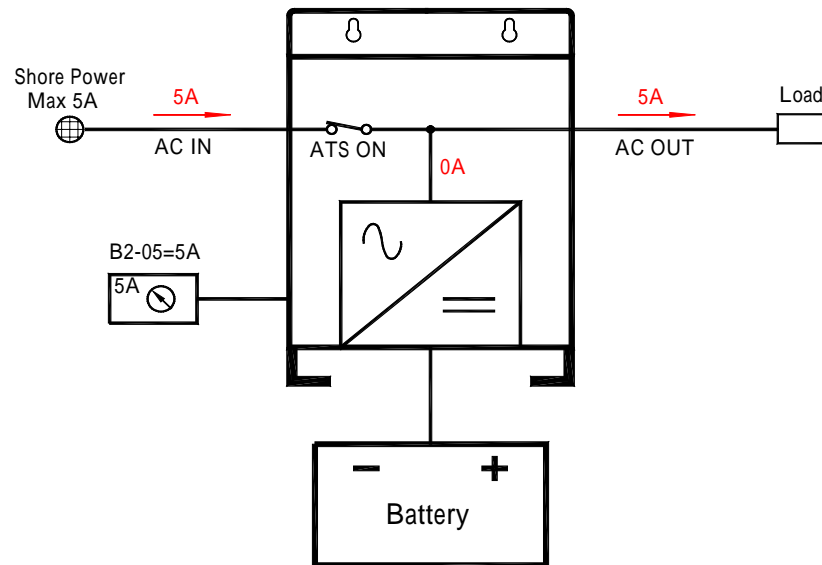

#### 5. Power Assist Mode

- And now the other load adds and switches on and the current increases to 11A. This is where Power Assist is needed.
- The bidirectional converter starts operating as inverter to add 6A to the 5A that is available from the shore-side: Total  $6+5=11$ A, and no overload on the AC supply.
- As soon as the load reduces to less than 5A, any current that is left over will be used to recharge the battery.

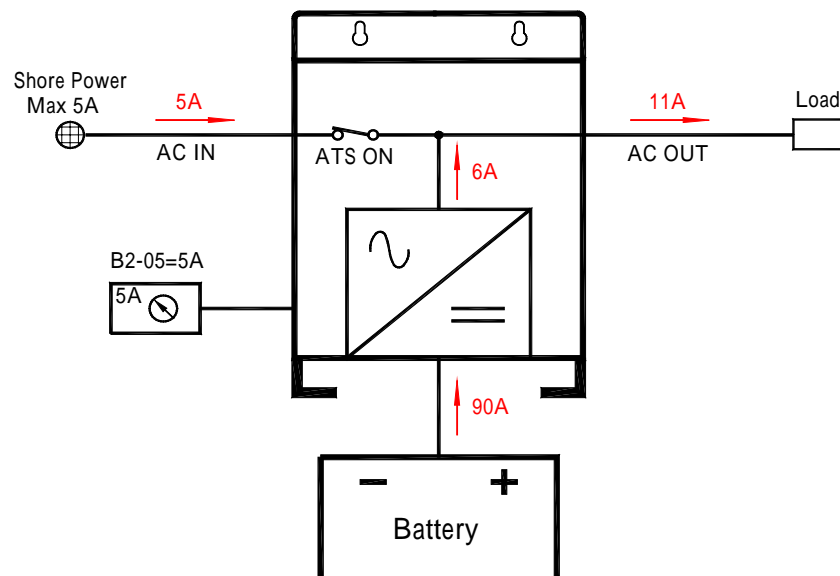




## AUTO 2: AC Generator Support with Dynamic Power Shifting

(Example of C3-3000-242)

When Combi 3 enters to AUTO 2, B2-09(AC IN DynaCur Limit)=1 (Enable) and the value of B2-19 (AUTO 2: ACINCurrent Lmt) will be loaded to B2-05.

### 1. INVERTER Mode:


- When AC IN=0 A, AC OUT load is completely supplied by INVERTER. It goes to the inverter mode.

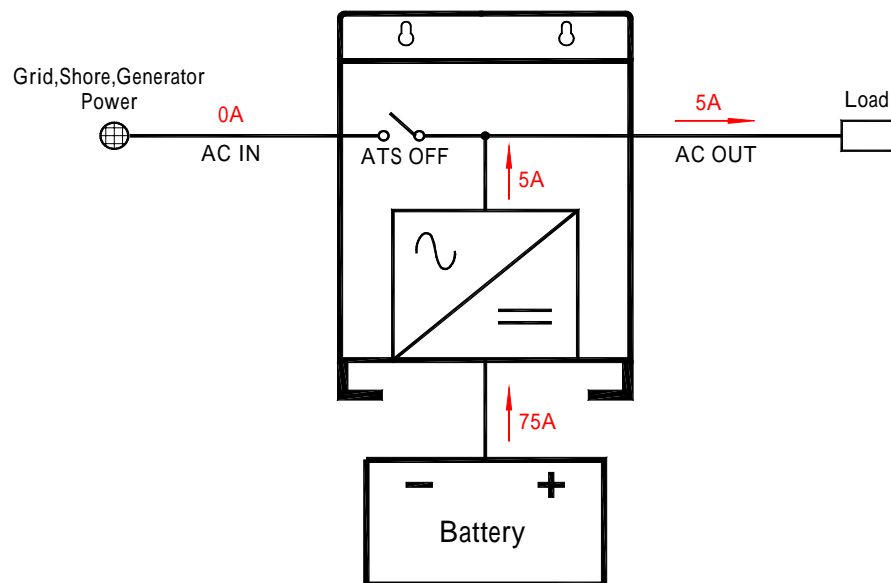

### 2. Power Control Mode (a)

- In this example:


All AC loads are off, with the “Combi 3” constant B2-05=5A (AC IN Current Limit), the AC CHARGER will not take more than 5A with limits to battery charge current to 75A.

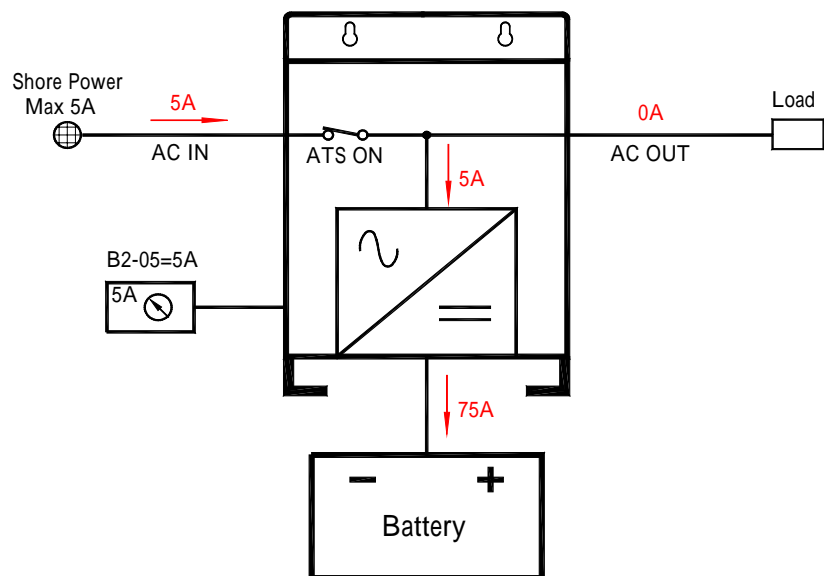

### 3. Power Control Mode (b)


- Now some small loads are switched on and load increase to 3A. Only  $5-3=2\text{A}$  is left to charge the batteries and charge current is reduced to about 30A.

Note: Shore current is automatically limited to 5A and the AC input circuit breaker will not trip!

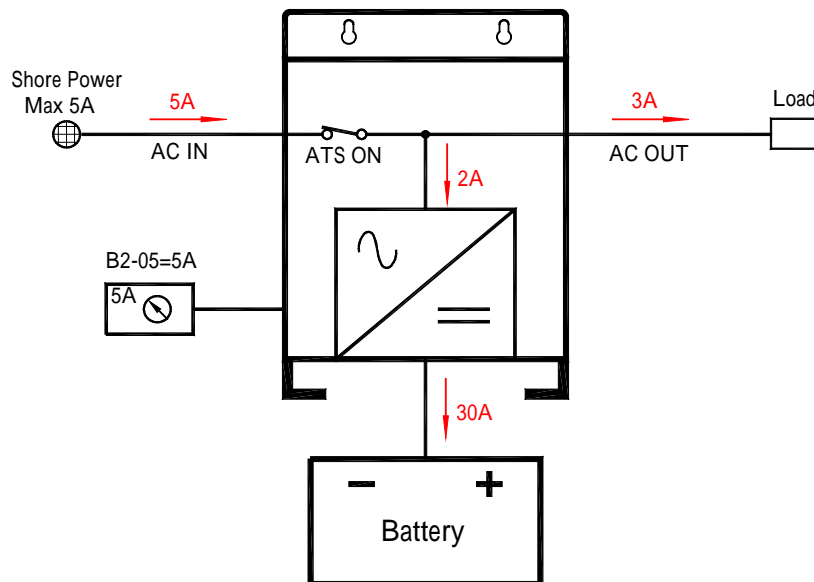

### 4. Power Control Mode (c)

- The load is switched on and current consumption increase to 5A. Nothing is left to charge the battery.
- The charge current is automatically reduced to 0A, and the AC input circuit breaker does not trip!

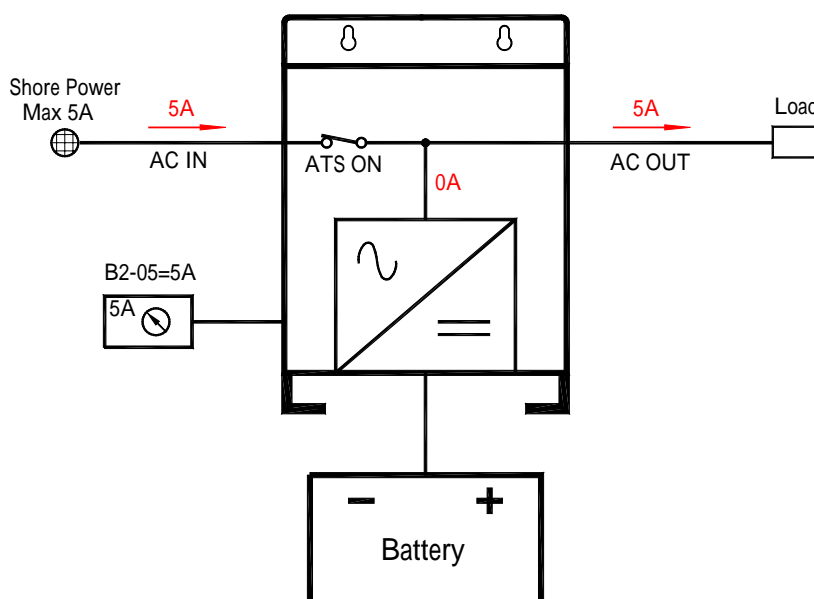


## INVERTER ONLY

When Combi 3 enters to INVERTER ONLY, B2-09(AC IN DynaCur Limit)=0 (Disable) and the value of B2-20 (INV M: ACINCurrent Lmt) will be loaded to B2-05.


### 1. INVERTER Mode:

- When the battery voltage is not lower than (B2-14) voltage value, inverter mode takes priority to supply voltage to AC OUT for load consumption.  
(INVERTER ON+ ATS OFF + AC CHARGER OFF)

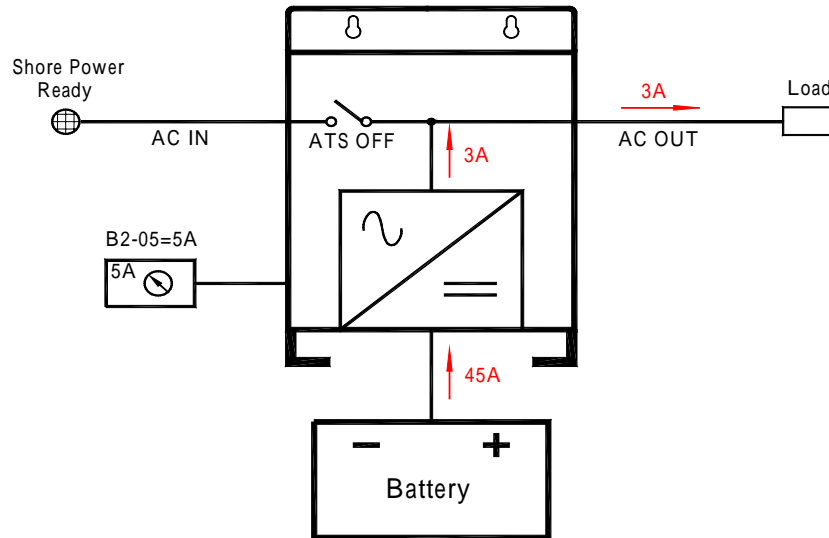


### 2. Power Control Mode

- When AC IN power is ready, INVERTER is active and battery voltage is lower than B2-14 voltage value and longer than the second time set in B2-15, ATS will be switched on to ensure AC OUT to continuously supply the load. At the moment, AC OUT will be supplied by AC IN power.
- When AC IN power is ready, it is only used to supply to the load, not to charge the battery.  
(INVERTER OFF+ ATS ON + AC CHARGER OFF)

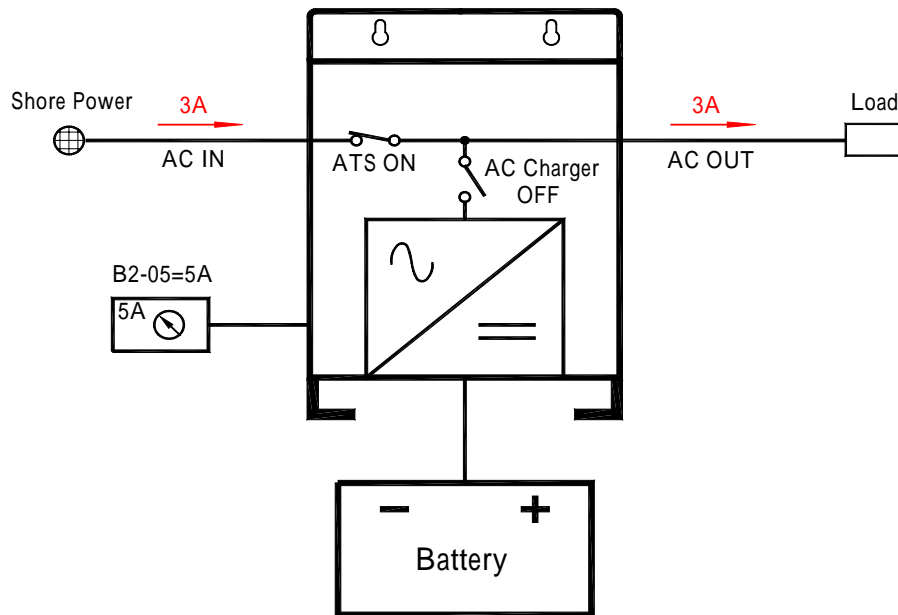

### 3. Power Assist Mode

- And now the other load adds and the current increases to 11A. This is where Power Assist function is needed!  
(ATS ON + AC CHARGER OFF + INVERTER ON + Power Assist Mode ON)
- As soon as the load reduces to less than 5A, power assist function stops.

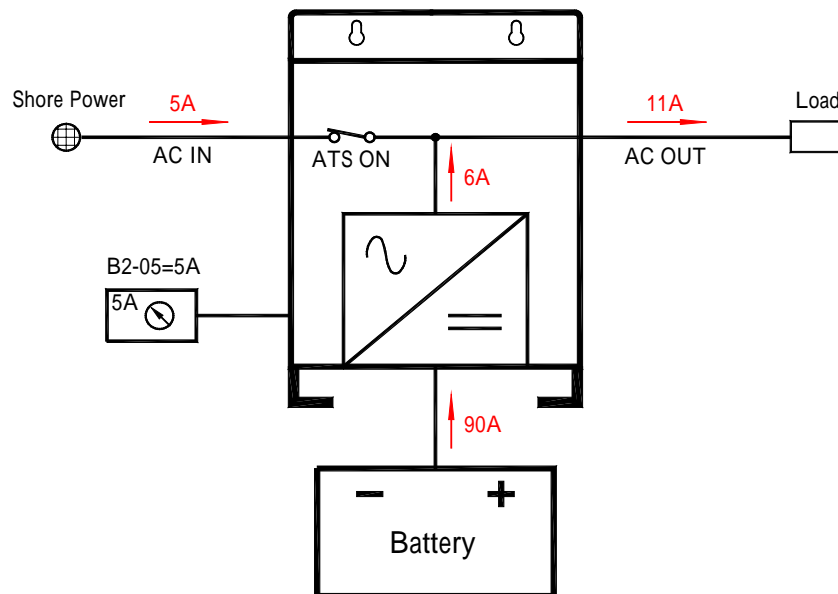


## CHARGER ONLY

When Combi 3 enters to CHARGER ONLY, B2-09 (AC IN DynaCur Limit)=0 (Disable) and the value of B2-21 (CHG M: ACINCurrent Lmt) will be loaded to B2-05.

### 1. NO AC IN Power:


- When AC IN=0 A, AC OUT load is not supplied and the AC Charger is not working.

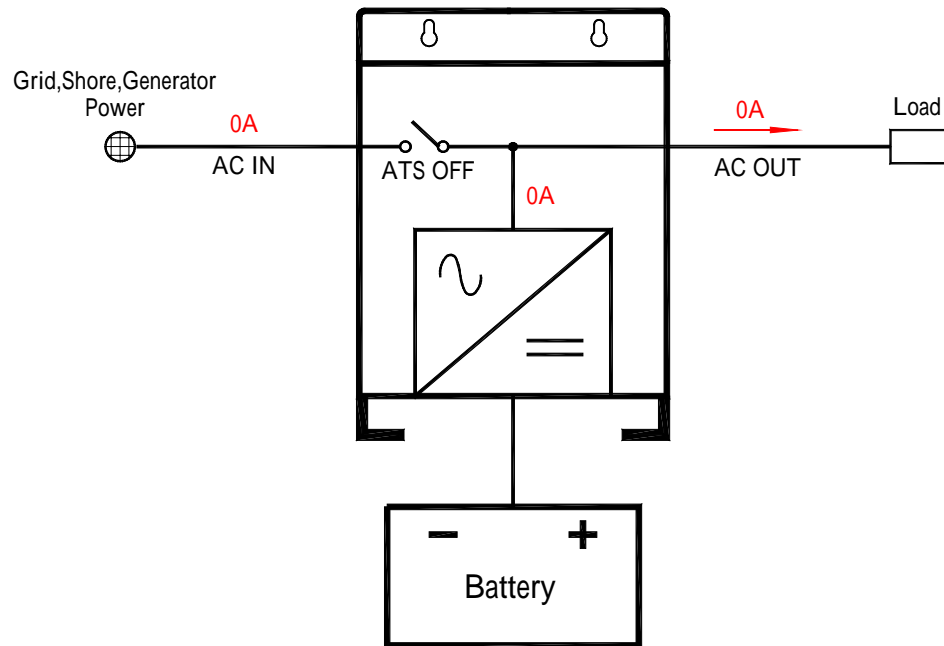

### 2. Power Control Mode (a)

- In this example:


All AC loads are off, with the “Combi 3” constant B2-05=5A (AC IN Current Limit), the AC CHARGER will not take more than 5A with limits to battery charge current to 75A.

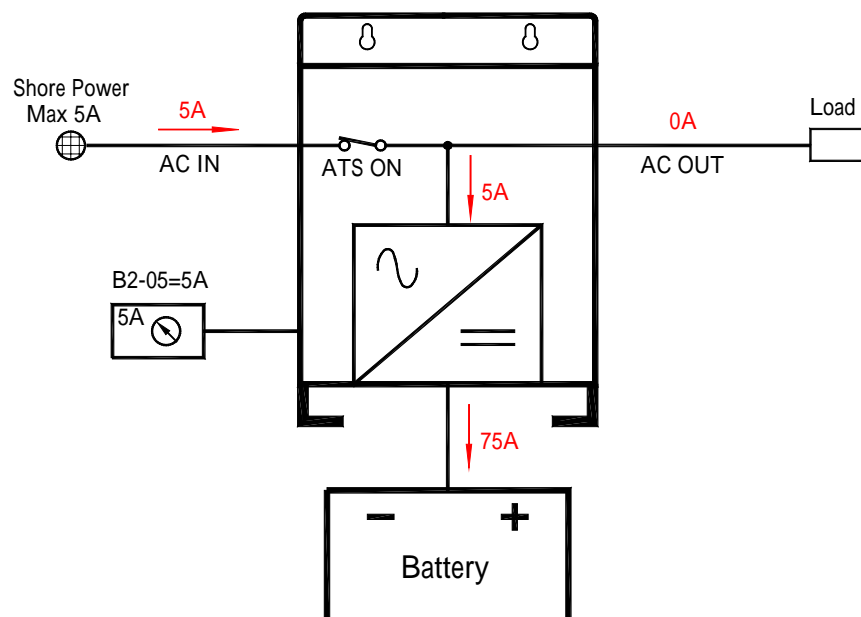

### 3. Power Control Mode (b)


- Now some small loads are switched on and load increase to 3A. Only  $5-3=2\text{A}$  is left to charge the batteries and charge current is reduced to about 30A.

Note: Shore current is automatically limited to 5A and the AC input circuit breaker will not trip!

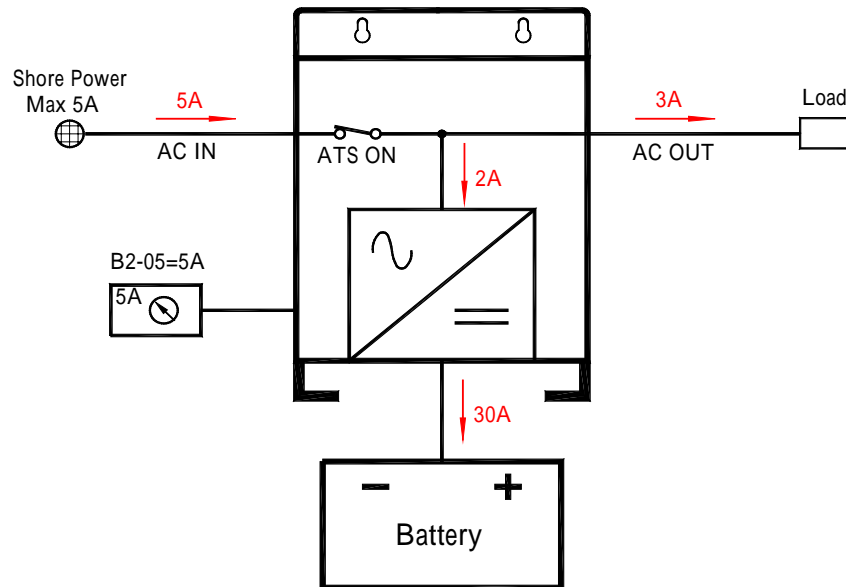


### 4. Power Control Mode (c)

- The load is switched on and current consumption increase to 5A. Nothing is left to charge the battery.
- The charge current is automatically reduced to 0A, and the AC input circuit breaker does not trip!

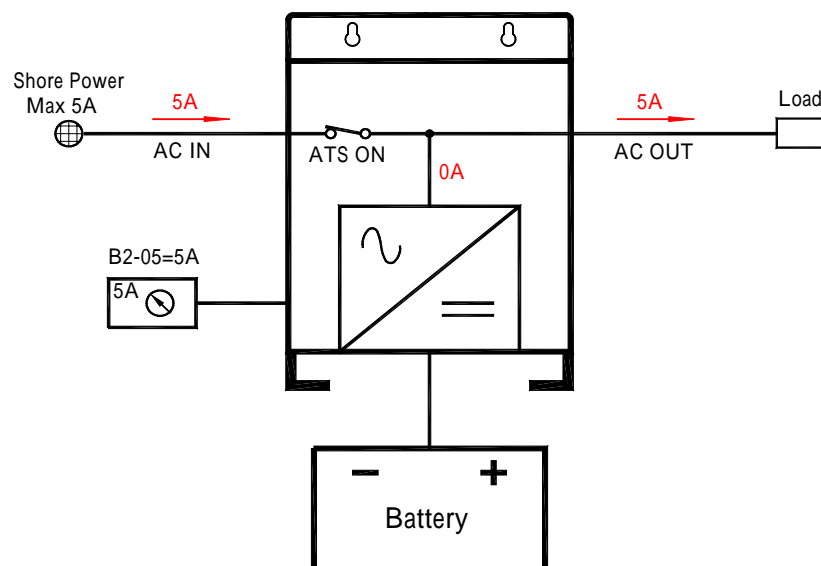



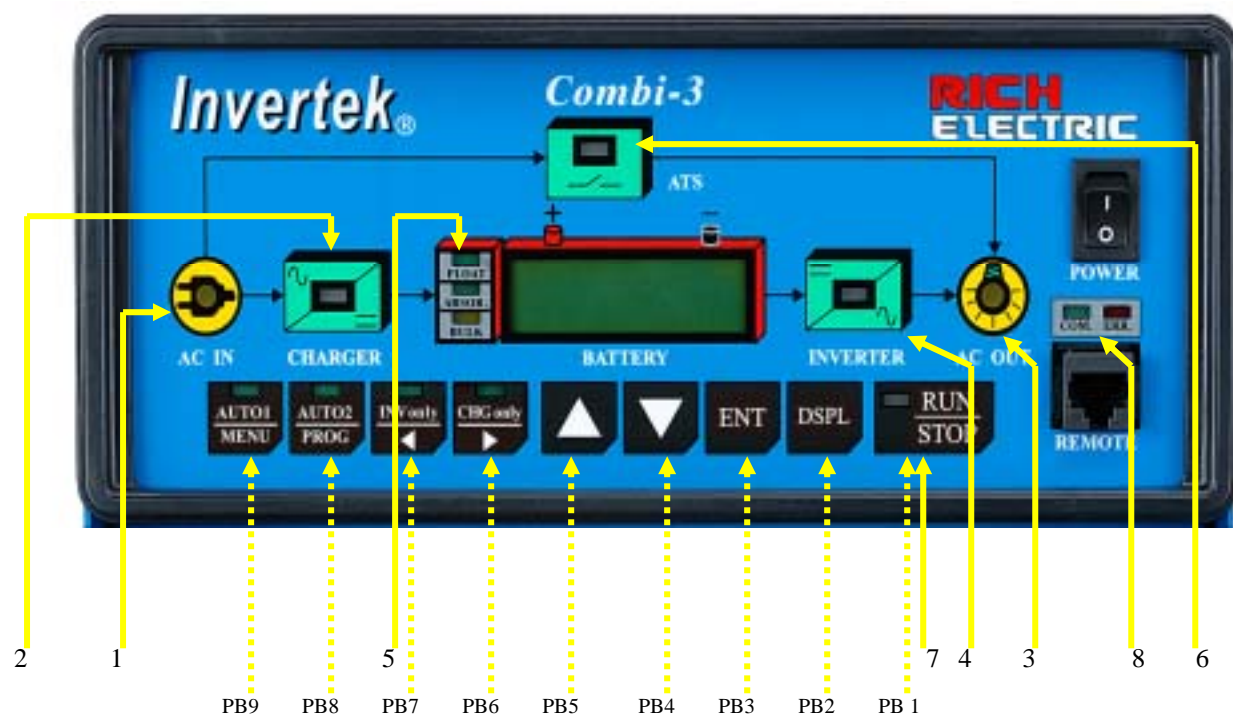

## Chapter 3 Wiring

### 3.1 Front Panel Display







#### Push Buttons

| Push buttons | Name  | Description  |   |
|--------------|---|--|---|
| PB1          | RUN/STOP  | Combi 3 RUN/STOP key   |   |
| PB2          | DSPL  | Multi-display select key   |   |
| PB3          | ENTER   | Data write-in key  |   |
| PB4          | DOWN ( )  | Decrement key  |   |
| PB5          | UP ( )  | Increment key  |   |
| PB6          |  | AC Input power to charge the battery.<br>Function Key to move Cursor to the right digit at Parameter Edit.       | Before changing from one mode to another, it has to stop running and be in STOP mode. |
| PB7          |  | DC power from battery to supply to AC loads.<br>Function Key to move Cursor to the left digit at Parameter Edit. |   |
| PB8          |  | AC Generator Support with Dynamic Power Shifting.<br>Function Key to return to Main Menu "Programming"           |   |

|            |   |   |  |
|------------|---|---|--|
| <b>PB9</b> |  | AC Power as Priority Support.<br>Function Key to return to Main Menu “Operation”. |  |
|------------|---|---|--|

Note:

1. When pressing RUN/STOP key, the holding time to remain on the key has to be at least 2 seconds (initial setting) to activate the RUN or STOP function in order to avoid any accidental pressing on the RUN/STOP key. The second time can be adjusted in RUN/STOP KeyHoldTime (O2-07).
2. When changing any of four modes to another mode, Combi 3 has to STOP and then press the desired mode key. When pressing AUTO 1 key or AUTO 2 key or INV only key or CHG only key, the holding time remaining on the key has to be at least 5 seconds (initial setting) to activate the mode change in order to avoid any accidental pressing on the mode keys. The second time can be adjusted in MODE Key Hold Time (O2-06).
3. The beep sound of key pressing can be selected to be enabled or disabled in Key Pressed Beep Sel (O2-01)
4. When all the keys are not pressed at all for a certain time (O1-02), it goes to idle mode. Once any key is pressed, the display will return to the LCD monitor selection value set in constant O1-01.
5. When all the keys are not pressed at all for a certain time (O2-09), all the LCD Display and LED Indicators are not active but RUN/STOP indicator remains active. The display idle function can save the display power.
6. When users are programming under any level of Groups or Function or Parameters or Parameters Edit, press  key for 1 second to return to Main Menu “Operation” immediately.
7. When users are programming under any level of Groups or Function or Parameters or Parameters Edit, press  key for 1 second to return to Main Menu “Programming” immediately.
8. When adjusting the parameters values, press  key to enable cursor to move left for one digit and press  key to enable cursor to move right for one digit.




## LED Indicators

| LED | Name       | L ED ON  | LED OFF        |
|-----|------------|--|----------------|
| 1   | AC IN      | 1. Input voltage normal, and position > "transfer Voltage Level" (150VAC~240VAC)<br>2. Input voltage frequency range in between(45~65Hz) | No input power |
| 2   | AC CHARGER | Green : Battery charger is working.  | -----          |
| 3   | AC OUT     | There is voltage at the "AC OUT" terminal.   | -----          |
| 4   | INVERTER   | Green : Inverter is working.   | -----          |
| 5   | BATTERY    | FLOAT or ABSOR. Or BULK charge state of battery.   | -----          |
| 6   | ATS        | Green : ATS switch is active AC IN voltage is being sent directly to AC OUT terminal   | -----          |
| 7   | RUN/STOP   | Green : Combi 3 turn on.<br>Red : Combi 3 turn off.  | -----          |
|     |            | NOTE: Green Blink : Auto-Restart is in use   |                |
| 8   | COM./ERR.  | Remote control port in communication/in error  |                |

## 3.2 Panel Connection


### 3.2.1 Lower-Front Panel Connection for Wall-Mounting/Vertical Combi 3

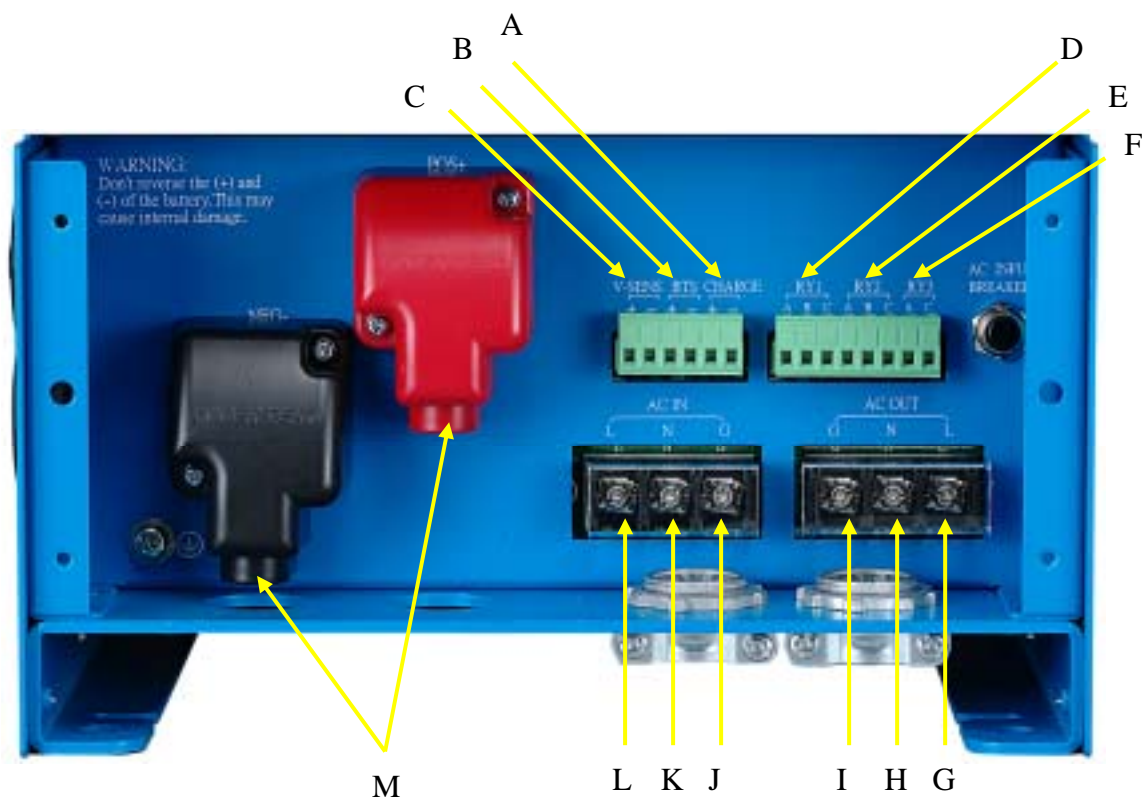

#### Connections / Lower-Front side for wall mounting

|  |  |
|--|--|
| A CHARGE                               | Connecting terminal for starting battery of 4A   |
| B BTS (Battery temp. sensor)           | Connecting terminal for temperature sensor       |
| C Vsens +/-<br>(Battery Voltage Sense) | Connecting terminal for Battery Voltage feedback |
| D RY1 contact                          | Connecting terminal for auxiliary contact 1      |
| E RY2 contact                          | Connecting terminal for auxiliary contact 2      |
| F RY3 contact                          | Connecting terminal for auxiliary contact 3      |
| G AC OUT L                             | Connecting terminal for AC output Line           |
| H AC OUT N                             | Connecting terminal for AC output Neutral        |
| I AC OUT G                             | Connecting terminal for AC output Ground         |
| J AC IN G                              | Connecting terminal for AC input Ground          |
| K AC IN N                              | Connecting terminal for AC input Neutral         |
| L AC IN L                              | Connecting terminal for AC input Line            |
| M Battery POS+/ NEG-                   | Battery cables                                   |

### 3.2.2 Rear Panel Connection for Table-Mounting/Horizontal Combi 3

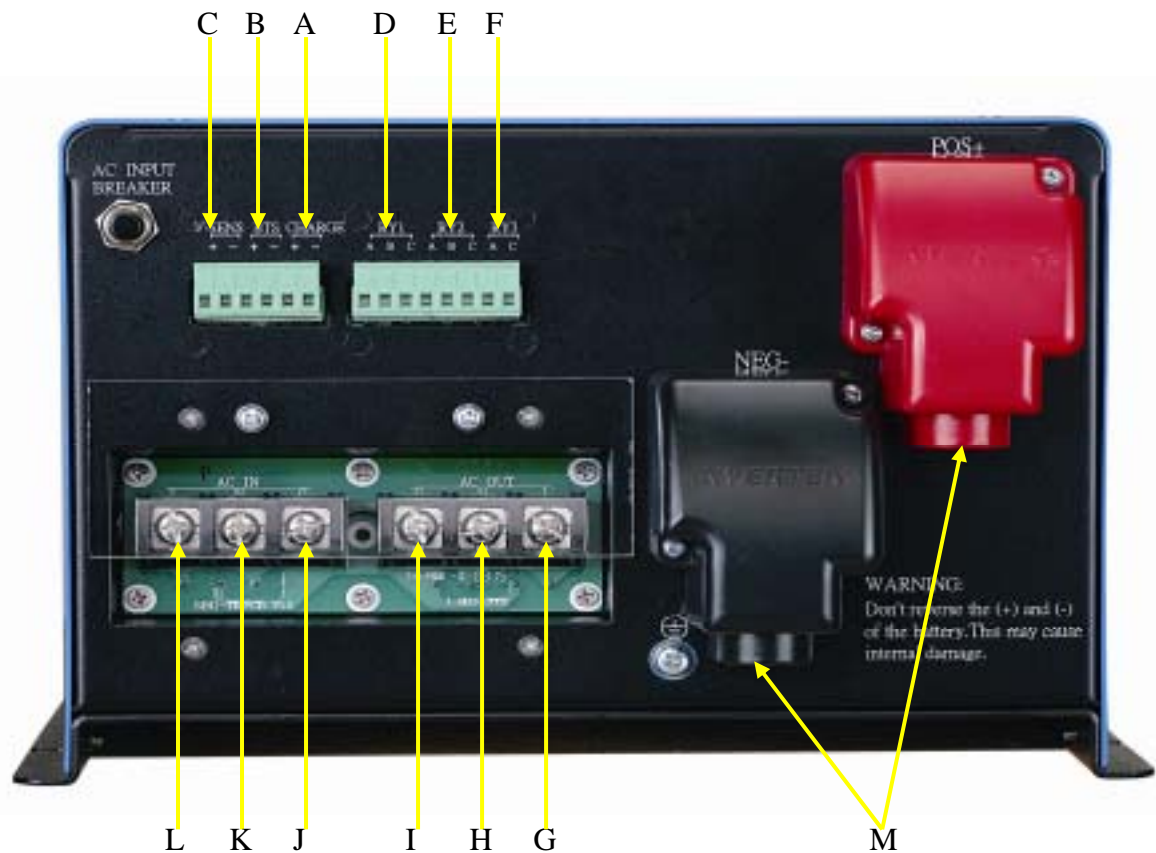


#### Connections / Rear side for table mounting


|  |  |
|--|--|
| A CHARGE                               | Connecting terminal for starting battery of 4A   |
| B BTS (Battery temp. sensor)           | Connecting terminal for temperature sensor       |
| C Vsens +/-<br>(Battery Voltage Sense) | Connecting terminal for Battery Voltage feedback |
| D RY1 contact                          | Connecting terminal for auxiliary contact 1      |
| E RY2 contact                          | Connecting terminal for auxiliary contact 2      |
| F RY3 contact                          | Connecting terminal for auxiliary contact 3      |
| G AC OUT L                             | Connecting terminal for AC output Line           |
| H AC OUT N                             | Connecting terminal for AC output Neutral        |
| I AC OUT G                             | Connecting terminal for AC output Ground         |
| J AC IN G                              | Connecting terminal for AC input Ground          |
| K AC IN N                              | Connecting terminal for AC input Neutral         |
| L AC IN L                              | Connecting terminal for AC input Line            |
| M Battery POS+/- NEG-                  | Battery cables                                   |

3.3 Battery Connection

3.3.1 Star Connection Schematic

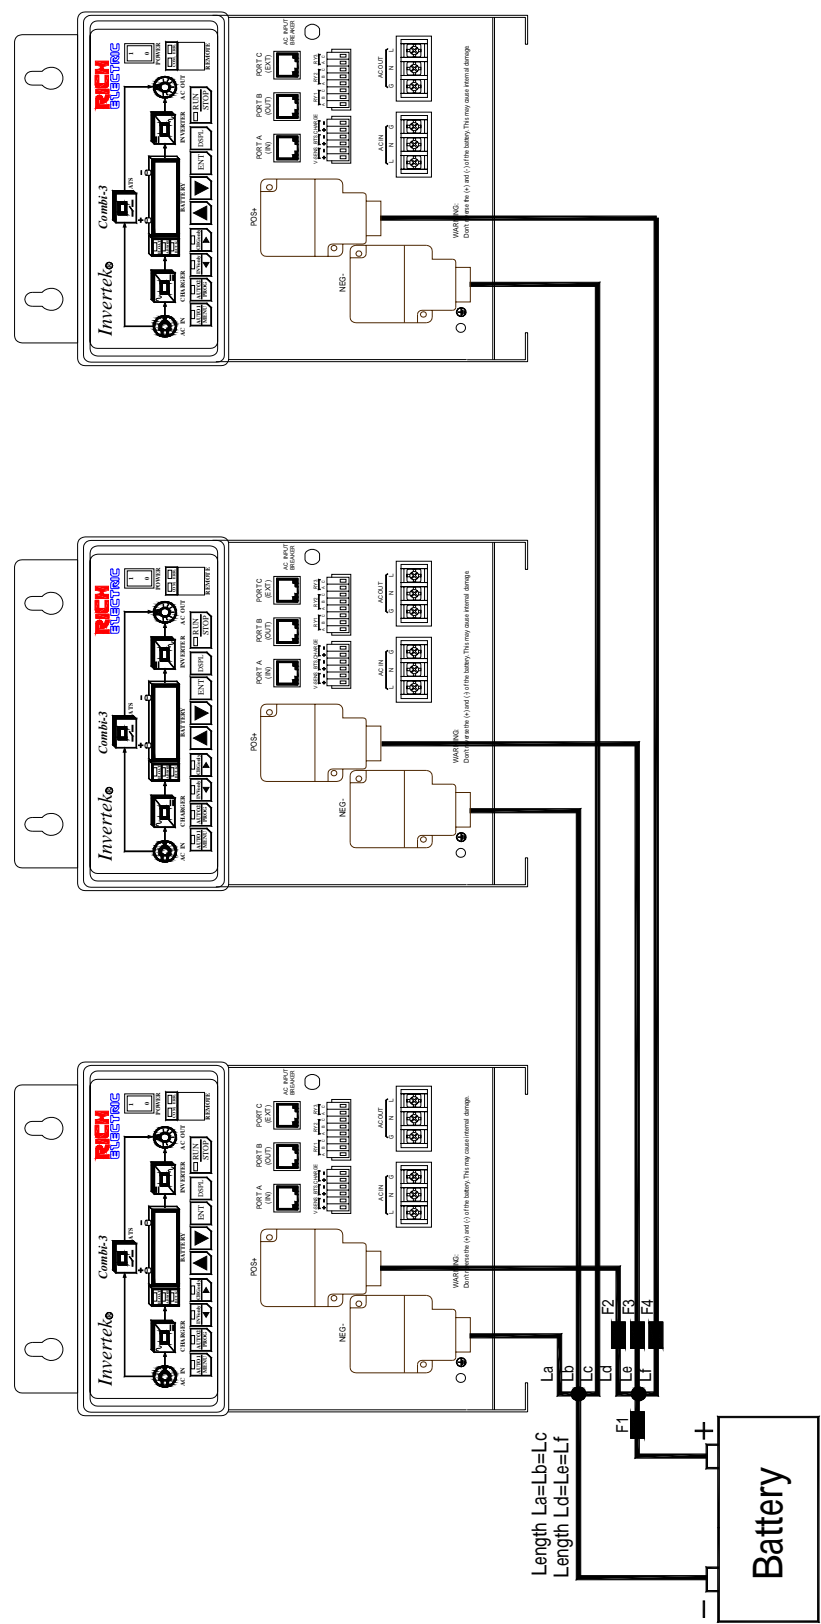

### 3.3.2 Rail Connection Schematic

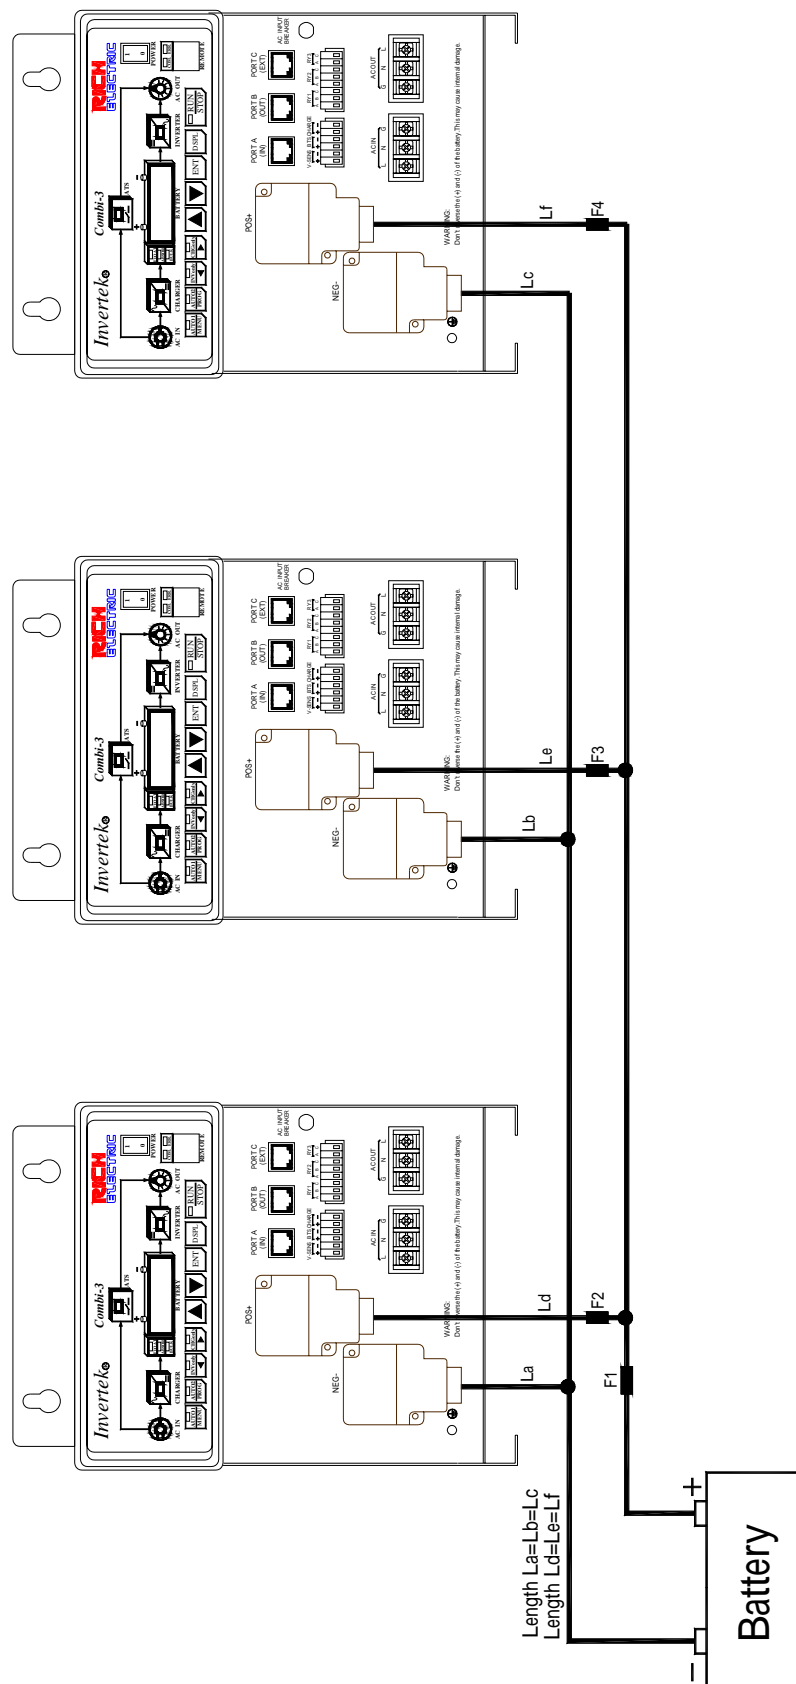

---

## Chapter 4 User Constants

There are four “Macro Function” under the main menu of the “Combi 3” and they are “Operation”, “Initialize”, “Programming” and “Modified Constants”. The functions and their contents are as below.

| Function           | Content   |
|--------------------|---|
| Operation          | “Combi 3” can monitor AC IN voltage and current, AC OUT voltage and current, battery voltage, battery current and ripple voltage in charging and discharging battery and other extension modules status. This is U (Monitor Group) constants. |
| Initialize         | Operation Condition Setting Group A (Initialize) Group: Multi-language setting, constants initialization setting and constants modification allowed/prohibited setting.   |
| Programming        | Constant groups to program (modify) all the constants: B (General) Group, C (INVERTER) Group, D (AC CHARGER) Group, E (Aux-relay) Group, and O (Operator) Group   |
| Modified Constants | Operating the read-out and modification of the constants group setting which are different from initial setting. Users can program and modify constants   |

\*\*\*\*


Operation of “Macro Function”


On any display screen, pressing DSPL key could have the effect just like ESC key to enable the display screen go back to previous any of four “Macro Function”

|                   |
|-------------------|
| *** Main Menu *** |
| XXXXXXXXX         |


(XXXXXXXXXX can be either Operation or Initialize or Programming or Modified Constants.)  
And continue to press DSPL key to select “Macro Function”


## 4.1 The following is the structure of user constants.

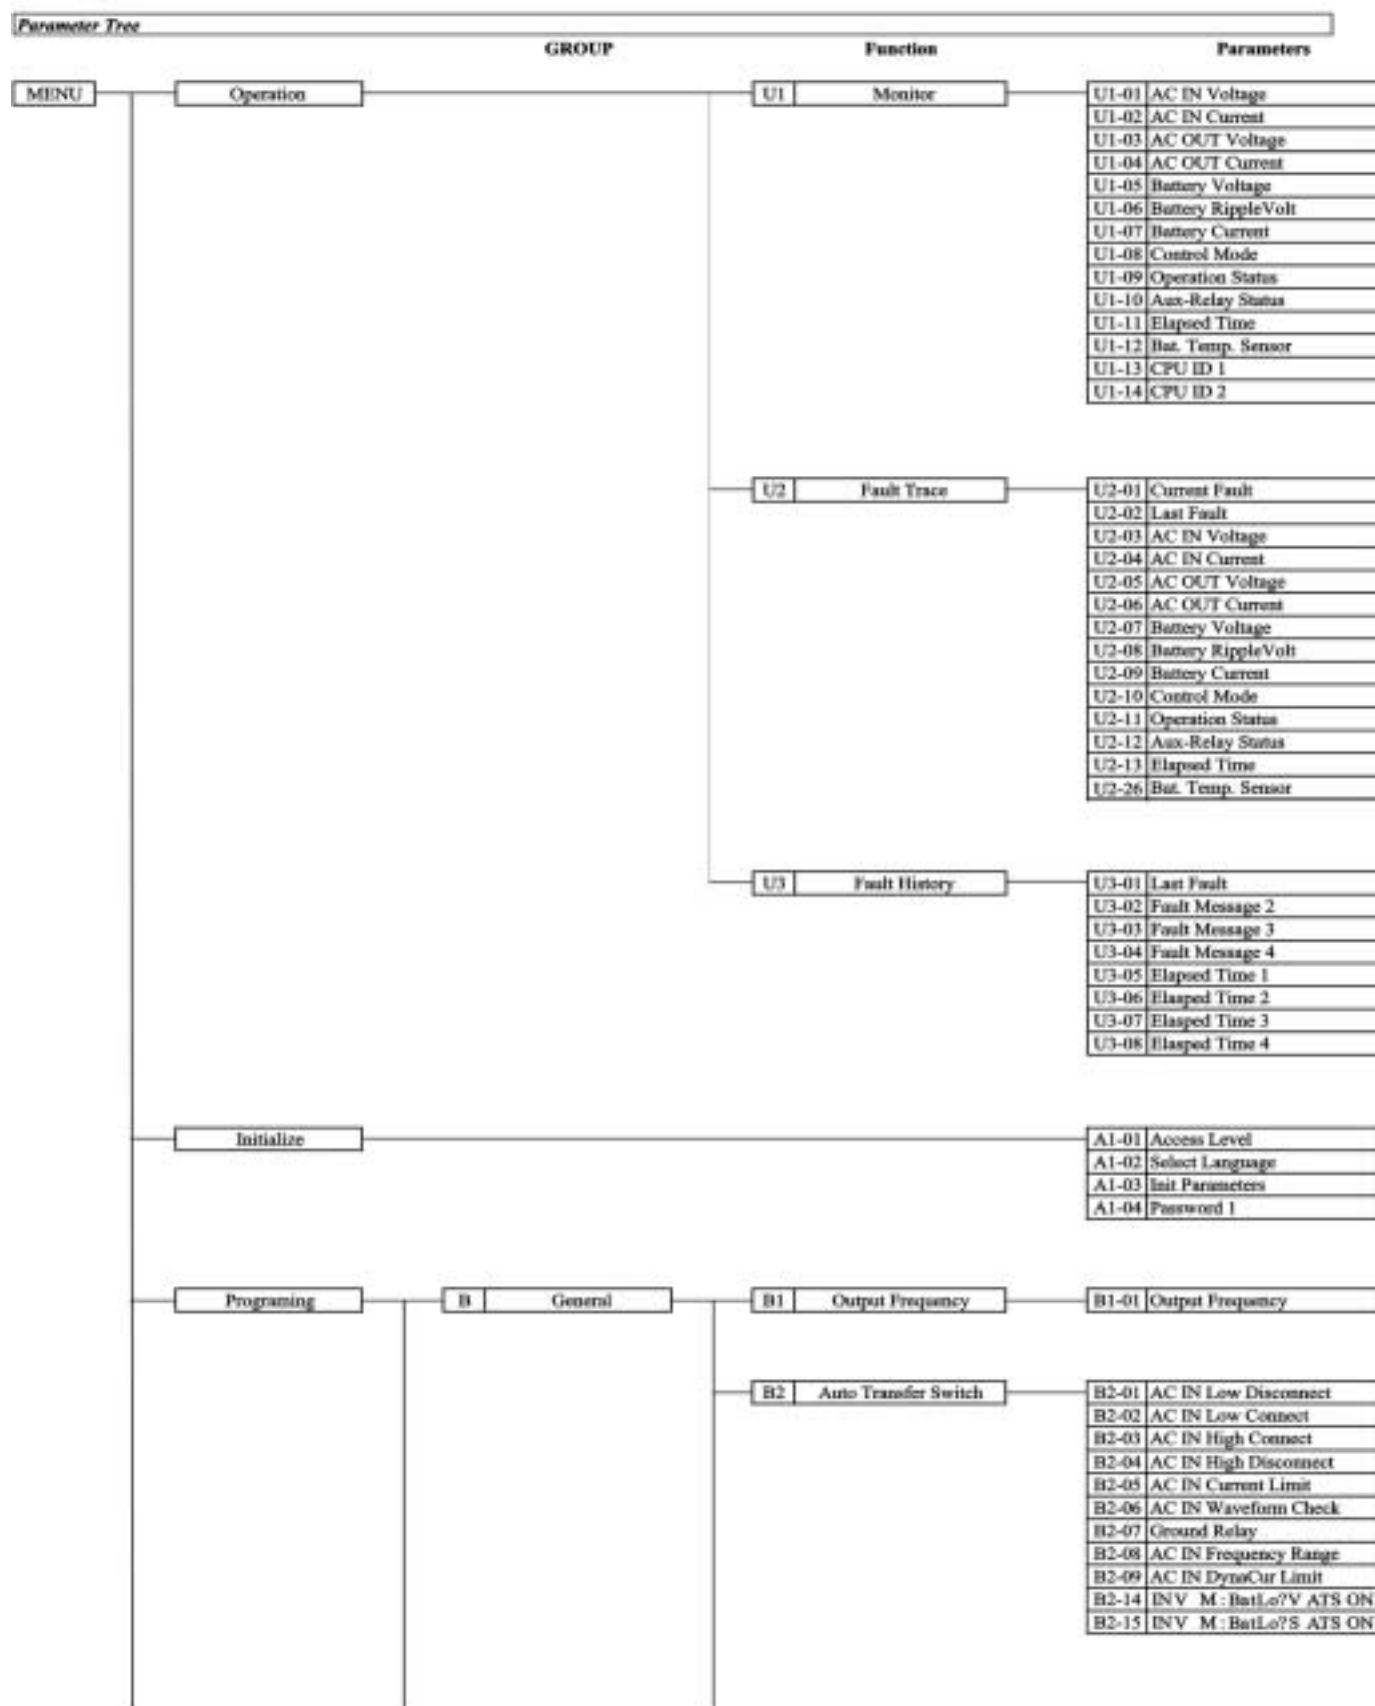

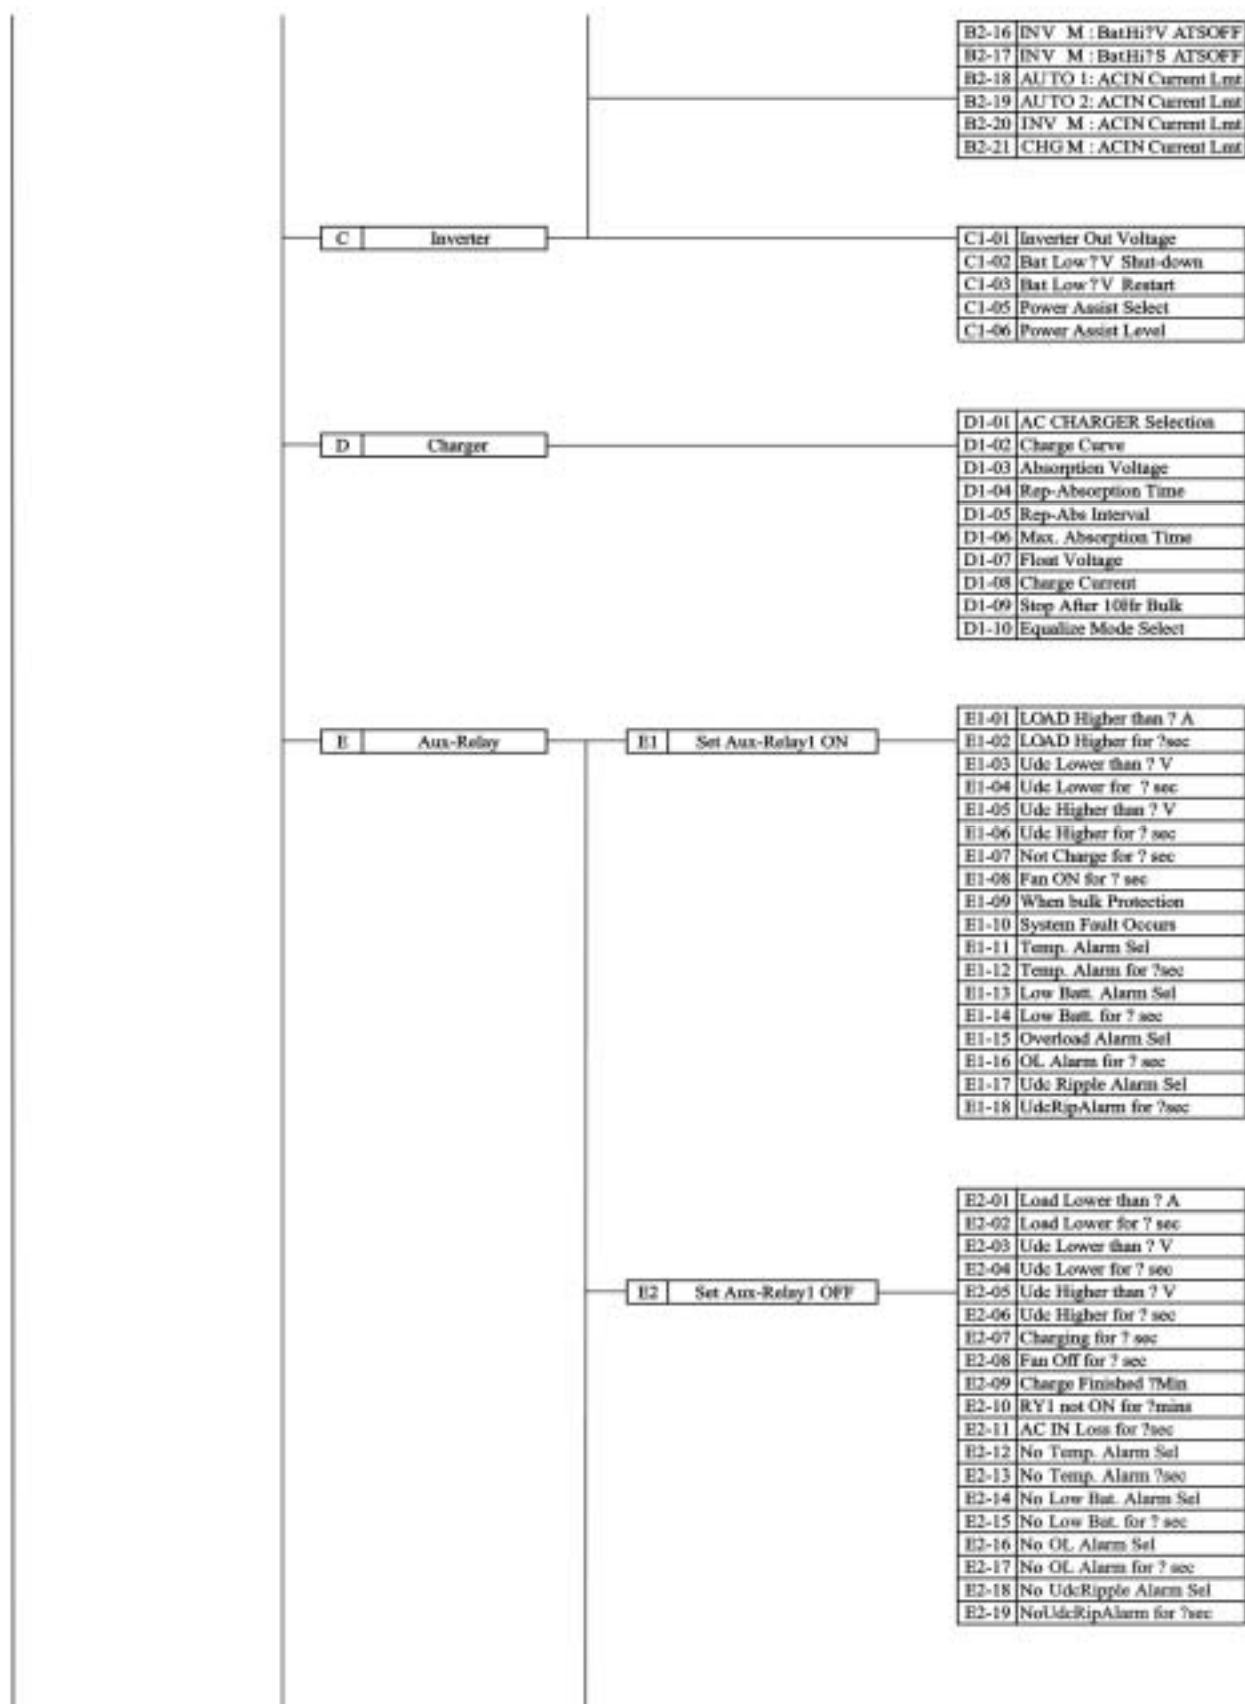




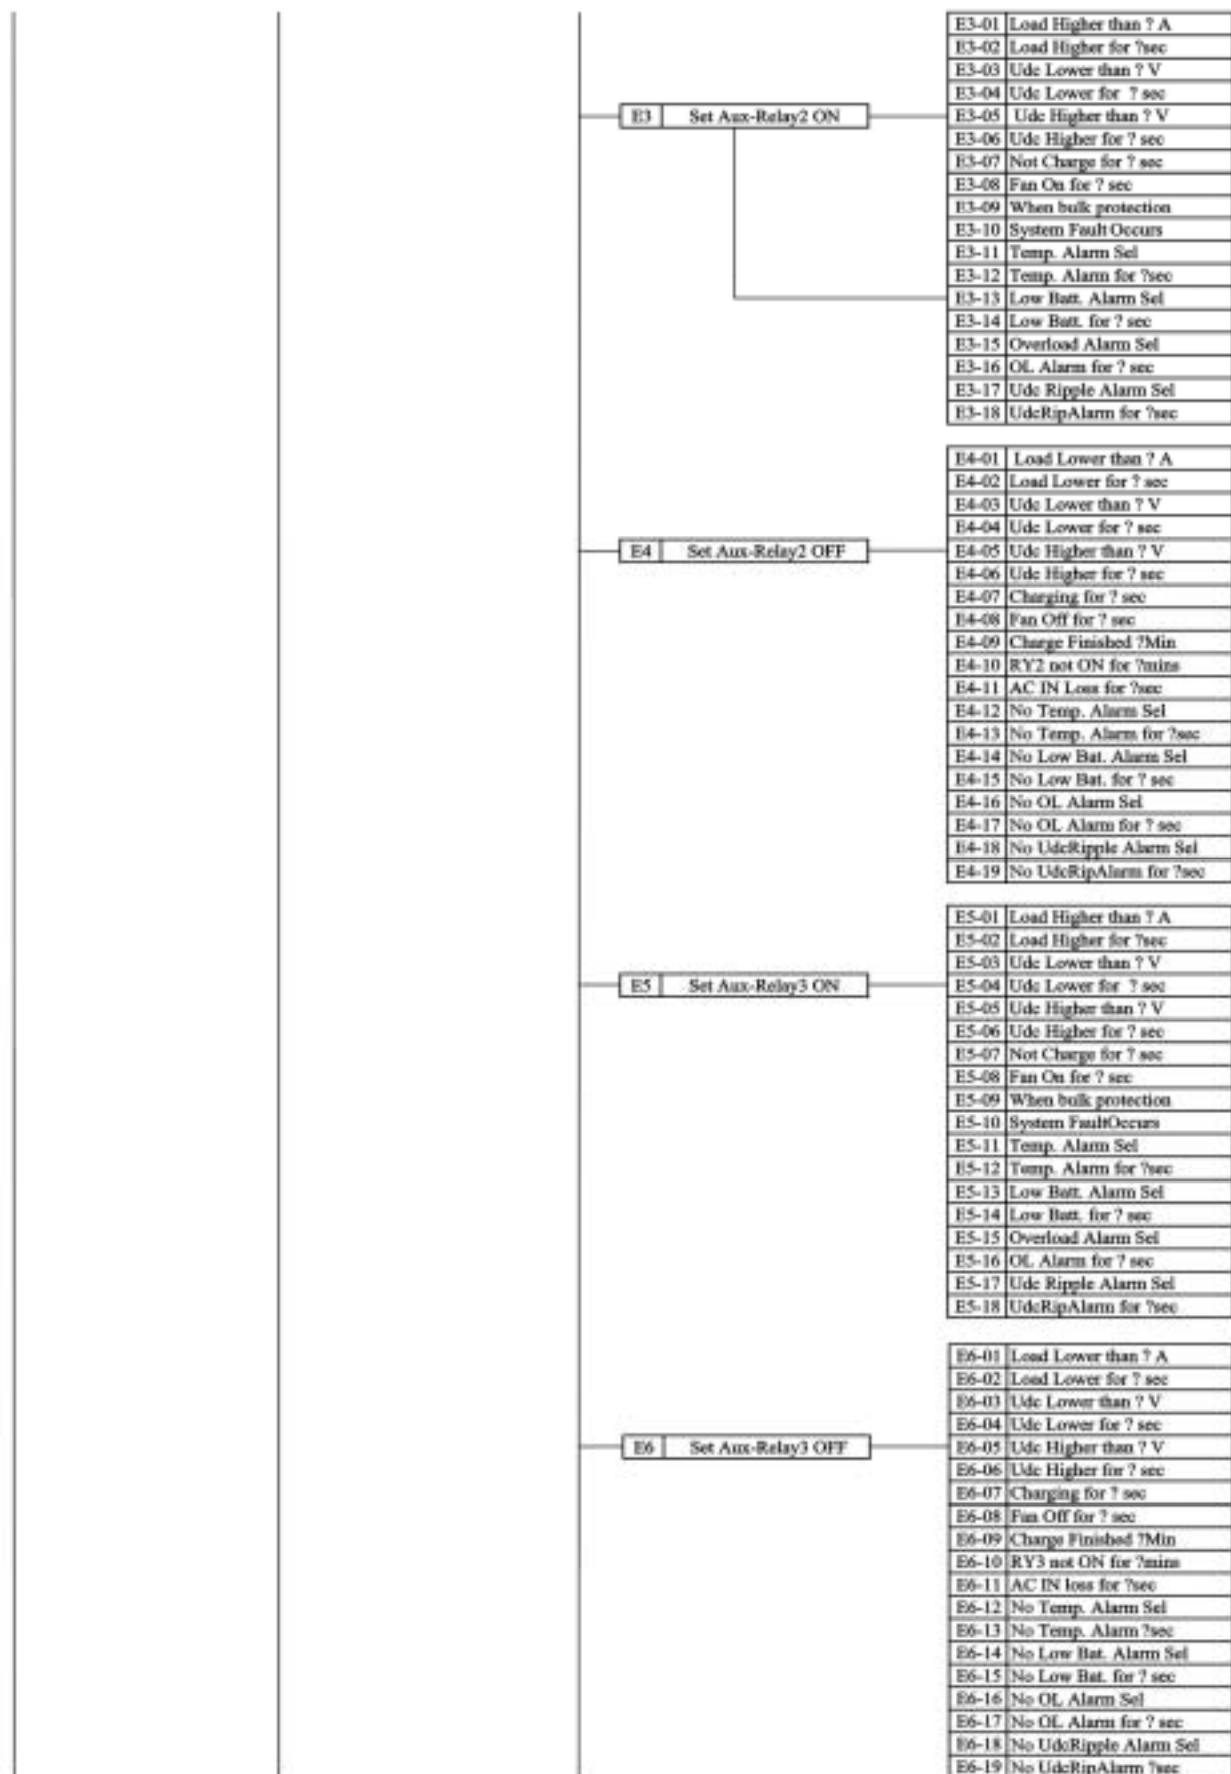

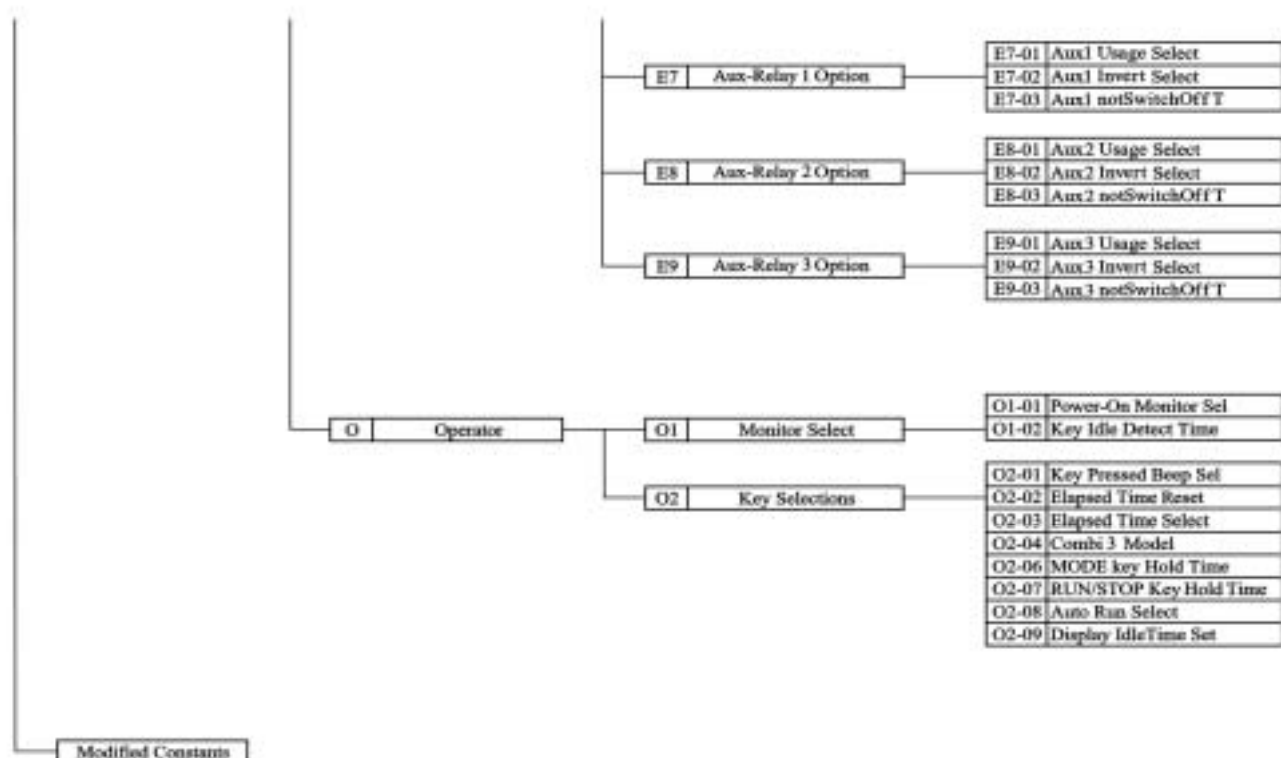


## 4.2 The following is the operation flow.


### Main Menu

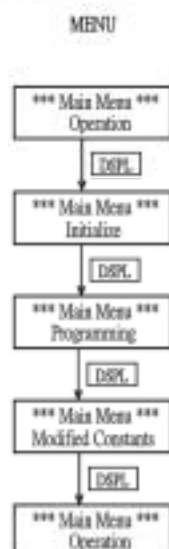


### Quick Return Main Menu-Operation

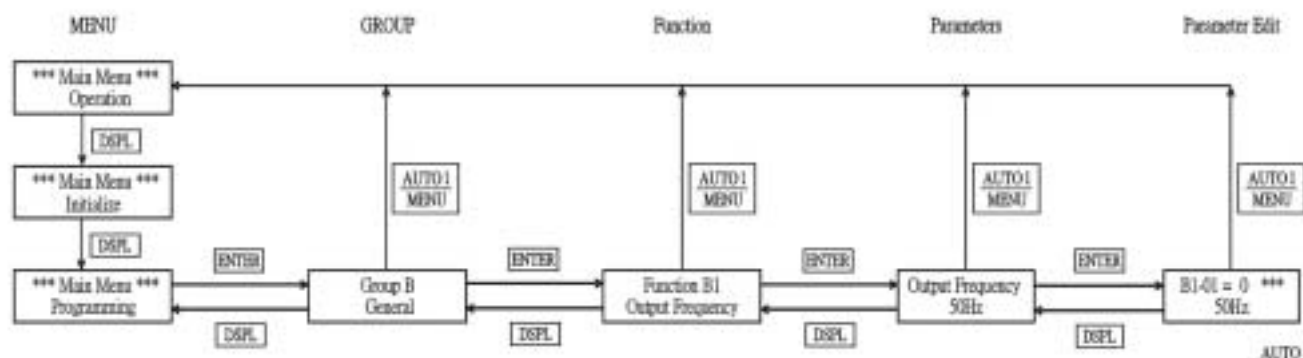


### Quick Return Main Menu-Programming

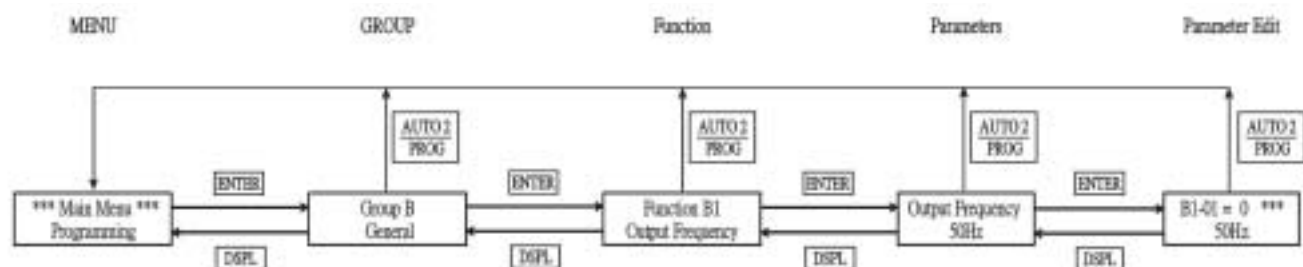


# Main Menu : Operation

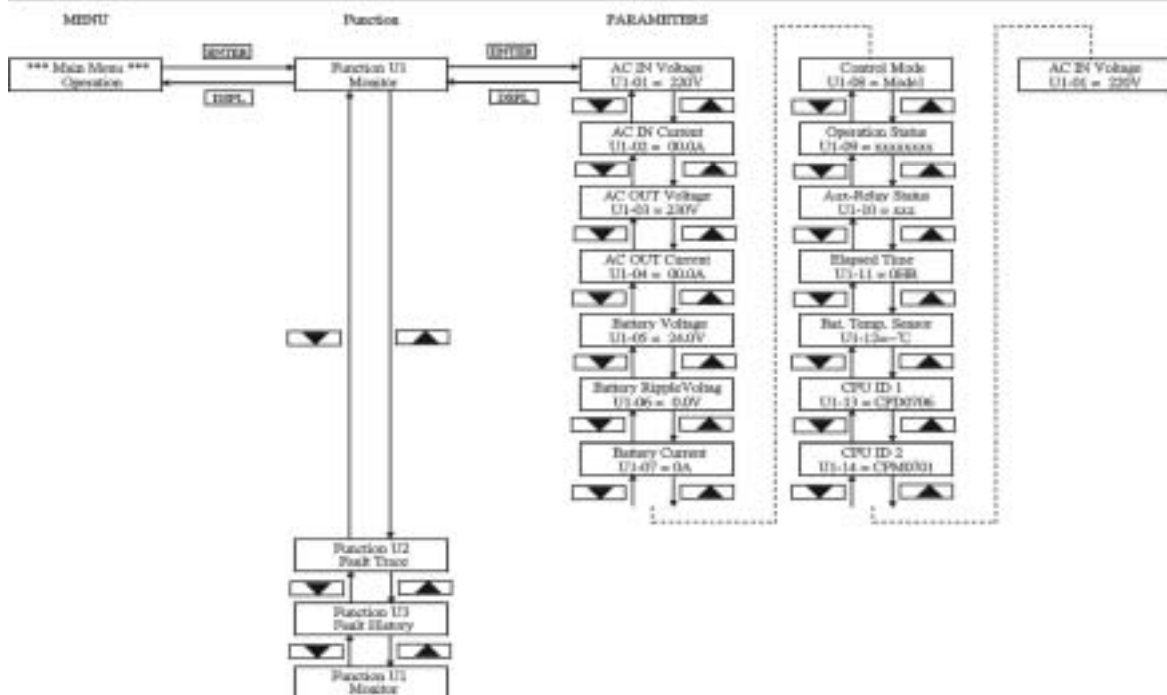


# Main Menu : Initialize

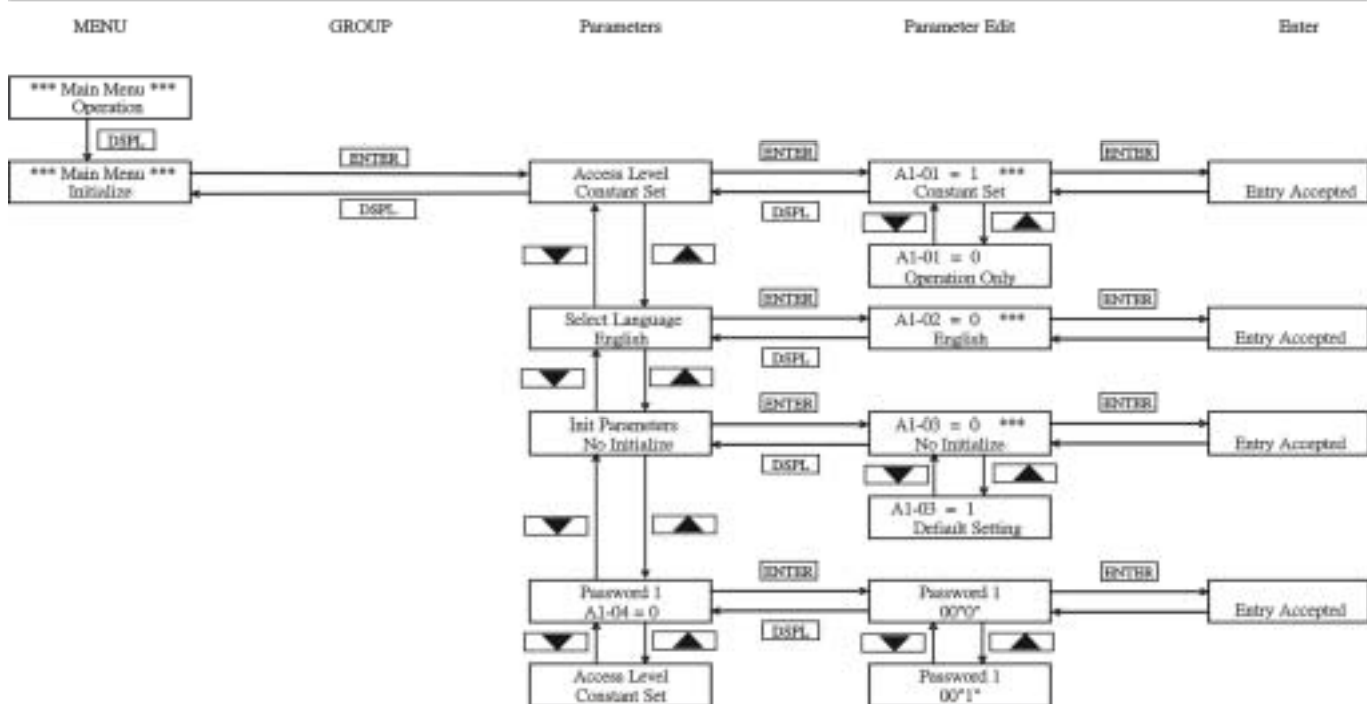

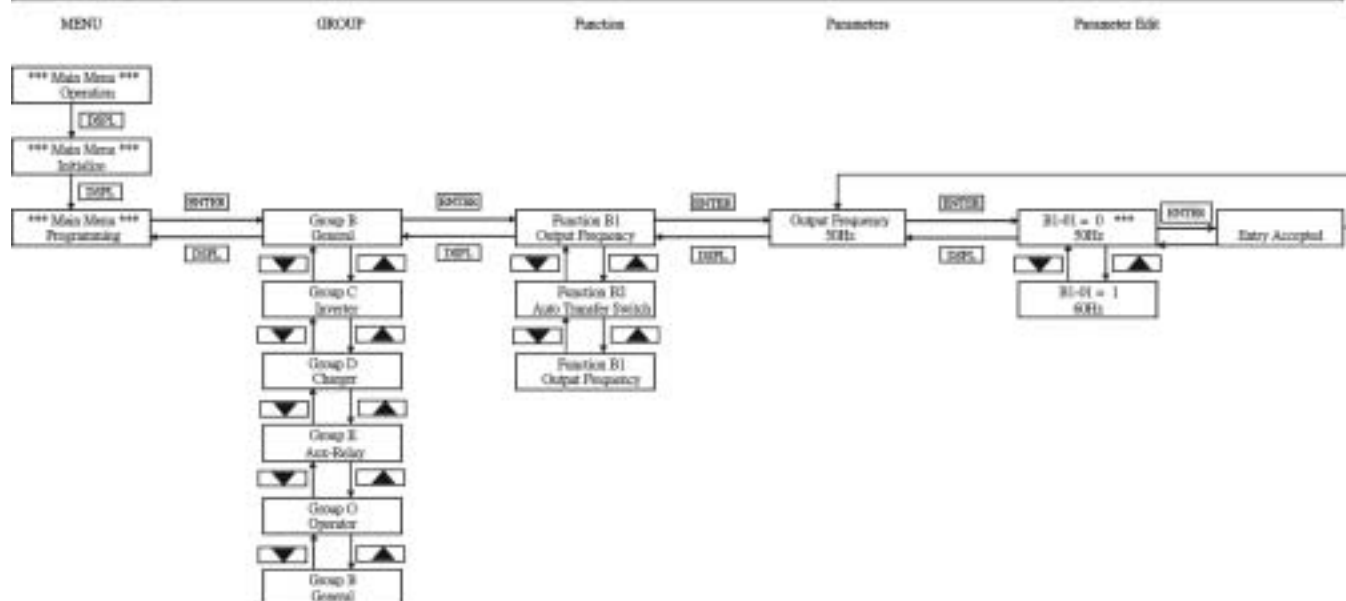



# Main Menu : Programming - Function C1 - C1-01

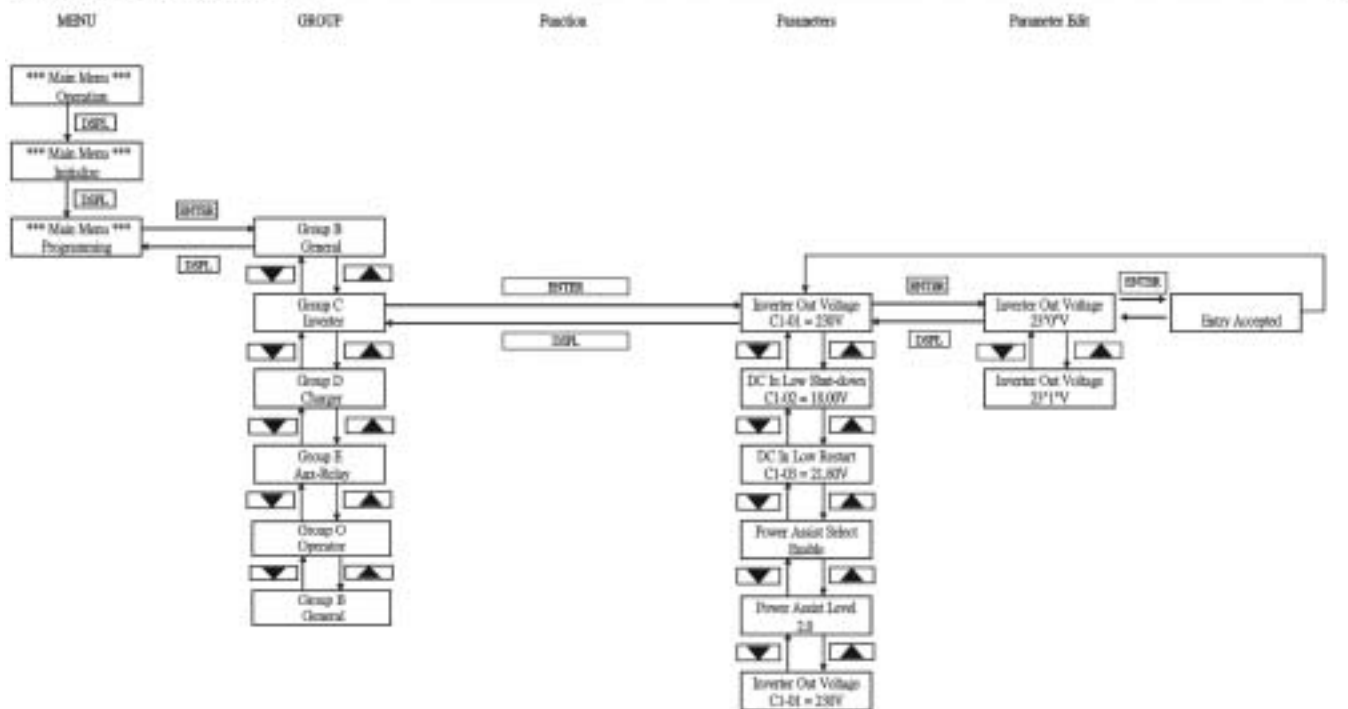


# Main Menu : Programming - Function D1 - D1-01



# Main Menu : Programming - Group B - Function B1 - B1-01




# Main Menu : Programming - Group E - Function E1 - E2-01

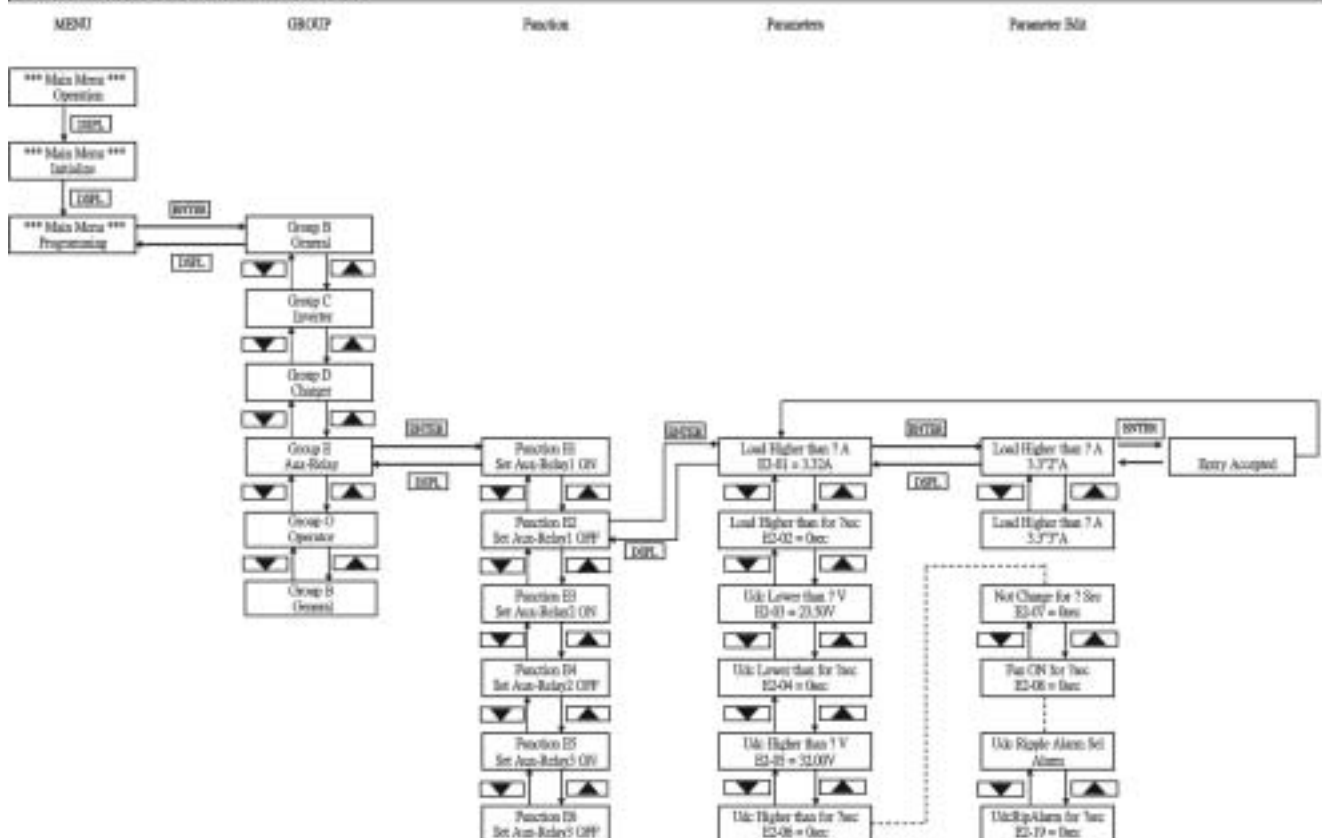




# Main Menu / Programming - Group 0 - Function 01 - 01-01

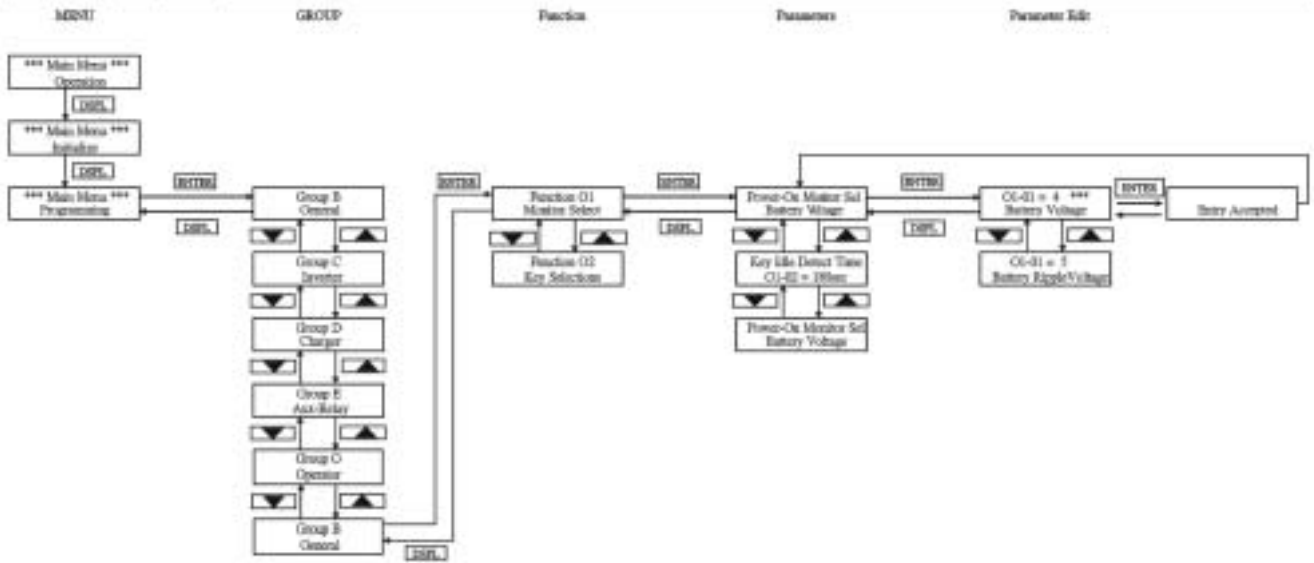

# Main Menu / Programming - Group 0 - Function 02 - 02-01

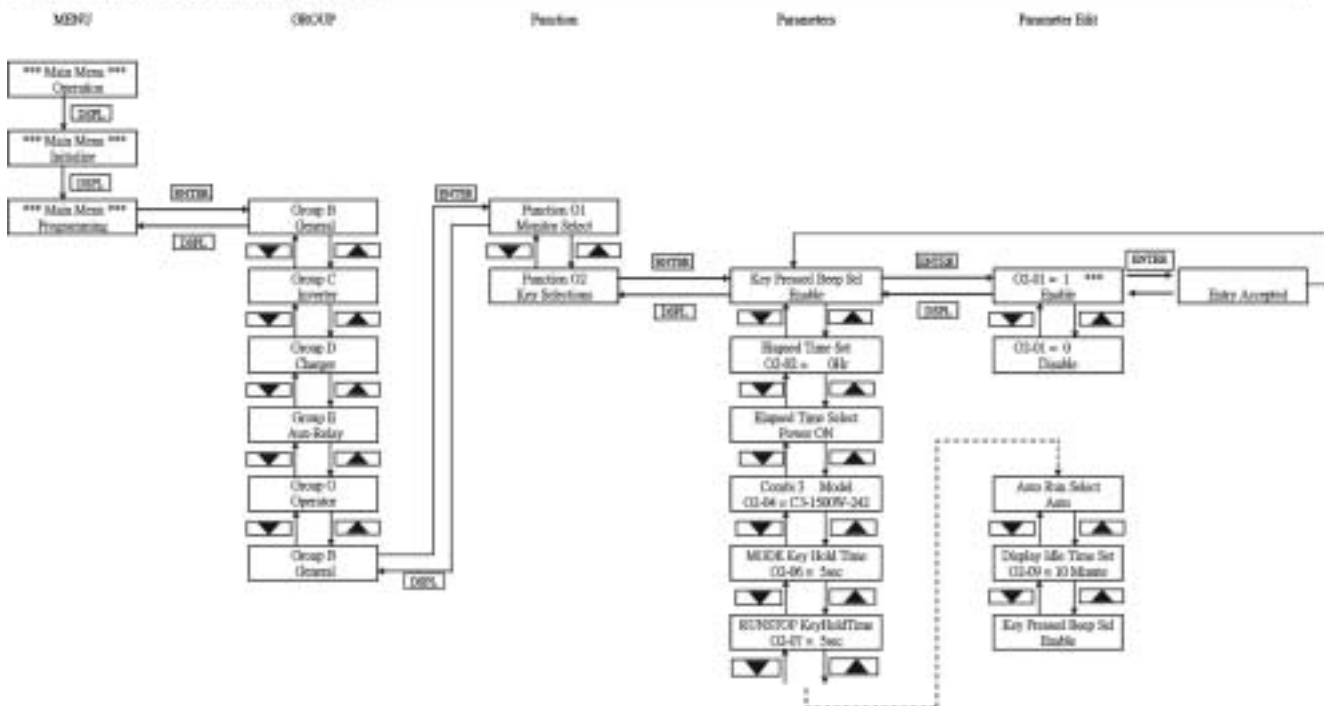

## Chapter 5 Constants List

| Menu      | Group |         | Function |               | Constant | LCD Display         | Range | Unit  | Factory Setting | Remark | Page |
|-----------|-------|---------|----------|---------------|----------|---------------------|-------|-------|-----------------|--------|------|
| Operation | U     | Monitor | U1       | Monitor       | U1-01    | AC IN Voltage       | -     | 0.1V  | -               |        | 6-21 |
|           |       |         |          |               | U1-02    | AC IN Current       | -     | 0.1A  | -               |        | 6-21 |
|           |       |         |          |               | U1-03    | AC OUT Voltage      | -     | 0.1V  | -               |        | 6-21 |
|           |       |         |          |               | U1-04    | AC OUT Current      | -     | 0.1A  | -               |        | 6-21 |
|           |       |         |          |               | U1-05    | Battery Voltage     | -     | 0.1V  | -               |        | 6-21 |
|           |       |         |          |               | U1-06    | Battery Ripple Volt | -     | 0.1V  | -               |        | 6-21 |
|           |       |         |          |               | U1-07    | Battery Current     | -     | 0.1A  | -               |        | 6-21 |
|           |       |         |          |               | U1-08    | Control Mode        | -     | -     | -               |        | 6-21 |
|           |       |         |          |               | U1-09    | Operation Status    | -     | -     | -               | NOTE 1 | 6-22 |
|           |       |         |          |               | U1-10    | Aux-Relay Status    | -     | -     | -               | NOTE 2 | 6-22 |
|           |       |         |          |               | U1-11    | Elapsed Time        | -     | 1hour | -               |        | 6-22 |
|           |       |         |          |               | U1-12    | Bat.Temp.Sensor     | -     | 1°C   | -               |        | 6-22 |
|           |       |         |          |               | U1-13    | CPU ID 1            | -     | -     | -               |        | 6-22 |
|           |       |         |          |               | U1-14    | CPU ID 2            | -     | -     | -               |        | 6-22 |
|           |       |         | U2       | Fault Trace   | U2-01    | Current Fault       | -     | -     | -               |        | 6-23 |
|           |       |         |          |               | U2-02    | Last Fault          | -     | -     | -               |        | 6-23 |
|           |       |         |          |               | U2-03    | AC IN Voltage       | -     | 0.1V  | -               |        | 6-23 |
|           |       |         |          |               | U2-04    | AC IN Current       | -     | 0.1A  | -               |        | 6-23 |
|           |       |         |          |               | U2-05    | AC OUT Voltage      | -     | 0.1V  | -               |        | 6-23 |
|           |       |         |          |               | U2-06    | AC OUT Current      | -     | 0.1A  | -               |        | 6-23 |
|           |       |         |          |               | U2-07    | Battery Voltage     | -     | 0.1V  | -               |        | 6-23 |
|           |       |         |          |               | U2-08    | Battery Ripple Volt | -     | 0.1V  | -               |        | 6-23 |
|           |       |         |          |               | U2-09    | Battery Current     | -     | 0.1A  | -               |        | 6-24 |
|           |       |         |          |               | U2-10    | Control Mode        | -     | -     | -               |        | 6-24 |
|           |       |         |          |               | U2-11    | Operation Status    | -     | -     | -               | NOTE 1 | 6-24 |
|           |       |         |          |               | U2-12    | Aux-Relay Status    | -     | -     | -               | NOTE 2 | 6-24 |
|           |       |         |          |               | U2-13    | Elapsed Time        | -     | 1hour | -               |        | 6-24 |
|           |       |         |          |               | U2-26    | Bat.Temp. Sensor    | -     | 1°C   | -               |        | 6-24 |
|           |       |         | U3       | Fault History | U3-01    | Last Fault          | -     | -     | -               |        | 6-25 |
|           |       |         |          |               | U3-02    | Fault Message 2     | -     | -     | -               |        | 6-25 |
|           |       |         |          |               | U3-03    | Fault Message 3     | -     | -     | -               |        | 6-25 |
|           |       |         |          |               | U3-04    | Fault Message 4     | -     | -     | -               |        | 6-25 |
|           |       |         |          |               | U3-05    | Elapsed Time 1      | -     | 1hour | -               |        | 6-25 |

| Menu             | Group |            | Function |                      | Constant | LCD Display                | Range            | Unit  | Factory Setting | Remark                                | Page |
|------------------|-------|------------|----------|----------------------|----------|----------------------------|------------------|-------|-----------------|---------------------------------------|------|
| Operation        | U     | Monitor    | U3       | Fault History        | U3-06    | Elapsed Time 2             | -                | 1hour | -               |                                       | 6-25 |
|                  |       |            |          |                      | U3-07    | Elapsed Time 3             | -                | 1hour | -               |                                       | 6-25 |
|                  |       |            |          |                      | U3-08    | Elapsed Time 4             | -                | 1hour | -               |                                       | 6-25 |
| Initialize       | A     | Initialize | A1       | Initialize           | A1-01    | Access Level               | 0~1              | 1     | 1               | 0: Operation Only<br>1: Constant Set  | 6-1  |
|                  |       |            |          |                      | A1-02    | Select Language            | -                | -     | 0               | 0:English                             | 6-1  |
|                  |       |            |          |                      | A1-03    | Init Parameters            | 0~1              | 1     | 0               | 0: No Initialize<br>1:Default Setting | 6-1  |
|                  |       |            |          |                      | A1-04    | Password 1                 | 0~999            | 1     | 0               |                                       | 6-2  |
| Programm-<br>ing | B     | General    | B1       | Output Frequency     | B1-01    | Output Frequency           | 0~1              | 1     | 0               | 0: 50 Hz<br>1:60 Hz                   | 6-3  |
|                  |       |            | B2       | Auto Transfer Switch | B2-01    | AC IN Low Disconnect       | NOTE 3           | 1V    | NOTE 3          |                                       | 6-3  |
|                  |       |            |          |                      | B2-02    | AC IN Low Connect          | NOTE 3           | 1V    | NOTE 3          |                                       | 6-3  |
|                  |       |            |          |                      | B2-03    | AC IN High Connect         | NOTE 3           | 1V    | NOTE 3          |                                       | 6-4  |
|                  |       |            |          |                      | B2-04    | AC IN High Disconnect      | NOTE 3           | 1V    | NOTE 3          |                                       | 6-4  |
|                  |       |            |          |                      | B2-05    | AC IN Current Limit        | NOTE 3           | 0.1A  | NOTE 3          |                                       | 6-4  |
|                  |       |            |          |                      | B2-06    | AC IN Waveform Check       | 0~1              | 1     | 1               | 0: Ignore<br>1: Active                | 6-4  |
|                  |       |            |          |                      | B2-07    | Ground Relay               | 0~1              | 1     | 1               | 0: Disconnect<br>1: Connect           | 6-5  |
|                  |       |            |          |                      | B2-08    | ACIN Frequency Range       | 0~1              | 1     | 1               | 0:50/60Hz+-5Hz<br>1:45Hz~65Hz         | 6-5  |
|                  |       |            |          |                      | B2-09    | AC IN DynaCur Limit        | 0~1              | 1     | 0               | 0: Normal<br>1:Dynamic                | 6-5  |
|                  |       |            |          |                      | B2-14    | INV M: BatLo?V   ATS<br>ON | 0~32.0<br>0~16.0 | 0.01V | 23.5V<br>11.75V |                                       | 6-6  |
|                  |       |            |          |                      | B2-15    | INV M: BatLo?S   ATS<br>ON | 0~255            | 1 sec | 10 sec          |                                       | 6-6  |
|                  |       |            |          |                      | B2-16    | INV M: BatHi?V<br>ATSOFF   | 0~32.0<br>0~16.0 | 0.01V | 28.8V<br>14.4V  |                                       | 6-6  |
|                  |       |            |          |                      | B2-17    | INV M: BatHi?S<br>ATSOFF   | 0~255            | 1 sec | 60 sec          |                                       | 6-6  |
|                  |       |            |          |                      | B2-18    | AUTO1:ACINCurrent<br>Lmt   | NOTE 3           | 0.1A  | NOTE 3          |                                       | 6-7  |
|                  |       |            |          |                      | B2-19    | AUTO2:ACINCurrent<br>Lmt   | NOTE 3           | 0.1A  | NOTE 3          |                                       | 6-7  |

| Menu             | Group |           | Function |                      | Constant | LCD Display           | Range   | Unit      | Factory Setting | Remark                                      | Page |
|------------------|-------|-----------|----------|----------------------|----------|-----------------------|---------|-----------|-----------------|---|------|
| Programm-<br>ing | B     | General   | B2       | Auto Transfer Switch | B2-20    | INV M:ACINCurrent Lmt | NOTE 3  | 0.1A      | NOTE 3          |   | 6-7  |
|                  |       |           |          |                      | B2-21    | CHG M:ACINCurrent Lmt | NOTE 3  | 0.1A      | NOTE 3          |   | 6-7  |
|                  | C     | Inverter  | C1       | Inverter             | C1-01    | Inverter Out Voltage  | NOTE 3  | 1V        | NOTE 3          |   | 6-8  |
|                  |       |           |          |                      | C1-02    | Bat Low ? V Shut-down | NOTE 3  | 0.01V     | NOTE 3          |   | 6-8  |
|                  |       |           |          |                      | C1-03    | Bat Low ? V Restart   | NOTE 3  | 0.01V     | NOTE 3          |   | 6-8  |
|                  |       |           |          |                      | C1-04    | Auto Power Saving     | 0~1     | 1         | 1               | 0: Disable<br>1: Enable                     | 6-8  |
|                  |       |           |          |                      | C1-05    | Power Assist Select   | 0~1     | 1         | 1               | 0: Disable<br>1: Enable                     | 6-8  |
|                  |       |           |          |                      | C1-06    | Power Assist Level    | 1.0~3.5 | 0.1       | 2.0             |   | 6-9  |
|                  | D     | Charger   | D1       | Charger              | D1-02    | Charge Curve          | 1~3     | 1         | 3               | 1: Fixed<br>2: Adaptive<br>3: Adaptive+safe | 6-10 |
|                  |       |           |          |                      | D1-03    | Absorption Voltage    | NOTE 3  | 0.01V     | NOTE 3          |   | 6-11 |
|                  |       |           |          |                      | D1-04    | Rep-Absorption Time   | 1~72    | 0.25 hour | 4               | 4x0.25=1 hour                               | 6-11 |
|                  |       |           |          |                      | D1-05    | Rep-Abs Interval      | 1~180   | 0.25 day  | 28              | 28x0.25=7day                                | 6-11 |
|                  |       |           |          |                      | D1-06    | Max. Absorption Time  | 1~8     | 1hour     | 4hour           |   | 6-11 |
|                  |       |           |          |                      | D1-07    | Float Voltage         | NOTE 3  | 0.01V     | NOTE 3          |   | 6-11 |
|                  |       |           |          |                      | D1-08    | Charge Current        | NOTE 3  | 1A        | NOTE 3          |   | 6-11 |
|                  |       |           |          |                      | D1-09    | Stop After 10Hr Bulk  | 0~1     | 1         | 1               | 0:Disable<br>1:Enable                       | 6-11 |
|                  |       |           |          |                      | D1-10    | Equalize Mode Select  | 0~1     | 1         | 1               | 0:Disable<br>1:Enable                       | 6-12 |
|                  | E     | Aux-Relay | E1       | Set Aux-Relay 1 ON   | E1-01    | LOAD Higher than ? A  | NOTE 3  | 0.01A     | NOTE 3          |   | 6-13 |
|                  |       |           |          |                      | E1-02    | LOAD Higher for ? sec | 0~255   | 1sec      | 0sec            |   | 6-13 |
|                  |       |           |          |                      | E1-03    | Udc Lower than ? V    | NOTE 3  | 0.01V     | NOTE 3          |   | 6-13 |
|                  |       |           |          |                      | E1-04    | Udc Lower for ? sec   | 0~255   | 1sec      | 0sec            |   | 6-13 |
|                  |       |           |          |                      | E1-05    | Udc Higher than ? V   | NOTE 3  | 0.01V     | NOTE 3          |   | 6-13 |
|                  |       |           |          |                      | E1-06    | Udc Higher for ? sec  | 0~255   | 1sec      | 0sec            |   | 6-13 |
|                  |       |           |          |                      | E1-07    | Not Charge for ? sec  | 0~255   | 1sec      | 0sec            |   | 6-13 |
|                  |       |           |          |                      | E1-08    | Fan On for ? sec      | 0~255   | 1sec      | 0sec            |   | 6-13 |

| Menu             | Group |           | Function |                            | Constant | LCD Display           | Range  | Unit  | Factory Setting | Remark                 | Page |
|------------------|-------|-----------|----------|----------------------------|----------|-----------------------|--------|-------|-----------------|------------------------|------|
| Programm-<br>ing | E     | Aux-Relay | E1       | Set Aux-<br>Relay 1<br>ON  | E1-09    | When bulk Protection  | 0~1    | 1     | 0               | 0:Disable<br>1:Enable  | 6-14 |
|                  |       |           |          |                            | E1-10    | System Fault Occurs   | 0~1    | 1     | 0               | 0:Disable<br>1:Enable  | 6-14 |
|                  |       |           |          |                            | E1-11    | Temp. Alarm Sel       | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-14 |
|                  |       |           |          |                            | E1-12    | Temp. Alarm for ? sec | 0~255  | 1sec  | 0sec            |                        | 6-14 |
|                  |       |           |          |                            | E1-13    | Low Batt. Alarm Sel   | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-14 |
|                  |       |           |          |                            | E1-14    | Low Batt. for ? sec   | 0~255  | 1sec  | 0sec            |                        | 6-14 |
|                  |       |           |          |                            | E1-15    | Overload Alarm Sel    | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-14 |
|                  |       |           |          |                            | E1-16    | OL Alarm for ? sec    | 0~255  | 1sec  | 0sec            |                        | 6-14 |
|                  |       |           |          |                            | E1-17    | Udc Ripple Alarm Sel  | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-14 |
|                  |       |           |          |                            | E1-18    | UdcRipAlarm for ? sec | 0~255  | 1sec  | 0sec            |                        | 6-14 |
|                  |       |           | E2       | Set Aux-<br>Relay 1<br>OFF | E2-01    | Load Lower than ? A   | NOTE 3 | 0.01A | NOTE 3          |                        | 6-15 |
|                  |       |           |          |                            | E2-02    | Load Lower for ? sec  | 0~255  | 1sec  | 0sec            |                        | 6-15 |
|                  |       |           |          |                            | E2-03    | Udc Lower than ? V    | NOTE 3 | 0.01V | NOTE 3          |                        | 6-15 |
|                  |       |           |          |                            | E2-04    | Udc Lower for ? sec   | 0~255  | 1sec  | 0sec            |                        | 6-15 |
|                  |       |           |          |                            | E2-05    | Udc Higher than ? V   | NOTE 3 | 0.01V | NOTE 3          |                        | 6-15 |
|                  |       |           |          |                            | E2-06    | Udc Higher for ? sec  | 0~255  | 1sec  | 0sec            |                        | 6-15 |
|                  |       |           |          |                            | E2-07    | Charging for ? sec    | 0~255  | 1sec  | 0sec            |                        | 6-15 |
|                  |       |           |          |                            | E2-08    | Fan Off for ? sec     | 0~255  | 1sec  | 0sec            |                        | 6-16 |
|                  |       |           |          |                            | E2-09    | Charge Finished ? Min | 0~1000 | 1min  | 0               |                        | 6-16 |
|                  |       |           |          |                            | E2-10    | RY1 not ON for ? mins | 0~1000 | 1min  | 0               |                        | 6-16 |
|                  |       |           |          |                            | E2-11    | AC IN Loss for ? sec  | 0~255  | 1sec  | 0sec            |                        | 6-16 |
|                  |       |           |          |                            | E2-12    | No Temp. Alarm Sel    | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-16 |
|                  |       |           |          |                            | E2-13    | No Temp. Alarm ? sec  | 0~255  | 1sec  | 0sec            |                        | 6-16 |
|                  |       |           |          |                            | E2-14    | No Low Bat. Alarm Sel | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E2-15    | No Low Bat for ? sec  | 0~255  | 1sec  | 0sec            |                        | 6-17 |

| Menu             | Group |           | Function |                                | Constant | LCD Display                | Range  | Unit  | Factory Setting | Remark                 | Page |
|------------------|-------|-----------|----------|--------------------------------|----------|----------------------------|--------|-------|-----------------|------------------------|------|
| Programm-<br>ing | E     | Aux-Relay | E2       | Set Aux-<br>Relay 1<br><br>OFF | E2-16    | No OL Alarm Sel            | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                                | E2-17    | No OL Alarm for ? sec      | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                                | E2-18    | No UdcRipple Alarm<br>Sel  | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                                | E2-19    | No UdcRipple<br>Alarm ?sec | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           | E3       | Set Aux-<br>Relay 2<br><br>ON  | E3-01    | Load Higher than ? A       | NOTE 3 | 0.01A | NOTE 3          |                        | 6-17 |
|                  |       |           |          |                                | E3-02    | Load Higher for ?sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                                | E3-03    | Udc Lower than ? V         | NOTE 3 | 0.01V | NOTE 3          |                        | 6-17 |
|                  |       |           |          |                                | E3-04    | Udc Lower for ? sec        | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                                | E3-05    | Udc Higher than ? V        | NOTE 3 | 0.01V | NOTE 3          |                        | 6-17 |
|                  |       |           |          |                                | E3-06    | Udc Higher for ? sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                                | E3-07    | Not Charge for ? sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                                | E3-08    | Fan On for ? sec           | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                                | E3-09    | When bulk Protection       | 0~1    | 1     | 0               | 0:Disable<br>1:Enable  | 6-17 |
|                  |       |           |          |                                | E3-10    | System Fault Occurs        | 0~1    | 1     | 0               | 0:Disable<br>1:Enable  | 6-17 |
|                  |       |           |          |                                | E3-11    | Temp. Alarm Sel            | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                                | E3-12    | Temp. Alarm for ?sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                                | E3-13    | Low Batt. Alarm Sel        | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                                | E3-14    | Low Batt. for ? sec        | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                                | E3-15    | Overload Alarm Sel         | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                                | E3-16    | OL Alarm for ? sec         | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                                | E3-17    | Udc Ripple Alarm Sel       | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                                | E3-18    | UdcRipAlarm for ?sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           | E4       | Set Aux-<br>Relay 2<br><br>OFF | E4-01    | Load Lower than ? A        | NOTE 3 | 0.01A | NOTE 3          |                        | 6-17 |
|                  |       |           |          |                                | E4-02    | Load Lower for ? sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                                | E4-03    | Udc Lower than ? V         | NOTE 3 | 0.01V | NOTE 3          |                        | 6-17 |

| Menu             | Group |           | Function |                            | Constant | LCD Display                | Range  | Unit  | Factory Setting | Remark                 | Page |
|------------------|-------|-----------|----------|----------------------------|----------|----------------------------|--------|-------|-----------------|------------------------|------|
| Programm-<br>ing | E     | Aux-Relay | E4       | Set Aux-<br>Relay 2<br>OFF | E4-04    | Udc Lower for ? sec        | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E4-05    | Udc Higher than ? V        | NOTE 3 | 0.01V | NOTE 3          |                        | 6-17 |
|                  |       |           |          |                            | E4-06    | Udc Higher for ? sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E4-07    | Charging for ? sec         | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E4-08    | Fan OFF for ? sec          | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E4-09    | Charge Finished ?Min       | 0~1000 | 1min  | 0               |                        | 6-17 |
|                  |       |           |          |                            | E4-10    | RY2 not ON for ?mins       | 0~1000 | 1min  | 0               |                        | 6-17 |
|                  |       |           |          |                            | E4-11    | AC IN Loss for ?sec        | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E4-12    | No Temp. Alarm Sel         | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E4-13    | No Temp. Alarm ? sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E4-14    | No Low Bat. Alarm Sel      | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E4-15    | No Low Bat for ? sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E4-16    | No OL Alarm Sel            | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E4-17    | No OL Alarm for ? sec      | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E4-18    | No UdcRipple Alarm<br>Sel  | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E4-19    | No UdcRipple<br>Alarm ?sec | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           | E5       | Set Aux-<br>Relay 3<br>ON  | E5-01    | Load Higher than ? A       | NOTE 3 | 0.01A | NOTE 3          |                        | 6-17 |
|                  |       |           |          |                            | E5-02    | Load Higher for ?sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E5-03    | Udc Lower than ? V         | NOTE 3 | 0.01V | NOTE 3          |                        | 6-17 |
|                  |       |           |          |                            | E5-04    | Udc Lower for ? sec        | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E5-05    | Udc Higher than ? V        | NOTE 3 | 0.01V | NOTE 3          |                        | 6-17 |
|                  |       |           |          |                            | E5-06    | Udc Higher for ? sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E5-07    | Not Charge for ? sec       | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E5-08    | Fan ON for ? sec           | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E5-09    | When bulk Protection       | 0~1    | 1     | 0               | 0:Disable<br>1:Enable  | 6-17 |
|                  |       |           |          |                            | E5-10    | System Fault Occurs        | 0~1    | 1     | 0               | 0:Disable<br>1:Enable  | 6-17 |

| Menu             | Group |           | Function |                            | Constant | LCD Display           | Range  | Unit  | Factory Setting | Remark                 | Page |
|------------------|-------|-----------|----------|----------------------------|----------|-----------------------|--------|-------|-----------------|------------------------|------|
| Programm-<br>ing | E     | Aux-Relay | E5       | Set Aux-<br>Relay 3<br>ON  | E5-11    | Temp. Alarm Sel       | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E5-12    | Temp. Alarm for ?sec  | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E5-13    | Low Batt. Alarm Sel   | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E5-14    | Low Batt. for ? sec   | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E5-15    | Overload Alarm Sel    | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E5-16    | OL Alarm for ? sec    | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E5-17    | Udc Ripple Alarm Sel  | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E5-18    | UdcRipAlarm for ?sec  | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           | E6       | Set Aux-<br>Relay 3<br>OFF | E6-01    | Load Lower than ? A   | NOTE 3 | 0.01A | NOTE 3          |                        | 6-17 |
|                  |       |           |          |                            | E6-02    | Load Lower for ? sec  | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E6-03    | Udc Lower than ? V    | NOTE 3 | 0.01V | NOTE 3          |                        | 6-17 |
|                  |       |           |          |                            | E6-04    | Udc Lower for ? sec   | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E6-05    | Udc Higher than ? V   | NOTE 3 | 0.01V | NOTE 3          |                        | 6-17 |
|                  |       |           |          |                            | E6-06    | Udc Higher for ? sec  | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E6-07    | Charging for ? sec    | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E6-08    | Fan OFF for ? sec     | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E6-09    | Charge Finished ?Min  | 0~1000 | 1min  | 0               |                        | 6-17 |
|                  |       |           |          |                            | E6-10    | RY3 not ON for ?mins  | 0~1000 | 1min  | 0               |                        | 6-17 |
|                  |       |           |          |                            | E6-11    | AC IN Loss for ?sec   | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E6-12    | No Temp. Alarm Sel    | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E6-13    | No Temp. Alarm ? sec  | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E6-14    | No Low Bat. Alarm Sel | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E6-15    | No Low Bat for ? sec  | 0~255  | 1sec  | 0sec            |                        | 6-17 |
|                  |       |           |          |                            | E6-16    | No OL Alarm Sel       | 0~1    | 1     | 0               | 0:Alarm<br>1:Pre-alarm | 6-17 |
|                  |       |           |          |                            | E6-17    | No OL Alarm for ? sec | 0~255  | 1sec  | 0sec            |                        | 6-17 |



| Menu             | Group |           | Function |                     | Constant | LCD Display             | Range   | Unit  | Factory Setting | Remark                         | Page |
|------------------|-------|-----------|----------|---------------------|----------|-------------------------|---------|-------|-----------------|--------------------------------|------|
| Programm-<br>ing | E     | Aux-Relay | E6       | Set Aux-Relay 3 OFF | E6-18    | No UdcRipple Alarm Sel  | 0~1     | 1     | 0               | 0:Alarm<br>1:Pre-alarm         | 6-17 |
|                  |       |           |          |                     | E6-19    | No UdcRipple Alarm ?sec | 0~255   | 1sec  | 0sec            |                                | 6-17 |
|                  |       |           | E7       | Aux-Relay 1 Option  | E7-01    | Aux1 Usage Select       | 0~1     | 1     | 0               | 0:Do not use Aux<br>1: Use Aux | 6-18 |
|                  |       |           |          |                     | E7-02    | Aux1 Invert Select      | 0~1     | 1     | 0               | 0: Normal<br>1: Invert switch  | 6-18 |
|                  |       |           |          |                     | E7-03    | Aux1 notSwitchOff T     | 0~1000  | 1 min | 0               |                                | 6-18 |
|                  |       |           | E8       | Aux-Relay 2 Option  | E8-01    | Aux2 Usage Select       | 0~1     | 1     | 0               | 0:Do not use Aux<br>1: Use Aux | 6-18 |
|                  |       |           |          |                     | E8-02    | Aux2 Invert Select      | 0~1     | 1     | 0               | 0: Normal<br>1: Invert switch  | 6-18 |
|                  |       |           |          |                     | E8-03    | Aux2 notSwitchOff T     | 0~1000  | 1 min | 0               |                                | 6-18 |
|                  |       |           | E9       | Aux-Relay 3 Option  | E9-01    | Aux3 Usage Select       | 0~1     | 1     | 0               | 0:Do not use Aux<br>1: Use Aux | 6-18 |
|                  |       |           |          |                     | E9-02    | Aux3 Invert Select      | 0~1     | 1     | 0               | 0: Normal<br>1: Invert switch  | 6-18 |
|                  |       |           |          |                     | E9-03    | Aux3 notSwitchOff T     | 0~1000  | 1 min | 0               |                                | 6-18 |
|                  | O     | Operator  | O1       | Monitor Select      | O1-01    | Power-ON Monitor Sel    | 0~13    | 1     | 4               | NOTE 4                         | 6-19 |
|                  |       |           |          |                     | O1-02    | Key Idle Detect Time    | 10~600  | 1sec  | 180 sec         |                                | 6-19 |
|                  |       |           | O2       | Key Selections      | O2-01    | Key Pressed Beep Sel    | 0~1     | 1     | 1               | 0:Disable<br>1:Enable          | 6-19 |
|                  |       |           |          |                     | O2-02    | Elapsed Time Reset      | 0~60000 | 1hour | 0               |                                | 6-19 |
|                  |       |           |          |                     | O2-03    | Elapsed Time Select     | 0~1     | 1     | 0               | 0:Power ON<br>1: Run Time      | 6-19 |
|                  |       |           |          |                     | O2-04    | Combi 3 Model           | -       | -     | -               |                                | 6-19 |
|                  |       |           |          |                     | O2-06    | MODE Key Hold Time      | 2~10    | 1sec  | 5 sec           |                                | 6-20 |
|                  |       |           |          |                     | O2-07    | RUN/STOP KeyHoldTime    | 2~10    | 1sec  | 2 sec           |                                | 6-20 |
|                  |       |           |          |                     | O2-08    | Auto Run Select         | 0~1     | 1     | 1               | 0: Manual<br>1: Auto           | 6-20 |
|                  |       |           |          |                     | O2-09    | Display IdleTime Set    | 0~60    | 1 min | 10 min          |                                | 6-20 |

### Operation Status

|         |              |   |   |   |   |   |   |   |   |                         |           |           |
|---------|--------------|---|---|---|---|---|---|---|---|-------------------------|-----------|-----------|
| U1-09 = | X            | X | X | X | X | X | X | X | X | X                       | X         | X         |
| Fault:  |              |   |   |   |   |   |   |   |   |                         |           |           |
| 0=OK    | Udc ripple:  |   |   |   |   |   |   |   |   |                         |           | RUN/STOP: |
| 1=Fault | 0=OK         |   |   |   |   |   |   |   |   |                         |           | 0=STOP    |
|         | 1=Udc-ripple |   |   |   |   |   |   |   |   |                         | Inverter: | 1=RUN     |
|         | Pre-alarm    |   |   |   |   |   |   |   |   |                         | 0=OFF     |           |
|         |              |   |   |   |   |   |   |   |   |                         | 1=ON      |           |
|         |              |   |   |   |   |   |   |   |   | AC CHARGER:             |           |           |
|         |              |   |   |   |   |   |   |   |   | 0=OFF                   |           |           |
|         |              |   |   |   |   |   |   |   |   | ATS:                    | 1=ON      |           |
|         |              |   |   |   |   |   |   |   |   | 0=OFF                   |           |           |
|         |              |   |   |   |   |   |   |   |   | 1=ON                    |           |           |
|         |              |   |   |   |   |   |   |   |   | AC IN:                  |           |           |
|         |              |   |   |   |   |   |   |   |   | 0=AC IN disconnect      |           |           |
|         |              |   |   |   |   |   |   |   |   | 1=AC IN connect         |           |           |
|         |              |   |   |   |   |   |   |   |   | AC OUT:                 |           |           |
|         |              |   |   |   |   |   |   |   |   | 0=No output             |           |           |
|         |              |   |   |   |   |   |   |   |   | 1=output                |           |           |
|         |              |   |   |   |   |   |   |   |   | Remoter:                |           |           |
|         |              |   |   |   |   |   |   |   |   | 0=Remoter disconnect    |           |           |
|         |              |   |   |   |   |   |   |   |   | 1=Remoter connect       |           |           |
|         |              |   |   |   |   |   |   |   |   | OH:                     |           |           |
|         |              |   |   |   |   |   |   |   |   | 0=OK                    |           |           |
|         |              |   |   |   |   |   |   |   |   | 1=OH Pre-alarm          |           |           |
|         |              |   |   |   |   |   |   |   |   | Battery Low:            |           |           |
|         |              |   |   |   |   |   |   |   |   | 0=OK                    |           |           |
|         |              |   |   |   |   |   |   |   |   | 1=Battery low pre-alarm |           |           |
|         |              |   |   |   |   |   |   |   |   | OL:                     |           |           |
|         |              |   |   |   |   |   |   |   |   | 0=OK                    |           |           |
|         |              |   |   |   |   |   |   |   |   | 1=Over load pre-alarm   |           |           |

NOTE 2:

U1-10 = X X X

|

|

|

Aux-Relay1:

0=OFF

1=ON

|

Aux-Relay2:

0=OFF

1=ON

|

Aux-Relay3:

0=OFF

1=ON

NOTE 3:

| Constants<br>Model | B2-01   |      |                 | B2-02   |      |                 | B2-03   |      |                 | B2-04   |      |                 |
|--------------------|---------|------|-----------------|---------|------|-----------------|---------|------|-----------------|---------|------|-----------------|
|                    | Range   | Unit | Factory Setting | Range   | Unit | Factory Setting | Range   | Unit | Factory Setting | Range   | Unit | Factory Setting |
| <b>C3-1500-122</b> | 180~230 | 1V   | 180V            | 181~260 | 1V   | 187V            | 240~269 | 1V   | 265V            | 230~270 | 1V   | 270V            |
| <b>C3-3000-122</b> | 180~230 | 1V   | 180V            | 181~260 | 1V   | 187V            | 240~269 | 1V   | 265V            | 230~270 | 1V   | 270V            |
| <b>C3-1500-242</b> | 180~230 | 1V   | 180V            | 181~260 | 1V   | 187V            | 240~269 | 1V   | 265V            | 230~270 | 1V   | 270V            |
| <b>C3-3000-242</b> | 180~230 | 1V   | 180V            | 181~260 | 1V   | 187V            | 240~269 | 1V   | 265V            | 230~270 | 1V   | 270V            |
| <b>C3-1500-121</b> | 94~120  | 1V   | 94V             | 95~135  | 1V   | 101V            | 128~142 | 1V   | 138V            | 120~143 | 1V   | 143V            |
| <b>C3-3000-121</b> | 94~120  | 1V   | 94V             | 95~135  | 1V   | 101V            | 128~142 | 1V   | 138V            | 120~143 | 1V   | 143V            |
| <b>C3-1500-241</b> | 94~120  | 1V   | 94V             | 95~135  | 1V   | 101V            | 128~142 | 1V   | 138V            | 120~143 | 1V   | 143V            |
| <b>C3-3000-241</b> | 94~120  | 1V   | 94V             | 95~135  | 1V   | 101V            | 128~142 | 1V   | 138V            | 120~143 | 1V   | 143V            |

| Constant<br>Model  | B2-05    |      |                 | C1-01   |      |                 | C1-02     |       |                 | C1-03     |       |                 |
|--------------------|----------|------|-----------------|---------|------|-----------------|-----------|-------|-----------------|-----------|-------|-----------------|
|                    | Range    | Unit | Factory Setting | Range   | Unit | Factory Setting | Range     | Unit  | Factory Setting | Range     | Unit  | Factory Setting |
| <b>C3-1500-122</b> | 1.0~16.0 | 0.1A | 16.0A           | 210~245 | 1V   | 230V            | 9.3~13.0  | 0.01V | 9.3V            | 10.9~17.0 | 0.01V | 10.9V           |
| <b>C3-3000-122</b> | 1.0~16.0 | 0.1A | 16.0A           | 210~245 | 1V   | 230V            | 9.3~13.0  | 0.01V | 9.3V            | 10.9~17.0 | 0.01V | 10.9V           |
| <b>C3-1500-242</b> | 1.0~16.0 | 0.1A | 16.0A           | 210~245 | 1V   | 230V            | 18.6~26.0 | 0.01V | 18.6V           | 21.8~34.0 | 0.01V | 21.8V           |
| <b>C3-3000-242</b> | 1.0~16.0 | 0.1A | 16.0A           | 210~245 | 1V   | 230V            | 18.6~23.0 | 0.01V | 18.6V           | 21.8~34.0 | 0.01V | 21.8V           |
| <b>C3-1500-121</b> | 2.0~30.0 | 0.1A | 30.0A           | 94~128  | 1V   | 120V            | 9.3~13.0  | 0.01V | 9.3V            | 10.9~17.0 | 0.01V | 10.9V           |
| <b>C3-3000-121</b> | 2.0~30.0 | 0.1A | 30.0A           | 94~128  | 1V   | 120V            | 9.3~13.0  | 0.01V | 9.3V            | 10.9~17.0 | 0.01V | 10.9V           |
| <b>C3-1500-241</b> | 2.0~30.0 | 0.1A | 30.0A           | 94~128  | 1V   | 120V            | 18.6~26.0 | 0.01V | 18.6V           | 21.8~34.0 | 0.01V | 21.8V           |
| <b>C3-3000-241</b> | 2.0~30.0 | 0.1A | 30.0A           | 94~128  | 1V   | 120V            | 18.6~23.0 | 0.01V | 18.6V           | 21.8~34.0 | 0.01V | 21.8V           |

| Constant<br>Model  | D1-03     |       |                 | D1-07     |       |                 | D1-08 |      |                 | E1-01,E3-01,E5-01 |       |                 |
|--------------------|-----------|-------|-----------------|-----------|-------|-----------------|-------|------|-----------------|-------------------|-------|-----------------|
|                    | Range     | Unit  | Factory Setting | Range     | Unit  | Factory Setting | Range | Unit | Factory Setting | Range             | Unit  | Factory Setting |
| <b>C3-1500-122</b> | 12.0~16.0 | 0.01V | 14.40V          | 12.0~16.0 | 0.01V | 13.80V          | 0~70  | 1A   | 35A             | 0~29.3            | 0.01A | 6.65A           |
| <b>C3-3000-122</b> | 12.0~16.0 | 0.01V | 14.40V          | 12.0~16.0 | 0.01V | 13.80V          | 0~140 | 1A   | 70A             | 0~42.6            | 0.01A | 13.30A          |
| <b>C3-1500-242</b> | 24.0~32.0 | 0.01V | 28.80V          | 24.0~32.0 | 0.01V | 27.60V          | 0~35  | 1A   | 17A             | 0~29.3            | 0.01A | 6.65A           |
| <b>C3-3000-242</b> | 24.0~32.0 | 0.01V | 28.80V          | 24.0~32.0 | 0.01V | 27.60V          | 0~70  | 1A   | 35A             | 0~42.6            | 0.01A | 13.30A          |
| <b>C3-1500-121</b> | 12.0~16.0 | 0.01V | 14.40V          | 12.0~16.0 | 0.01V | 13.80V          | 0~70  | 1A   | 35A             | 0~44.7            | 0.01A | 12.75A          |
| <b>C3-3000-121</b> | 12.0~16.0 | 0.01V | 14.40V          | 12.0~16.0 | 0.01V | 13.80V          | 0~140 | 1A   | 70A             | 0~83.0            | 0.01A | 25.5A           |
| <b>C3-1500-241</b> | 24.0~32.0 | 0.01V | 28.80V          | 24.0~32.0 | 0.01V | 27.60V          | 0~35  | 1A   | 17A             | 0~44.7            | 0.01A | 12.75A          |
| <b>C3-3000-241</b> | 24.0~32.0 | 0.01V | 28.80V          | 24.0~32.0 | 0.01V | 27.60V          | 0~70  | 1A   | 35A             | 0~83.0            | 0.01A | 25.5A           |

| Constant<br>Model  | E1-03,E3-03,E5-03 |       |                 | E1-05,E3-05,E5-05 |       |                 | E2-01,E4-01,E6-01 |       |                 | E2-03,E4-03,E6-03 |       |                 |
|--------------------|-------------------|-------|-----------------|-------------------|-------|-----------------|-------------------|-------|-----------------|-------------------|-------|-----------------|
|                    | Range             | Unit  | Factory Setting | Range             | Unit  | Factory Setting | Range             | Unit  | Factory Setting | Range             | Unit  | Factory Setting |
| <b>C3-1500-122</b> | 0~17.5            | 0.01V | 11.75V          | 0~17.5            | 0.01V | 16.0V           | 0~29.3            | 0.01A | 1.66A           | 0~17.5            | 0.01V | 11.75V          |
| <b>C3-3000-122</b> | 0~17.5            | 0.01V | 11.75V          | 0~17.5            | 0.01V | 16.0V           | 0~42.6            | 0.01A | 3.32A           | 0~17.5            | 0.01V | 11.75V          |
| <b>C3-1500-242</b> | 0~35.0            | 0.01V | 23.5V           | 0~35.0            | 0.01V | 32.0V           | 0~29.3            | 0.01A | 1.66A           | 0~35.0            | 0.01V | 23.5V           |
| <b>C3-3000-242</b> | 0~35.0            | 0.01V | 23.5V           | 0~35.0            | 0.01V | 32.0V           | 0~42.6            | 0.01A | 3.32A           | 0~35.0            | 0.01V | 23.5V           |
| <b>C3-1500-121</b> | 0~17.5            | 0.01V | 11.75V          | 0~17.5            | 0.01V | 16.0V           | 0~44.75           | 0.01A | 3.18A           | 0~17.5            | 0.01V | 11.75V          |
| <b>C3-3000-121</b> | 0~17.5            | 0.01V | 11.75V          | 0~17.5            | 0.01V | 16.0V           | 0~83.0            | 0.01A | 6.37A           | 0~17.5            | 0.01V | 11.75V          |
| <b>C3-1500-241</b> | 0~35.0            | 0.01V | 23.5V           | 0~35.0            | 0.01V | 32.0V           | 0~44.75           | 0.01A | 3.18A           | 0~35.0            | 0.01V | 23.5V           |
| <b>C3-3000-241</b> | 0~35.0            | 0.01V | 23.5V           | 0~35.0            | 0.01V | 32.0V           | 0~83.0            | 0.01A | 6.37A           | 0~35.0            | 0.01V | 23.5V           |

| Constant<br>Model  | E2-05,E4-05,E6-05 |       |                 |
|--------------------|-------------------|-------|-----------------|
|                    | Range             | Unit  | Factory Setting |
| <b>C3-1500-122</b> | 0~17.5            | 0.01V | 16.0V           |
| <b>C3-3000-122</b> | 0~17.5            | 0.01V | 16.0V           |
| <b>C3-1500-242</b> | 0~35.0            | 0.01V | 32.0V           |
| <b>C3-3000-242</b> | 0~35.0            | 0.01V | 32.0V           |
| <b>C3-1500-121</b> | 0~17.5            | 0.01V | 16.0V           |
| <b>C3-3000-121</b> | 0~17.5            | 0.01V | 16.0V           |
| <b>C3-1500-241</b> | 0~35.0            | 0.01V | 32.0V           |
| <b>C3-3000-241</b> | 0~35.0            | 0.01V | 32.0V           |

**NOTE 4:**

| Parameter | Setting | LCD Display         |
|-----------|---------|---------------------|
| O1-01=    | 0       | AC IN Voltage       |
|           | 1       | AC IN Current       |
|           | 2       | AC OUT Voltage      |
|           | 3       | AC OUT Current      |
|           | 4       | Battery Voltage     |
|           | 5       | Battery Ripple Volt |
|           | 6       | Battery Current     |
|           | 7       | Control Mode        |
|           | 8       | Operation Status    |
|           | 9       | Aux-Relay Status    |
|           | 10      | Elapsed Time        |
|           | 11      | Bat.Temp.Sensor     |
|           | 12      | CPU ID 1            |
|           | 13      | CPU ID 2            |

A1-04=Password 1

**Lock the constants setting (A1-01=1)**

1. Finish setting all the programmable parameters to desired values.
2. Change A1-01=0 (Operation only), factory setting is A1-01=1 (Constants set).
3. Go to A1-04 and press RUN/STOP key and UP key at the same time till A1-05 parameter occurs.
4. Enter the desired password (max. 4 digits)
5. Press UP key to leave A1-05

Above procedure completes locking the constants setting and no more programming selection would appear. A1-01 would only display 0 (Operation only) and would not display 1 (Constants set).

**Unlock the constants setting**

1. Enter the password in A1-04 to be exactly the same as the one earlier set in A1-05
2. When the password in A1-04 matches the one earlier set in A1-05, the unlocking is completed. A1-01=1 (Constants set) would appear again for programming.

## Chapter 6 Programming Constants

A Group (Initialize):

A1 Group (Initialize)

### A1-01: Access level

- Use constant A1-01 to select the user constant access level.  
This level determines which user constants can be changed and displayed.

| Setting                      | Function   |
|------------------------------|--|
| A1-01=0                      | This setting allows the “operation” and “initialize” to be changed or displayed.<br>Use this setting to prevent user constant settings from being changed. |
| A1-01=1<br>(Initial setting) | This setting allows all user constants to be changed or displayed.   |

### A1-02: Select Language

- Use constant A1-02 to select the language displayed by the Combi 3. A value of 0 set English and values of others set other language.
- This user constant is not returned to factory setting when constants are initialized. It must be manually reset to factory setting.

| Setting                      | Function                    |
|------------------------------|-----------------------------|
| A1-02=0<br>(Initial setting) | English language            |
| A1-02=1                      | Reserved, under development |
| A1-02=2                      | Reserved, under development |
| A1-02=3                      | Reserved, under development |
| A1-02=4                      | Reserved, under development |
| A1-02=5                      | Reserved, under development |
| A1-02=6                      | Reserved, under development |

### A1-03: Init Parameters

- Use constant A1-03 to initialize the user constants.
- When initialized, the user constants will return to their factory preset values. You should normally record the setting of any constants that are changed from factory presets.

| Setting                      | Function   |
|------------------------------|--|
| A1-03=0<br>(Initial setting) | Returns to initialize Display without initializing any user constants. |
| A1-03=1                      | Initializes the user constants to factory settings.                    |

#### **A1-04: Init Password 1**

- This constant is reserved for the factory to test and set the functions.
- Users are not allowed to set this constant.

#### **Lock the constants setting (A1-01=1)**

1. Finish setting all the programmable parameters to desired values.
2. Change A1-01=0 (Operation only), factory setting is A1-01=1 (Constants set).
3. Go to A1-04 and press RUN/STOP key and UP key at the same time till A1-05 parameter occurs.
4. Enter the desired password (max. 4 digits)
5. Press UP key to leave A1-05

Above procedure completes locking the constants setting and no more programming selection would appear. A1-01 would only display 0 (Operation only) and would not display 1 (Constants set).

#### **Unlock the constants setting**

1. Enter the password in A1-04 to be exactly the same as the one earlier set in A1-05
2. When the password in A1-04 matches the one earlier set in A1-05, the unlocking is completed. A1-01=1 (Constants set) would appear again for programming.

## B Group (General):

### B1 Group (Output Frequency)

#### B1-01: Output frequency

- B1-01 is used to set the output frequency at INVERTER AC output

| Setting                      | Function                   |
|------------------------------|----------------------------|
| B1-01=0<br>(Initial setting) | 50Hz at INVERTER AC output |
| B1-01=1                      | 60Hz at INVERTER AC output |

- B2-08: AC IN Frequency Range

| Setting                      | Function  |
|------------------------------|---|
| B2-08=0                      | When B1-01=0: Acceptable AC input frequency is 50Hz $\pm$ 5Hz (45~55Hz) |
|                              | When B1-01=1: Acceptable AC input frequency is 60Hz $\pm$ 5Hz (55~65Hz) |
| B2-08=1<br>(Initial setting) | Accept wide AC input frequency range between 45~65Hz                    |

### B2 Group (Auto Transfer Switch)

#### B2-01: AC IN Low Disconnect

- Use constant B2-01 to determine the AC IN voltage below which level the ATS (Auto Transfer Switch) will switch off.
- This voltage level will always lie below the AC IN Low Connect (B2-02) level. In fact, changing this level will also change the AC IN Low Connect (B2-02) level.

#### B2-02: AC IN Low Connect

- This setting forms a pair with AC IN Low Disconnect (B2-01). With this setting, one determines the AC IN low voltage at which level the ATS will switch on. This should lie above AC IN Low Disconnect (B2-01) level to prevent continuous switching off the ATS when the voltage is fluctuating around the level.
- In fact, the parameter which is changed is the difference between AC IN Low Disconnect (B2-01) and AC IN Low Connect (B2-02).
- The result of this is that when changing B2-01 level, this level (B2-02) also changes.  
Note: B2-02 can be ignored for a short time when AC IN Waveform Check (B2-06) is



disabled (B2-06=0)

- When the AC IN voltage drops due to the increasing charge current, the AC CHARGER will take care that the voltage does not drop below this level.
- $B2-02 = B2-01 + \text{offset voltage}$   
For example: C3-1500-122, when  $B2-01 = 180V$ ,  $B2-02 = 187V$ , offset voltage =  $7V$  ( $187 - 180$ ),  $B2-02$  will automatically go to  $197V(190 + 7)$  after  $B2-01$  is changed to  $190V$ .

#### **B2-03: AC IN High Connect**

- This setting forms a pair with AC IN High Disconnect (B2-04). With this setting, one determines the AC IN high voltage at which level the ATS will switch on. This should lie below the AC IN High Disconnect (B2-04) level to prevent continuous switching of the ATS when the voltage is fluctuating around that level.
- In fact, the parameter which is changed is the difference between AC IN High Disconnect (B2-04) and AC IN High Connect (B2-03).
- The result of this is that when changing B2-04 level, this level (B2-03) also changes.
- $B2-03 = B2-04 - \text{offset voltage}$   
For example: C3-1500-122, when  $B2-03 = 265V$ ,  $B2-04 = 270V$ , offset voltage =  $5V$  ( $270 - 265$ ),  $B2-03$  will automatically go to  $255V(260 - 5)$  after  $B2-04$  is changed to  $260V$ .

#### **B2-04: AC IN High Disconnect**

- Use constant B2-04 to determine the AC IN voltage above which level the ATS will switch off.
- This voltage level will always lie above the AC IN High Connect (B2-03) level. In fact, changing this level will also change the AC IN High Connect (B2-03) level.

#### **B2-05: AC IN Current Limit**

- Use constant B2-05 to set the specific maximum AC input current. This value is very important for both battery charger and inverter output power assist.
- When using constant B2-05, the values determine the actual AC current limit.  
Note: With Power Support enabled, there is a minimum value for the AC input current limit.  
Please see the note at Power Support (page 6-9).

#### **B2-06: AC IN Waveform Check**

- Use constant B2-06 to enable/disable the fast detection of input voltage wave shape.

| Setting                                  | Function  |
|--|---|
| B2-06=0<br>(Ignore)                      | <ul style="list-style-type: none"> <li>By disabling AC IN waveform check, <u>AC IN Low Disconnect</u> (B2-01) is ignored. When the load current is higher 1.5 times than <u>AC In Current Limit</u> (B2-05), this is used to prevent unnecessary switching to INVERTER due to voltage drop when a high load is connected.</li> </ul>  |
| B2-06=1<br>(Initial setting)<br>(Active) | <ul style="list-style-type: none"> <li>This detection checks the wave shape, if it is not sinusoidal within certain limits, the AC input voltage is rejected.</li> <li>However, certain generator or very weak mains supply have an ill shaped sinusoidal output especially when the load suddenly changes. The fast detection will detect a failure in such a case.</li> <li>This will result in a slightly longer transfer time.</li> </ul> |

#### **B2-07: Ground Relay**

- Used to enable/disable the internal ground relay functionality. The ground relay is useful when an earth-leakage circuit-breaker is part of the installation.
- When ATS (Auto Transfer Switch) is open (INVERTER mode), the Neutral of the inverter is connected to “G” terminal.
- When ATS closes (AC IN is transferred to AC OUT), the Neutral is first disconnected from “G” terminal.

| Setting                      | Function   |
|------------------------------|--|
| B2-07=0                      | The internal ground relay is open with “G” terminal.   |
| B2-07=1<br>(Initial setting) | The internal ground relay is closed with “G” terminal. |

#### **B2-08: AC IN Frequency Range**

Refer to page 6-3 (B1-01)

#### **B2-09: AC IN Dynamic Current Limit**

- This setting is an expansion of the AC IN Current Limit (B2-05) mechanism.

| Setting                      | Function  |
|------------------------------|---|
| B2-09=0<br>(Initial setting) | <ul style="list-style-type: none"> <li>The AC current limit is specified by the <u>AC IN Current Limit</u> (B2-05) setting</li> </ul> |

|         |   |
|---------|---|
| B2-09=1 | <ul style="list-style-type: none"> <li>● The effective AC input current limit depends on the load history. When the load is lower than the <u>AC IN Current Limit</u> (B2-05), the effective AC input current limit is also lower but slightly above the load.</li> <li>● When the load increase, the effective current limit also increases with a delay. The thought behind this is that when a generator is running at a low load, it can't switch to full load immediately and it needs some time to increase the power.</li> </ul> |
|---------|---|

An example:

- We have a 2KVA generator.  
We adjust the AC IN Current Limit (B2-05) setting to 8A and we enable Power Assist (C1-05=1). We have no load connected and the batteries are fully charged. Therefore, no current from generator is drawn.
- At this moment, we connect a load of 7A to the Combi 3 with this setting (B2-09) disabled, the Combi 3 would not react because the load is below the AC IN Current Limit (B2-05) setting. The result is that the full load is connected to generator which will drop in voltage because it can't deliver that current instantly which could result in switching to INVERTER.
- If however we had this setting (Dynamic Current Limit) enabled, the effective AC input current limit would be far lower than 8A because the load was zero. So connecting a load of 7A will result in Combi 3 starting to power assist and no voltage drop is being examined on the AC OUT. The generator starts to supply the load and the effective AC input current limit will increase to 8A slowly. At the moment, the Combi 3 will stop Power Assist and the full load is on the generator.
- This is powerful option in combination with Power Assist but even without Power Assist, it can prevent unnecessary switching to INVERTER because the charge current will reduce when AC input current becomes higher than the effective AC input current limit.

**B2-14: INV only: Bat Lo?V ATS ON**  
**B2-15: INV only: Bat Lo?S ATS ON**  
**B2-16: INV only: Bat Hi?V ATSOFF**  
**B2-17: INV only: Bat Lo?S ATSOFF**

- B2-14~B2-17 are used to set the condition of ATS to be ON/OFF in INVERTER Only mode.
- When Combi 3 is in INVERTER Only mode, INVERTER mode takes priority to supply voltage to AC OUT for load consumption. When AC IN power is ready, INVERTER is active and battery is about to be exhausted, ATS will be switched on to ensure AC OUT to

continuously supply the load. At the moment, AC OUT will be supplied by AC IN power.

- B2-14 and B2-15 are used to set ATS to be “ON” to supply AC IN power to the AC OUT load when the battery voltage is lower than B2-14 voltage value and longer than the second time set in B2-15 in INVERTER Only mode.  
(ATS ON+INVERTER OFF+AC CHARGER OFF)
- B2-16 and B2-17 are used to set ATS to be “OFF” when the battery voltage is higher than B2-16 voltage value and longer than the second time set in B2-17 in INVERTER Only mode.  
(INVERTER ON+ATS OFF+ AC CHARGER OFF)

#### **B2-18: AUTO1: ACIN Current Lmt**

- Use constant B2-18 to set the specific maximum AC input current in AUTO 1. This value is very important for both battery charger and inverter output power assist.
- When using constant B2-18, the values determine the actual AC current limit.

#### **B2-19: AUTO2: ACIN Current Lmt**

- Use constant B2-19 to set the specific maximum AC input current in AUTO 2. This value is very important for both battery charger and inverter output power assist.
- When using constant B2-19, the values determine the actual AC current limit.

#### **B2-20: INV only: ACIN Current Lmt**

- Use constant B2-20 to set the set the specific maximum AC input current in INVERTER ONLY. This value is very important for both battery charger and inverter output power assist.
- When using constant B2-20, the values determine the actual AC current limit.

#### **B2-21: CHG only: ACIN Current Lmt**

- Use constant B2-21 to set the set the specific maximum AC input current in CHARGER ONLY. This value is very important for both battery charger and inverter output power assist.
- When using constant B2-21, the values determine the actual AC current limit.

C Group (INVERTER):  
C1 Group (INVERTER)

#### **C1-01: INVERTER Output Voltage**

- Use constant C1-01 to change the RMS output voltage of the INVERTER.

#### **C1-02: Bat Low ?V Shut-down**

- With this setting, one can determine the battery voltage at which level the INVERTER will switch off. This can be useful to prevent drawing too much current from an exhausted battery.
- This voltage level will always lie below the Bat Low ? V Restart (C1-03) level. In fact, changing this level will also change the Bat Low ? V Restart (C1-03) level.
- $C1-03 = C1-02 + \text{offset voltage}$   
For example: C3-1500-122, when  $C1-02 = 9.3V$ ,  $C1-03 = 10.9V$ , offset voltage =  $1.6V$  ( $10.9 - 9.3$ ),  $C1-03$  will automatically go to  $11.6V$  ( $10.0 + 1.6$ ) after  $C1-02$  is changed to  $10.0V$ .

#### **C1-03: Battery Low ? V Restart**

- This setting forms a pair with Bat Low ? V Shut-down (C1-02). With this setting, one determines the battery voltage at which level the INVERTER will switch on.
- In fact, the parameter which is changed is the difference between Bat Low ? V Shut-down (C1-02) and Bat Low ? V Restart (C1-03). The result of this is that when changing the Bat Low ? V Shut-down (C1-02) level, this level also changes.

#### **C1-04: Auto Power Saving**

- When there is no load connected, set  $C1-04 = 1$  (Initial setting) to active the power saving function by reducing the output voltage to be 144V for 220V model and to be 72 for 110V model.
- Setting  $C1-04 = 0$  can disable the auto power saving and the output voltage would be continuously supplied as the same default voltage even when there is no load connected.

#### **C1-05: Power Assist Select**

- Using this constant C1-05, the Power Assist feature can be enabled or disabled. Use Power Assist to prevent an external circuit breaker to trip when the load on the Combi 3 is too high.

- If the load exceeds the AC IN Current Limit (B2-05), the Combi 3 will start inverting and will provide the extra current needed.

Note: When Power Assist is enabled. C1-05=1 (Initial setting), there is a minimum AC input current limit of approximate 2-3 Amps. Setting a lower limit (B2-05) than this minimum value will result in the minimum limit.

| Setting                      | Function                           |
|------------------------------|------------------------------------|
| C1-05=0                      | Power Assist Function is disabled. |
| C1-05=1<br>(Initial setting) | Power Assist Function is enabled.  |

### **C1-06: Power Assist Level**

- This setting is a special setting for power assist mode when the Combi 3 is charging and due to a sudden load, the AC IN current exceeds the AC IN Current Limit (B2-05), the Combi 3 will switch to power assist mode (when C1-05=1)
- At that moment, the current need is unknown. The Combi 3 makes an assumption of the magnitude of this current. This assumption is equal to AC IN Current Limit (B2-05) multiplied by this Power Assist Level (C1-06). The default factor is two.
- This will prevent the circuit breaker from tripping because current provided by the INVERTER minus the current drawn by the load is always lower than the rating of the circuit breaker. This happens, of course, when the AC IN Current Limit (B2-05) is correctly adjusted to the circuit breaker.
- If for instance in a generator application, the circuit breaker has a higher value than the AC IN Current Limit (B2-05) (Normal load of generator is lower than maximum peak load) and one knows that the load which is switched on always draws a certain current, one can consider to increase this factor (C1-06) to achieve better results with sudden load changes.


## D Group (AC CHARGER):

### D1 Group (Charger)

#### D1-02: Charge Curve

| Setting                      | Function                |
|------------------------------|-------------------------|
| D1-02=1                      | Fixed                   |
| D1-02=2                      | Adaptive                |
| D1-02=3<br>(Initial setting) | Adaptive + Battery safe |

- The Fixed (D1-02=1) charge curve will have a fixed Absorption Time (D1-06).
- The Adaptive (D1-02=2) and Adaptive + Battery safe (D1-02=3) curve derive the Absorption time from the Bulk time. The maximum Absorption time of these charge curves is determined by Absorption Time (D1-06) setting.
- The Adaptive + Battery safe (D1-02=3) curve has a special regulation in the absorption phase. The absorption phase will start when the battery voltage reaches 14.4V( for 12V batteries) regardless of the specified Absorption Voltage (D1-03). During the absorption phase, the voltage will increase with a fixed ramp until the voltage reaches the absorption voltage or the calculated absorption time is over in the latter case, the absorption phase will end before the absorption voltage is reached.

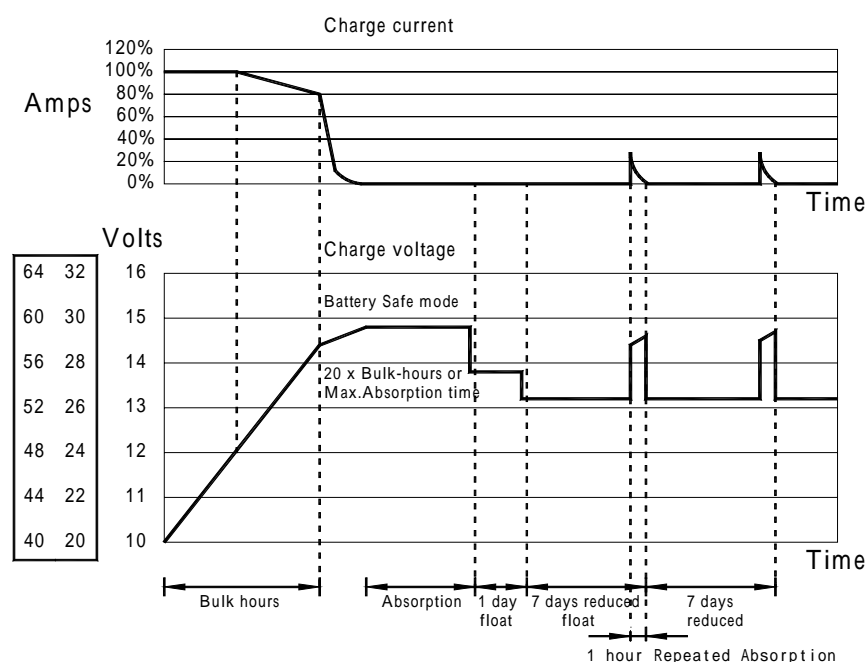

### **D1-03: Absorption Voltage**

- Use this setting to specify the absorption voltage.

### **D1-04: Repeated Absorption Time**

- Use this setting to specify the duration of the repeated absorption “pulses”.

### **D1-05: Repeated Absorption Interval**

- Use this setting to specify the interval between repeated absorptions.

### **D1-06: Maximum Absorption Time**

- If the Charge Curve is fixed (D1-02=1), then this setting is used to determine the absorption time.
- In all other cases, this setting determines the maximum absorption time.

### **D1-07: Float Voltage**

- Use this setting to specify the float voltage.

### **D1-08: Charge Current**

- Use this setting to specify the current with which the battery is charged in the bulk phase.  
Note: The actual charge current depends on other conditions also. Therefore, under certain circumstances, it is possible that the actual charge current is lower than this setting. This can, among others, be due to:
  - A low AC IN Current Limit (B2-05) in combination with a high load.
  - A high environmental temperature
  - A too high ripple voltage due to improper cabling.

### **D1-09: Stop After 10Hr Bulk**

- This is a safety setting. When the bulk phase lasts more than 10 hours, this can be indication that a battery cell is damaged.
- The absorption voltage (or the 14.4V for battery when Battery Safe (D1-02=3) mode is used) will never be reached in that case and the other cells will be over-charged resulting in the



production of an explosive gas.

- Therefore, the charger is disabled if the bulk phase lasts more than 10 hours.
- This setting can be disabled because it does not always indicate a problem when the bulk phase lasts very long. The charge current can be very low due to limited AC input current and/or AC loads. Also, DC loads can “steal away” part of the charge current. In that case, the bulk phase will need more time to complete and this setting must be disabled.

Note: When this setting is disabled, there is no safety check against over-charging.

| Setting                      | Function  |
|------------------------------|---|
| D1-09=0                      | <u>Stop After 10Hr Bulk</u> setting is disabled |
| D1-09=1<br>(Initial setting) | <u>Stop After 10Hr Bulk</u> setting is enabled  |

#### **D1-10: Equalize Mode Select (Storage Mode Select)**

- This setting is used for enabling/disabling the Equalize Mode.
- In this mode, the voltage setpoint is 13.2V (for 12V battery). If Equalize mode is disabled, then the normal float voltage will be used.

| Setting                      | Function                  |
|------------------------------|---------------------------|
| D1-10=0                      | Equalize mode is disabled |
| D1-10=1<br>(Initial setting) | Equalize mode is enabled  |

## E Group (Auxiliary Relay):

### E1 Group (Setting Aux-Relay 1 ON Condition)

#### **E1-01: LOAD Higher than ? Amps**

#### **E1-02: LOAD Higher for ? sec**

- Use these settings to switch the Aux-Relay 1 ON. When the actual AC OUT load is above a certain value (E1-01) for a certain time (E1-02).
- The corresponding Aux-Relay 1 OFF condition is  
E2-01: Load Lower than ? Amps and  
E2-02: Load Lower for ? sec.

Note: If setting E1-02=0 sec (Initial setting). Then the E1-01 is ignored.

Note: If setting E2-02=0 sec (Initial setting). Then the E2-01 is ignored.

#### **E1-03: Udc Lower than ? Voltage**

#### **E1-04: Udc Lower for ? sec**

- Use these settings to switch the Aux-Relay 1 ON. When battery voltage becomes lower than a certain limit (E1-03) for a certain time (E1-04).

Note: If E1-04=0 sec (Initial setting), then E1-03 is ignored.

#### **E1-05: Udc Higher than ? Voltage**

#### **E1-06: Udc Higher for ? sec**

- Use these settings to switch the Aux-Relay 1 ON when battery voltage becomes higher than a certain limit (E1-05) for a certain time (E1-06).

Note: If E1-06=0 sec (Initial setting), then E1-05 is ignored.

#### **E1-07: Not Charge for ? sec**

- Use this setting to switch on the Aux-Relay 1 when the AC CHARGER is not charging for a certain time (E1-07).
- Normally used for generating an alarm situation.

#### **E1-08: Fan ON for ? sec**

- This will switch the Aux-Relay 1 ON when the internal fan switches on. This can be used together with the E2-08: Fan OFF for ? sec setting to drive an external fan.

**E1-09: When bulk protection is activated.**

- This will set the Aux-Relay1 ON when the “bulk protection” (D1-09=1) is activated. This condition will remain valid as long as the AC CHARGER is disabled due to that safety mechanism. One can use this setting to generate an alarm.

**E1-10: System Fault Occurs**

- This will switch on the Aux-Relay 1 when the Combi 3 switches off due to an internal alarm situation.

**E1-11: Temp. Alarm Select (When E1-12=0, ignore this setting)****E1-12: Temp. Alarm for ? sec**

- If you want to switch on the Aux-Relay 1 when there is a over temperature alarm, this setting (E1-11) can be used to choose between pre-alarm or normal alarm.
- As with other Aux-Relay 1 settings, a delay value (E1-12) must be specified also. This can be done with Delay value for set Aux-Relay 1 ON when over temperature alarm (E1-12) setting.

**E1-13: Low Batt. Alarm Select (When E1-14=0, ignore this setting)****E1-14: Low Batt. Alarm for ? sec**

- If you want to switch on the Aux-Relay 1 when there is a low battery alarm, this setting (E1-13) can be used to choose between pre-alarm or normal alarm.
- As with other Aux-Relay 1 settings, a delay value (E1-14) must be specified also. This can be done with Delay value for set Aux-relay 1 ON when low battery alarm (E1-14) setting.

**E1-15: OverLoad Alarm Select (When E1-16=0, ignore this setting)****E1-16: OverLoad Alarm for ? sec**

- If you want to switch on the Aux-Relay 1 when there is a overLoad alarm, this setting (E1-15) can be used to choose between pre-alarm or normal alarm.
- As with other Aux-Relay 1 setting, a delay value (E1-16) must be specified also. This can be done with Delay value for set Aux-Relay 1 ON when overload alarm (E1-16) setting.

**E1-17: Udc Ripple Alarm Select (When E1-18=0, ignore this setting)****E1-18: Udc Ripple Alarm for ? sec**

- If you want to switch on the Aux-Relay 1 when there is a battery voltage ripple alarm. This setting (E1-17) can be used to choose between pre-alarm or normal alarm.
- As with other Aux-Relay 2, setting a delay value (E1-18) must be specified also. This can be done with Delay value for set Aux-Relay 1 ON when battery voltage ripple alarm (E1-18) setting.

## E2 Group (Setting Aux-Relay 1 OFF Condition)

### **E2-01: Load Lower than ? Amps**

### **E2-02: Load Lower for ? sec**

- Use these settings to switch Aux-Relay 1 OFF. When the actual AC OUT Load is below a certain value (E2-01) for a certain time (E2-02).
- The corresponding Aux-Relay ON condition is  
E1-01: Load Higher than ? Amps and  
E1-02: Load Higher for ? sec.

Note: If setting E2-02 (E1-02)=0 sec (Initial setting), then the E2-01 (E1-01) is ignored.

### **E2-03: Udc Lower than ? Voltage**

### **E2-04: Udc Lower for ? sec**

- Use these settings to switch off the Aux-Relay 1 when battery voltage becomes lower than a certain limit (E2-03) for a certain time (E2-04)

Note: If E2-04=0 sec (Initial Setting), then E2-03 is ignored.

### **E2-05: Udc Higher than ? Voltage**

### **E2-06: Udc Higher for ? sec**

- Use these settings to switch off the Aux-Relay 1 when battery voltage becomes higher than a certain limit (E2-05) for a certain time (E2-06)

Note: If E2-06=0 sec (Initial setting), then E2-05 is ignored.

### **E2-07: Charging for ? sec**

- This setting switches the Aux-Relay 1 OFF when the AC CHARGER started for a certain time (E2-07). This can be useful when the Aux-Relay 1 is for instance used a low battery alarm.
- Use the Set Udc Lower than ? Voltage (E1-03) setting to start the alarm and use this setting (E2-07) to stop it.

Note: As long as the battery voltage is lower than the specified limit (E1-03), the alarm will be active.

#### **E2-08: Fan OFF for ? sec**

- This will switch the Aux-Relay 1 OFF when the internal fan switches off. This can be used together with the E1-08: Fan ON for ? sec setting to drive an external fan.

#### **E2-09: Charge finished for ? Min (When E2-09=0, ignore this setting)**

- This condition becomes active when the charge bulk phase is finished for a certain time (E2-09).
- For the charge curve, take a look at for instance the Charge Current (D1-08) setting.
- This is useful when the Aux-Relay 1 is used to start a generator. Once started, one might want to keep the generator on until the batteries are more or less charged.

#### **E2-10: Aux-Relay 1 not ON for ? minutes (When E2-10=0, ignore this setting)**

- If one does not need special off condition, one can use this setting and the Aux-Relay 1 will switch off automatically when there has been no ON condition for a certain time (E2-10).

#### **E2-11: AC IN loss for ? sec (When E2-11=0, ignore this setting)**

- This setting will switch off Aux-Relay1 if the RMS value of AC IN voltage is too low for a certain time (E2-11).
- This AC level is determined by the AC IN Low Disconnect (B2-01) setting.
- Use this setting (E2-11) to disable re-starting of a generator which is switched off by hand when the Aux-Relay 1 is used to generate a start signal for that generator.

#### **E2-12: No Temp. Alarm Select (When E2-13=0, ignore this setting)**

#### **E2-13: No Temp. Alarm for ? sec**

- If you want to switch off the Aux-Relay 1 when there is no over temperature alarm, this setting (E2-12) can be used to choose between pre-alarm or normal alarm.
- As with other Aux-Relay 1 setting, a delay value must be specified also. This can be done with the Delay value for set Aux-Relay 1 OFF when No Overtemperature Alarm (E2-13) setting.

**E2-14: No Low Batt. Alarm Select (When E2-15=0, ignore this setting)**

**E2-15: No Low Batt Alarm for ? sec**

- If you want to switch off the Aux-Relay 1 when there is no low battery alarm, this setting (E2-14) can be used to choose between pre-alarm or normal alarm.
- As with other Aux-Relay 1 setting, a delay must be specified also. This can be done with the Delay value for set Aux-Relay 1 OFF when No Low Battery Alarm (E2-15) setting.

**E2-16: No OverLoad Alarm Select (When E2-17=0, ignore this setting)**

**E2-17: No OverLoad Alarm for ? sec**

- If you want to switch off the Aux-Relay 1 when there is no OverLoad alarm, this setting (E2-16) can be used to choose between pre-alarm or normal alarm.
- As with other Aux-Relay 1 setting, a delay must be specified also. This can be done with the Delay value for set Aux-Relay 1 OFF when No OverLoad Alarm (E2-17) setting.

**E2-18: No Udc Ripple Alarm Select (When E2-19=0, ignore this setting)**

**E2-19: No Udc Ripple Alarm for ? sec**

- If you want to switch off the Aux-Relay 1 when there is no battery voltage ripple alarm, this setting (E2-18) can be used to choose between pre-alarm or normal alarm.
- As with other Aux-Relay 1 setting, a delay must be specified also. This can be done with the Delay value for set Aux-Relay 1 OFF when No Battery voltage Ripple Alarm (E2-19) setting.

E3 Group (Setting Aux-Relay 2 ON Condition)

E4 Group (Setting Aux-Relay 2 OFF Condition)

E5 Group (Setting Aux-Relay 3 ON Condition)

E6 Group (Setting Aux-Relay 3 OFF Condition)

Note: The functions and the settings of E3, E4, E5 and E6 Groups are exactly the same as those of E1 and E2 Group so please refer to above E1 and E2 Group description and setting for E3, E4, E5 and E6 Groups.

## E7 Group (Aux-Relay 1 Option)

### **E7-01: Aux-Relay 1 Usage Select**

| Setting                      | Function  |
|------------------------------|---|
| E7-01=0<br>(Initial setting) | Auxiliary Relay 1 is not allowed to be active (Idle). |
| E7-01=1                      | Auxiliary Relay 1 is allowed to be active.            |

### **E7-02: Aux-Relay 1 Invert Select**

| Setting                      | Function  |
|------------------------------|---|
| E7-02=0<br>(Initial setting) | Auxiliary Relay 1 is normal.  |
| E7-02=1                      | Auxiliary Relay 1 is Invert switch and that is ON becomes off and OFF becomes ON. |

- This is used to invert the Aux-Relay 1 So ON becomes OFF and OFF becomes ON. In the program, the labels are adapted to reflect this inversion.

### **E7-03: Aux1 not Switch Off Time (Aux-Relay 1 do not switch off with certain period)**

- Use constant E7-03 to determine the minimum ON time.
- The Aux-Relay 1 will not be switched off within the time specified here measured from the moment that all on condition are inactive.

Note: OFF conditions with a delay of 0 minute, ignore this setting.

## E8 Group (Aux-Relay 2 Option)

## E9 Group (Aux-Relay 3 Option)

The functions and the settings of E8 and E9 Groups are exactly the same as those of E7 Group so please refer to above E7 Group description and setting for E8 and E9 Groups.

O Group (Operator):  
O1 Group (Monitor Select)

#### **O1-01: Power ON LCD Monitor Select**

- After power of the Combi 3 is on, the monitor selections will be showed on LCD Display, U1-05 Battery Voltage is the initial display shown.
- All the constants in U1 Group (U1-01~U1-14) can be monitored.

#### **O1-02: Key Idle Detect Time**

- Use constant O1-02 to set the idle time when the keyboard is not operated and once any key is pressed, the display will return to the LCD monitor selection value set in constant O1-01.
- Initial Setting=180 sec, setting range: 10~600 sec.

O2 Group (Key Selections)

#### **O2-01: Key Pressed Beep Select**

| Setting                      | Function   |
|------------------------------|--|
| O2-01=0                      | When keys are pressed, beep sound will not be heard. |
| O2-01=1<br>(Initial setting) | When keys are pressed, beep sound will be heard.     |

#### **O2-02: Elapsed Time Reset**

- Use constant O2-02 to reset elapsed time.

#### **O2-03: Elapsed Time Select**

| Setting                      | Function  |
|------------------------------|---|
| O2-03=0<br>(Initial setting) | The elapsed time started to be counted after power is on. |
| O2-03=1                      | The elapsed time started to be counted after RUN.         |

#### **O2-04: Combi 3 Model**

- This is the model number to be displayed.



#### **O2-06: MODE Key Hold Time**

- Use constant O2-06 to set the time it takes to press MODE key to transfer from one of four modes to another mode. (This has to be done in STOP mode)
- Initial setting=5 sec, setting range: 2~10 sec.

#### **O2-07: RUN/STOP Key Hold Time**

- Use constant O2-07 to set the time it takes to press RUN/STOP key to activate its function.
- Initial setting=2 sec, setting range: 2~10 sec.

#### **O2-08: Power ON Auto Run Select**

- Use constant O2-08 to select to auto run manually or automatically.

| Setting                      | Function                                      |
|------------------------------|---|
| O2-08=0                      | Auto Run is active when pressing Run/STOP key |
| O2-08=1<br>(Initial setting) | Auto Run is active when the power is on.      |

#### **O2-09: LCD Display Idle Time Set**

- When O2-09=0, Display Idle Function is disabled.
- Use constant O2-09 to set the idle time when the keypad is not operated and all the LCD Display and LED Indicators of the Combi 3 entering the idle mode which only RUN/STOP indicator is active.
- Once any key on the panel is pressed, it will return to the display before Idle status.
- Initial setting=10 min, setting range: 0~60 min.

U Group (Monitor):

U1 Group (Monitor)

#### **U1-01: AC IN Voltage**

- Use U1-01 to monitor the current voltage value of AC IN power in unit of 0.1V.

#### **U1-02: AC IN Current**

- Use U1-02 to monitor the current value of AC IN power in unit of 0.1A.

#### **U1-03: AC OUT Voltage**

- Use constant U1-03 to monitor AC OUT voltage value in unit of 0.1V.

#### **U1-04: AC OUT Current**

- Use constant U1-04 to monitor AC OUT current value in unit of 0.1A.

#### **U1-05: Battery Voltage**

- Use constant U1-05 to monitor the battery voltage in unit of 0.1V.

#### **U1-06: Battery Ripple Voltage**

- Use constant U1-06 to monitor the battery ripple voltage in unit of 0.1V.

#### **U1-07: Battery Current**

- Use constant U1-07 to monitor battery current value in unit of 0.1A.

#### **U1-08: Control Mode**

- Use constant U1-08 to monitor the current control mode (AUTO 1, AUTO 2, Inverter Only or Charger Only)

#### **U1-09: Operation Status**

- There are 12 digits to account for each operation status. Please see NOTE 1 in Chapter 5.

#### **U1-10: Aux-Relay Status**

- Use constant U1-10 to monitor the ON/OFF status of 3 sets of Aux-Relay (RY1, RY2, RY3). Please see NOTE 2 in Chapter 5.

#### **U1-11: Elapsed Time**

- Use constant U1-11 to monitor the elapsed time after power ON (O2-03=0) or after RUN (O2-03=1) in unit of 1 hour.

#### **U1-12: Battery Temperature Sensor**

- Use constant U1-12 to monitor the temperature that has been detected by Battery Temperature Sensor (BTS-3) in unit of 1 °C.

#### **U1-13: CPU ID1**

- Use constant U1-13 to check the software version 1.

#### **U1-14: CPU ID2**

- Use constant U1-14 to check the software version 2.

## U2 Group (Fault Trace)

### U2-01: Current Fault

- Use constant U2-01 to monitor the current fault that results in “Combi 3” stopping operating.

### U2-02: Last Fault

- Use constant U2-02 to monitor the last fault that has been recorded.

### U2-03: AC IN Voltage

- Use constant U2-03 to monitor the AC input voltage value in unit of 0.1V when the current fault occurs.

### U2-04: AC IN Current

- Use constant U2-04 to monitor the AC input current value in unit of 0.1A when the current fault occurs.

### U2-05: AC OUT Voltage

- Use constant U2-05 to monitor the AC output voltage value in unit of 0.1V when the current fault occurs.

### U2-06: AC OUT Current

- Use constant U2-06 to monitor the AC output current value in unit of 0.1A when the current fault occurs.

### U2-07: Battery Voltage

- Use constant U2-07 to monitor the battery voltage value in unit of 0.1V when the current fault occurs.

### U2-08: Battery Ripple Volt

- Use constant U2-08 to monitor the battery ripple voltage in unit of 0.1V when the current fault occurs.

#### **U2-09: Battery Current**

- Use constant U2-09 to monitor the battery current value in unit of 0.1A when the current fault occurs.

#### **U2-10: Control Mode**

- Use constant U2-10 to monitor what the control mode (AUTO 1, AUTO 2, Inverter Only or Charger Only) is when the current fault occurs.

#### **U2-11: Operation Status**

- Use constant U2-11 to monitor 12 digits which account for each operation status when the current fault occurs. Please see NOTE 1 in Chapter 5.

#### **U2-12: Aux-Relay Status**

- Use constant U2-12 to monitor the ON/OFF status of 3 sets of Aux-Relay (RY1, RY2, RY3) when the current fault occurs. Please see NOTE 2 in Chapter 5.

#### **U2-13: Elapsed Time**

- Use constant U2-13 to monitor the elapsed time after power ON (O2-03=0) or after RUN (O2-03=1) in unit of 1 hour when the current fault occurs.

#### **U2-26: Battery Temperature Sensor**

- Use constant U2-26 to monitor the current temperature that has been detected by Battery Temperature Sensor (BTS-3) in unit of 1 when the current fault occurs.

## U3 Group (Fault History)

### **U3-01: Last Fault**

- Use constant U3-01 to monitor the latest fault stored in the software.

### **U3-02: Fault Message 2**

- Use constant U3-02 to monitor the most recent second fault stored in the software.

### **U3-03: Fault Message 3**

- Use constant U3-03 to monitor the most recent third fault stored in the software.

### **U3-04: Fault Message 4**

- Use constant U3-04 to monitor the most recent fourth fault stored in the software.

### **U3-05: Elapsed Time 1**

- Use constant U3-05 to monitor the elapsed time before the latest fault occurs.

### **U3-06: Elapsed Time 2**

- Use constant U3-06 to monitor the elapsed time before the most recent second fault occurs.

### **U3-07: Elapsed Time 3**

- Use constant U3-07 to monitor the elapsed time before the most recent third fault occurs.

### **U3-08: Elapsed Time 4**

- Use constant U3-08 to monitor the elapsed time before the most recent fourth fault occurs.

## Chapter 7 Trouble Shooting Table

- Proceed as follows for a quick detection of common faults.
- DC loads must be disconnected from the batteries and the AC loads must be disconnected from the INVERTER before the INVERTER and/or battery charger (AC CHARGER) is tested.
- Consult your Rich Electric dealer if the fault cannot be resolved.

| Problem or Error message   | Cause   | Solution  |
|--|---|---|
| The “Combi 3” fails to operate when power on.                          | The battery voltage is too high or too low.                           | Ensure that the battery voltage is within the correct value range.          |
| <div>‘Udc-UV’<br/>Battery under volt</div> <div>‘       ’: blink</div> | The battery voltage is low.   | Charge the battery or check the battery connections.                        |
| <div>Udc-UV<br/>Battery under volt</div>                               | The “Combi 3” cuts out because the battery voltage is too low.        | Charge the battery or check the battery connections.                        |
| <div>‘OL’<br/>Inverter OverLoad</div> <div>‘       ’: blink</div>      | The load on the inverter of “Combi 3” is higher than the normal load. | Reduce the load.  |
| <div>OL<br/>Inverter OverLoad</div>                                    | The INVERTER of “Combi 3” cuts out due to excessive load.             | Reduce the load.  |
| <div>‘OH’<br/>Heatsink Max Temp.</div> <div>‘       ’: blink</div>     | The ambient temperature is too high, or the load is excessive.        | Place the “Combi 3” in a cool and well-ventilated room, or reduce the load. |

|   |  |  |
|---|--|--|
| <div>OH<br/>Heatsink Max Temp.</div>  | The ambient temperature is too high, or the load is excessive.   | Place the “Combi 3” in a cool and well-ventilated room, or reduce the load.  |
| <div>‘Udc-ripple’<br/>Volt Ripple Exceeds</div> <div>‘       ’: blink</div> | Voltage ripple on the DC input exceeds 1.25Vrms  | Check the battery cables and terminals.<br>Check the battery capacity; increase it if necessary.                                       |
| <div>Udc-ripple<br/>Volt Ripple Exceeds</div>                               | The INVERTER of “Combi 3” cuts out as a result of excessive voltage ripple on the DC input                     | Install batteries with a higher capacity.<br>Use shorter and/or thicker battery cables and reset the Combi 3 (Power OFF and ON again). |
| <div>‘Udc-OV’<br/>Battery over voltage.</div> <div>‘       ’: blink</div>   | Battery charger is not in normal charging status to cause battery voltage too high.                            | Replace the “Combi 3”.   |
| <div>Udc-OV<br/>Battery over voltage.</div>                                 | Incorrect battery voltage connection (12V system but connected to 24V battery)                                 | Recheck if the Combi 3 and the battery voltage is matched.   |
| <div>‘Idc-OC’<br/>Over current.</div> <div>‘       ’: blink</div>           | The actual charge current is 1.5 times larger than the set current value (D1-08) when AC CHARGER is operating. | Stop the Charge mode of the “Combi 3”.   |
| <div>Idc-OC<br/>Over current.</div>   |  | Repair or replace the “Combi 3”.   |



|  |  |   |
|--|--|---|
| <div> <div>‘Bat-NG’<br/>Battery Fault</div> <div>‘     ’: blink</div> </div> | <p>The charging time of <u>AC CHARGER</u> has been over 10 hours and remains in Bulk Charge mode. (D1-09=1) shows the battery is at fault.</p> | <p>Replace the battery banks.</p>   |
| <div> <div>Bat-NG<br/>Battery Fault</div> </div>                             |  |   |
| <p>The charger is not functioning</p>  | <p>The AC IN voltage or frequency is out of range.</p>   | <p>Ensure that the AC IN voltage is within the range 220V system:<br/>180VAC~260VAC<br/>110V system:<br/>90VAC~130VAC<br/>And that the frequency matches the setting.</p> |
|  | <p>“Combi 3” internal circuit breaker has tripped.</p>   | <p>Reset the internal circuit breaker.</p>  |
| <p>The battery is not being charged fully.</p>                               | <p>Incorrect charging current.</p>   | <p>Set the charging current at between (0.1~0.2) × battery capacity.</p>  |
|  | <p>A defective battery connection.</p>   | <p>Check the battery terminals.</p>   |
|  | <p>The absorption voltage has been set an incorrect value.</p>   | <p>Adjust the absorption voltage to the correct value.</p>  |
|  | <p>The float voltage has been set to an incorrect value.</p>   | <p>Adjust the float voltage to the correct value.</p>   |
|  | <p>The internal DC fuse is defective</p>   | <p>“Combi 3” is damaged.</p>  |
| <p>The battery is overcharged.</p>   | <p>The absorption voltage has been set to an incorrect value.</p>  | <p>Adjust the absorption voltage to the correct value.</p>  |
|  | <p>The float voltage has been set to an incorrect value.</p>   | <p>Adjust the float voltage to the correct value.</p>   |

|  |  |  |
|--|--|--|
| The battery is overcharged.  | The battery is too small.                    | Reduce the charging current or use a battery with a higher capacity.   |
|  | A defective battery.                         | Replace the battery.   |
|  | The battery is too hot.                      | Connect a Battery Temperature Sensor (BTS-3)   |
| Battery charge current drop to 0 A when the absorption voltage is reached. | Battery overtemperature (> 50 °C)            | <ol style="list-style-type: none"> <li>1. Allow battery to cool down.</li> <li>2. Place battery in a cool environment.</li> <li>3. Check for shorted cells.</li> </ol>   |
|  | Battery Temperature Sensor (BTS-3) is faulty | <ol style="list-style-type: none"> <li>1. Unplug Battery Temperature Sensor (BTS-3) from “Combi 3” and power off the “Combi 3” then wait 5 seconds and power on again.</li> <li>2. If the “Combi 3” AC CHARGE normally, the BTS-3 is faulty and needs to be replaced.</li> </ol> |

## SGS

Page : 1 of 31

www.fox.com

## Appendix B: LVD for Wall-Mounting/Vertical Combi 3

**SGS**

Report NO.:EZ/2008/30010-2  
Page : 1 of 25

### Test Report / Electrical & Performance Safety

Product: Combi-3  
Trade Name: RICH ELECTRIC  
Model No.: C3-ABCD-XXX  
(ABCD=3000, 2000, 1500, 1000, 0600)  
(XXX=121, 122, 241, 242, 481, 482)

Applicant : Rich Electric Co., Ltd.  
Address: 11F-4, 54 Chung Cheng North Road, Yung Kang City,  
Tainan 710, Taiwan R.O.C.

Reference Standards: EN 50178: 1997: Electronic equipment for use in power  
installations

ASP TECHNOLOGY CORPORATION  
No. 439, Jhen Cian St., Shulin City, Taipei Hsien, Taiwan 238, R.O.C.

Received Date: March 03, 2008  
Report Issue Date: March 03, 2008

Compiled by:

*Alex Lee*

Signature

Reviewed by:

*Jason*

Signature

This Test Report is issued by the Company subject to its General Conditions of Service posted on the website or available on request and accessible at [www.sgs.com](http://www.sgs.com). Attention is drawn to the limitations of liability, indemnification and jurisdictional issues defined therein. Unless otherwise stated the results shown in this test report refer only to the samples tested. This test report cannot be reproduced, except in full, without prior written permission of the Company. Any unauthorized alteration, forgery or falsification of the content or appearance of this report is unlawful and offenders may be prosecuted to the fullest extent of the law. 此報告係根據本公司之測試結果所製成之文件，其內容僅供參考，不得作為任何法律訴訟之依據。本公司之測試結果，僅供客戶參考，不得作為任何法律訴訟之依據。未經本公司之許可，不得將此報告之內容或外觀進行任何修改或偽造，否則本公司將依法追究其法律責任。此報告係根據本公司之測試結果所製成之文件，其內容僅供參考，不得作為任何法律訴訟之依據。本公司之測試結果，僅供客戶參考，不得作為任何法律訴訟之依據。

TW5778512

SGS Taiwan Ltd. No. 134, Wu Kang Road, Wuku Industrial Zone, Taipei County, Taiwan. / 台北縣五股工業區五三路134號  
台灣檢驗科技股份有限公司 ☎(886-2) 2299-8939 ☎(886-2) 2299-2096 [www.tw.sgs.com](http://www.tw.sgs.com)

Member of SGS Group

## Appendix C: C-tick for Wall-Mounting/Vertical Combi 3



Report No.: ED/2008/30021

Page :1 of 20

### C-TICK CLASS A COMPLIANCE REPORT

Test Report No. : ED/2008/30021

Head Applicant : RICH ELECTRIC CO., LTD.

Address of Applicant : 11F-4, 54, CHUNG CHENG N. ROAD, YUNG KANG CITY,  
TAINAN, TAIWAN R.O.C.

Factory Applicant : RICH ELECTRIC CO., LTD.

Address of Applicant : NO. 163, CHUNG CHENG 5 STREET, YUNG KANG CITY,  
TAINAN, TAIWAN R.O.C.

Equipment Under Test (EUT) :

Name : Combi-3

Model No.: C3-ABCD-XXX

(ABCD=3000,2000,1500,1000,0600)

(XXX=121,122,241,242,481,482)

Standard : AS/NZS CISPR 22: 2004

IEC/CISPR 22 : 2004 CLASS A

EN55022 : 2004 CLASS A

Date of Tests: March 19, 2008

Date of Issue: March 27, 2008

|               |             |
|---------------|-------------|
| Test Result : | <b>PASS</b> |
|---------------|-------------|

In the configuration tested, the EUT complied with the standards specified above.

NOTE: The test standards also meet the CISPR 11 & EN55011 Class A rules.

#### Remarks :

This report detail the results of the testing carried out on one sample, the results contained in this test report do not relate to other samples of the same product. The manufacturer should ensure that all products in series production are in conformity with the product sample detailed in this report.

This report may only be reproduced and distributed in full. If the product in this report is used in any configuration other than that detailed in the report, the manufacturer must ensure the new system complies with all relevant standards. Any mention of SGS E&C Laboratory or testing done by SGS E&C Laboratory in connection with distribution or use of the product described in this report must be approved by SGS E&C Laboratory in writing.

Authorized Signatory:

SGS TAIWAN LTD.

Jason Lin

Technical Manager

This Test Report is issued by the Company subject to its General Conditions of Service printed overleaf or available on request and accessible at [www.sgs.com](http://www.sgs.com). Attention is drawn to the limitations of liability, indemnification and jurisdictional issues defined therein. Unless otherwise stated the results shown in this test report refer only to the sample(s) tested. This test report cannot be reproduced, copied or sold, without prior written permission of the Company. Any unauthorized alteration, forgery or falsification of the content or appearance of this report is unlawful and offenders may be prosecuted to the fullest extent of the law. 此報告係根據本公司訂定之測試標準與程序所發出，請注意此報告僅用於報告，不可在www.sgs.com中查閱。將本公司之測試、報告、資料轉給其他機構或個人，除須有本公司之書面許可外，否則將受法律之追究。本報告未經本公司書面許可，不可進行複製、對本報告內容作任何之修改或轉讓之權利。修改、複製或轉讓，違反者將受法律之追究。

TW 5778537

SGS Taiwan Ltd.  
台灣檢驗科技股份有限公司

No. 134, Wu Kang Road, Waka Industrial Zone, Taipei County, Taiwan / 台北縣五股工業區五工路134號  
☎ (886-2) 2286-2839 ☎ (886-2) 2288-2838

[www.tw.sgs.com](http://www.tw.sgs.com)  
Member of SGS Group

## Appendix D: EMC for Table-Mounting/Horizontal Combi 3



Report No.: ED/2008/40051

Page : 1 of 31

# EMC ONSITE TEST REPORT

Test Report No: ED/2008/40051

Head Applicant : RICH ELECTRIC CO., LTD.

Address of Applicant : 11F-4, 54, CHUNG CHENG N. ROAD, YUNG KANG CITY,  
TAINAN, TAIWAN R.O.C.

Factory Applicant : RICH ELECTRIC CO., LTD.

Address of Applicant : NO. 163, CHUNG CHENG 5 STREET, YUNG KANG CITY,  
TAINAN, TAIWAN R.O.C.

Equipment Under Test (EUT):

Name : Combi-3

Model No.: C3-ABCD-XXX-1

(ABCD=3000,2000,1500,1000,0600)

(XXX=121,122,241,242,481,482)

Test(s) Required : SGS Onsite Test Standard: 2002

EN 61000-6-2: 2001, EN 61000-6-4: 2001

IEC/CISPR 11/EN55011 CLASS A, EN61000-4-2, EN61000-4-4, EN61000-4-6, Mobile Phone Test

Date of Tests: March 19, 2008

Date of Issue: March 25, 2008

|               |      |
|---------------|------|
| Test Result : | PASS |
|---------------|------|

Remarks :

This report detail the results of the testing carried out on one sample, the results contained in this test report do not relate to other samples of the same product. The manufacturer should ensure that all products in series production are in conformity with the product sample detailed in this report.

This report may only be reproduced and distributed in full. If the product in this report is used in any configuration other than that detailed in the report, the manufacturer must ensure the new system complies with all relevant standards. Any mention of SGS E&C Laboratory or testing done by SGS E&C Laboratory in connection with distribution or use of the product described in this report must be approved by SGS E&C Laboratory in writing.

Authorized Signatory:

SGS TAIWAN LTD.

Jason Lin

Technical Manager

This Test Report is issued by the Company subject to its General Conditions of Service printed overleaf or available on request and accessible at [www.sgs.com](http://www.sgs.com). Attention is drawn to the limitations of liability, indemnification and jurisdictional issues defined therein. Unless otherwise stated the results shown in this test report refer only to the sample(s) tested. This test report cannot be reproduced, except in full, without prior written permission of the Company. Any unauthorized alteration, forgery or falsification of the content or appearance of this report is unlawful and offenders may be prosecuted to the fullest extent of the law. 此報告係根據本公司之測試結果所製成之文件，請注意此報告內所載之內容，不可作任何更改、偽造或冒用。如本公司之資料、報告、測試結果或測試結果之使用，未經本公司之書面許可，即屬違法行為。本公司之資料、報告、測試結果或測試結果之使用，未經本公司之書面許可，即屬違法行為。本公司之資料、報告、測試結果或測試結果之使用，未經本公司之書面許可，即屬違法行為。

TW5778409

SGS Taiwan Ltd. No. 134, Wu Kang Road, Wu Kang Industrial Zone, Taipei County, Taiwan. / 台北縣五股工業區五工路134號  
台灣檢驗科技股份有限公司 T (886-2) 2759-2020 F (886-2) 2759-2038 [www.tw.sgs.com](http://www.tw.sgs.com)

Member of SGS Group



## Appendix E: LVD for Table-Mounting/Horizontal Combi 3

**SGS**

Report NO.:EZ/2008/40025  
Page : 1 of 25

### Test Report / Electrical & Performance Safety

Product: Combi-3  
Trade Name: RICH ELECTRIC  
Model No.: C3-ABCD-XXX-1  
(ABCD=3000, 2000, 1500, 1000, 0600)  
(XXX=121, 122, 241, 242, 481, 482)

Applicant : Rich Electric Co., Ltd.  
Address: 11F-4, 54 Chung Cheng North Road, Yung Kang City,  
Tainan 710, Taiwan R.O.C.

Reference Standards: EN 50178: 1997: Electronic equipment for use in power installations.

ASP TECHNOLOGY CORPORATION  
No. 439, Jhen Cian St., Shulin City, Taipei Hsien, Taiwan 238, R.O.C.

Received Date: March 03, 2008  
Report Issue Date: March 03, 2008

Compiled by:

Reviewed by:

*Alex Lee*

Signature

*Jason*

Signature

This Test Report is issued by the Company subject to its General Conditions of Service printed overleaf or available on request and irrespective of 30000SGS.COM. Attention is drawn to the limitations of liability, indemnification and jurisdictional issues defined therein. Unless otherwise stated the results shown in this test report refer only to the sample(s) tested. This test report cannot be reproduced, except in full, without prior written permission of the Company. Any unauthorized alteration, forgery or falsification of the content or appearance of this report is unlawful and offenders may be prosecuted to the fullest extent of the law. 此報告係根據本公司訂定之「通用檢驗與報告中斷中斷」，請注意此報告中斷中斷，亦可向www.sgs.com查詢。此報告之內容，如欲、查詢、或轉讓給其他單位之、請向本公司洽詢。此報告結果僅對檢驗之樣品負責。本報告未經本公司蓋章許可，不得用於其他用途。對本報告內容所提之任何未經授權之變更、修改、或複製、或轉讓、或用於其他用途，均屬違法行為。

TW5778447

SGS Taiwan Ltd. No. 134, Wu Kung Road, Wuks Industrial Zone, Taipei County, Taiwan / 台北縣五股工業區五工路134號  
台灣檢驗科技股份有限公司 +886-2) 2299-3838 +886-2) 2298-2688 www.tw.sgs.com

Member of SGS Group

## Appendix F: C-tick for Table-Mounting/Horizontal Combi 3



Report No.: ED/2008/40049

Page :1 of 20

### C-TICK CLASS A COMPLIANCE REPORT

Test Report No. : ED/2008/40049

Head Applicant : RICH ELECTRIC CO., LTD.

Address of Applicant : 11F-4, 54, CHUNG CHENG N. ROAD, YUNG KANG CITY,  
TAINAN, TAIWAN R.O.C.

Factory Applicant : RICH ELECTRIC CO., LTD.

Address of Applicant : NO. 163, CHUNG CHENG 5 STREET, YUNG KANG CITY,  
TAINAN, TAIWAN R.O.C.

Equipment Under Test (EUT) :

Name : Combi-3

Model No.: C3-ABCD-XXX-1

(ABCD=3000,2000,1500,1000,0600)

(XXX=121,122,241,242,481,482)

Standard : AS/NZS CISPR 22: 2004

IEC/CISPR 22 : 2004 CLASS A

EN55022 : 2004 CLASS A

Date of Tests: March 19, 2008

Date of Issue: March 27, 2008

|               |      |
|---------------|------|
| Test Result : | PASS |
|---------------|------|

In the configuration tested, the EUT complied with the standards specified above.

NOTE: The test standards also meet the CISPR 11 & EN55011 Class A rules.

#### Remarks :

This report detail the results of the testing carried out on one sample, the results contained in this test report do not relate to other samples of the same product. The manufacturer should ensure that all products in series production are in conformity with the product sample detailed in this report.

This report may only be reproduced and distributed in full. If the product in this report is used in any configuration other than that detailed in the report, the manufacturer must ensure the new system complies with all relevant standards. Any mention of SGS E&C Laboratory or testing done by SGS E&C Laboratory in connection with distribution or use of the product described in this report must be approved by SGS E&C Laboratory in writing.

Authorized Signatory:

SGS TAIWAN LTD.

Jason Lin

Technical Manager

This Test Report is issued by the Company subject to its General Conditions of Service printed overleaf or available on request and accessible at [www.sgs.com](http://www.sgs.com). Attention is drawn to the limitations of liability, indemnification and jurisdictional issues defined therein. Unless otherwise stated the results shown in this test report refer only to the sample(s) tested. This test report cannot be reproduced, except in full, without prior written permission of the Company. Any unauthorized alteration, forgery or falsification of the content or appearance of this report is unlawful and offenders may be prosecuted to the fullest extent of the law. 此報告係根據本公司之工業標準進行測試之結果，該結果僅供參考，不可作為其他用途。本公司之測試結果，僅供客戶參考，不得作為其他用途。本公司之測試結果，僅供客戶參考，不得作為其他用途。本公司之測試結果，僅供客戶參考，不得作為其他用途。

TW 5778389