



INSTRUCTION MANUAL

5.1 MULTIMEDIA HOME THEATER SYSTEM





TSP-5276USBT



DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to info@premiermundo.com

	CAUTION RISK OF ELECTRIC SHOCK, DO NOT OPEN	
<p>Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.</p>		
	<p>This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.</p>	
	<p>This sign means that there are important instructions of operation and handling in the manual that comes with this device.</p>	

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

Usage:

Specification:

- *Output power: 1.4W+1.3W x 5 (RMS)
- *Frequency Response:40Hz-20kHz
- *S/N Ratio:≥75dB
- *Separation:≥50dB
- *Speaker:4"+2.75" x 5
- *AC: 110V 60Hz / 220V 50Hz

Caution:

- 1.Do not expose to dripping or splashing.
- 2.Do not place any objects filled with water over the apparatus.
- 3.Do not block the ventilation holes.
- 4.For indoor use only.
- 5.When using high output signal don't turn the volume to maximum to avoid distortion.

Inside Package:


Subwoofer Speaker	1pc
Satellite Speaker	5pcs
Audio Cable	1pc
Audio Converter	1pc
User Manual	1pc
Remote Control	1pc
FM ANT	1pc

How to use the Blue-connect:

1. Press BLU button on the remote to enter Blue-connect mode.
2. Search subwoofer's Blue-connect named " PREMIER " in your device Bluetooth list.
3. Connect your device to " PREMIER " then you can play music on subwoofer.


PS) If your Bluetooth device is below 2.0 version, pls input password " 0000" after connection.

Front panel

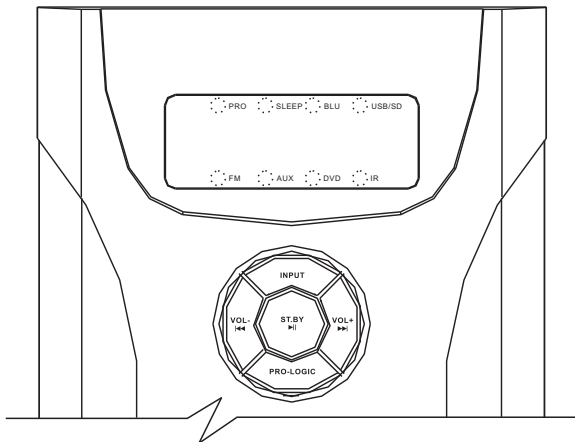

- PRO-----Pro-logic function indicator lamp.
 SLEEP-----Sleep function key indicator lamp.
 BLU-----Blue connect function key indicator lamp.
 USB/SD-----USB/SD function key indicator lamp.
 FM-----FM function key indicator lamp.
 AUX-----AUX function key indicator lamp.
 DVD-----DVD function key indicator lamp.
 ST.BY-----USB/SD pause/Play function key will be Stand by function
 ►| when pressing more than 3 seconds.
 IR-----The remote sensor to receive the window way.
 INPUT-----Input function key.
 USB/SD-----USB/SD function key indicator lamp.
 VOL- -----“previous” will be “volume-” function if u keep pressing
 ◀◀ it more than 3 seconds.
 PRO-LOGIC----- Pro-logic function key.
 VOL+ -----“next” will be “volume+” function if u keep pressing it
 ▶▶ more than 3 seconds.

Front panel

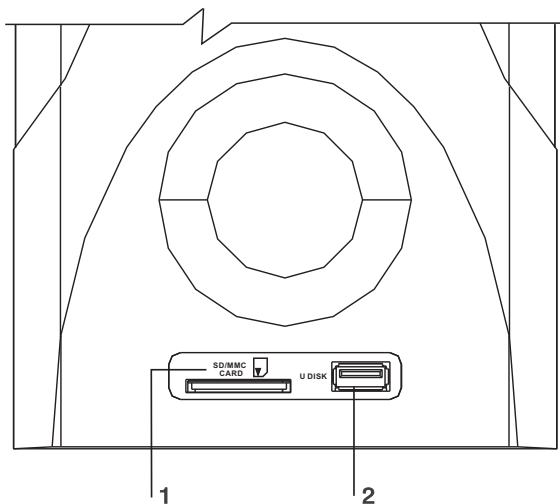


1. SD card socket

2.USB socket

1. When using SD card function, it is required to choose SD card whose memory is more than 512M and also is legal edition.
2. USB and SD automatic switching Play


How to use the remote control

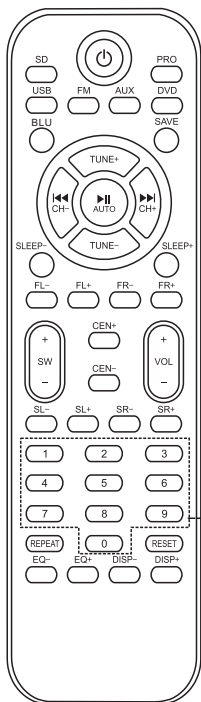

- Power switch button(stand by) switch On or off for waiting or On condition.
- SD----- SD Input
- PRO -----Pro-logic channel switch.
- USB -----USB Disk
- FM -----FM Input
- AUX-----AUX Input
- DVD -----DVD Input
- BLU ----- Blue connect Input
- SAVE ----- Save FM Channel
- TUNE-/+ -----Previous/Next channel keep pressing to search the channel.
- Play & pause
- SCAN Keep pressing for FM channel
- Previous song when USB/SD Input;
- CH- Previous channel when FM Input
- Next song when USB/SD Input;
- CH+ Next channel when FM Input
- SLEEP-/+ ---- To time on/off the speaker
- FL-/+ ----- FL volume to upgrade & attenuation of the key
- FR-/+ -----FR volume to upgrade & attenuation of the key
- SW-/+ -----SW volume to upgrade & attenuation of the key
- CEN-/+ -----CEN volume to upgrade & attenuation of the key.
- VOL-/+ ----- Master Volume
- SL-/+ ----- SL volume to upgrade & attenuation of the key
- SR-/+ -----SR volume to upgrade & attenuation of the key
- Press any key to choose the song
- REPEAT----- Repeat
- RESET----- When the volume is at the maximum, press "RESET" button. at the status while power on.
- EQ-/+ ----- EQ (When USB/SD Input)
- DISP-/+ -----Lightness Adjust

*If the Remote Control cannot function,it is because the battery of remote control has been used up.Thank you.

System connection diagram

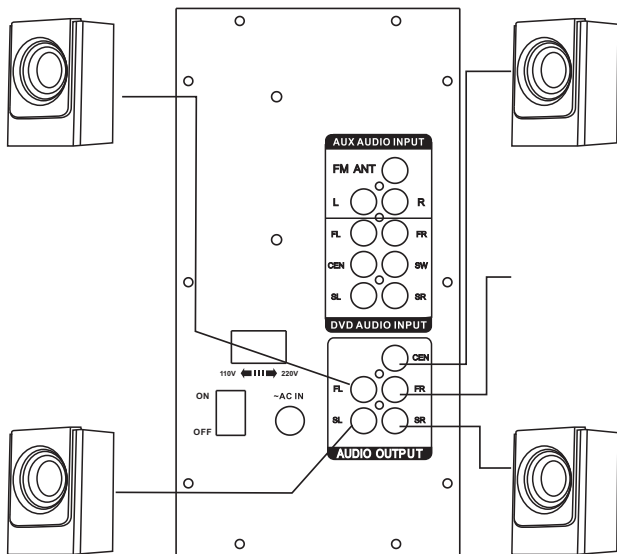

SPEAKER TERMINALS


Connect front speakers, a center speaker, surround speakers to 5.1 speaker output terminals.

- The front speaker cords to the FRONT SPEAKERS terminals
- The center speaker cords to the CENTER SPEAKERS terminals
- The surround speaker cords to the SURROUND SPEAKERS terminals

NOTE

* Do not leave objects generating magnetism near the speakers.

System connection diagram

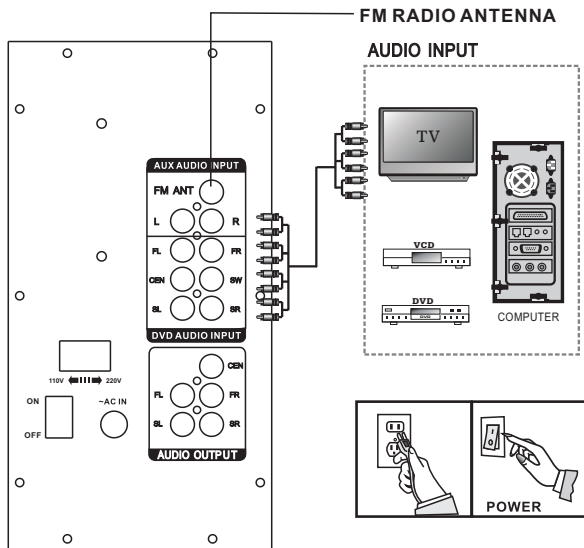

Connecting equipment

Jacks and plugs of the connecting cord are color-coded as follows:
 Red jacks and plugs: For the left channel of audio signals



NOTE:


Insert the plugs fully into the jacks. Loose connections may produce a humming sound or other noise interference.



IMPORTANT:

Connect the speakers and all other external equipment, and finally connect the AC power cord.

Positioning the speakers

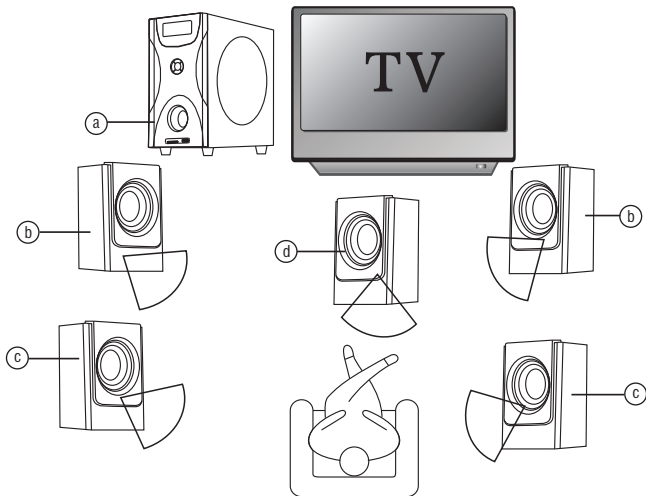

(a) Sub-woofer

Place the sub-woofer any place on the floor.

(There is no directional requirement for the Bass effect.)

(b) Front Speakers

(c) Surround Speakers

Place the surround speakers directly to the side or a slightly behind the listening area.

Align them horizontally, about 1 meter above ear height.

(d) Center Speaker

Position in the center of the two front speakers. in addition

Position on or below the TV set. If connecting a TV set to the unit.

Schematic diagram

