

PROLINK®

www.prolink2u.com

MODEL NO:
PWC3703



Quick Installation Guide

Wireless-AC Extender Dual-band

Version 1.00
(English / Indonesian)

BEFORE GETTING STARTED

This document is designed to aid you to get started with the device. If you experience problems following these guides or need further information pertaining to the device, please visit our website at www.prolink2u.com. All specifications are subject to the manufacturer's configuration at the time of shipping and may change without prior notice, written or otherwise.

1. Package Contents

1



2




Items:

- 1 One (1) unit of PROLiNK® PWC3703
- 2 One (1) piece of Quick Installation Guide (QIG)

Note:

1. The illustrations in this document may appear different from your model.
2. If any of above item is not packed in your package when open, please consult your reseller immediately.

2. Overview

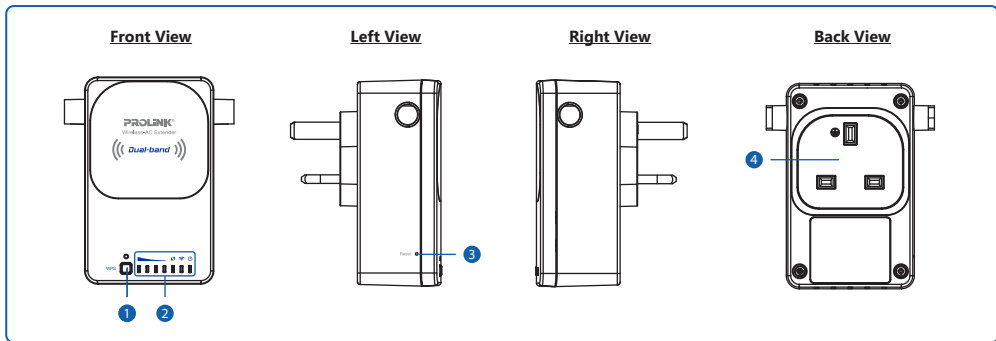

- 1 WPS : Connect to 2.4GHz Network - Press 2 seconds and release, the WPS LED will slow blinking.
Connect to 5GHz Network - Press 5 seconds and release, the WPS LED will fast blinking.
The extender is connected to the network once the LED turns solid.

2 LED Indicators:

- Power : On - Power On
Off - Power Off
- WLAN : On - Wireless turn On
Off - Wireless turn Off
- WPS : Blinking (1 time/ 1 sec) - Triggering 2.4GHz WPS
Blinking (2 times/ 1 sec) - Triggering 5GHz WPS
On - Connected to Wireless Router/ AP
Off - Idle


- Signal Strength : 1 LED On : Low Signal
2 LEDs On : Medium Signal
3 LEDs On : Good Signal
4 LEDs On : Excellent Signal

- 3 Reset : Press > 5 seconds to reset to factory default and reboot.
(Release when Signal Strength LEDs blinking.)
- 4 AC Power Input

Note:

The illustration in this document may appear different from your model.

3. Hardware Installation

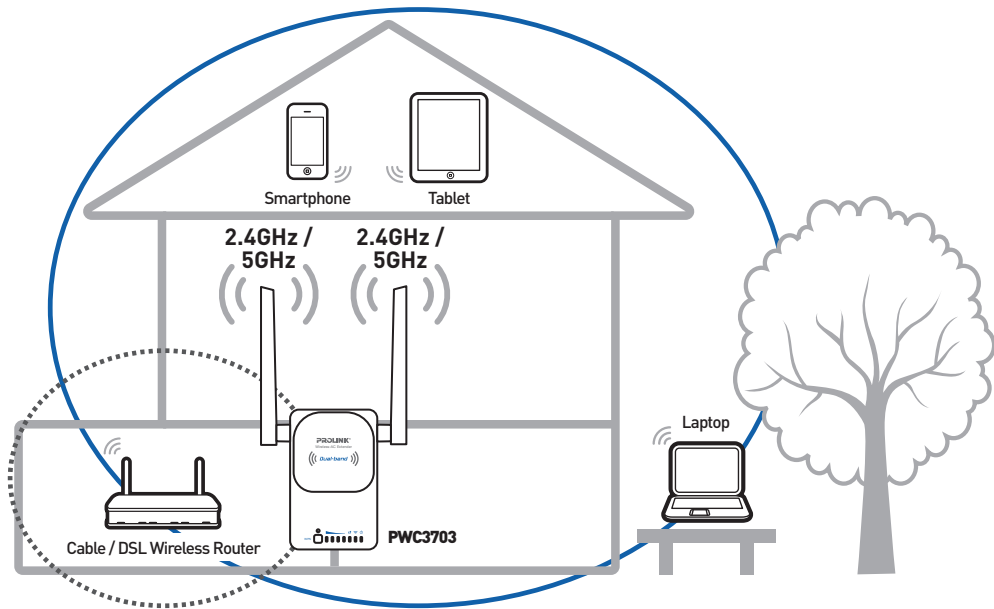

Router WiFi Range





WiFi Extender Range

4. Connecting to the Wireless Router

Method 1 : With WPS button (Use this method only when your wireless router has WPS enabled.

Hint: If your wireless router WPS led does not lit up after pressing it's WPS button, it is usually being disabled. In this case, please use Method 2).

Step 1. Plug the PWC3703 into the electrical socket and power on the electrical socket. The Power LED  on PWC3703 will illuminate. Wait until the WLAN  LED light up.

Step 2. Press the Wi-Fi Protected Setup (WPS) button on your wireless router.


Step 3. Press the WPS button of PWC3703 for 2 seconds and release, the WPS  LED starts to blink.




Note 1. The Signal Strength LEDs will illuminate to show the link quality once connected to the wireless router.

Note 2. Both buttons must be pressed within 2 minutes.

LOCATION 1

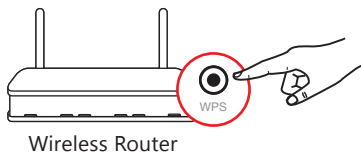

LOCATION 2

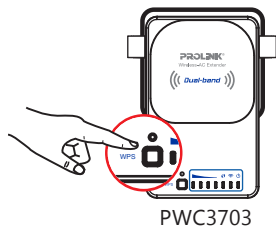

2 seconds*

2 seconds



Within 2 Minutes

* Some wireless routers may have different timing to trigger WPS, please check the User Manual of the wireless router to trigger the WPS.

4. Connecting to the Wireless Router

Method 2 : With Web Configuration – Setup Wizard

 
Step 1. Connect your computer to PWC3703 via wireless.

The wireless network name (SSID) shall appear as “**PROLiNK_PWC3703_xxxx**”.


 **Note:** The default Wi-Fi Key or password is “**prolink12345**”

Step 2. Open web browser and type **<http://prolinkext>** or **<http://192.168.123.253>** in the address box.


For example:



The default user name is “**admin**” and password is “**password**”.

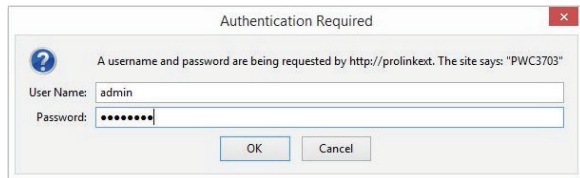

Step 3. Click on <Home> → <Setup Wizard>

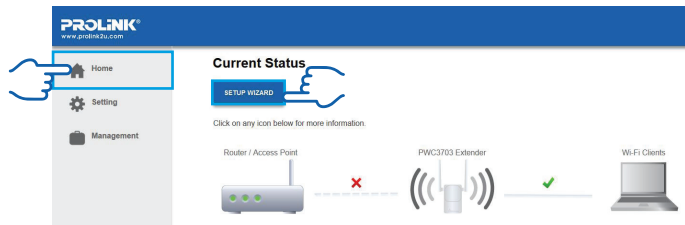

PROLINK
www.prolink2u.com

Home
Setting
Management


Current Status

SETUP WIZARD


Click on any icon below for more information.

Router / Access Point PWC3703 Extender Wi-Fi Clients

4. Connecting to the Wireless Router

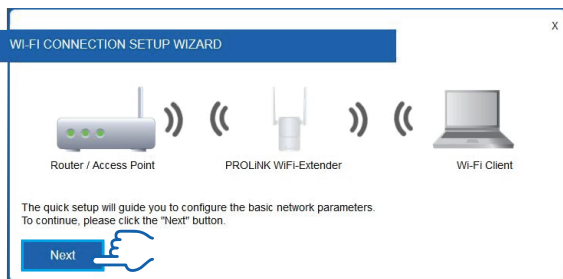


Click <Next>.

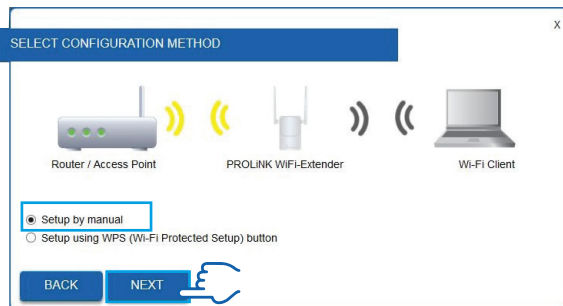


Select <Setup by manual> and click <Next>.

The extender will scan and find the available wireless router.

4. Connecting to the Wireless Router

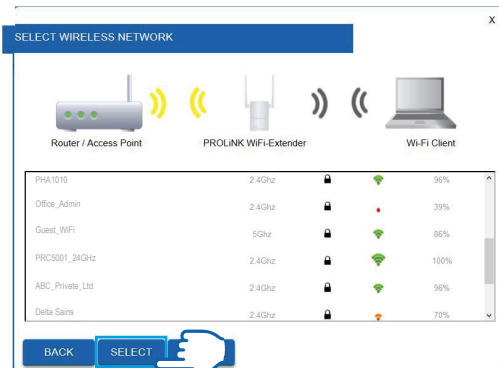

Select the wireless router that you want to connect to, and click on **<Select>**.

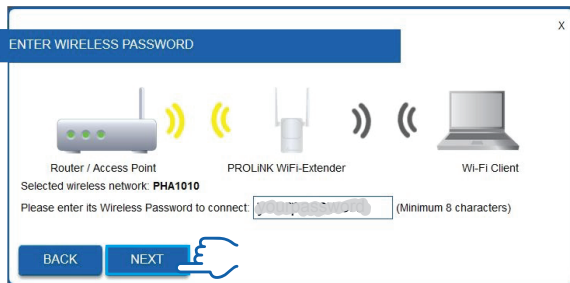

Key in the wireless password of the wireless router, and click on **<Next>** to proceed.

4. Connecting to the Wireless Router

ENTER EXTENDER WIRELESS NETWORK NAME AND PASSWORD

Router / Access Point PROLINK WiFi-Extender Wi-Fi Client

Provide a name to your 2.4GHz Extender Wi-Fi Network:
 (Maximum 32 characters)

Provide a password to your 2.4GHz Extender Wi-Fi Network:
 (Minimum 8 characters)

Provide a name to your 5GHz Extender Wi-Fi Network:
 (Maximum 32 Characters)

Provide a password to your 5GHz Extender Wi-Fi Network:
 (Minimum 8 characters)

You may change or provide the extender's Wi-Fi Network Name and password here. Click on **<Apply & Reboot>**.

Wireless Password History

-
-
-
-
-

1. Isi kemasan

1



2




Items:

- 1 Satu (1) unit PROLiNK® PWC3703
- 2 Satu (1) Lembar Panduan Instalasi

Catatan:

1. Ilustrasi didalam dokumen ini mungkin akan berbeda dari model perangkat yang Anda miliki.
2. Jika terdapat item diatas yang tidak ditemukan pada isi kemasan, silahkan untuk menghubungi dealer Anda secepatnya.

2. Penjelasan

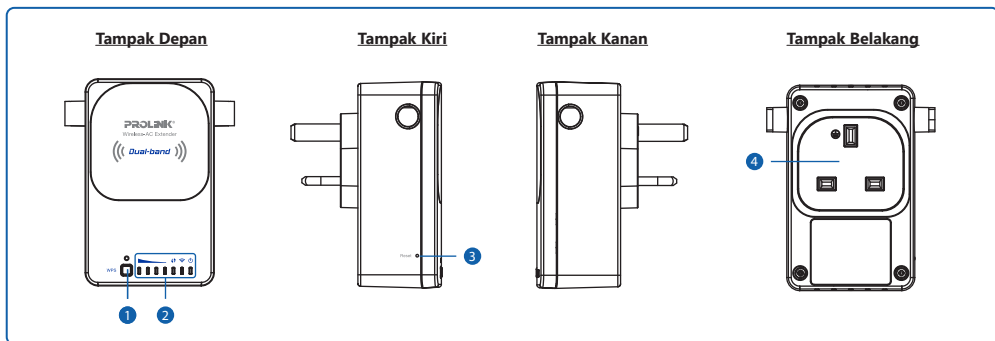

- 1 WPS : Menghubungkan Jaringan 2.4GHz - Tekan selama 2 detik dan tunggu, hingga indicator LED WPS berkedip perlahan-lahan.
Menghubungkan Jaringan 5GHz - Tekan selama 5 detik dan tunggu, hingga indicator LED WPS berkedip cepat.

Indikator LED menyala secara solid menandakan Extender terhubung ke jaringan.

- 2 Indicators LED :

- Power : Menyala - Perangkat menyala
Tidak menyala - Perangkat tidak menyala
- WLAN : Menyala - Wireless berfungsi
Tidak menyala- Wireless tidak berfungsi
- WPS : Berkedip (1 kali/1 detik)- Memicu WPS 2.4Ghz
Berkedip (2 kali/1 detik) - Memicu WPS 5Ghz
Menyala solid - terhubung ke wireless router/AP
tidak menyala - tidak terhubung

- Kekuatan Signal : 1 LED Menyala : Signal Lemah
2 LED Menyala : Signal Sedang
3 LED Menyala : Signal baik
4 LED Menyala : Signal sempurna


- 3 Reset : Tekan dan tahan selama > 5 detik untuk mereset ke pengaturan pabrik dan restart. (berkerja pada saat signal power indikator berkedip).

- 4 Input daya AC

Catatan:

Ilustrasi didalam dokumen ini mungkin akan berbeda dari model perangkat yang Anda miliki.

3. Instalasi Perangkat Keras

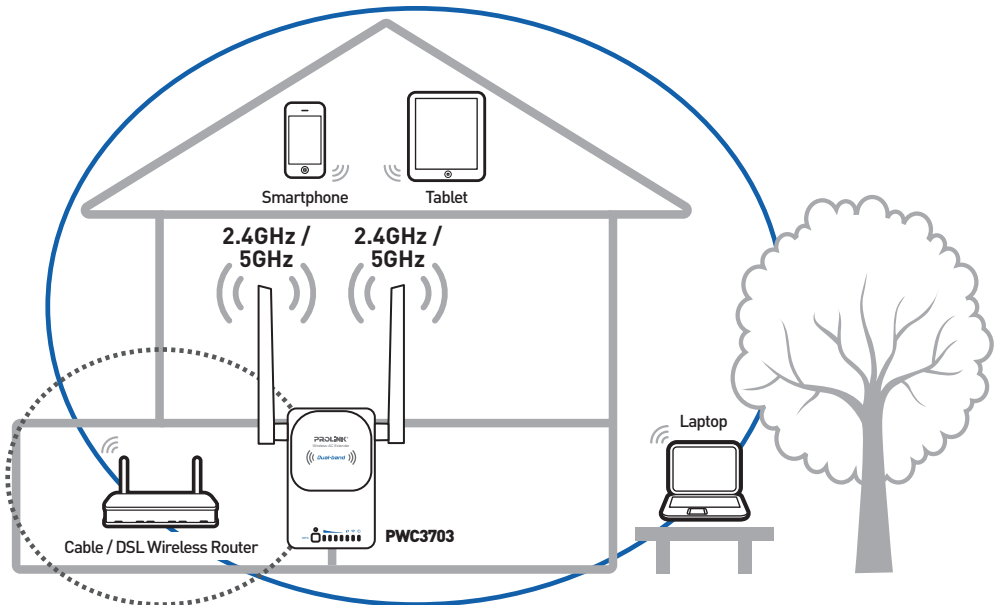



 Jangkauan Router Wireless


 Jangkauan Wireless Extender

4. Bagaimana Cara Koneksi ke AP?

Metode 1 : Dengan tombol WPS (Gunakan metode ini hanya jika WPS router nirkabel telah diaktifkan. Petunjuk: Jika LED router nirkabel WPS Anda tidak menyala setelah menekan tombol WPS itu biasanya WPS tidak berfungsi. Dalam hal ini, silakan gunakan Metode 2).

Langkah 1. Pasang PWC3703 ke soket listrik. Lampu Power LED PWC3703  akan menyala. Tunggu sampai lampu indikator LED WLAN  menyala.

Langkah 2. Tekan tombol Wi-Fi Protected Setup (WPS) pada router.


Langkah 3. Tekan dan tahan tombol WPS dari PWC3703 selama 2 detik sampai lampu indikator LED  WPS berkedip, kemudian lepaskan.



Catatan 1. Indikator Signal LED akan menyala untuk menunjukkan kualitas Jaringan pada saat terhubung ke wireless router.


Catatan 2. Proses penekanan kedua tombol harus dilakukan tidak lebih dari 2 menit.

LOKASI 1

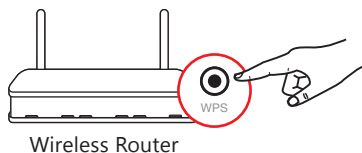


2 detik

LOKASI 2

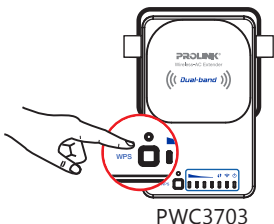

2 detik

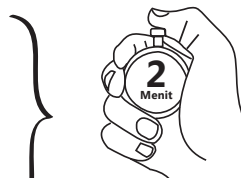

Dalam 2 Menit

* Beberapa wireless routers mungkin memiliki waktu yang berbeda, untuk memicu WPS, silahkan cek User Manual dari wireless router untuk memicu WPS.

4. Bagaimana Cara Koneksi ke Wireless Router?

Metode 2 : Konfigurasi melalui Web Configuration – Setup Wizard


Langkah 1. Hubungkan komputer Anda ke PWC3703 melalui jaringan nirkabel.
Nama Jaringan nirkabel (SSID) akan tampil dengan nama **“PROLiNK_PWC3703_xxxx”**.

 **Catatan:** password jaringan nirkabel adalah **“prolink12345”**


Langkah 2. Buka web browser dan ketik **<http://prolinkext>** atau **<http://192.168.123.253>** pada kotak address.

Contoh: 


Masukkan standar username = **“admin”** dan password = **“password”**.

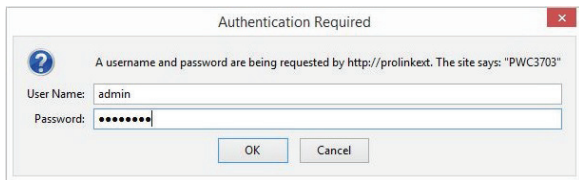


Langkah 3. Pilih menu **<Home>** → **<Setup Wizard>**

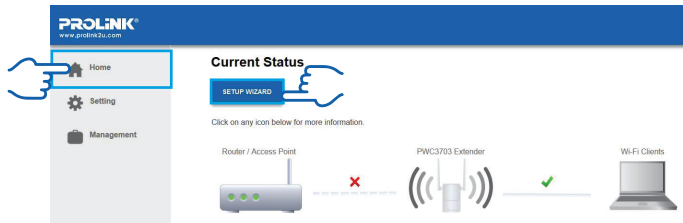

4. Bagaimana Cara Koneksi ke Wireless Router?

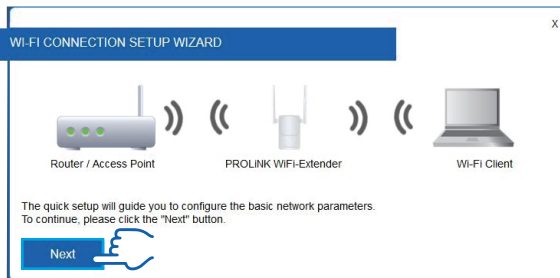


Klik **<Next>**.

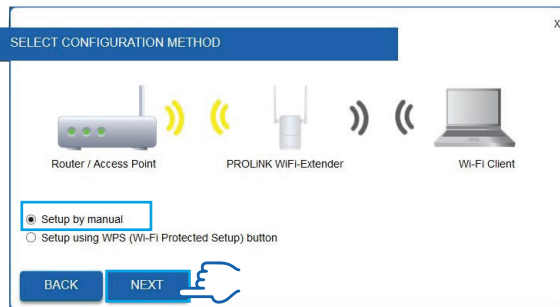


Pilih **<Setup by manual>** dan klik **<Next>**.

Wireless Extender akan mencari dan mendeteksi router wireless yang ada di sekitarnya.

4. Bagaimana Cara Koneksi ke Wireless Router?

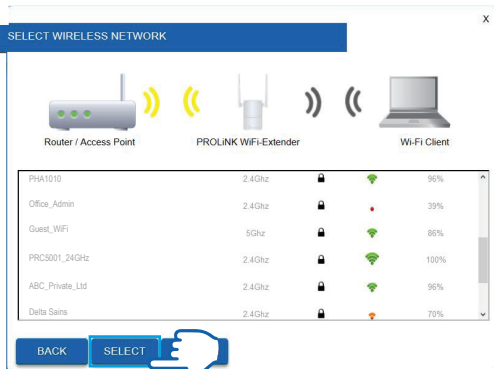


Pilih router wireless atau AP yang Anda inginkan, lalu klik **<Select>**.

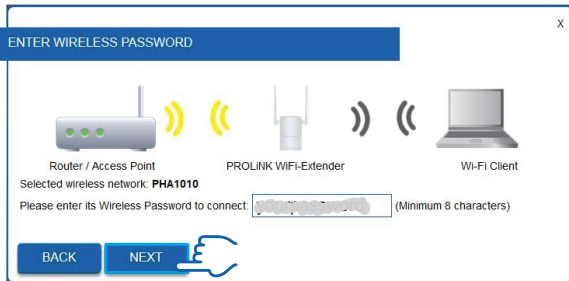

Masukkan password dari router wireless Anda, lalu klik **<Next>**.

4. Bagaimana Cara Koneksi ke Wireless Router?

ENTER EXTENDER WIRELESS NETWORK NAME AND PASSWORD




Router / Access Point PROLINK WiFi-Extender Wi-Fi Client

Provide a name to your 2.4GHz Extender Wi-Fi Network:
 (Maximum 32 characters)

Provide a password to your 2.4GHz Extender Wi-Fi Network:
 (Minimum 8 characters)

Provide a name to your 5GHz Extender Wi-Fi Network:
 (Maximum 32 Characters)

Provide a password to your 5GHz Extender Wi-Fi Network:
 (Minimum 8 characters)



Anda dapat mengubah nama dan password wireless extender Anda di sini. Lalu Klik **<Apply & Reboot>**.

Catatan Sejarah Sandi Nirkabel

-
-
-
-
-

KETENTUAN GARANSI *(for Indonesia region only)*



Kami mengucapkan terima kasih atas kepercayaan Anda memilih produk kami dan selaku distributor di Indonesia, kami memberikan garansi produk selama 1 (satu) tahun.

1. Garansi Hanya Berlaku Jika :

- a. Diisi dengan jelas, lengkap dan benar.
- b. Jika telah dikirimkan dan diterima oleh PT. Prolink Intidata Nusantara.
- c. Memperlihatkan kartu garansi asli dan nota pembelian pada saat klaim service.

2. Garansi Tidak Berlaku Apabila :

- a. Kerusakan yang disebabkan oleh, kelalaian pemakai, bencana alam, kebakaran, tegangan listrik yang terlalu tinggi / rendah, terkena cairan.
- b. Kerusakan yang diakibatkan karena transportasi / pengiriman, pemasangan / pengoperasian yang tidak sesuai dengan buku petunjuk, penyambungan dengan alat lain.
- c. Barang yang diservice tidak sesuai dengan kartu garansi.
- d. Serial number rusak / robek / tidak ada.

3. Ruang Lingkup Garansi :

- a. Garansi hanya mencakup bagian-bagian / komponen perangkat keras dari konfigurasi standar yang terdapat pada spesifikasi produk sesuai dengan faktur.
- b. Khusus netbook garansi baterai hanya berlaku selama 6 bulan sejak tgl. pembelian.

* Biaya pengiriman ditanggung pembeli

No :

KARTU GARANSI / WARRANTY CARD

(for Indonesia region only)

Barang : Data Comm Networking Netbook
Produk : UPS Display* Accessories

S/N :

Nama :
Name

Model :

Alamat :
Address

Tgl. Pembelian :
Purchase Date

Dealer :

Toko :

Kota :

Kode Pos :

Kota :

City :

Tel / Fax :

Email :

Pelanggan

PT. Prolink Intidata Nusantara

Cap Toko

Kartu Garansi harus diisi lengkap, kiriman paling lambat 14 Hari setelah Tgl. Pembelian / Please Fill - in Your Warranty Card Completely and Send max.14 day after Purchase

*Terdaftar No.2134/1.824.124

Alamat Pengiriman : **PT. PROLINK INTIDATA NUSANTARA**
Address : **Jl. Cideng Barat No.79 Jakarta Pusat 10150 - Indonesia**

Telp. : (62-21) 34831777
Fax : (62-21) 34830788
Email : service@prolink.co.id

No :

KARTU GARANSI / WARRANTY CARD

(for Indonesia region only)

Barang : Data Comm Networking Netbook
Produk : UPS Display* Accessories

S/N :

Nama :
Name

Model :

Alamat :
Address

Tgl. Pembelian :
Purchase Date

Dealer :
Toko :

Kota : **Kode Pos** :

Kota :
City :

Tel / Fax :

Email :

Pelanggan

PT. Prolink Intidata Nusantara

Cap Toko

*Kartu Garansi harus diisi lengkap, kirimkan paling lambat 14 Hari setelah Tgl. Pembelian / Please Fill - in Your Warranty Card Completely and Send max.14 day after Purchase
* Terdaftar No.2134/1.824.124*


Alamat Pengiriman : **PT. PROLINK INTIDATA NUSANTARA**
Address : Jl. Cideng Barat No.79 Jakarta Pusat 10150 - Indonesia

Telp. : (62-21) 34831777
Fax : (62-21) 34830788
Email : service@prolink.co.id

PROLINK[®]
Your Reliable IT Products

Tempelkan perangkat
disini.
Hanya untuk pengeposan
di Indonesia

Kepada Yth.
Customer Service
PT. PROLINK INTIDATA NUSANTARA
Jl. Cideng Barat No.79
Jakarta Pusat 10150 - Indonesia

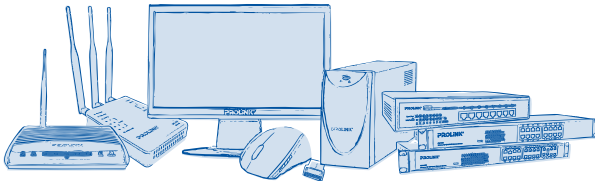

KARTU GARANSI
(for Indonesia region only)

Worldwide Customer Care Centers

INDONESIA Office

PT PROLINK INTIDATA NUSANTARA

Walk-In : Jl. Cideng Barat No. 79, Jakarta Pusat 10150, Indonesia.

Telephone : +62 21 3483 1777

Email Support : support@prolink.co.id

MALAYSIA Office

FIDA SYSTEMS (M) SDN BHD

Walk-In : 29 Jalan USJ 1/31, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia.

Telephone : +60 3 8024 9151

Email Support : support_my@fida.com

SINGAPORE Office

FIDA INTERNATIONAL (S) PTE LTD

Walk-In : Block 16 Kallang Place #06-02, Kallang Basin Industrial Estate, Singapore 339156.

Telephone : +65 6357 0668

Email Support : support@fida.com

Technical Support Hotline

INDONESIA : +62 21 3483 1717

MALAYSIA : +60 3 8023 9151

SINGAPORE : +65 6357 0666

Note: Closed on Saturdays, Sundays and local/regional Public Holidays.

Register Online For Your Product Warranty @ www.prolink2u.com/register

PROLINK® is a trademark of FIDA INTERNATIONAL (S) PTE LTD and is manufactured under its authority. All other brands, products, services, logos and company names mentioned herein are trademarks of their respective owners. All specifications, designs and contents are subject to changes without prior notice. © Copyright 2015. PROLINK® all rights reserved.