

✿ Troubleshooting

If the unit doesn't operate...	Check that the batteries are installed correctly or install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the light of the keys becomes dim...	Install new batteries.
If the unit malfunctions...	Install new batteries.

✿ Customer specific information

InspirationWorks UK Ltd

First Floor
The Annexe
Salisbury Hall
St Albans
AL2 1BU



www.inspirationworks.co.uk

Warranty:

Should you in the unlikely event experience any problems with this product all our products have a six month guarantee. In the first instance, return the product back to the place of purchase where a replacement will be issued.

© 2007 - CIDE Group
www.cidegroup.com

In the Night Garden characters and logo © Ragdoll Worldwide Limited 2007. In the Night Garden is a trade mark of Ragdoll Worldwide Limited. Produced and licensed by Ragdoll Limited.

Rev.01
March 2013
Made in China
Printed in China



WASTE ELECTRICAL PRODUCTS AND BATTERIES SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

In the Night Garden...



Magic Mirror

Instruction manual

✿ The Unit



✿ Important Information

- This toy is suitable for children aged 2 years & over.
- Please retain this manual for further reference.
- **WARNING:** All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- **IMPORTANT:** for additional safety, check toys regularly for signs of damage during use.



Content


The unit, this user manual.

How to Play

- To turn ON, use the switch at the back of the unit.
- Open the lid, to discover the magic mirror, all the activities and the friendly characters of the In the Night Garden playing hide and seek!
- There are 2 different games to play.
- Press on Discovery (Game Mode 1) in the centre of the unit to enter Discovery mode.
 - * Character keys: Press any of these keys to hear the name of the characters! Press twice on each key to hear their song! A surprise picture will also appear on the mirror.
 - * Number keys: Press one of these 4 keys, and you will hear a sentence using the number and colour.
 - * Music keys: Press one of these 4 keys, and you will hear a short jolly tune accompanied by lights on the mirror.
- Press on Quiz (Game Mode 2) in the centre of the unit to enter Quiz mode. The unit will ask you to find characters, colours or to count objects that will appear in the mirror. Use the character and number / colour keys to answer. You can have 3 attempts to find the correct answer. If after the 3 attempts you have not found the correct answer, the unit will ask you another question.
- To save battery power. The unit will switch off automatically after a few seconds of inactivity. To restart, press on any key or game mode contact.

How to Change Batteries

- This product requires 3 x AA (LR6) 1.5V batteries
- When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
- Insert 3 x AA batteries into the compartment ensuring they are installed the correct way around.
- The polarities are marked inside the battery compartment.
- Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
- Reassemble the battery cover and tighten the screw to secure.
- Do not over tighten.

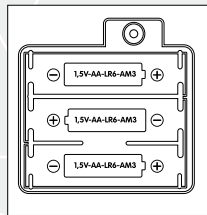

Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
 - Rechargeable batteries shall be charged only under the supervision of an adult.
 - Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.

Important Information

Care instructions:

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.
- Lamps cannot be changed on this product.

This product complies with the essential requirements of the European Toy safety directive 88/378/EEC, directives 89/336/EEC, 92/31/EC, 93/68/EEC, 2004/108/EC, 2002/96/EC, 2003/108/EC and 2002/95/EC