

 
CONTENTS

ACCESSORIES	2
SAFTY INTRODUCTIONS	3
INTRODUCTION.....	9
CONTROLS.....	9
CONNECTION OPTION	10
REMOTE CONTROL KEY FUNCTIONS	11
INSTALLING BATTERIES	13
INSTALLATION.....	14
STAND INSTALLATION.....	14
QUICK GUIDE.....	15
CONNECTIONS & SETUP	17
ANTENNA CONNECTION.....	17
DVD CONNECTION	19
PC CONNECTION	21
BASIC OPERATION.....	22
TURNING THE TV ON	22
VOLUME ADJUSTMENT	22
PROGRAM SELECTION	22
SLEEP TIMER.....	23
RETURN FUNCTION.....	23
SOURCE INPUT SWITCH	24
OSD OPERATION.....	25
HOW TO USE THE OSD (On Screen Display)	25
VIDEO MENU OPTIONS	25
AUDIO MENU OPTIONS	28
SETUP MENU OPTIONS	30
TIMER MENU OPTIONS.....	36
FIRST TIME INSTALLATION	40
DVB OPERATION	42
TROUBLESHOOTING	46
SPECIFICATIONS.....	47
WARRANTY CONDITION	48


ACCESSORIES

Ensure that the following accessories are included with your TV.
If an accessory is missing, please contact the dealer where you purchased the product.

EN

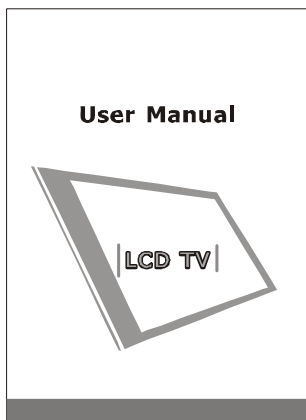

User Manual

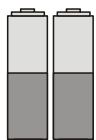 

Batteries



 
Warranty Card



Remote Control



Audio Cable

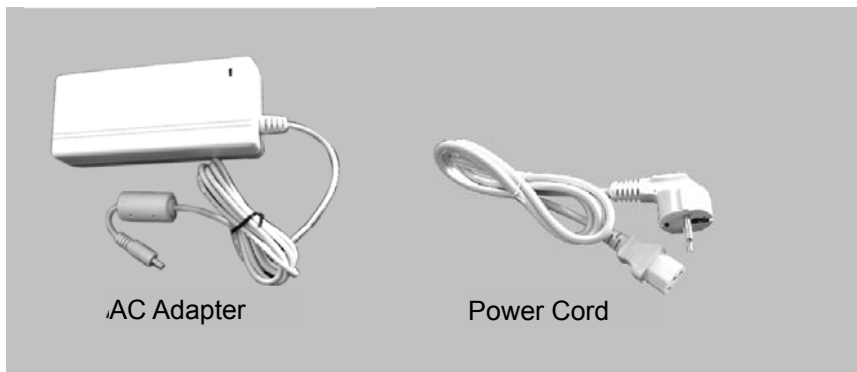

AC Adapter

Power Cord

SAFTY INTRODUCTIONS

This LCD TV is engineered and manufactured to comply with the international safety standards. The same as other electrical equipments all the safety and operating instructions should be read before the appliance is operated.

This LCD TV is engineered and manufactured to comply with the international safety standards. The same as other electrical equipments , all the safety and operating instructions should be read before the appliance is operated.

About Symbols

This manual includes different kinds of symbols. To ensure the correct using, as well as to avoid danger to users and others, the following introductions should be adhered to.



This is a WARNING symbol. If the users ignore this warning, there might be personal damage or even death due to incorrect operation.



This is an ATTENTION symbol. If the users ignore this warning, there might be damage to the person or to the appliance due to incorrect operation.

No Operations when Problems Occur

When abnormal phenomenon happens, such as smoking, smell, no picture, no voice, over loud voice, damage of part or cable, and inside of liquid or other things, there might be fire or electrical shock. Under such occasions, please unplug the TV set, make sure there is no smoke or smell, and get contact with the dealer. DO NOT repair it by yourself, or there might be hurt to human body.

No Entry of Liquid or Object

There might be fire or electrical shock if liquid or other object get inside the appliance. Please pay more attention to your children. If it happens, please unplug the TV set, make sure there is no smoke or smell, and get contact with the dealer.

- Keep the TV away from rain and moisture.
- Do not set liquids, including flower vases and vessels filled with chemicals or water etc. on top of the TV or around it.
- Do not set metal or tinder on top of the TV or around it.



SAFTY INTRODUCTIONS

Don't open the TV Set

There is high voltage subassembly inside the TV set, which may cause fire or electrical shock during repair.

- DO NOT remove cover (or back).

No Quiver or Concussion on TV Set

This appliance should not be exposed to dripping or broken. Continuous use might cause fire or electrical shock. If the panel gets broken, please unplug the TV set, and get contact with the dealer.

Set the TV on Balanced Spot

There will be damage if the TV drops or breaks.

- Don't set the TV on uneven, oblique, or shacking surface.

Ventilation

Don't interfere with its proper ventilation when the TV is working or has just been unplugged, or the display may be spoiled or life shortened due to over heating. In order to keep proper ventilation, please allow a clearance of 25cm on each side from the wall.

- Don't set any object around the ventilation openings of the appliance.
- Don't block the ventilation openings.
- NO inversion of the screen.
- Don't cover the appliance with table cloth.
- Don't set the appliance on carpet, bedding, or near to curtain.

SAFTY INTRODUCTIONS

Power Sources

Unbefitting power sources may cause fire or electrical shock. The appliance should be connected to a power supply of the type described in the operating instructions or as marked on the appliance.

- Power supply cord should adapt to the socket outlet.

Power Cord Connection

Incorrect connection of power cord may cause fire or electrical shock.

- Don't touch the cord with wet hands.
- Please check the pontes if it is clean (no dust) before use. If it is not, please do the cleaning with dry and soft fabric.
- Fix the power cord steadily in to the socket outlet to avoid it becoming flexible, or it may have malfunction.
- Don't cut off the cord, for it may debase the performance. If you want to lengthen it, please make an appropriate one or get contact with the dealer.
- If you want to change the fuse in the connector plugs, please change it with the same resistance and model.

Connect to Earth Connection

This appliance shall be connected to a mains socket outlet with a protective earth connection. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Take care of the cord, or there might be fire or electrical shock due to broken cord. Please make sure that the cord is not over hot, pressed, or tensed. If the cord has problem (the core string emerges or the cord breaks), please get contact with the dealer.

- Never allow heavy objects such as the TV set itself to be placed on the power cord. Never cover the cord with table cloth, for it may lead you to set heavy object on the cord duo to ignorance.
- When removing the power plug from the socket, always hold onto the plug, never pull by the cord.
- Don't set the cord next to heaters.
- Don't touch the plug right after it is unplugged to avoid electrical shock.
- Don't touch the plug during lightning.
- Don't allow cord to become knotted or tangled.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

SAFTY INTRODUCTIONS

Dispose the Batteries Carefully

- Incorrect disposal of batteries may cause fire or human damage, and even explosion.
- Don't throw batteries into fire or water.
- Keep the batteries far away from fire or heat.
- Don't fetch the batteries with metal forceps.
- Keep the batteries under cool and dry environment.
- Match the batteries to the (+) and (-) marks in the battery compartment.
- Don't charge up, dismantle, or joint the batteries.
- Don't impact the batteries.
- Please use the batteries that are appointed in the user's manual.
- Please clean the matter sweeps out of the batteries if they break, and change a new pair. If the matters stick to your clothes, please clean it with water downright.
- Please treat the used batteries with the observance of the local law.



Battery Recycling

In order to ensure the environmentally friendly disposal of batteries, please do **NOT** dispose of used batteries through normal household waste. Please take the batteries to your local retail or community collection point for recycling.

The following may be an indication of a discharged battery: The device cannot be switched on. The device switches off automatically and "Battery Empty" is shown in the display. The device and or battery do not function properly.

Don't Set the TV in the places bellow:

- In the sun or near heaters;
- Places where difference in temperature goes great;
- Places that have bad ventilation;
- Near fire;
- Moist places such as bathroom;
- Places that human walks frequently or places where are quivering fiercely;
- Places where is deflective or unbalanced.


SAFTY INTRODUCTIONS

Watching TV

Please watch TV indoors where there is proper brightness. Please make sure the sunlight will not fall directly on the picture screen. Please relax your eyes every now and then by taking an overlook.

How to Clean the TV Set

Before cleaning, please turn off the TV and unplug the power cord. Don't beat or scrape the screen with sharp and hard object. Clean the screen with a soft cloth moistened in warm water. A mild soap may be used if the screen is extremely dirty. Dry the screen with a soft cloth after cleaning.

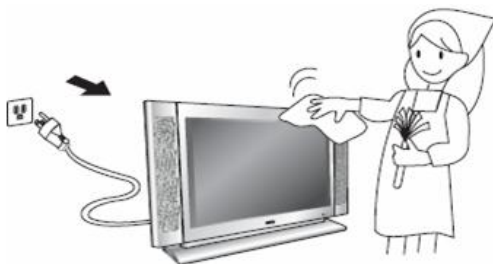

Notes of Cable Connection

- Make sure that all cables, including connector plugs, extend lines, and connecting cables between equipments are specify by the manufacturer. Before changing the connection, please turn off the power and unplug the power cord;
- The power cord should not be the same one as other equipments';
- Use plugs with a protective earthing connection.

SAFTY INTRODUCTIONS

Notes of Transportation

Please handle with care during transportation. Besides, please use the original carton and wrappage, or it may damage the TV set. Please retain the original carton and wrappage.

Don't Impact the Remote Control

Impacts on remote control may lead to trouble.

- Please don't chuck the remote control;
- Don't set heavy object on remote control.

To Avoid Fierce Lights

The sensor of remote control will not work if the lights, such as sunlight or bright indoor illumination fall directly on it. Make sure that there is no interference from wireless, or it may cause distortion of the picture or unusual sound. There should no equipment like mobile telephone or wireless receiver.

Adjust Volume to a Proper Level

It's better to turn down the volume and shut the windows at night, in case it will influence others.

Note on Installation

- Never use wooden screws and bracket to fix up. Use those that are specified by the manufacturer;
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over;
- Pleas follow all the operating instructions of the wall or ceiling mounting;
- Use only the attachments/accessories specified by the manufacturer;
- If you have any questions on installation, operation, or safety, please call the dealer.



Tips regarding environmental protection

At the end of its operating life, this product may not be disposed of by way of your normal household waste. Instead it must be delivered to a collection point for recycling electrical and electronic equipment. The icon on the product, in the operating instructions or on the packaging, indicates this.

The materials used in manufacturing this product are recyclable, depending on their identifying markings. By recycling this equipment, by recycling its components, or through other procedures of re-using outdated equipment, you are making an important contribution to protection our environment. Please ask you local municipal administration for the location of the corresponding recycling point.


INTRODUCTION

CONTROLS

This manual explains the features available on the model of 22 LCD TV.

- This is a simplified representation of a front panel. Here shown may be somewhat different from your TV.

Control Panel

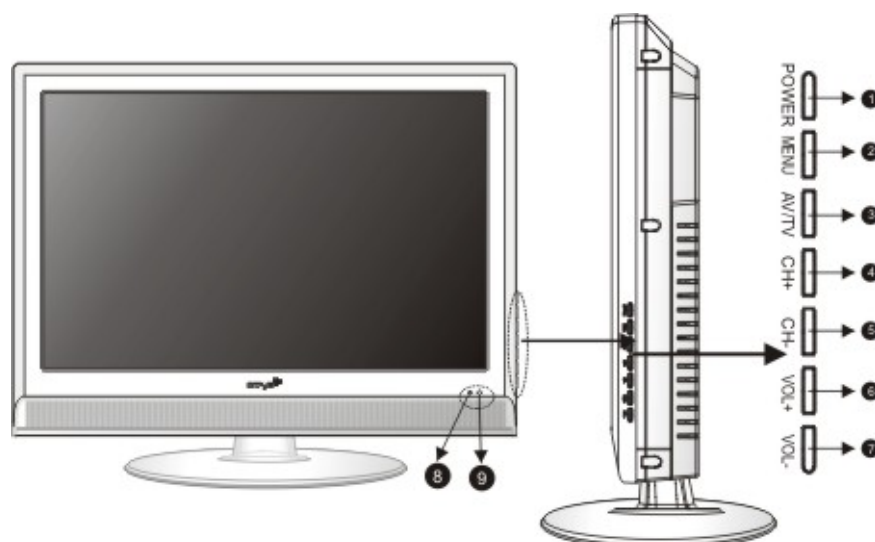

- (1) (Power) Press this button to standby mood.
- (2) (MENU) Press this button to display the OSD menu. When the OSD menu is on, press this button to exit the menu
- (3) (AV/ TV) Press this button to select AV source or TV source.
- (4) (CH+) Press the button to up the channel
- (5) (CH-) Press the button to down the channel
- (6) (VOL+) Press Volume+ to increase the volume.
- (7) (VOL-) Press Volume- to decrease the volume.
- (8) (Indicator) Stand by/Power indicator
- (9) (Receiver) Infrared remote control sensor window

 
 
INTRODUCTION

CONNECTION OPTION

Back Connection Panel

- This is a simplified representation of a back panel.

Here shown may be somewhat different from your TV.

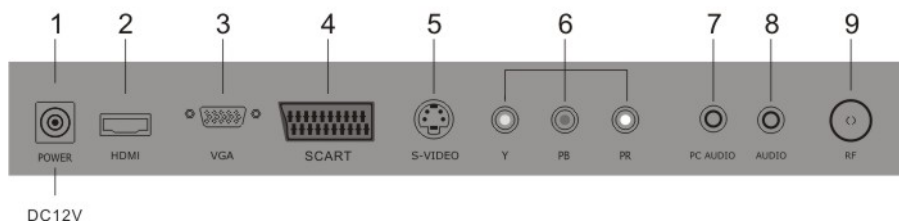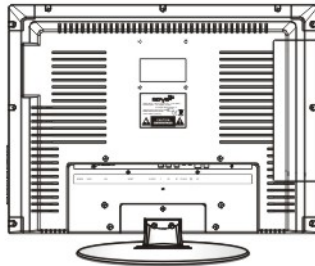

(01):(POWER)DC IN : Connect the power cord with DC12V to this input

(02):HDMI Input: Connect HDMI signal

(03)PC VGA Input: Connect PC VGA signal output

(04)SCART Connector(CVBS input; RGB input; Audio input; based on TV audio and video output)

(05)S-video Input: Connect S-video output of your AV device

(06)YPbPr Video Input: Connect the component image output of your AV devices here

(07)PC Audio Input: Connect PC audio input

(08)Audio Input: connect to S-video/YPbPr AUDIO input

(09)RF: Antenna Input (75 ohm)


Note: Please study the operation manuals of external equipments before connecting them to the television

Please turn off the TV when connecting other equipments till all the connection is in correct.

INTRODUCTION

REMOTE CONTROL KEY FUNCTIONS

- | | |
|------------------------|---|
| (1) POWER | Switches the TV set on. |
| (2) MUTE | Press to eliminate or restore the TV sound. |
| (3) AUTO | Press to pc source picture auto adjust. |
| (4) P.MODE | Press to select preset picture mode. |
| (5) S.MODE | Press to select Sound mode button. |
| (6) NICAM | Press to select TV sound. |
| (7) DISPLAY | Press to display current status, TV channel; input source. |
| (8) Numerical buttons: | Press number buttons for direct access TV channels. |
| (9) ↻ button | Press to return to previous channel. |
| (10) -/-- button | Direct input numerical button for 2 digit or 3 digit program. |
| (11) LCDMENU | LCD menu selection. |
| (12) EXIT | Exit the OSD menu(On-screen display). |
| (13) SLEEP | Sets the sleep timer |
| (14) INPUT | Press to display all possible input sources |
| (15) " ▲ " button | Press the button to up channels.
When OSD menu is on ,press this button to move the selection focus up or change settings. |
| (16) " ▼ "button | Press the button to down channels.
When OSD menu is on, press this button to move the selection focus down or change settings. |
| (17) " ◀ "button: | Press the button to decrease the volume.
When OSD menu is on, press this button to move the selection focus left or confirm the settings. |
| (18) " ▶ "button | Press the button to increase the volume.
When OSD menu is on, press this button to move the selection focus right or confirm the settings. |

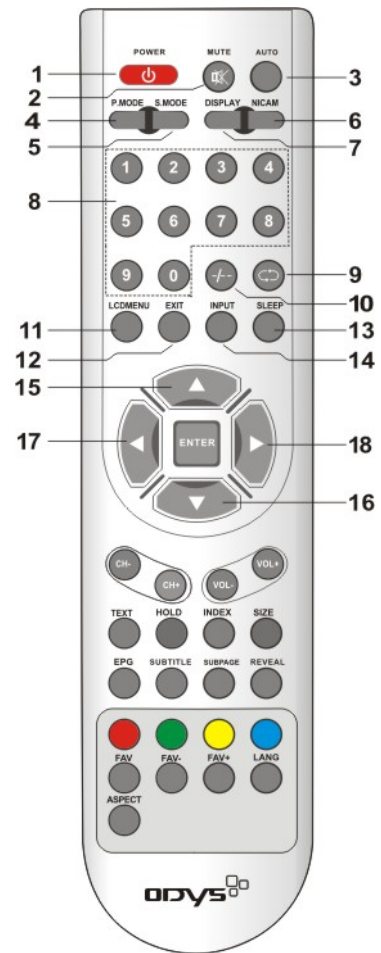 


INTRODUCTION

REMOTE CONTROL KEY FUNCTIONS

EN

 - (19) CH- button Changes the channels down.
- (20) CH+ button Changes the channels up.
- (21) VOL- button Adjusts the volume down.
- (22) VOL+ button Adjusts the volume up.
- (23) TEXT button Switch the teletext on or off
- (24) HOLD button Teletext function button
(used for teletext mode only)
- (25) SIZE button Teletext function button
(used for teletext mode only)
- (26) INDEX button Teletext function button
(used for teletext mode only)
- (27) EPG button Enter Electronic Program Guide.
- (28) SUBTITLE Press the button to select different captions.
- (29) REVEAL button Press this button to reveal the hidden
information for some teletext mode.
- (30) SUBPAGE Carry out the function of SUBCODE in the
text while enter the display mode.
- (31) "RED" button Teletext function button
(used for teletext mode only)
- (32) "GREEN" Teletext function button
(used for teletext mode only)
- (33) "YELLOW" Teletext function button
(used for teletext mode only)
- (34) "CYAN" Teletext function button
(used for teletext mode only)
- (35) FAV button Switch between custom set "Favorite list".
- (36) FAV- button Changes the Favorite channels down.
- (37) LANG button Press to select DTV language.
- (38) FAV+ button Changes the Favorite channels down.
- (39) ASPECT button Press to select picture mode 4:3,16:9 etc.

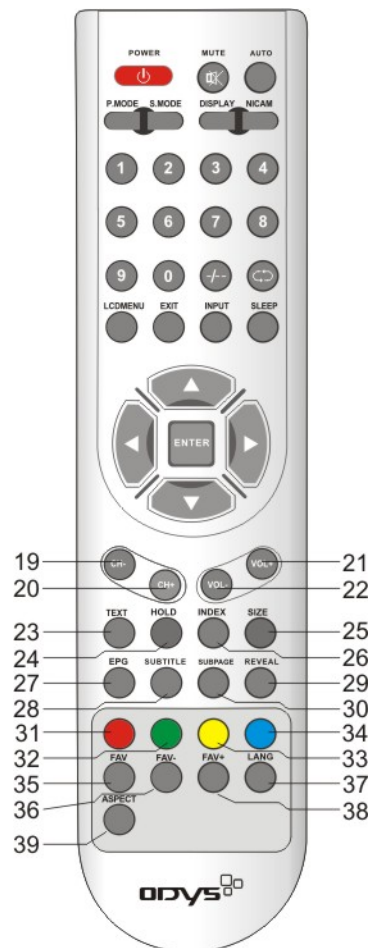

INTRODUCTION

INSTALLING BATTERIES

- (1) Open the battery compartment cover on the back side
- (2) Insert two 1.5V batteries of AAA type with correct polarity
- (3) Close the battery compartment cover on the back side

Notes on Using Batteries

The use of the wrong type of batteries may cause chemical leaks and/or explosion.

Please note the following:

Always ensure that the batteries are inserted with the positive and negative terminals in the correct direction as shown in the batteries compartment. Different types of batteries have different characteristics. Do not mix different types.

Do not mix old and new batteries. Mixing old and new batteries will shorten battery life and /or cause chemical leaks from the old batteries.

When batteries fail to function, replace them immediately.

Chemicals which leak from batteries may cause skin irritation.

If any chemical matter seeps out of the batteries, wipe it up immediately using a dry cloth.

Due to varying storage conditions, the battery life for the batteries included with your unit may be shortened.

If the remote control is not used for a long period of time, remove the batteries.

 
Notes on using the Remote control:

Do not strike or drop the remote.

Do not expose the remote control to liquids and do not place it in humid environment.

Do not install or place the remote control in direct sunlight.

The heat may damage the remote control.

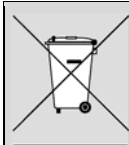

Battery Recycling

In order to ensure the environmentally friendly disposal of batteries, please do **NOT** dispose of used batteries through normal household waste. Please take the batteries to your local retail or community collection point for recycling.

The following may be an indication of a discharged battery: The device cannot be switched on. The device switches off automatically and "Battery Empty" is shown in the display. The device and or battery do not function properly.

INSTALLATION

 
STAND INSTALLATION

EN


Wall Mount: Horizontal installation

- (1) Secure the wall brackets with the bolts (not provided as parts of the product, must purchase separately) on the wall. Match the height of the bracket that is mounted on the wall. The wall bracket is of normal dimension. Please see the position of the wall brackets bolts as follow picture .The actual dimension of the wall brackets bolt should according to the products. Detailed installation instructions are available from your dealer; see the optional Tilt Wall Mounting Bracket Installation and Setup Guide.




The wall brackets bolt position

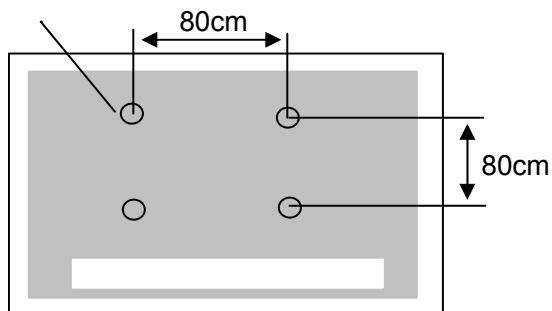

 - (2) Remove the table stand of the TV when install the TV on a wall as follow:

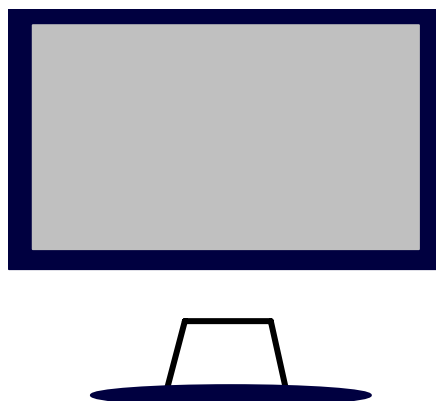


- (3) For proper ventilation, allow a clearance of 10cm on each side from the wall.

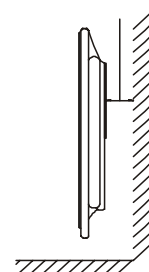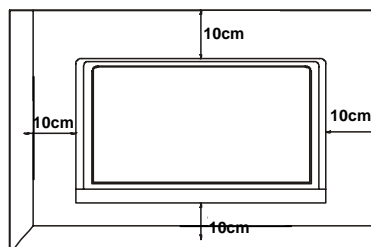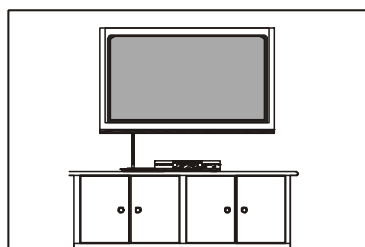

INSTALLATION

STAND INSTALLATION

- (1) Keep the TV stand when installing.
- (2) Don't set the TV set on shelves, carpets, beds, or closets.
- (3) Don't cover the TV with curtain or paper.
- (4) Avoid the following methods:

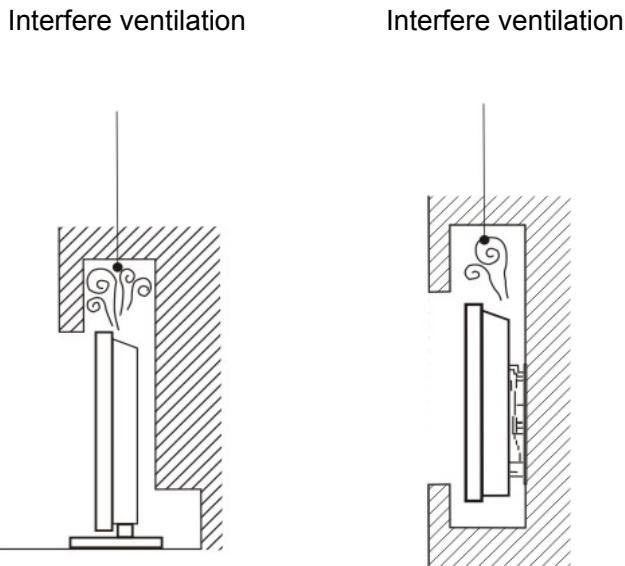


QUICK GUIDE

First Installation

The installation assistant starts automatically when the device is being switched on for the first time.

1. Choose the desired option in the menu using the ▼ / ▲ buttons.
2. Change the settings using the ◀ / ▶ buttons.
3. You can choose among the following settings:

Country	Where you scan for channels
Language	OSD Language
Delete Program Search	
Analogue Program Search	
Delete Digital Program	
Digital Program Search	

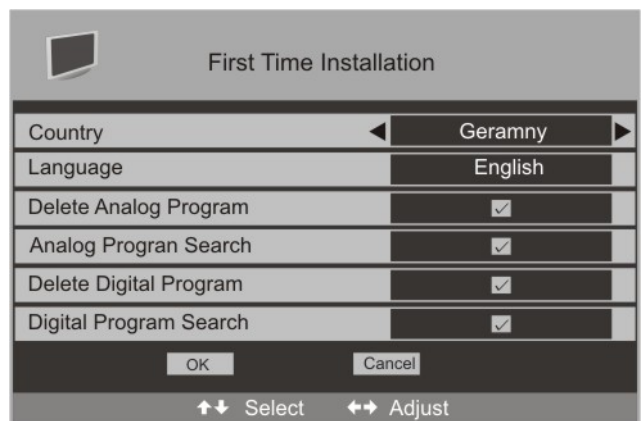 

4. Now, press the OK button and confirm pressing the ENTER button. Upon this, the chosen settings will be executed.

NOTE: The standard language is English. The options are marked during the first installation.

INSTALLATION

Change the language setting

1. Press the LCD menu button of the remote control and choose FUNCTION. Press once the ◀ -button.
2. Choose the option LANGUAGE. Use the ▼ / ▲ buttons.
3. Change the language using the ◀ / ▶ buttons.

Repeat first installation routine

1. Press LCD menu button of the remote control and choose FUNCTION. For this, press once the ◀ -button.
2. Afterwards, choose the option "FIRST TIME INSTALLATION" using the ▼ / ▲ -buttons.

Follow the instructions given under FIRST TIME INSTALLATION.

NOTE: There are no markers. Mark the desired options.

IMPORTANT BUTTONS

MUTE

LCD MENU open the menu

EXIT leave menu, EPG or TELETEXT

INPUT choose signal source

TV: analogue TV (cable TV) **DVB-T:** DVB-T

ENTER Confirm chosen options, open program list

ASPECT change format

NOTE:

Please make sure that DVB-T coverage is available for your area. DVB-T radio in particular is very limited and not available in most locations.

Depending on your region and building structure, a stronger antenna might be necessary in order to receive DVB-T stations. Metal buildings and the geographic location of the transponder may have a strong effect on the available signal strength. Please note that this is not a device defect, but particularities of the reception of DVB-T.


Appropriate antennas may be obtained from your local electronics dealer.

CONNECTIONS & SETUP

- To prevent the equipment damage, never plug in any power cords until you have finished connecting all equipment.

ANTENNA CONNECTION


- For optimum picture quality, adjust antenna direction.
- An antenna cable and converter are not supplied.

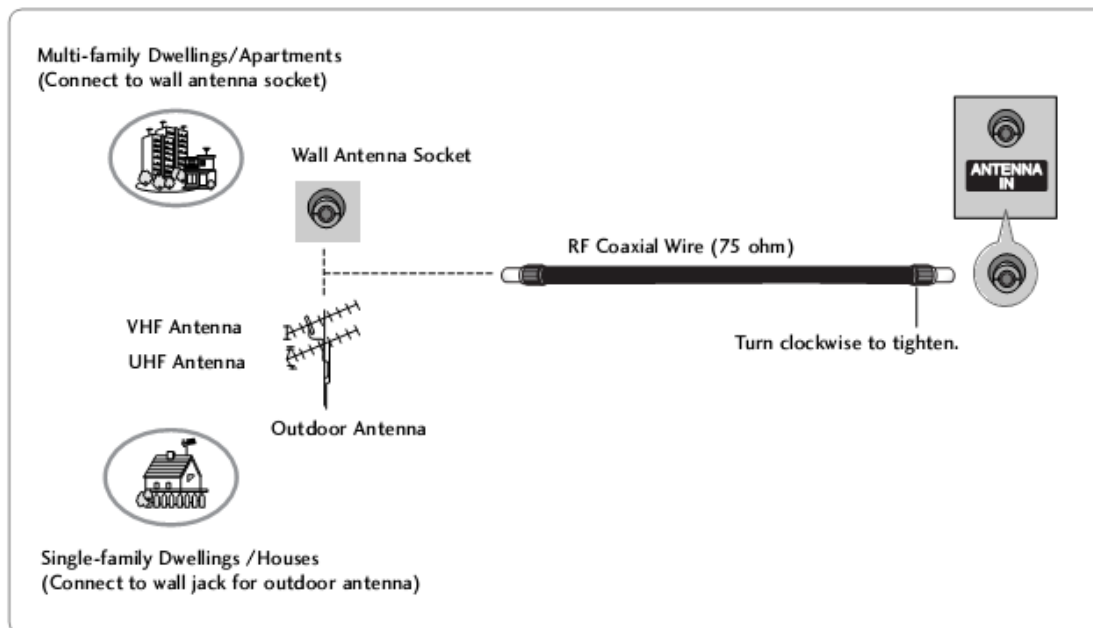

CONNECTIONS & SETUP

ANTENNA CONNECTION

 - In poor signal areas, to get better picture quality, install a signal amplifier to the antenna as shown below.
- If signal needs to be split for two TVs, use an antenna signal splitter for connection.

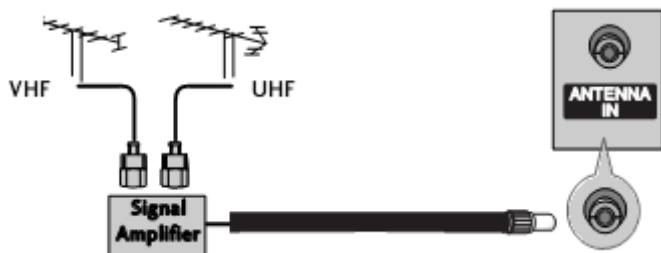

NOTE:

You are able to use analogue TV (Cable TV) or DVB-T as signal source.

For DVB-T (DTT) reception insure that the service is available for your area. DVB-T radio in particular is very limited and not available in most locations.

Depending on your region and building structure, a stronger antenna may be requires in order to receive DVB-T stations. Metal buildings and the geographic location of the transponder may have a strong effect on the reception. Please note that this is not a device defect; merely specific specifications for the reception of DVB-T.


Appropriate antennas may be obtained from your local specialty stores.

CONNECTIONS & SETUP

DVD CONNECTION

When connecting with a component cable

1. Connect the video outputs (Y, PB, PR) of the DVD to the YPbPr jacks on the set
2. Connect the audio outputs of the DVD to the Audio Input jack on the set.
3. Turn on the DVD player, insert a DVD.
4. Select YPbPr source with using the SOURCE button on the remote control
5. Refer to the DVD player's manual for operating instructions

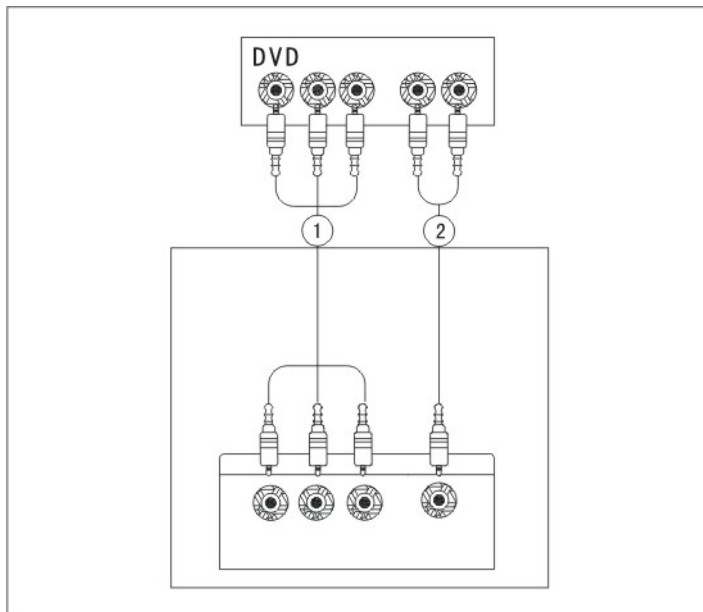


CONNECTIONS & SETUP

DVD CONNECTION


When connecting with a S-Video cable

1. Connect the S-VIDEO output of the DVD to the S-VIDEO input on the set.
2. Connect the audio outputs of the DVD to the Audio Input jack on the set.
3. Turn on the DVD player, insert a DVD
4. Select S-VIDEO source with using the SOURCE button on the remote control.
5. Refer to the DVD player's manual for operating instructions

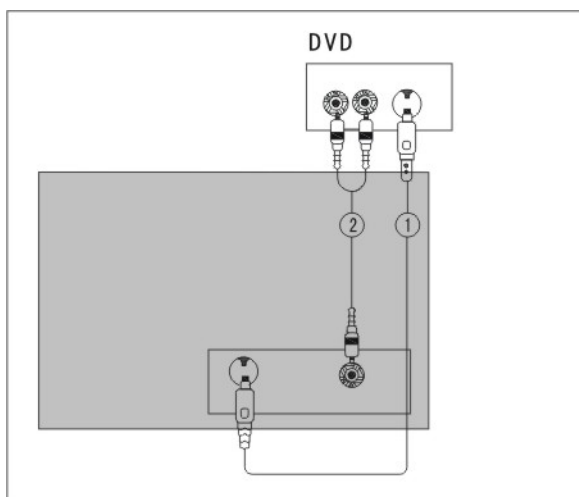

When connecting with a HDMI cable

1. Connect the HDMI output of the DVD to the HDMI Input jack on the set.
2. Select HDMI source with using the SOURCE button on the remote control
3. Refer to the DVD player's manual for operating instructions.

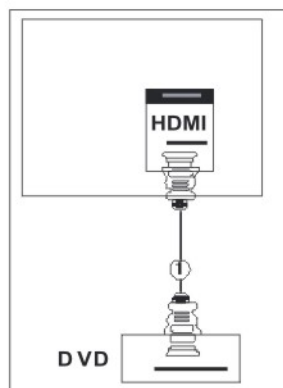


HDMI provides both audio and video signals and typically provides superior image quality to component or S-Video.

CONNECTIONS & SETUP

PC CONNECTION

When connecting with a D-sub 15 pin cable

1. Connect the RGB output of the PC to the PC VGA Input jack on the set.
2. Connect the audio outputs of the PC to the PC Audio Input jack on the set.
3. Turn on the PC and the set
4. Select PC source with using the SOURCE button on the remote control.
5. Refer to the PC manual for operating instructions.

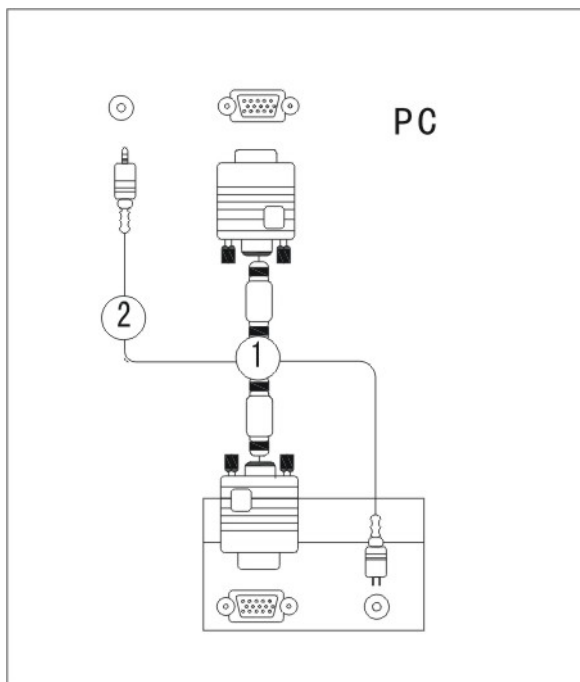


BASIC OPERATION


TURNING THE TV ON

If your TV will be turned on, you will be able to use its features.

Turning on the TV



First, connect power cord correctly. When the indicator illuminates red is standby mode.

Press the  button on the remote control then the indicator illuminates orange, after the TV initialization finished, the indicator turns to green. It means the TV is in power mode.

When you press the  button on the remote control once again, the power/stand-by Indicator illuminates red in standby mode.

If you intend to be away on vacation, disconnect the power plug from wall power outlet.

VOLUME ADJUSTMENT

1. Press the VOL +/VOL- button on the control panel or the ◀ / ▶ button on the remote control to adjust the volume.
2. If you want to switch the sound off, press the  button on the remote control.
3. You can cancel this function by pressing the , button or the ◀ / ▶ button on the remote control.

PROGRAM SELECTION

Press the CH +/CH- button on the control panel or the Numerical buttons or the ▼ / ▲ button to select a program number.



BASIC OPERATION

SLEEP TIMER

You don't have to remember to switch the set off before you go to sleep.


The sleep timer automatically switches the set to standby after the preset time has elapsed.

Press the SLEEP button on the remote control repeatedly to select the number of minutes.

The display will appear on the screen followed by close, 015,30,45 ,60,75,90,105and 120 minutes.



RETURN FUNCTION

When you are looking TV programs ,you can press the  button on the remote control to return to the previous channel.

BASIC OPERATION

 
SOURCE INPUT SWITCH

1. Press SOURCE button on the remote control to the source menu.

The source menu rank as: TV - SCART - S-VIDEO - YPbPr - VGA - HDMI - DTV ;

2. Press ▼ / ▲ button on the remote control to select the source in the menu.

When the bar became red means the covering source selected.

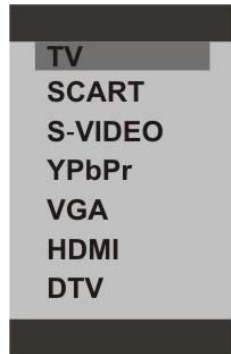

OSD OPERATION

HOW TO USE THE OSD (On Screen Display)

The OSD (On Screen Display) function enables you to adjust the screen status conveniently since it provides graphical presentation.

In this manual, the OSD (On Screen Display) may be different from your TV's because it is just example to help the TV operation.

Press the MENU ◀ / ▶ , ▼ / ▲ buttons on the remote control to adjust or set up the pictures, sound, program channel ,PC signal source ,etc .of the TV. Please refer to the interrelated menu operation.

 
Note : The "MENU", "VOL+/VOL-", " CH+/CH-" buttons on the control panel and the

MENU ◀ / ▶ , ▼ / ▲ buttons on the remote control are of the same function .

Here only signed as MENU ◀ / ▶ , ▼ / ▲ on the remote control

VIDEO MENU OPTIONS

Press MENU button on the control panel or LCD-MENU on the remote control to display the main menu.

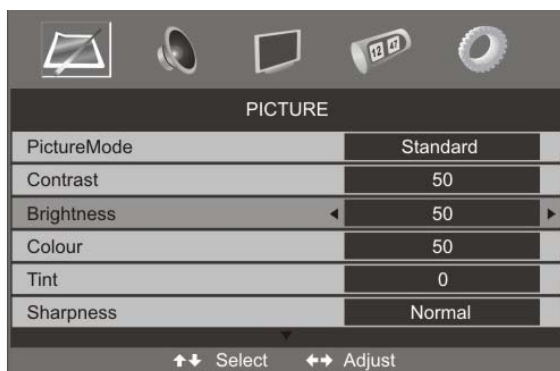

1. Press ◀ / ▶ button to select PICTURE in the main menu.
2. Press ▼ / ▲ button to select the option that you want to adjust in the PICTURE menu.
3. Press ◀ / ▶ button to adjust.
4. When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.



Adjusting Tint is only available under NTSC signal mode.

OSD OPERATION

VIDEO MENU OPTIONS

Picture Mode

Select Picture Mode in PICTURE menu. (Available picture mode: Standard, Personal, Movie, Sport, Mild, Game.)

If you change the value of Contrast, Brightness, Colour, Tint, Sharpness or Colour temperature on the picture menu, the picture mode will be changed to "Personal" automatically.

NOTE: You can press PMODE button on the remote control to select the Picture Mode directly.

Contrast

Press \blacktriangledown / \blacktriangle button and then use \blacktriangleleft / \blacktriangleright to adjust the contrast of the picture.



After adjust the value you want, press LCD-MENU button to return to the preview MENU.

Brightness

Press \blacktriangledown / \blacktriangle button and then use \blacktriangleleft / \blacktriangleright to adjust the brightness of the picture.

OSD OPERATION

VIDEO MENU OPTIONS

Colour

Press ▼ / ▲ button and then use ◀ / ▶ to adjust the colour saturation.

NOTE: This option is invalid in PC mode, and it will be shown in gray.

Tint

Press ▼ / ▲ button and then use ◀ / ▶ to adjust the tone of colour when your system is in NTSC.

Sharpness

Press ◀ / ▶ to select the sharpness mode of your TV.

(Available Sharpness Mode: Normal, Sharp, Sharpest, Softest, Soft.)

 
Colour temperature

Select an optimum colour temperature mode to suit your eyes for viewing among Normal, Warm and Cold.

NOTE: This option is available only in PC mode.

DNR (Digital Noise Reduction)

If the broadcast signal received is weak, you can select the DNR option to reduce the video noise level between Off, Low, Mid and High.

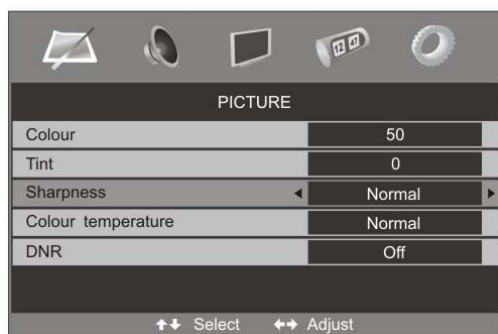

OSD OPERATION

AUDIO MENU OPTIONS

Press MENU button on the front panel or LCD-MENU on the remote control to display the main menu.



1. Press the ◀ / ▶ button to select SOUND in the main menu.
2. Press the ▼ / ▲ button to select the option that you want to adjust in the SOUND menu.
3. Press the ◀ / ▶ button to adjust.
4. When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.

Volume

Press ▼ / ▲ button and then use ◀ / ▶ to adjust the sound level.



After adjust the value you want, press LCD-MENU button to return to the preview MENU.

OSD OPERATION

AUDIO MENU OPTIONS

Sound Mode

Select Sound Mode in SOUND menu. (Available sound mode: Personal, Voice, Music, Theatre.)

If you change the value of Bass and Treble on the Sound menu, the sound mode will be changed to "Personal" automatically.

You may select the sound mode directly by pressing SMODE button .

NOTE: You can press SMODE button on the remote control to select the Sound Mode directly.

Bass

Press ▼ / ▲ button and then use ◀ / ▶ to increase or decrease the level of the lower-pitched sounds.

Treble

Press ▼ / ▲ button and then use ◀ / ▶ to increase or decrease the level of the higher-pitched sounds.

Balance

Press ▼ / ▲ button and then use ◀ / ▶ to adjust the audio output between left and right speakers.

OSD OPERATION

SETUP MENU OPTIONS

Press MENU button on the front panel or LCD-MENU on the remote control to display the main menu.

NOTE: SETUP menus are different for different input sources, if the input source is selected HDMI/YPbPr/VGA and there are no relative input signal, SETUP menu will be unavailable.

SETUP menu of TV input:



1. Press the ◀ / ▶ button to select SETUP in the main menu.
2. Press the ▼ / ▲ button to select your option what you want to adjust in the SETUP menu.
3. Press the ◀ / ▶ button to adjust.
4. When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.

OSD OPERATION

SETUP MENU OPTIONS

Country

This option allows you to select the country.

Auto tuning

 
This option allows you to tune the channels that can be received automatically.

Note: Before you perform Auto Tuning, you must choose the country where you are by selecting COUNTRY option.



Press ENTER key to start.

1. Press ▲ and ▼ to select Auto Tuning in the SETUP menu.
2. Press ◀ and ▶ to perform your selection.
3. Press ENTER to start Auto Tuning as below:
4. During searching, you can press EXIT to stop tuning at any moment, and return to the previous menu.

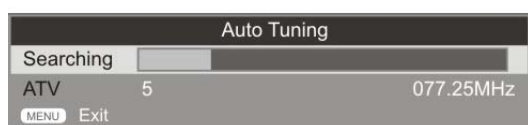

You can press LCD-MENU button to stop auto tuning and close the OSD menu.

OSD OPERATION

SETUP MENU OPTIONS

 
EN

Manual Tuning

This option allows you to perform Manual Tuning.

Note: Before you perform Manual Tuning, you must choose the country where you are by selecting Country option.

1. Press ◀ / ▶ to select Manual tuning in SETUP menu.
2. Press ▼ / ▲ to perform your selection, the menu of Manual tuning will display on the screen.

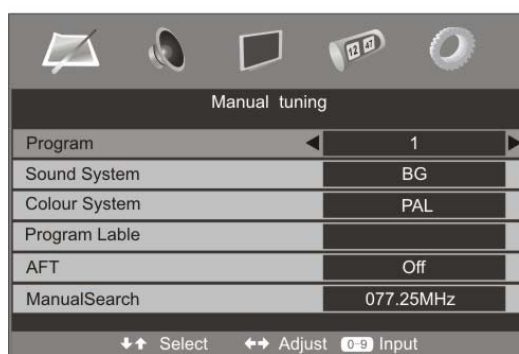

Program

The current program number. Press ◀ / ▶ to select the upper or lower program.

Sound System

Press ◀ / ▶ to select a corresponding sound system, such as BG//DK/ L/L'.

Color System

Press ◀ / ▶ to select a corresponding colour system, such as PAL/SECAM.

OSD OPERATION

SETUP MENU OPTIONS

Program Label

This option allows you to name a channel, you can also rename the program which you have named.

1. Select a channel to be named.
2. Press ◀ and ▶ to select Manual tuning in SETUP menu.
3. Press ▲ and ▼ to perform your selection, the menu of program label will display as below



4. Press the numeric buttons to input the numbers directly or press ▲ and ▼ to select the letters.
5. Press ◀ and ▶ to move the cursor.
6. Press MENU to return to previous menu or press EXIT to exit.

AFT

Due to weak signals or a wrong antenna configuration, some of the channels may not be tuned to the best reception condition. AFT function allows you to fine tune channel selected (the frequency of channel is around the value in Manual Search option).

Manual Search



This option has two functions:

1. Set the frequency of channel for AFT option.
2. Press ▶ button for 3+ seconds and it will start auto tuning from this frequency.



OSD OPERATION

 
SETUP MENU OPTIONS

1. Press ▲ and ▼ to select Program Edit in SETUP menu.
2. Press ▲ and ▼ to enter into the sub menu, a channel list will display.
3. Press ▲ and ▼ to select the channel in the list which you would like to sort.
4. Press ▶ to perform your selection.
5. Press ▲ and ▼ to select the location you would like to place the channel.
6. Press ◀ to perform you selection.

After completed, press MENU to return to the previous menu or press EXIT to exit.

SETUP menu of VGA input (for setting the PC picture position):

NOTE: SETUP menu will be unavailable if there is no VGA signal input.

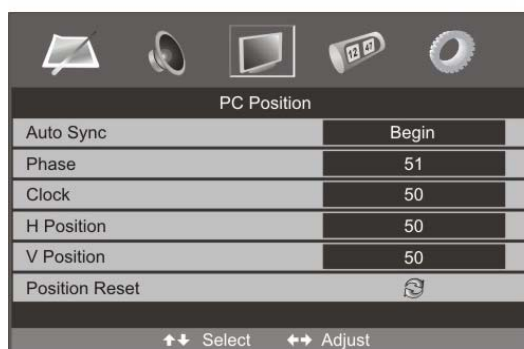


OSD OPERATION

SETUP MENU OPTIONS

SETUP menu of HDMI input (for setting the HDMI picture position):

 NOTE: SETUP menu will be unavailable if there is no HDMI signal input.

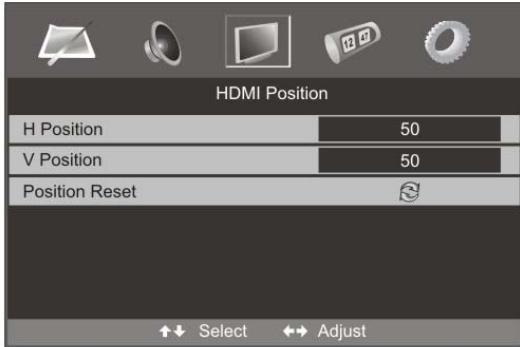

SETUP menu of YPbPr input (for setting the YPbPr picture position):

NOTE: SETUP menu will be unavailable if there is no YPbPr signal input.



OSD OPERATION

TIMER MENU OPTIONS

Press MENU button on the control panel or LCD-MENU on the remote control to display the main menu.



1. Select TIMER in the main menu.
2. Select your option what you want to adjust in the TIMER menu.
3. Press the ◀ / ▶ button to adjust.
4. When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.

Sleep Timer

Select the sleep time to put automatically the TV in standby mode.

Timer can be selected as 0min, 15min, 30min, 45min, 60min, 75min, 90min, 105min, 120min. Also you can select the sleep time by pressing SLEEP button repeatedly.

 
OSD Timer

You can select the time when the OSD display on the screen such as: 5Sec, 10Sec, 15Sec, 20Sec, 25Sec, 30Sec.

OSD OPERATION

FUNCTION MENU OPTIONS

Press MENU button on the control panel or LCD-MENU on the remote control to display the main menu.

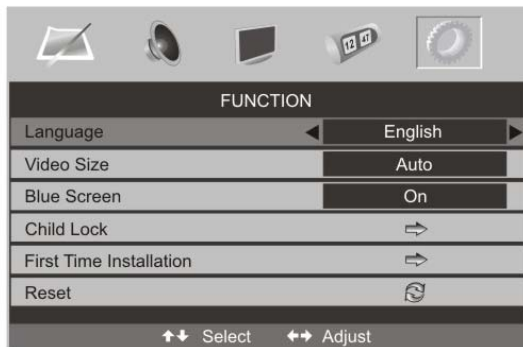

1. Press the ◀ / ▶ button to select FUNCTION in the main menu.
2. Press the ▼ / ▲ button to select your option what you want to adjust in the FUNCTION menu.
3. Press the ◀ / ▶ button to adjust.
4. When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.

Language

This option allows you to select the language of OSD (on screen display) by pressing ◀ and ▶ Such as English/ Francais/ Deutsch/ Italiano/ Espanol/ Spain/ Portuguese.

Video Size

This option allows you to select the screen display mode which best corresponds to your viewing requirements.

Note: The available aspect mode may be different in different input signal.

Blue screen

This option allows you to select the blue background on or off. If on, the screen background will turn blue at very weak or no signal condition.

 
OSD OPERATION

FUNCTION MENU OPTIONS

Child Lock

Press ENTER or ► button to set the child lock.

You need to enter the PIN code if the Child lock is set "on", and the default PIN code is empty, you can press ENTER button directly to enter.

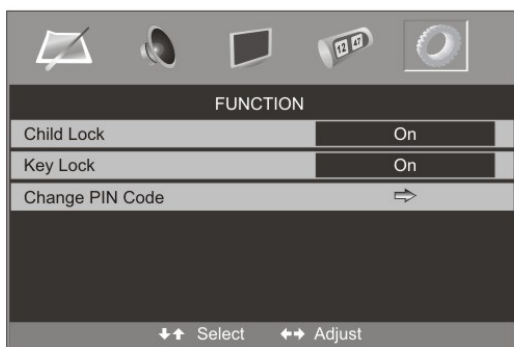

NOTE: The administrator's password is 4711.

Child Lock

Press ENTER or ► button to set the child lock.

Key Lock

 
Press ENTER or ► button to set the key lock.

OSD OPERATION

FUNCTION MENU OPTIONS

Change PIN Code

Press ► button to enter Change PIN Code menu.

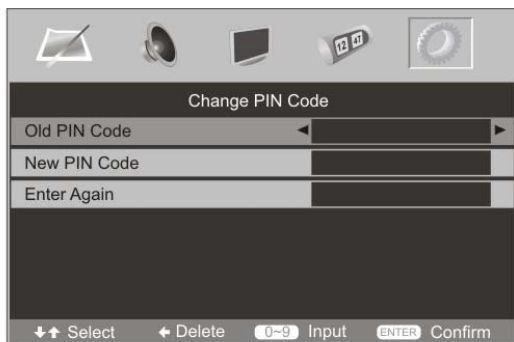

Old PIN Code

Press 0~9 buttons to enter the correct old PIN code, you can not change the PIN code if you entered a wrong PIN code.

New PIN Code

Press 0-9 buttons to enter the PIN code you entered in the New

PIN Code

menu again to confirm the new PIN code.

First Time Installation

Press ► button to open the first time installation menu and the operation of this menu is in page 3.

 
Reset

Press ENTER or ► button to reset the TV to the factory default.

OSD OPERATION

FIRST TIME INSTALLATION

If this is the first time you power on the TV and there are no programs in the TV memory, the First Time Installation menu will appear in the display.

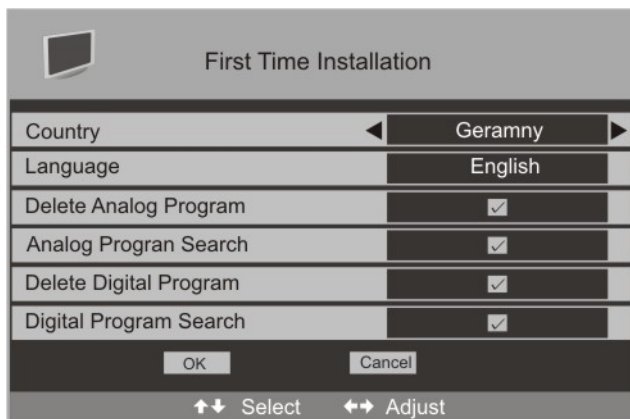

Country

Press ▼ and ▲ button and then use ◀ and ▶ to select the country.

Language

Press ▼ and ▲ button and then use ◀ and ▶ to select the OSD language.

Delete Analog Program

 
Press ▼ and ▲ button and then use ◀ and ▶ to select whether to delete all the analog programs.

Analog Program Search

Press ▼ and ▲ button and then use ◀ and ▶ to select whether to start searching analog programs.

OSD OPERATION

FIRST TIME INSTALLATION

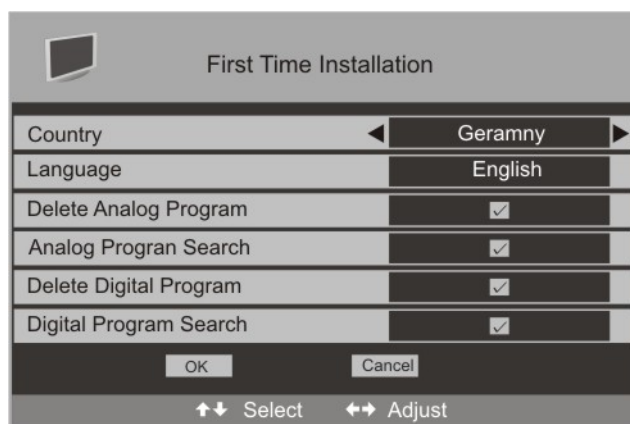

Delete Digital Program

Press ▼ and ▲ button and then use ◀ and ▶ to select whether to delete all the digital programs.

Digital Program Search

Press ▼ and ▲ button and then use ◀ and ▶ to select whether to start searching digital programs.

After setting the items select OK to finish the first time installation or select cancel to exit this menu. If you cancelled the first time installation it will remind you whether to set the first time installation next time.

i Please allow a few minutes for this feature to scan the entire range of available channels to insure accurate programming of available channels.

i **Note**
To avoid distortion, it may me necessary to switch the display to 4:3 or 16:9 which ever best suites the current station.
Please note that movies using the 21:9 format may cause black margins on the upper and lower margins of the display.

OSD OPERATION

DVB OPERATION

EN

Channel List options

Press ENTER button to open the Channel List, then Press ▼ / ▲ to select the channel you want to watch.



Favorite List options

Press FAV button to open the Channel List, then Press ▼ / ▲ to select the channel you want to watch.



NOTE: Only the channels that you selected to FAV in Program Edit Menu could be displayed in favorite List.

OSD OPERATION

DVB OPERATION

Channel Search options



1. Press the ◀ / ▶ button to select SETUP in the main menu.
2. Press the ▼ / ▲ button to select your option what you want to adjust in the SETUP menu.
3. Press the ◀ / ▶ button to adjust.
4. When you are satisfied with your adjustment, press the LCD-MENU button to return to the previous menu or press the EXIT button to exit the main menu.



Press ▼ / ▲ button to select Manual Search, Press ENTER or ▶ button to set the Manual Tuning.

Channel

The current channel number. Press ◀ / ▶ to select the upper or lower channel, press 0~9 to select the channel directly.

Start Search

To select whether to start searching in begin/searching/finished.

OSD OPERATION

DVB OPERATION

EN

Service Found

The services be found.

Signal Quality

The signal quality of current channel.

Signal Strength

The signal strength of current channel.

Frequency

The frequency of current channel.

Program Edit

This function allows you to edit the DTV programs according to your preferences, as following:

 


OSD OPERATION

DVB OPERATION

EPG Menu

Press EPG button on the remote control to display the EPG menu directly as below:

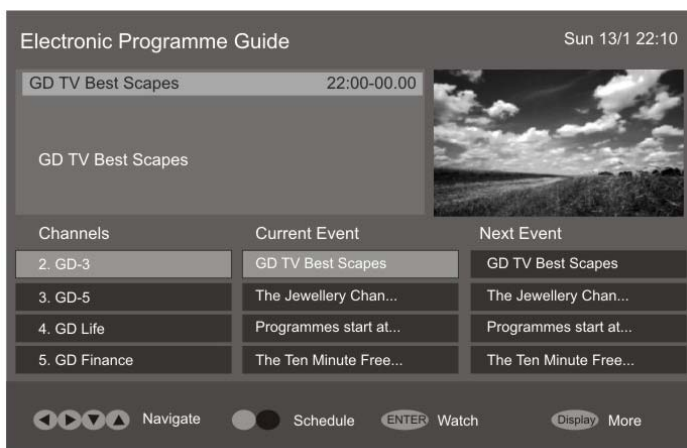

▲ ▶ ▼ ◀ Buttons

- Yellow Button
- Blue Button
- Display Button
- Exit

- Select channel or program.
- Open Time Table 1 (Different programs and stations)
- Open Time Table 2 (One station and different programs)
- Navigation information's
- Exit EPG

Time Table 1

- Red Button 2 hours before
- Green Button 2 hours later
- Yellow Button Previous Day
- Blue Button Next Day

Time Table 2

- Red Button Zoom out the current view
- Green Button Zoom in the current view
- Yellow Button Previous Day
- Blue Button Next Day

TROUBLESHOOTING

Carry out the problem-solving measures described in the following section before contacting Customer Support. Turn off the device immediately as soon as you suspect a malfunction and unplug the power plug. Do not attempt to repair the device yourself.

SYMPTOM	CHECK ITEM
LCD screen stays dark.	Make sure the unit is turned on and the connections are correct. Make sure the power adapter is correctly connected
There is no sound	Make sure system connection is correct. Make sure the power of speakers is turned on.
There is no picture or picture move up and down unsteady.	Check if the connections with the external AV signal source are correct. Correctly set the items in the picture menu. Check if the video type input signal is not corresponding to the unit. Make sure the unit is turned on and in correct video type.
The remote control does not work.	Make sure there are no obstructions between the remote control and the player. Make sure the remote control is pointing at the player. Make sure batteries are inserted or the polarity is correct. Make sure battery is not weak. Replace the weak battery.


Other Notes:

Static or other external interfere may cause the player to behave abnormally. In this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the player. If the problems persist, then please disconnect the power and consult a qualified technician.

SPECIFICATIONS

TFT-LCD Screen Size	22 inches
Power	AC100 ~ 240V , 50/60Hz DC 12V 5A
Power Consumption	< 60 W < 1W (Standby)
Ambient temperature	5 ... 35 °C

 DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

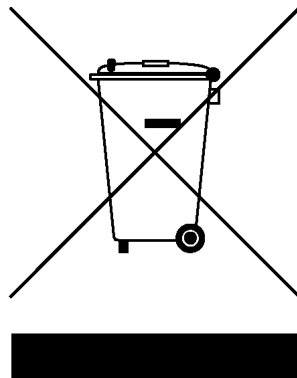

AXDIA International GmbH
47877 Willich | Germany

WARRANTY CONDITION

The following conditions comprise the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations.

We offer a warranty on our products in accordance with the following conditions:

1. Odys products are covered by a 24 month warranty. We will resolve damages or defects on Odys products free of charge within 12 months of the purchase date under the following warranty conditions. For any damage or defect determined later than 12 months after the purchase date, proof of a manufacturing fault must be submitted for repair under warranty.
The warranty does not cover batteries and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the product's fitness for use, in the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions.
2. The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. AXDIA reserves the right to exchange the product for a replacement product of equal value if the product that is sent in cannot be repaired within a reasonable time or at reasonable cost. The product can also be exchanged for a different model of the same value. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become our property.
3. The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our products.
4. Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.
5. Any other or further claims are excluded, especially those for replacement due to damage caused outside of the product, provided there is no obligatory legal liability. We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to usage restrictions, data loss, loss of earnings or interruption to business.

Asserting a warranty claim

1. To make use of the warranty service, you must contact the AXDIA Service Center by e-mail, fax or phone (see below for contact details). You can also use the service form on our website or on the back of the warranty conditions.
2. AXDIA Service Center will try to diagnose and solve your problem. If it is determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and you will be asked to send the product to AXDIA.

IMPORTANT: AXDIA will only accept parcels that have an RMA number.

Please observe the following when sending the product:

1. Send the product suitably packaged with carriage and insurance paid. Do not enclose any accessories with the products (no cables, CD's, memory cards, manuals, etc.), unless the AXDIA Service Centre specifies otherwise.
2. Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.
3. You must enclose a copy of the sales slip as proof of purchase.
4. Once AXDIA has received the product, it will meet its warranty obligations in accordance with the warranty conditions and will return the product to the sender with carriage and insurance paid.

Service outside of warranty

AXDIA can refuse any service claim made that is not covered by the warranty. If AXDIA agrees to provide a service outside the warranty, the customer will be invoiced for all repair and transport costs.

AXDIA will not accept any packages that have not first been approved by AXDIA by means of an RMA (Return Material Authorization).