





User Manual Coffee Grinder Model: SY-CG1

Welcome

Thank you for purchasing the Coffee Grinder - SY-CG1. In order to fully benefit from this product, please follow the instructions in this user manual very carefully. Store this user manual in a safe place for future reference.

Important Safeguards

When using the Coffee grinder, basic safety precautions should always be followed:

- Please read these instructions carefully before use.
- This product is supposed to be used only for Home use. Do not use for industrial purposes.
- Before connecting the SY-CG1, check that the indicated voltage on the rating label corresponds to the mains voltage in your home.
- To protect against fire, electrical shock and injury, do not immerse the cord or the appliance into water or other liquids.
- Keep away the appliance from children.
- Unplug the SY-CG1 from the outlet when not in use and before cleaning.
- Do not operate the SY-CG1 if the cord or the plug is damaged.
- Do not use the appliance outdoor.
- Do not let the cord hang over the edge of a table or touch hot surfaces.
- Do not touch any moving parts.
- To disconnect the SY-CG1from the power supply, use the plug. Never pull the cord.
- To avoid overheating the motor, do not use the SY-CG1for more than 30 seconds.
- If the appliance or cable is damaged, please contact the Sytech Technical Service Department for a proper repair or exchange of the unit. Do not manipulate the product or open it to repair it on your own. This will cancel the warranty of the product.
- The Safety lock cover ensures that you can only switch on the appliance when the lid part has been placed on the unit in the correct position.
 - If the Lid is not correctly closed, the unit will not work. This ensures a proper safety of the unit.
- If the power cord is damaged, it must be replaced by Sytech. Do not attempt to repair the unit by yourself or any other unqualified person.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Instructions

- The SY-CG1 is used for grinding coffee beans only.
- The coffee grinder has a capacity of 60g. Do not fill the grinder beyond the maximum level.
- The SY-CG1 contains includes Stainless steel blades for a proper and perfect grinding.
- Open the cover anti-clockwise.
- Place the coffee beans in the coffee bean container.

- Close the cover, and turn it until the mark on the cover fits the mark on the housing.
- Fully unwind the cord and plug it to the power supply.
- Press and maintain the Center button to start grinding the coffee beans.
- Once the desired consistency of the grinding has achieved, remove the finger from the button.
- Open the cover and pour the grounds in a small container.
- Wait at least one minute after each use to avoid the appliance overheating.
- Do not use the appliance to grind oily beans (e.g. peanuts) or products that are too hard (e.g. rice).

Cleaning Instructions

- Unplug the appliance from the power supply.
- Clean the coffee bean container after each use.
- Wipe the outside and coffee bean container with a damp cloth.
- After washing, polish the cover with a dry cloth.

Storage

- The cord could be winded into the base unit which includes a cord storage compartment.
- Store the appliance in a cool, dry place.

Environmental Disposal



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.











