

Eliminator[®]

LIGHTING

Electro Panel 192



SPECIFICATIONS:

Model:	Electro Panel 192
LEDs:	192 - 64 Red, 64 Green, & 64 Blue
Weight:	4.6lbs./ 2.1kgs.
Size:	7.12" (H) x 12.41" (W) x 4.5" (D)
Fuse:	2 Amp
Supply Voltage:	120V
Working Position:	Any Safe position
Duty Cycle:	None
DMX Channels:	6 DMX Channel Modes: 1, 2, 3, 4, 6, or 7 DMX Channels
Colors:	Multiple Colors
Warranty:	1 Year

CAUTION! Please read and understand these instructions before installing or operating this unit.

Caution! Never open unit when in use. Always disconnect main power before replacing fuse. Remember to always replace with the exact same type fuse.

Operating Instructions:

The Electro Panel 192 has been tested at the factory, there is no assembly required. The unit is ready to be plugged into a power outlet. This unit is a 7 channel DMX intelligent LED par can. It can be run as a stand-alone, static unit DMX controlled unit, or in a Master/Slave configuration. While in Stand Alone or a Master/Slave configuration, you can run the auto mode. For stand-alone mode, and Master/Slave configuration settings, see other side.

1 Year Limited Warranty: Eliminator Lighting warranty is valid from the date of purchase. Our 1 year limited warranty covers manufacturing defects only. Serial number, place of purchase with dated valid receipt must be submitted at time of service. Eliminator Lighting warranty does not cover items or parts prone to wear and tear: lamps, fuses, brushes and belts. Eliminator Lighting warranty is only valid with-in the United States.

ADDR - DMX Address Setting.

1. Tap the either the MENU, UP, or DOWN buttons until “ADDR” is displayed, press ENTER.
2. “1” will now be displayed and flashing. Press the UP or DOWN buttons to find your desired address. Press ENTER to set your desired DMX address.

CHND - There are 6 DMX Channel modes to choose from, this will let you switch and select your DMX Channel mode. You can choose from either 1, 2, 3, 4, 6, or 7 DMX Channels. Please see the last page of the DMX values and traits for each DMX Channel Mode.

1. Tap the either the MENU button until “CHND” is displayed, press ENTER.
2. Tap the UP or DOWN buttons to scroll through the different DMX Channel modes. Once you have found your desired DMX Channel mode press ENTER to confirm and exit.

SLND - This will let you set unit as a master or slave in a master/slave configuration.

1. Tap the either the MENU button until “SLND” is displayed, press ENTER. “MASTER”, “SL 1” or “SL 2” will be displayed.
2. Tap the UP or DOWN buttons until your desired setting is displayed, press ENTER to confirm and exit.

SHND - in this mode you can choose and run one of 11 preprogrammed shows.

1. Tap the either the MENU button until “SHND” is displayed, press ENTER.
2. Tap the UP or DOWN buttons to scroll through 11 preprogrammed shows.
3. Select your desired show by pressing the ENTER button to confirm and exit.

DIMM - in this mode you can set the brightness/intensity of the fixture.

1. Tap the either the MENU button until “DIMM” is displayed, press ENTER.
2. Tap the UP or DOWN buttons to adjust the brightness (0-255). A setting of 0 will not produce any light output
3. Select your desired intensity by pressing the ENTER button to confirm and exit.

STRO - in this mode you can activate and set the strobe rate.

1. Tap the either the MENU button until “STRO” is displayed, press ENTER.
2. Tap the UP or DOWN buttons to adjust the stobe rate (0-255). A setting of 0 will deactivate the strobe feature.
3. Select your desired strobe rate by pressing the ENTER button to confirm and exit.

BLND - Blackout or Stand by mode.

1. Tap the either the MENU button until “BLND” is displayed, press ENTER. Either Yes or No will be displayed.

2. To activate Blackout tap the UP or DOWN buttons until Yes is displayed, press ENTER to confirm and exit. The fixture will now be in Blackout mode. To deactivate Blackout mode, select No and press Enter.

LED - With this function you can switch the lamp on or off via the control board.

1. Tap the either the MENU button until "LED" is displayed, press ENTER.
2. The display will show either "ON" or "OFF". Press the UP or DOWN buttons to select "ON" to switch on the LED, or "OFF" to switch off the LED.
3. Press ENTER to confirm and exit.

IDSP - This function will reverse the display 180°.

1. Tap the either the MENU button until "IDSP" is displayed, press ENTER.
2. Tap the UP button until "FLIP" is displayed.
3. Press ENTER, the display will show "ON/OFF".
4. Press the UP button to select "ON" to activate this function, or "OFF" to deactivate this function.
5. Press ENTER to confirm.

FHRS - With this function you can display the running time of the unit.

1. Tap the either the MENU button until "FHRS" is displayed, press ENTER.
2. The display shows the running time of the unit. Press MENU to exit.

VER - Use this function to display the Software version of the unit.

1. Tap the either the MENU button until "VER" is displayed, press ENTER.
2. The display will show the software version.

DMX CONFIGURATION

1-CH MODE	2-CH MODE	3-CH MODE	4-CH MODE	6-CH MODE	7-CH MODE	FUNCTION
1	1	1	1	1	1	COLOR MACROS
	2	2	2	2	2	COLOR MACROS/Dimmer
		3	3	3	3	RED / GREEN / BLUE
			4	4	4	RED / GREEN / BLUE/DIMMER
				6	6	RED / GREEN / BLUE/COLOR MACROS/STROBE/DIMMER
					7	RED / GREEN / BLUE/MARCOS. PROGRAMS SPEED/STROBE/DIMMER

6Channels

CH. 1	CH. 2	CH. 3	CH. 4	CH. 5	CH. 6
RED	GREEN	BLUE	MACROS/PROGRAMS	SPEED	STROBE
0-255	0-255	0-255	0-10 = OFF	0-255	0-255
			<ul style="list-style-type: none"> 11-21 = RED 22-32 = YELLOW 33-43 = GREEN 44-54 = CYAN 55-65 = BLUE 66-76 = PURPLE 77-87 = WHITE 88-98 = MAGENTA 99-109 = Program 1 110-120 = Program 2 121-131 = Program 3 132-142 = Program 4 143-153 = Program 5 154-164 = Program 6 165-175 = Program 7 176-186 = Program 8 187-197 = Program 9 198-208 = Program 10 209-219 = Program 11 220-230 = Program 12 231-255 = Sound Active 		

7Channels

CH. 1	CH. 2	CH. 3	CH. 4	CH. 5	CH. 6	CH. 7
RED	GREEN	BLUE	MACROS/PROGRAMS	SPEED	STROBE	DIMMER
0-255	0-255	0-255	0-10 = OFF	0-255	0-255	0-255
			<ul style="list-style-type: none"> 11-21 = RED 22-32 = YELLOW 33-43 = GREEN 44-54 = CYAN 55-65 = BLUE 66-76 = PURPLE 77-87 = WHITE 88-98 = MAGENTA 99-109 = Program 1 110-120 = Program 2 121-131 = Program 3 132-142 = Program 4 143-153 = Program 5 154-164 = Program 6 165-175 = Program 7 176-186 = Program 8 187-197 = Program 9 198-208 = Program 10 209-219 = Program 11 220-230 = Program 12 231-255 = Sound Active 			