

# Electric Food Crisper

*Deni®*

Model #7800

## IMPORTANT!

Please keep these instructions and  
your original box packaging.

[www.deni.com](http://www.deni.com)



***INSTRUCTIONS***  
***FOR PROPER USE AND CARE***

## **IMPORTANT SAFEGUARDS**

When using this electrical appliance, safety precautions should always be observed, including the following:

- **Read all of the instructions before using.**
- Close adult supervision must be provided when this appliance is used by or near children
- Do not operate with a damaged cord or plug. If the appliance is not working as it should, has been dropped or damaged, left outdoors or dropped into water, do not use it and return it to the manufacturer for proper service and replacement or repair.
- Always unplug before cleaning.
- For indoor use only.
- Do not use outdoors.
- Do not place near hot gas or electric burner. Do not let cord contact hot surface, including the stove.
- Portable—Do not let cord hang over edge of table or counter.
- Do not clean with metal scrubbing pads. Pieces can break off the pad and short-circuit electrical parts, creating a possibility of an electrical shock.
- To protect against electrical shock, do not immerse plug, cord or motor base in water or any other liquid.
- Do not use an extension cord with this food crisper. However, if one is used, it must have a rating equal to or exceeding the rating of this appliance.
- The food crisper is for household use only.
- The food crisper should not be used for other than the intended use.
- The food crisper has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way, as a safety feature. Reverse the plug if the plug does not fit fully in the outlet. Contact a qualified electrician if it still does not fit. Do not attempt to defeat this safety feature.


## **SAVE THESE INSTRUCTIONS**

## Before First Use

1. Remove all packing materials and literature.
2. Wipe out the inside and outside of the food crisper with a soft, damp cloth. **Do Not** use abrasive cleaners or scouring pads. **NEVER** immerse in water or any other liquid.

## How To Operate

1. Place the unit on a flat sturdy surface.
2. Open the door and place the food inside.
3. Close the door and plug the appliance in. Allow approximately 15 minutes for the unit to warm up after you plug it in.

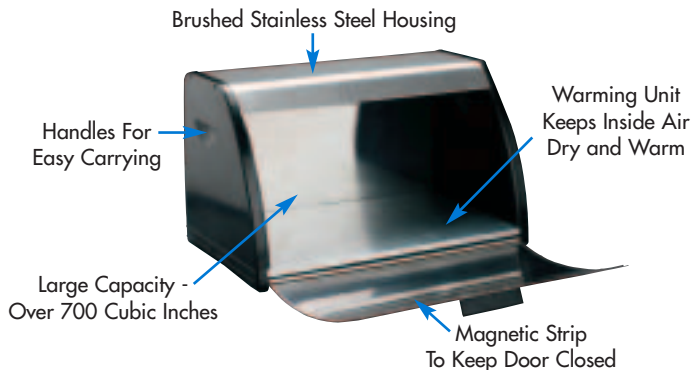

## Cleaning

1. Unplug the unit and allow to cool.
2. Wipe out the inside and outside of the food crisper with a soft, damp cloth. **Do Not** use abrasive cleaners or scouring pads. **NEVER** immerse in water or any other liquid.

## Hints and Tips

- Read all the instructions and save for future reference.
- Only dry food that you want to stay crisp should be placed in the food crisper.
- Leaving the bag/box open while in the food crisper will allow the warm air to get inside of the package and keeping the food crisp.
- The food crisper is **NOT** a bread box.
- Foods with a high oil content or strong flavor may transfer their flavor to other foods in the crisper.
- Do not put cereal with fruits or raisins in the crisper.
- Position small bags/boxes vertically so the warm air can get between them.
- Position larger boxes horizontally on top of smaller ones.
- You will block the heat flow if you put a large box directly on the crisper floor.
- If the box is too big, take the bag out of the box.



## **CUSTOMER SERVICE**

*If you have any questions or problems regarding the operation of your Deni Food Crisper, call our customer service department toll free:*

Monday through Friday  
8:30 a.m. to 5:00 p.m.  
(Eastern Standard Time)

**1-800-DENI-822**

or E-mail us at  
**custserv@deni.com**

**www.deni.com**

Deni by Keystone Manufacturing Company, Inc.®

## **ONE-YEAR LIMITED WARRANTY**

Your Deni Food Crisper is warranted for one year from date of purchase or receipt against all defects in material and workmanship. Should your appliance prove defective within one year from date of purchase or receipt, return the unit, freight prepaid, along with an explanation of the claim. If purchased in the U.S.A. or other country, please send to: Keystone Manufacturing Company, Inc. 33 Norris Street, Buffalo, NY 14207. If purchased in Canada, please send to: Keystone Manufacturing Company, Inc., 151 Cushman Road, St. Catharines, Ontario L2M 6T4. (Please package your appliance carefully in its original box and packing material to avoid damage in transit. Keystone is not responsible for any damage caused to the appliance in return shipment.) Under this warranty, Keystone Manufacturing Company, Inc. undertakes to repair or replace any parts found to be defective.

This warranty is only valid if the appliance is used solely for household purposes in accordance with the instructions. This warranty is invalid if the unit is connected to an unsuitable electrical supply, or dismantled or interfered with in any way or damaged through misuse.

We ask that you fill in the details on your warranty card and return it within one week from date of purchase or receipt.

This warranty gives you specific legal rights. You may also have other rights which vary from state/province to state/province.

©2006 Keystone Manufacturing Company, Inc.

All rights reserved.