


QUICK SET-UP GUIDE

1. Remove GolfAchiever's components from the shipping box. Be sure that all components have arrived safely. A component list appears on page 7 of the User Manual.

2. Attach the triangle to the L-Frame by tightening the thumb screws (see inset). For a hitting location, be sure that you place the GolfAchiever on a firm, flat, and level surface.




3. Install the GolfAchiever and Diagnostics program on your computer (install CD). After software installation, attach the serial and power cables to the L-Frame and your computer.

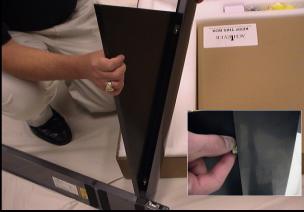

4. Run the Diagnostics Program. Be sure that all laser levels are reading above 20. If you find low readings, go to page 31 of the User Manual for instructions on Adjusting the Lasers.



5. Attach the mat-holders to the L-Frame by pushing the back of the mat holder into the slot on the L-Frame and then rotating the mat holder 90 degrees. Slide the mat holders to far opposite ends of the base slot.

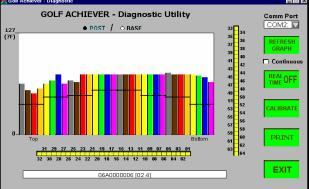

6. Insert a tee into the black hitting mat. Attach the black mat to the L-Frame via the mat holders. Start with the mat holder on the outside of the L-Frame, connect it, then slide the mat onto the other mat holder. Be sure that the mat holders sit flush into their circular moldings under the mat.





7. Place hitting turf into position on the hitting mat. Start the GolfAchiever program.

8. This is what your GolfAchiever system will should look like when fully assembled.





9. After starting the software, you must enter a player, select a club, select a tee height, select ball type, and then hit the play button to begin using your GolfAchiever.

10. You are ready to use GolfAchiever. Step up and swing away!





IMPORTANT! CHANGING TEES ON GOLFACHIEVER IMPORTANT!

1. To prevent breaking mat holders when changing tees, use one foot to stand on the GolfAchiever hitting mat close to the frame (as shown below). Peel up the back of the hitting mat and push down on the top of the tee.

2. Reach under the hitting mat and pull the tee out from under the hitting mat. Insert a new tee by pushing it up from the bottom. If a mat holder breaks, call Focaltron for replacement—GolfAchiever's accuracy depends on the mat





For customer support, please call (408) 530-8588, x2, or email your questions to support@golfachiever.com.