



Deluxe Steam and Spray Iron

Model CE2184SI

INSTRUCTION MANUAL

PLEASE SAVE THESE INSTRUCTIONS



Dear Valued Customer

Thank you for purchasing a *CASCADÉ* appliance.

We understand the importance of your purchasing decision, and appreciate your final choice to introduce this *CASCADÉ* product into your home.

Your *CASCADÉ* appliance is recognized as a quality product at an affordable price, and is proudly supported by our after sales service team. We encourage you and your friends to choose from the range of *CASCADÉ* appliances available exclusively to The Warehouse.

TECHNICAL INFORMATION

Please make sure that your house installation voltage corresponds to the voltage marked on the unit.

Mains supply: 220–240V ~ 50 Hz – AC only

Rated Power: 1100–1400 Watts

SERVICE

In the unlikely event of failure or for product information please contact the below help lines.

New Zealand call 0800 89 85 80

Email: service@opnz.com

Australia call Toll Free 1 800 858 011



BEFORE FIRST USE

- Your *CASCADÉ* appliance has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, immediately contact your retailer for replacement or repair.
- Carefully unpack your *CASCADÉ* appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found.
- Remove any label or sticker. Carefully wipe the exterior of the appliance to remove any dust that may have accumulated. Dry with a dry towel. Do not use harsh abrasive cleaners.
WARNING! Do not immerse in water or any other liquids.

OPERATION

- NOTE: The first time you use this iron, trial it on a piece of old cloth, to ensure any impurities left inside the appliance from the manufacturer are removed.
- Always place the appliance on a heat resistant surface, as the appliance will reach high temperatures. Use the heel-rest of the appliance when it is on.
- WARNING! DO NOT LEAVE ON WHILE UNATTENDED.
- WARNING! Always leave a gap of approximately 20 cm around the exterior of appliance when on. Never use near curtains or other flammable material.
- WARNING! DO NOT LET SUPPLY CORD HANG OVER THE EDGE OF ANY BENCH OR TABLETOP. THERE MAY BE A RISK OF SCALDING OR OTHER INJURY SHOULD YOUNG CHILDREN PULL THE APPLIANCE FROM THE BENCH OR TABLETOP.



DRY IRON

Your *CASCADÉ* Iron may be used as a Dry Iron.

- Plug the power cord into a suitable mains outlet corresponding to the supply requirements of your appliance, 220–240V ~50Hz – AC only.
- Select the desired temperature setting on the temperature control dial. The ‘ power-on’ indicator will glow, indicating that heating cycle is on. When the appliance reaches the desired temperature, the indicator light will stop, and the iron is ready for use. This indicator light will cycle on and off as the appliance automatically maintains its operating temperature.

STEAM IRON

Your *CASCADÉ* Iron may be used as a Steam Iron with a ‘ Burst of Steam Boost and Spray’ function.

- Place the iron on an angle of approximately 45°. Using the cup supplied, carefully fill the water tank with water to the maximum level. WARNING! DO NOT OVERFILL. ALWAYS FILL BEFORE CONNECTING TO THE POWER SUPPLY. When completed press the water tank cover again to release.
- Plug the power cord into a suitable mains outlet corresponding to the supply requirements of your appliance, 220–240V ~50Hz – AC only.
- Select the desired temperature setting on the temperature control dial. The power on indicator will glow, indicating that heating cycle is on. When the appliance reaches the desired temperature, the indicator light will stop, and the iron is ready for use. This indicator light will cycle on and off as the appliance automatically maintains its operating temperature.



- Adjust the steam level by adjusting the steam control from minimum to maximum as desired. Steaming will automatically commence. NOTE: When the iron is placed on its 'heel stand', steaming will automatically stop.
- For 'Burst of Steam' while ironing, simply press the 'Burst of Steam' button downwards.
- For 'Spray' function simply press the 'Spray' button downwards.
- WARNING! Avoid contact with hot steam and hot surfaces. Use caution in order to avoid personal injury. Keep this appliance away from children and infirm persons.

NOTE: The first time you use your appliance; there may be a small amount of smoke and odor. This is normal. It is due to the heating of a protective coating, placed on the heating elements, to protect the heating elements during shipping.

CLEANING AND CARING

Your *CASCADÉ* Iron is fitted with a 'Self-Clean' function.

- To use 'Self-Clean', simply fill the water tank with water as described above. Connect to the mains supply and set temperature dial to maximum. When the desired temperature has been reached, select the full 'Self-Clean' setting on steam selector. Hold iron in a horizontal position until steam action ceases. The iron will operate with high steam levels to clean out the inside of the iron of any residue. Empty any unused water before storage. Never leave water in the tank when not in use.
- Always allow your appliance to completely cool before final cleaning. WARNING! Never immerse your appliance in water or other liquids.
- When completely cool, wipe the exterior of the appliance with a warm soft damp cloth. Dry with a dry towel.
- Do not use harsh abrasives as they may damage any plastic, non-stick surface or the exterior finish.
- Store your appliance in its original box or in a dry cupboard.

4.



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Carefully read these instructions before using your appliance.
2. VERY IMPORTANT: Do not immerse in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use if hands are wet.
3. Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.
4. WARNING! Unplug iron from mains outlet when filling with water, cleaning or when appliance is not in use,.
5. An appliance dropped or damaged should not be used until examined by a service engineer.
6. Do not permit the mains lead to come in contact with hot objects.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
8. CAUTION: Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with this appliance
9. Use this appliance only for its intended use. Use only genuine attachments supplied by an authorised Service Dealer.
10. This appliance is intended for household use only and not for commercial or industrial use.
11. The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
12. WARNING! Do not let the cord hang over edge of table or counter. There is a risk of scalding.
13. WARNING! An appliance should never be left unattended when plugged in.

14. WARNING! Hot steam. Keep away from hot steam. Do not touch hot surfaces.
15. WARNING! Always place the appliance on a heat resistant surface, as the soleplate will reach high temperatures. USE THE HEEL-REST STAND.
16. WARNING! Ensure adequate ventilation; keep an open space of approximately 20 cm all around the appliance.

5.

17. WARNING! Do not use the appliance near flammable materials such as curtains, or other combustible material.
18. If appliance is to be used by a third party, please supply the instruction manual with it.
19. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

CAUTION

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

6.

Guarantee Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: _____

Model No.: _____ Purchase Date: _____

Product Purchased From: _____

Name: _____

Address: _____

_____ Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.

Technical Assistant Helpline

New Zealand call tollfree: 0800 89 85 80

Australia call tollfree: 1800 85 80 11

Email: service@orientalpacific.com

7.