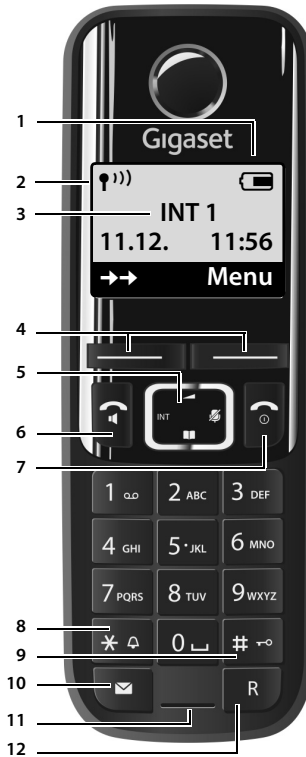


Gigaset AL410H

The handset at a glance

1. Charge status of the batteries (→ P. 6)
2. Signal strength (→ P. 6)
3. Internal number of the handset
4. Display keys
5. Control key (🔄)
 - 🔍: Open the menu for setting the volume (→ P. 12)
 - 📖: Open the directory (→ P. 8)
 - 📞: Display the list of registered handsets
 - 🔇: Microphone off (→ P. 7)
6. Accept/speaker key (→ P. 7)
7. End call key and On/Off key
8. Ringer melody on/off (press and **hold** in idle status)
9. Keypad lock on/off (press and **hold** in idle status)
10. Message key (→ P. 8)
11. Microphone
12. Recall key
 - Recall (flash)
 - Dialling pause (press and **hold**)



Display keys on handset:

Pressing a key launches the function that appears above that key in the display.

Display	Function when pressed
→→	Open redial list (→ P. 8).
Menu	Open main/submenu (see menu tree → P. 12).
↶	Go back one menu level.
↕	Scroll up/down or adjust volume with 🔍.
↔	Move cursor to left/right with 🔍.
⏪	Backspace deletes one character at a time from right to left.
OK	Confirm menu function or save entry.

Other icons in the top display line:

🔇	Ringer melody off
🔒	Keypad locked
🔋	Eco Mode+ activated

Please note

To change the display language, proceed as described on P. 9.

ECO DECT

You are helping to protect the environment with your Gigaset.

Reducing energy consumption

Your telephone has a power-saving adapter plug and uses less power.

Reducing radiation (dependent on base)

The radiation can only be reduced if your base supports this function.

The telephone's transmission power is **automatically** reduced depending on the distance to the base.

You can reduce the radiation from the handset and base even more by using **Eco Mode** or **Eco Mode+**. When **Eco Mode+** is enabled, handset standby time is reduced by approx. 50%.

For further information, please refer to your base user guide.

Safety precautions

Be sure to read this user guide and the safety precautions in detail before using your telephone. Explain their content and the potential hazards associated with using the telephone to your children.



Use only the power adapter supplied.



Only fit the **recommended, rechargeable batteries** (→ P. 10) i.e., never use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment e.g., doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing. The handset may cause an unpleasant humming noise in hearing aids.



Do not install the phone in a bathroom or shower room. The handset is not splashproof.



Do not use your phone in environments with a potential explosion hazard e.g., paint shops.



If you give your phone to a third party, make sure you also give them the user guide.



Remove faulty bases from use or have them repaired by our Service department, as they could interfere with other wireless services.



Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.

All electrical and electronic products should be disposed of separately from general household waste using the sites designated by local authorities.

If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a prerequisite for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Emergency numbers cannot be dialled if the keypad lock (→ P. 1) is activated!

Not all of the functions described in this user guide are available in all countries.

Caring for your telephone

Wipe the charger and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth as this can cause static.

Contact with liquid

If the handset has come into contact with liquid:

- ◆ **Switch the handset off and remove the batteries immediately.**
- ◆ Allow the liquid to drain from the handset.
- ◆ Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (not in a microwave, oven or similar).
- ◆ **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will usually be able to use it again.

First steps

Checking the package contents

- ◆ One Gigaset handset
- ◆ One charger
- ◆ One power adapter
- ◆ Two batteries
- ◆ One battery cover
- ◆ One user guide

Setting up the charger

The charger is designed for use in dry rooms in a temperature range of +5°C to +45°C.

- ▶ Set up the charger on a flat, non-slip surface.

Please note

Pay attention to the range of the base.

This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode is activated (→ P. 1).

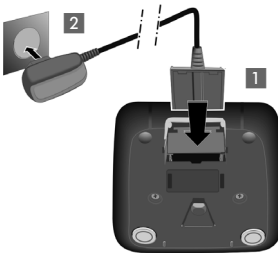
The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

You can also mount the charger on the wall (see packaging).

Please note:

- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

Connecting the charger



- ▶ Connect the flat plug on the power adapter **1**.
- ▶ Plug the power adapter into the plug socket **2**.



To disconnect the plug from the charger, press the release button **3** and disconnect the plug **4**.

Setting up the handset for use



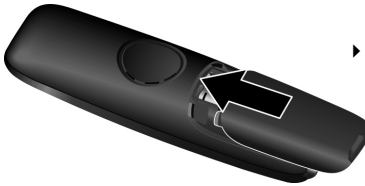
The display is protected by a plastic film.
Please remove the protective film!

Inserting the batteries and closing the battery cover

Warning

Use only rechargeable batteries (→ P. 10) recommended by Gigaset Communications GmbH i.e., never use a conventional (non-rechargeable) battery, as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries with the polarity in the correct direction.
The polarity is indicated in/on the battery compartment.



- ▶ Slide the battery cover back into the main casing until it clicks into place.

To reopen the battery cover, for instance to replace the batteries, press the grooved area at the top of the cover and slide it downwards.



Changing the display language

If you do not understand the language that has been set, press:

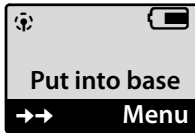
- Menu** ▶ **4** **OK** **2** **OK** **1** **OK** ▶ **Select the language** ▶ **OK** (✓ = selected)
▶ **OK** (press and hold to return to idle status)

Registering handsets

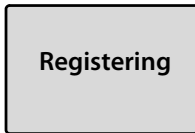
Before you can use the phone, you must first register the handset to the base. **Each additional handset must be registered with the base for it to work properly!** The registration procedure will depend on the type of base.

Automatically registering the AL410H handset to the Gigaset AL410/AL410A base

Prerequisite: The handset must not already be registered to a base.



- ▶ Place the handset with the **display facing up** in the base.



The handset registers automatically. Registration can take **up to 5 minutes**. **Do not remove the handset from the base during this time.**

After it has registered, the handset display shows **HS registered** briefly and then returns to idle status.

Please note

- ◆ Each key press interrupts automatic registration.
- ◆ If the handset is already registered to at least one base or if automatic registration does not work, the handset will have to be registered manually.

Manually registering the AL410H handset

You must manually register the handset on both the handset (1) and the base (2).

1) On the handset

Menu ▶ Settings ▶ OK ▶ Handset ▶ OK ▶ Register HS ▶ OK
 ▶ Enter the base system PIN (default setting: 0000) ▶ **OK**
Registering will appear on the display.

2) On the base

Within **60 seconds** of entering the system PIN, press and **hold** the registration/paging key (min. 3 seconds).

Once registration is complete, the handset returns to idle status. If not, repeat the procedure.

Please note

For instructions on deregistering the handsets, please consult the base user guide.

Initial charging and discharging of the batteries

The correct charge status can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ Charge the handset in the charger for **5.5 hours**.

Please note

The handset must only be placed in the designated Gigaset AL410/AL410A base or the corresponding charger.



- ▶ After charging, remove the handset from the charger and only replace it when the batteries are **fully discharged**.

Please note

- ◆ After the first battery charge **and** discharge, you may place your handset in the charger after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.

Menu ▶ Settings ▶ OK ▶ Date/Time ▶ OK

▶ **Date:** ▶ (enter the day, month and year in 6-digit format) ▶ OK

▶ **Time:** ▶ (enter hours and minutes in 4-digit format) ▶ OK (display message: Saved)

▶ (press and hold to return to idle status)

Please note

When entering the time and date, you can move the cursor position to the left or right by pressing left or right on the control button.

Display in idle status

Once the phone is registered and the time set, the idle status is shown as in this example.

The strength of the reception signal between base and handset:

- Good to poor:
- No reception:

Charge status of the batteries:

- Batteries charged to over 66%
- Batteries charged to between 34% and 66%
- Batteries charged to between 11% and 33%
- Flashes: batteries charged to below 11%
- Charging



If Eco Mode+ (→ P. 1) is activated, the icon is displayed in the top left corner of the display.

Activating/deactivating the handset

Press and hold the end call key to activate or deactivate the handset.

If you place a deactivated handset in the base or charger, it will automatically be activated after a specific period of time (approx. 30 seconds).



Your phone is now ready for use.




If you have any questions about using your phone, please read the tips on troubleshooting ("Questions and answers" → P. 10) or contact our Customer Care team (→ P. 11).

Making calls


Making external calls and ending calls

External calls are calls using the public telephone network.


 (Enter phone number) ▶ .

The number is dialled. (Or you can **first** press and **hold**  [dialling tone] and then enter the number.) During the call you can adjust the earpiece volume using  and set the volume with .

Ending a call/cancelling dialling:

Press the end call key .

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing accept/speaker key .

Press the talk key  to accept the call.

When **Auto Answer** is activated, simply remove the handset from the base/charger (see menu tree → P. 12).

Displaying the caller's number

The phone number of the caller is shown on the display; the caller's name is also displayed if the name has been saved in the directory.

Prerequisites:

- 1 You have asked your network provider for the caller's number (CLIP) to be displayed on your handset screen.
- 2 The caller has asked the network provider for his/her number to be identified (CLI).

In the display you will see **External call** if you have not requested Calling Line Identification, **Withheld** if the caller has withheld CLI or **Unavailable** if CLI has not been requested.

Notes on calling line display (CLIP)

By default, the number of the caller is shown in the display of your Gigaset telephone. You do not have to make any other settings on your Gigaset telephone.

However, if the caller's number is not displayed, this can be due to the following:

- ◆ You have not ordered CLIP from your network provider
- ◆ Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.

Is your telephone connected via a PABX/gateway?

You can establish this by checking for an additional device connected between your telephone and home connection e.g., a PABX, gateway etc. In most cases, simply resetting this device will remedy the situation:

- ▶ Briefly disconnect the PABX power plug. Re-insert the plug and wait for the device to restart.

If the caller number is still not displayed:

- ▶ Check the CLIP settings of your PABX and activate this function if necessary. In the user guide for the device, search for the term "CLIP" (or an alternative term such as "calling line identification", "phone number transmission", "caller ID" etc.). If necessary, contact the device manufacturer.

If this does not resolve the problem, it is possible that your network provider does not provide the CLIP service for this number.

Have you ordered the calling line display service from your network provider?


- ▶ Check whether your provider supports calling line display (CLIP) and that the function has been activated for you. If necessary, contact your provider.



Additional information on this subject can be found on the Gigaset homepage at:

www.gigaset.com/service

Using speaker mode


Switching between earpiece and speaker mode:

During a call, press the accept/speaker key  to activate or deactivate speaker mode. If speaker mode is activated, the key is lit up.

During a call, use  to open the menu for setting the speaker volume and use  to set the volume.

Muting







 
You can mute your handset during a call. Your caller can no longer hear you.


Press the **right-hand** control key  during the call to activate/deactivate the function.

Making internal calls

Internal calls are free calls to other handsets that are registered to the same base.


To make a call to other handsets, press

- ◆  ▶  (Select internal number of handset) **or**  (Enter internal number directly) ▶ **OK**, the handset is called **or**
- ◆  ▶ **Call All** ▶ **OK** all handsets are called (alternatively you can also press and **hold** the control key  or press  ▶ ).

To end the call, press the end call key .




Using the directory and lists

Directory




To open the directory: press and hold the **bottom** of the control key .

You can save up to 80 phone numbers (max. 32 digits) with corresponding names (max. 16 characters). Enter letters/characters (→ P. 10).

Saving the first number in the directory



-  ▶ **New Entry?** ▶ **OK**
- ▶  (Enter number) ▶ **OK**
- ▶  (Enter name) ▶ **OK**

Saving a number in the directory

-  ▶ **Menu** ▶ **New Entry** ▶ **OK**
- ▶  (Enter number) ▶ **OK**
- ▶  (Enter name) ▶ **OK**

Selecting a directory entry



Open the directory with . You have the following options:


- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name, if necessary scroll to the entry with the  key.

Dialling with the directory

-  ▶  (Select entry) ▶ 

Using other functions




-  ▶  (Select entry) ▶ **Menu**

The following functions can be selected with :

New Entry	Save new phone number.
Show Number	Display the phone number.
Show Name	Display name.
Edit Entry	Edit selected entry.
Use Number	Edit or add to the number. Then dial or select other functions from the Menu .
Delete Entry	Delete selected entry.
Send Entry	Send a single entry to another handset (→ P. 8).
Delete List	Delete all directory entries.
Send List	Send the complete directory to another handset (→ P. 8).
Shortcut	For speed dial, assign the current entry to a key.

Using speed dial keys

You can assign directory entries to the keys 0 and 2-9:




-  ▶  (Select entry) ▶ **Menu**
- ▶ **Shortcut** ▶ **OK** ▶  (Press the key to which you want to assign the entry)

To dial, press and **hold** the required speed dial key.

Transferring the directory to another handset

Prerequisites:




- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

-  ▶  (Select entry) ▶ **Menu**
- ▶ **Send Entry / Send List** ▶ **OK** ▶  (Enter the internal number of the receiving handset) ▶ **OK**



Using the redial list

This list contains the last ten numbers dialled.

Dialling from the redial list

- Press **→→** or  (**briefly**) ▶  (Select entry) ▶ 

Managing entries in the redial list

- Press **→→** or  (**briefly**) ▶  (Select entry) ▶ **Menu**


You can select the following settings:

Use Number	Edit or add to the number. Then dial or select other functions from the Menu .
Copy to Dir.	Copy an entry to the directory.
Delete Entry	Delete selected entry.
Delete List	Delete all entries.

Using other lists

Depending on the base, your telephone has the following:

- ◆ Answering machine list
- ◆ Network mailbox list
- ◆ Calls list


when you press , the list selection opens. You can scroll through the available lists.

The lists are displayed as follows (e.g., calls list):

 
CallsList	01+02
------------------	--------------


Number of new entries + number of old, read or played back entries.

 
Select the required list and open by pressing **OK**.

 
An **advisory tone** sounds as soon as a new message appears in a list. You can select whether you also want a message to appear on the display or the message key  to flash:

Menu \blacktriangleright       \blacktriangleright XY \blacktriangleright OK

X =  for missed calls

 for messages on the answering machine

Y =  visual signal activated (default setting)

 visual signal deactivated

Settings will only be changed once a new message has been received.

Answering machine list (dependent on base)

You can use the answering machine list to listen to messages that are on the answering machine (see base user guide).

Network mailbox list (dependent on base)

You can use the network mailbox list to listen to messages that are on the network mailbox. You will only see this list when the network mailbox number is entered (see base user guide).

Calls list

Prerequisite: CLIP (\rightarrow P. 7)



Depending on the base, the calls list contains:

- ◆ Accepted calls
- ◆ Missed calls
- ◆ Calls recorded by the answering machine

 
Depending on the type of list set, all numbers of the last 25 incoming calls are saved or just the missed calls are saved.

Calling back a caller from the calls list

 \blacktriangleright CallsList 01+02 \blacktriangleright OK

\blacktriangleright  (select entry) \blacktriangleright 


Using the fast access function for the answering machine or network mailbox

Simply press and **hold** key  on the handset and you will be connected directly to the answering machine/network mailbox (see base user guide).

Setting the alarm clock

 
Activating/deactivating the alarm clock

Menu \blacktriangleright Alarm Clock \blacktriangleright OK \blacktriangleright Activation

\blacktriangleright OK ( = activated)

If activated:

\blacktriangleright Enter wake-up time \blacktriangleright OK

When the alarm clock rings, press any key to switch it off for 24 hours. If the alarm clock is set, the wake-up icon  will appear on the screen and the wake-up time will be displayed instead of the date.

Entering/changing the wake-up time

Menu \blacktriangleright Alarm Clock \blacktriangleright OK \blacktriangleright Wake-up time \blacktriangleright OK

Enter the wake-up time in hours and minutes, then press OK. The alarm clock is automatically activated after the wake-up time is entered/changed.


Changing phone settings


For details on performing audio settings and activating/deactivating warning and advisory tones and key tones (see menu tree \rightarrow P. 12).

For details on setting the display contrast and large dialling numbers (see menu tree \rightarrow P. 12).

Changing the display language


Menu \blacktriangleright Settings \blacktriangleright OK \blacktriangleright Handset \blacktriangleright OK \blacktriangleright Language

\blacktriangleright OK \blacktriangleright  Select language \blacktriangleright OK

The current language is indicated by  .

If you accidentally choose a language you do not understand:

Menu \blacktriangleright    \blacktriangleright  select language


\blacktriangleright OK ( = selected)

Resetting the handset

You can reset any individual settings and changes that you have made. Entries in the directory, the calls list and the handset's registration to the base will be retained.

Menu \blacktriangleright Settings \blacktriangleright OK \blacktriangleright Handset \blacktriangleright OK

\blacktriangleright Reset Handset \blacktriangleright OK \blacktriangleright Reset? \blacktriangleright OK

Cancel the reset with .

Appendix

Entering letters/characters

Press the relevant key the number of times indicated.

Briefly press the hash key (# →) to switch from "Abc" to "123" mode, from "123" to "abc" mode and from "abc" to "Abc" mode.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x
[1 sec]	1	£	§	¥	¤										
[2 sec]	a	b	c	2	ä	á	à	â	ã	ç					
[3 sec]	d	e	f	3	é	ê	è	ê							
[4 sec]	g	h	i	4	ï	í	ì	î							
[5 sec]	j	k	l	5											
[6 sec]	m	n	o	6	ö	ñ	ó	ò	ô	õ					
[7 sec]	p	q	r	s	7	ß									
[8 sec]	t	u	v	8	ü	ú	ù	û							
[9 sec]	w	x	y	9	ÿ	ý	æ	ø	å						
[0...]	[]	.	,	?	!	0	+	-	:	"	'	; _			
[* Ⓞ]	*	/	()	<	=	>	%							
[# →]	Abc 123	123 abc	#	@	\	&	§								

1) Space

Hebrew

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x
[1 sec]	1	€	£	§	¥	¤	₪						
[2 sec]	א	ב	ג	ד	ה	ו	ז						
[3 sec]	ח	ט	י	כ	ל	מ	נ						
[4 sec]	ס	ע	פ	צ	ק	ר	ש						
[5 sec]	ת	י	ך	ל	ם	נ	ס						
[6 sec]	פ	ח	ט	ו	מ	נ	ו						
[7 sec]	ך	ש	ת	7	p	q	r	s					
[8 sec]	צ	י	ך	8	t	u	v						
[9 sec]	o	y	5	η	9	w	x	y	z				
[0...]	[]	.	,	?	!	0	+	-	:	"	'	; _	
[* Ⓞ]	*	/	()	<	=	>	%					
[# →]	Abc 123	123 abc	#	@	\	&							

1) Space

Specifications

Recommended batteries

Technology: Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 400–800 mAh

The device is supplied with two approved batteries.

General specifications

DECT standard	Supported
GAP standard	Supported (the Gigaset handset is only fully functional on Gigaset bases)
Range	Up to 300 m outdoors Up to 50 m indoors
Environmental conditions for operation	+5°C to +45°C, 20% to 75% relative humidity
Standby time	220 hours
Talktime	20 hours
Operating time for 1.5 hrs of calls per day – without Eco Mode+ – with Eco Mode+	135 hours 90 hours
Charging time in charger	5.5 hours

Questions and answers

If you have any queries about the use of your telephone, visit our website at www.gigaset.com/service for assistance 24/7. The table below contains a list of common problems and possible solutions.

Problem	Cause	Solution
Nothing appears in the display.	The handset is not switched on. The batteries are flat.	Press the end call key [Ⓞ] for approx. 5 seconds or place the handset in the base. Charge or replace the batteries.
No wireless connection to the base, Base flashes in the display.	The handset is outside the range of the base. The handset is not registered. The base is not switched on.	Move the handset closer to the base. Register the handset (→ P. 5). Check the power plug on the base.
The connection always terminates after approx. 30 seconds.	Repeater activated/deactivated.	Deactivate and reactivate the handset (→ P. 6).

Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal www.gigaset.com/service.

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

Australia	1300 780 878
Austria	0043 1 311 3046
Bahrain	97 31 73 11 173
Belgium	0 78 15 66 79
Bosnia Herzegovina	033 276 649
Brazil	4003 3020
(grandes cidades e regiões metropolitanas - Custo de uma ligação local)	
	0800 888 3020
(demais localidades - Gratuito)	
Bulgaria	+359 2 9710666
(0.50 евро на минута от всички държави за стационарни телефони. За обаждания от мобилни телефони може да има други цени).	
Canada	1-866 247-8758
China	0 21 400 670 6007 (RMB 0.11)
Croatia	01 2456 555 (0,23 Kn)
Czech Republic	233 032 727
Denmark	+45 (0) 35 25 86 00
Finland	09 231 134 25
France	+33 170 706 181
Coût d'un appel local depuis une ligne fixe Orange.	
Germany	01805 333 222
Der Anruf kostet Sie aus den deutschen Festnetzen 0,14 € pro Minute. Anrufe aus den deutschen Mobilfunknetzen kosten höchstens 0,42 € pro Minute.	
Greece	801-100.0.500
(Χρέωση 0,0031 € το λεπτό για το σταθερό δίκτυο της Ελλάδας. Για κλήσεις από κινητό ίσως ισχύουν άλλες χρεώσεις)	
Hong Kong	2763 0203
	2389 7285
Hungary	01 267 21 09 (27 Ft)
India	Please refer to your local warranty card
Indonesia	(62-21) 5673813
	(62-21) 888856000
Ireland	18 50 77 72 77
Italy	199.15.11.15
(€ cent 8,36 + IVA al minuto da telefono fisso della rete Telecom Italia senza scatto alla risposta mentre per le chiamate effettuate attra-	

verso la rete di altri operatori fissi o mobili consultate le tariffe del vostro operatore)	
Jordan	00962 6 5625460/1/2
Kuwait	+965 -22458737/22458738
Lebanon	+9611240259/
	+9611236110
Luxembourg	+352 8002 3811
Malaysia	+603-8076 9696
Malta	+390 2360 46789 (0,10 €)
Mexico	
	01800 999 4442738 (01800 999 GIGASET)
Netherlands	0900-3333102
(0,25 € per minuut (vast net). Voor oproepen uit het mobiele netwerk kunnen andere prijzen gelden.)	
New Zealand	0800 780 878
Norway	22 70 84 00
(Oppstartskostnad 89 øre + 15 øre pr. minutt fra fasttelefon. For samtaler fra mobiltelefon gjelder egne priser.)	
Oman	+968 709281 Ext. 49/21/75
Poland	801 140 160
Portugal	(351) 808 781 223
(custo de uma chamada local)	
Romania	+40 021 204 9130
Russia	8 (495) 2281312
Serbia	0800 222 111
Singapore	6735 9100
Slovak Republic	02 59 68 22 66 (4,428 sk)
Slovenija	01 5644171
South Africa	+2711 46 13 181
Spain	902 103935
Sweden	87 50 99 11
Switzerland	0848 212 000
Taiwan	02 266 24343
Turkey	0216 459 98 59
Ukraine	+380-44-451-71-72
United Arab Emirates	+97144458255/
	+97144458254
United Kingdom	0 84 53 67 08 12
USA	1-866 247-8758
Vietnam	1900 545 416

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.



We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.


A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:
www.gigaset.com/docs

CE 0682

Menu tree

Your phone has an extensive range of features. These are offered in the form of menus.

To select a function while the phone is in **idle status**, press **Menu** (open menu), use the  and  keys to scroll to the function you require and press **OK** to confirm.

To return to **idle status**: press and hold the  key.

Alarm Clock

Activation	Activating/deactivating the alarm clock.
Wake-up time	Input format: HHMM.

Audio Settings

Handset Volume	Earpiece	Can be set to one of 5 levels.
	Speaker	Can be set to one of 5 levels.
Ringer Volume	5 levels + "crescendo" available.	
Ringer Melody	External Calls	20 ringer melodies available for external calls.
	Internal Calls	20 ringer melodies available for internal calls.
	Alarm Clock	20 ringer melodies available for alarm clock.
Advis.Tones	Activate/deactivate.	
Battery Low	Activate/deactivate warning tone for low battery.	

Voice Mail (Menu dependent on base)

Settings

Date/Time	Enter date (DDMMYY format), then time (HHMM format).	
Handset	Language	Set the display language (→ P. 9).
	Big Dial Font	Show the phone numbers in large font when dialling.
	Contrast	The display contrast can be set to 9 levels.
	Auto Answer	Automatically activate/deactivate auto answer (→ P. 7).
	Register HS	Register the handset (→ P. 5).
	De-register HS	(dependent on base)
	Reset Handset	Reset the handset (→ P. 9).
Base	(Menu dependent on base)	

Issued by
Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© **Gigaset Communications GmbH 2012**

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com