

MS 300 SERIES METER

USER'S MANUAL

Safety

Meaning of symbol

CAUTION! Please consult the operating instructions before using the device. In these operating instructions, failure to follow or carry out instructions preceded by this symbol may result in personal injury or damage to the device and the installations.

Meaning of symbol

This appliance is protected by double insulation or reinforced insulation. It does not have to be connected to an earth protection terminal for electrical safety.

Thank you for purchasing this MS305 wattmeter.

To obtain the best service from your unit:



- **Read** these operating instructions carefully,

- **Comply** with the precautions for use.



PRECAUTIONS FOR USE

- Never use on a voltage network over 600V with respect to the earth connection. This voltage surge category III wattmeter complies with stringent reliability and availability requirements, corresponding to fixed industrial and domestic installations (see IEC 664-1).
- Do not use on alternative and continuous voltages > 600V.
- Indoor use in environments with a maximum pollution level of 2 (EN 50419:2006) temperature of -10°C to +50°C and relative humidity below 90%.
- Respect the value and type of the fuses to avoid damaging the instrument and canceling the warranty.
- Fuse 1A/500V
- Use accessories corresponding to safety standards (EN 61010-1:2001) with 600V minimum voltage and surge category III.
- Before any measurement, ensure correct positioning of the leads on the wattmeter and of the switch. When the value range of a measurement is not known, place the switch at the highest caliber, and then gradually reduce it until the appropriate caliber is achieved: the reading should preferably be in the upper 2/3 of the range.
- The leads must be disconnected to open the lower half of the meter case
- Never connect to the circuit to be measured if the casing is not properly closed.

CONTENTS

1 DESCRIPTION.....	2
2 REFERENCE CONDITIONS	2
3 SPECIFICATIONS	3
4 MEASUREMENTS	4
5 GENERAL CHARACTERISTICS	6
6 SUPPLY	7
7 MAINTENANCE	7

1 DESCRIPTION

The MS305 wattmeter is for everyday use by electricity professionals. It offers the following functions:

-Wattmeter: power measurement (DC and AC)


1-1 Safety terminals, $\Phi 4\text{mm}$

- COM common, terminal receiving the black lead (1)
- A for A_{DC} and A_{AC} calibers (2)
- COM/V1 common, terminal receiving the black lead or voltage (3)
- V2 for voltage (4)
- V3 for voltage (5)

1-2 2-range dial (6)

One black and one red, with anti-parallax mirror, for the P_{DC} and P_{AC} .

1-3 Range selection switch (7)

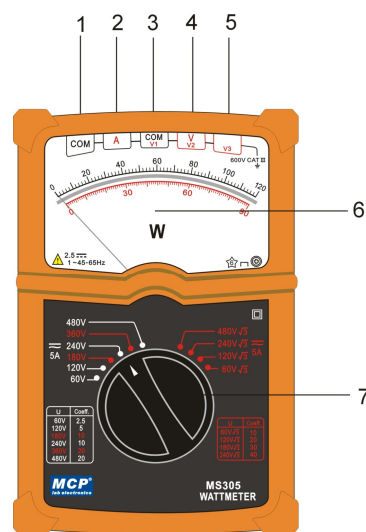

2 REFERENCE CONDITIONS

Temperature: $23^{\circ}\text{C} \pm 2^{\circ}\text{C}$

Humidity: $45\% \text{RH} \pm 5\%$

Position: horizontal $\pm 2^{\circ}$

Ensure that the pointer is at zero before starting any measurements.

Zero adjustment: open the device. Mechanical zero adjustment is carried out by turning the screw on the back of the null meter.

Ensure that the switch is correctly positioned.

When an estimated measurement is unknown, place the switch at the highest caliber, and then gradually reduce it until the appropriate caliber is achieved: the reading should preferably be in the upper 2/3 of the range.

3 SPECIFICATIONS

Connect the leads to the wattmeter (be careful of switch position, see below) and connect to the circuit to be controlled. When an estimated measurement is unknown, place the switch at the highest caliber, and then gradually reduce it until the appropriate caliber is achieved.

To obtain power in W, multiply the appropriate range value by the reading coefficient indicated in the table.

Single phase

Range V AC/DC	60 V	120 V	180 V	240 V	360 V	480 V
Power	300 W	600 W	900 W	1200 W	1800 W	2400 W
Reading coefficient	2.5	5	10	10	20	20
Internal resistance	60 kΩ	120 kΩ	180 kΩ	240 kΩ	360 kΩ	480 kΩ
Accuracy (1)	1 % on AC, 2.5 % on DC					
Admissible Overload (6)	120 V (2) 400 V (3)	240 V (2) 400 V (3)	240 V (2) 400 V (3)	380 V (2) 400 V (3)	480 V (2) 800 V (3)	600 V (2) 800 V (3)

3-phase

Range V AC/DC	$60\sqrt{3}$ V	$120\sqrt{3}$ V	$180\sqrt{3}$ V	$240\sqrt{3}$ V
Power	900 W	1800 W	2700 W	3600 W
Reading coefficient	10	20	30	40
Internal resistance	120 kΩ	240 kΩ	360 kΩ	480 kΩ
Accuracy (1)	2 %			
Admissible Overload (6)	220 V (4) 380 V (5)	380 V (4) 500 V (5)	480 V (4) 800 V (5)	600 V (4) 800 V (5)

(1) In % of end of range.

(2) 10 A on the 5A range, for a maximum measurement time of 2 to 3 minutes.

(3) 10 A on the 5A range, for a maximum measurement time of 5 seconds.

(4) 10 In on 5A range, for a maximum measurement time of 2 to 3 minutes.

(5) 10 In on 5A range, for a maximum measurement time of 5 seconds.

(6) The current or voltage circuit can withstand permanent overloads of 25%

4 MEASUREMENTS

4-1 Measurement time


About 2.5 seconds

4-2 Active power (Watts) DC or single phase measurements

- Place the switch on one of the 6 ranges on the left, corresponding to the voltage of the circuit to measure.
- Connect the MS305 as shown in the diagram (the terminal on the right, V3, is not connected)
- Read the deflection of the needle on the measurement scale .read the value in such a way that the reflection of the needle on the anti parallax mirror is hidden
- Apply the coefficient corresponding to the voltage and the current indicated by the switch

Example:

- With the switch on the 120 V range.
- In the table, the coefficient corresponding to 120 V is 5.
- The result is Watts is therefore: Number of divisions read x 5.

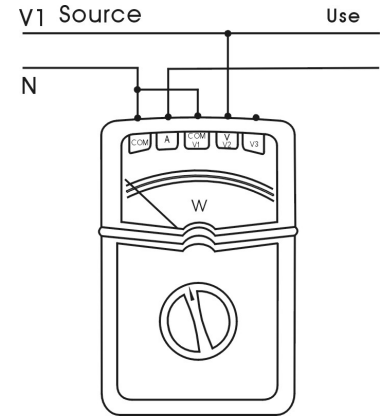


4-3 Active power (Watts) on 3-phase 3wire balanced

- Place the switch on one of the 4 ranges of the right corresponding to the voltage of the circuit measured
- Connected the MS305 as shown on the diagram
- Read the deflection of the needle on scale 90
- Apply the coefficient from the table on the right corresponding to the range chosen

Example:

- With switch on range $180V\sqrt{3}$
- The table gives the coefficient corresponding to the range: 30
- The result of the measurement in Watts is:
Number of divisions read x 30

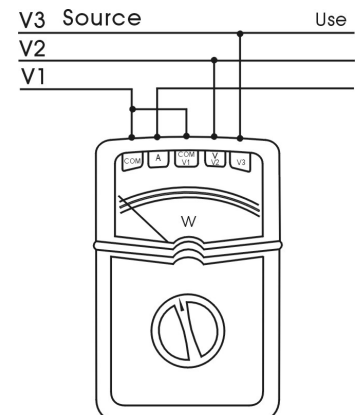


4-4 Reactive power (Vars) on 3-phase 3 wire balanced

- Same procedure as for the measurement on single phase with connected as shown on the diagram opposite
- In addition to the coefficient for the position of the switch, apply the coefficient $\sqrt{3}$ for 3-phase

See example of measurement on single phase:


$$Q = \text{Number of divisions read} \times 5 \times \sqrt{3}$$

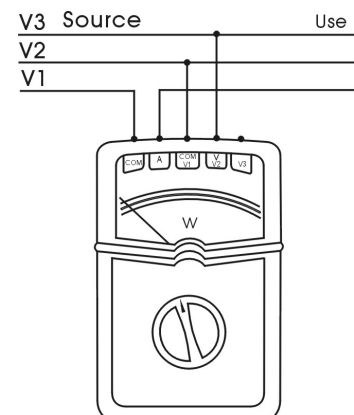

4-5 Active power (Watts) on 3-phase 3 wire non balanced


- In this case, use the two wattmeter method and find the sum of the two single phase powers $P_1 + P_2$ to obtain the total active power P
- See connection on the diagram below

Note: refer to the paragraph on single phase measurement for reading of P_1 and P_2 .

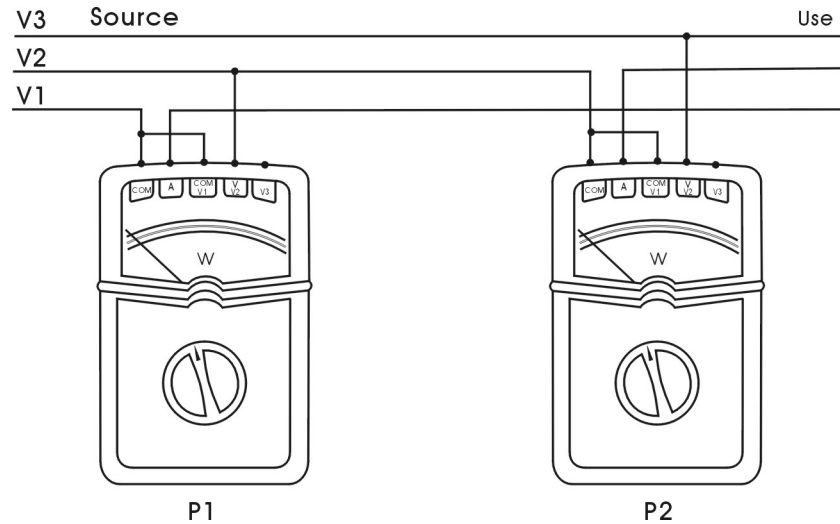

4-6 Reactive power (Vars) on 3-phase 3 wire non balanced

- Take the sum of three powers $P_1 + P_2 + P_3$ and apply the coefficient $1/\sqrt{3}$ to get the total reactive power
- See connection shown of the diagram below

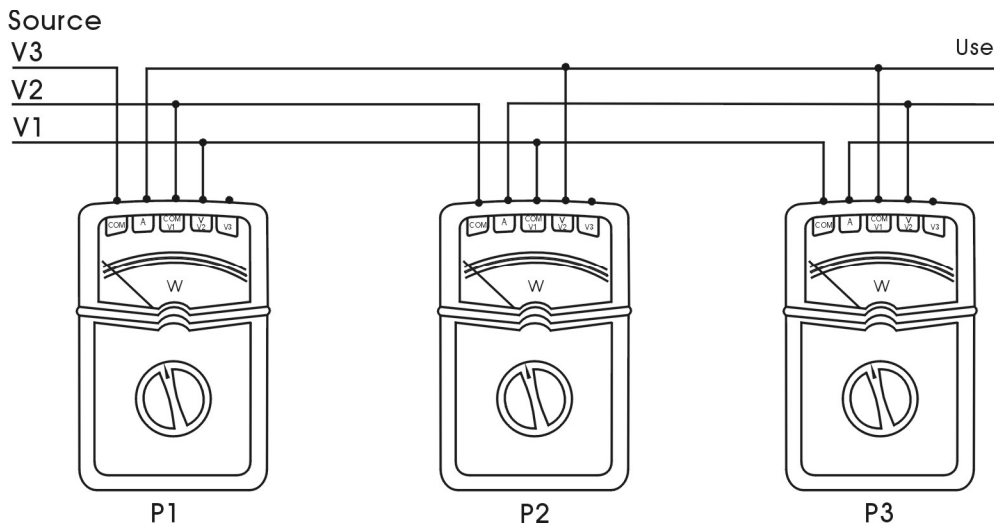


4-7 Active power (Watts) on 3-phase 4 wire non balanced

Add the three single phase powers $P1+P2+P3$ to find the total active power P .

- See connection shown on the diagram below.

Note: refer to the paragraph on single phase measurement to read $P1$, $P2$ and $P3$.

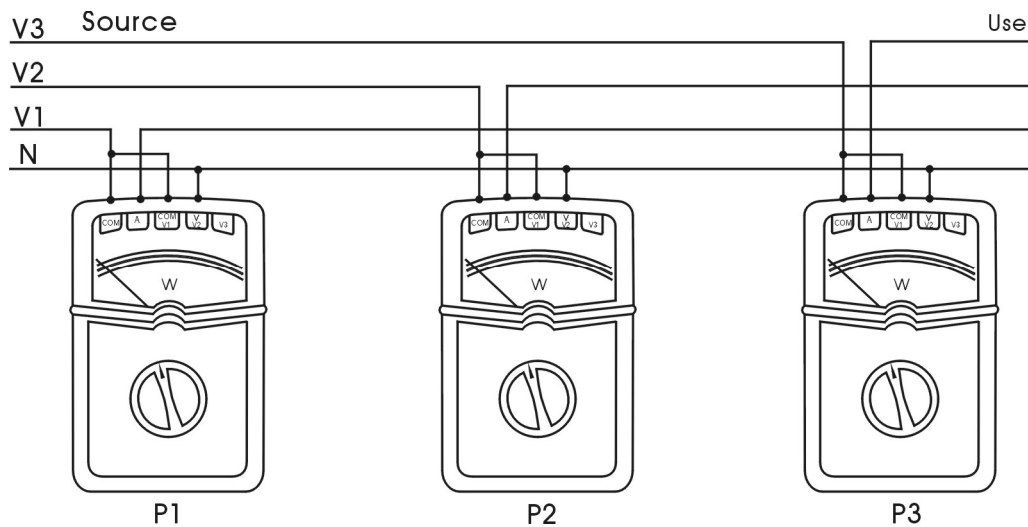

4-8 Reactive power (Vars) on 3-phase 4 wire

Proceed in the same way as for reactive power on 3-phase 3 wire non balanced without taking into account the neutral wire.

5 GENERAL CHARACTERISTICS

5-1 Dimensions and weight

Dimensions: 165×105×50mm

Weight: 670g

5-2 Maximum climatic conditions

Temperature use -10°C to +50°C; storage -30°C to +70°C


Relative humidity use ≤80% HR

Altitude use <2000m

5-3 Compliance with international standards

Electrical safety (EN 61010-1:2001)

 CEI 1010-1 EN61010 NF-C 42020 VDE 0411

- Double insulation: 
- Pollution level: 2
- Installation category: III according to CEI 664
- Allocated voltage: 600V

5-4 Electromagnetic compatibility

- Emission (EN 61326-1:2006)
- Immunity (EN 61326-1:2006)

Maximum influence in the presence of conducted radio frequencies: 3 times the accuracy class if the length of the measured circuit is >3m.

6 SUPPLY

To order **MS305**

Delivery:

- 1 wattmeter
- 1 user's manual

7 MAINTENANCE

Only use the specified spare parts for maintenance. The manufacturer shall not be held liable for any incident occurring following repairs carried out by a party other than its after-sales service or approved repairers.

7-1 Changing the fuses

Opening the wattmeter:

Open the device by removing the black over. Use the same type of fuses to ensure the safety of users and of the device.

Fuse: 5 A/500V

7-2 Storage

If the wattmeter is not used for a period of over 60 days, remove the battery and store it separately.

For a shorter period, avoid leaving the wattmeter in ohmmeter position. There is a risk of premature battery wear if the tips come into contact with it.

7-3 Cleaning

The wattmeter must be disconnected from all electricity sources.

To clean the casing, use a cloth dampened with soapy water. Wipe over with a damp cloth. Dry quickly with a dry cloth or forced air.