


# OWNER'S MANUAL

## Mobile Video System

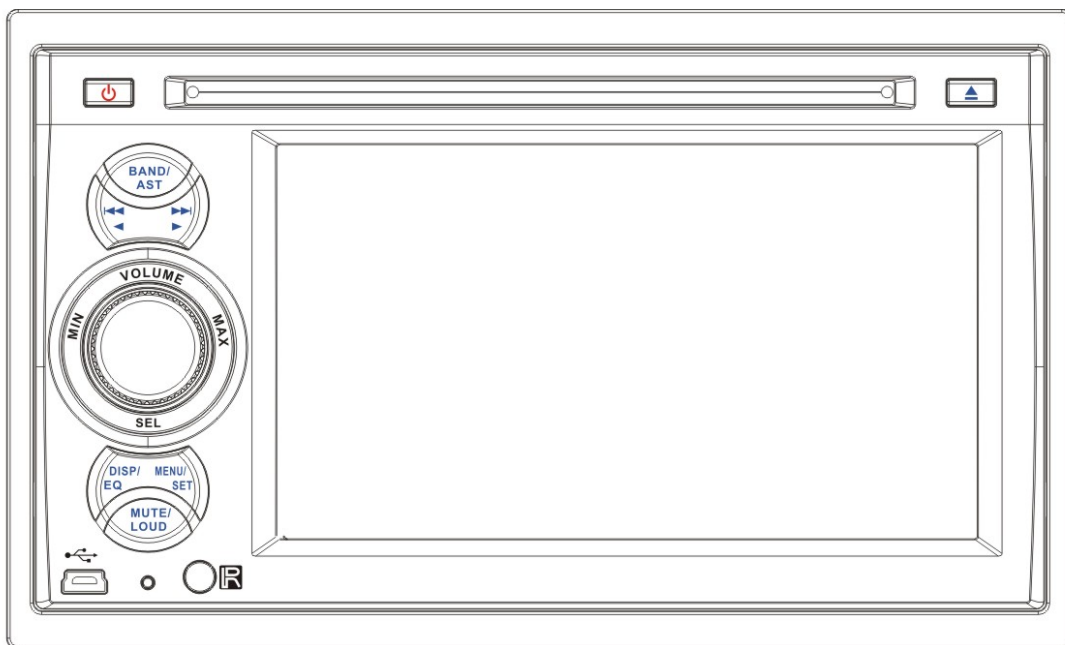

## **TABLE OF CONTENTS**

Safety Information .....	2
Features .....	3
Accessories.....	4
Front Panel .....	5
Rear Panel .....	5
Remote Control .....	6
Installation .....	8
Unit Removal .....	9
Wire Connection .....	10
Disc Notes .....	11
Disc Operations .....	12
Basic Operations .....	13
Touch Screen Operations. ....	14
Touch Screen Calibrate .....	14
Main Menu .....	15
Radio Operations .....	17
DVD Operations .....	20
USB Operations .....	23
iPod Operations .....	24
AV IN Operations .....	26
CDC Operations .....	27
System Setup .....	29
DVD Setup Menu.....	32
Specifications .....	35
Trouble Shooting .....	36

## **SAFETY INFORMATION**

**Please read the manual carefully before operating this unit and keep it for future reference.**

**CAUTION:** This unit is a class 1 laser product. To prevent direct exposure to the laser system, do not open the unit. The laser beam may hurt your eyes. If the unit requires adjustments, contact an authorized service centre.

### **USE THIS PRODUCT SAFELY**

Be sure you fully understand the following safety information:

#### **When driving**

Keep the unit at an appropriate sound level. Driving with the sound at a level preventing you from hearing sounds outside and around the car may cause an accident.

#### **When cleaning**

Do not expose the product to water or excessive moisture. This could cause short circuit, fire or other severe damage.

#### **When parked**

Parking in direct sunlight can result in very high temperature levels inside your car. Let the interior and unit cool down before switching the unit on.

#### **NOTE:**

*Do not use and store the player in dusty, hot or humid environment.*

### **FUSE REPLACEMENT – WARNING!**



**Never replace any fuse with one of a higher value than the fuse supplied with your unit. Using a higher current rated fuse may cause damage to your unit and/or electrical wiring.**

## **FEATURES**

- ISO/2-DIN Size
- DVD/DVD-R/DVD-RW/VCD/CD/CD-R/CD-RW/MP3 Compatible
- 5.8" Wide-Screen TFT/LCD Display
- High Brightness: 350 cd/m<sup>2</sup>
- Resolution: 1440 x 234
- Color, Contrast, Brightness, Tint controls
- Car DVD Slot-in Mechanism
- Digital & Mechanical Anti-Shock with ESP Memory
- Built-In Dolby Digital Decoder
- Built-In MP4 Decoder
- Last Position Memory
- OSD (On Screen Display)
- NTSC/PAL Compatible
- Full Function Remote Control
- AM/FM PLL Synthesizer Tuner with 30 Memory Presets
- Auto Store Pre-set Scan
- Preset EQ (POP CLASSIC ROCK JAZZ USER)
- Bass/Treble/Fader/Balance Controls
- Extending Amplifier Control
- Auto Antenna Control
- Telephone Mute Control
- Sanyo Compatible DVD/CD Changer Control
- Brake Reminder System
- Hi Power 50W x 4
- 4 RCA Audio Outputs
- 1 RCA Video Output
- 1 RCA Sub-Woofer Output
- 1 RCA Audio Video Input
- 1 RCA Rear View Camera Input
- Mini USB / SD Card
- iPod Input Connection (Cable not included)

### **NOTE:**


*This user's manual is only for reference.*

*Modifying rights are reserved.*

*Specifications are subject to change without notice.*


## ACCESSORIES

1

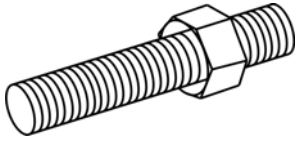

Bolt

2

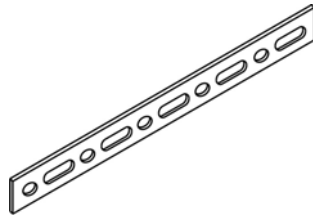


Steel Bar x 1

3




M5X5 Screws x 8

4

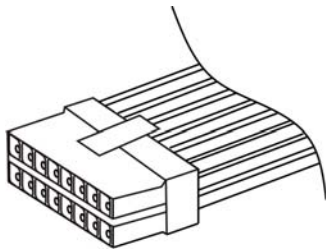


Connector Wire x 1

5

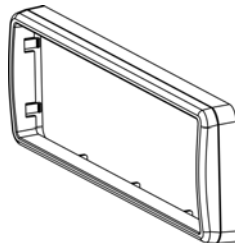


Trim Bezel x 1

6

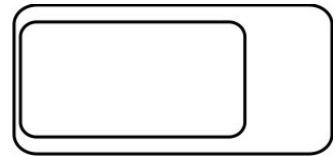


Remote Control x 1

 7




Operational Manual x 1

8

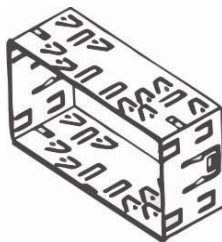


Mounting Sleeve x 1

9

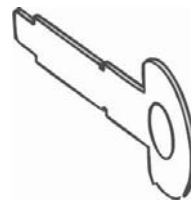


Keys x 2

## **FRONT PANEL**

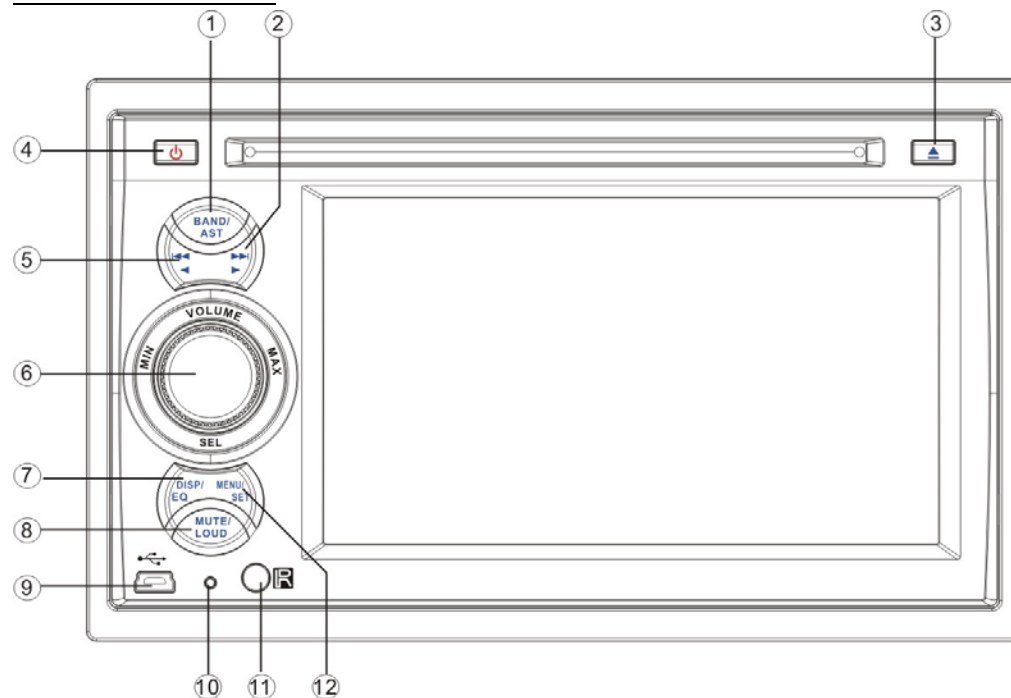


- |                   |                               |                |
|-------------------|-------------------------------|----------------|
| 1. BAND / AST     | 6. VOLUME + / - / SEL / ENTER | 11. REMOTE     |
| 2. NEXT / F.FWD   | 7. EQ / DISP                  | 12. MENU / SET |
| 3. EJECT          | 8. MUTE / LOUD                |                |
| 4. POWER / SOURCE | 9. MINI USB                   |                |
| 5. PREV / F.REW   | 10. RESET                     |                |

## **REAR PANEL**

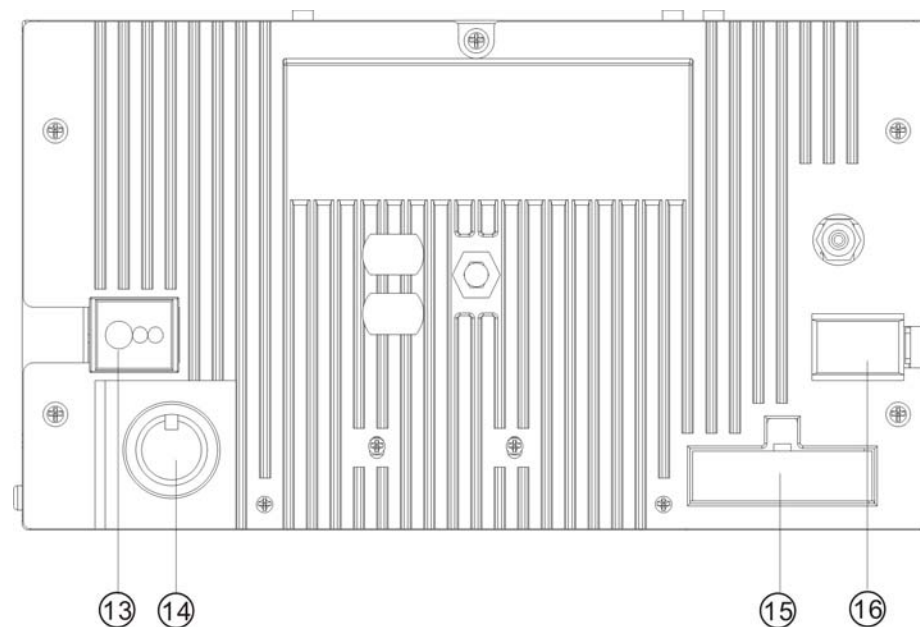

- |                                  |                  |
|----------------------------------|------------------|
| 13. RADIO, IPOD MINI DIN ADAPTER | 15. 16PIN SOCKET |
| 14. CDC ADAPTER                  |                  |
| 16. VIDEO AUDIO OUTPUT & INPUT   |                  |

## REMOTE CONTROL

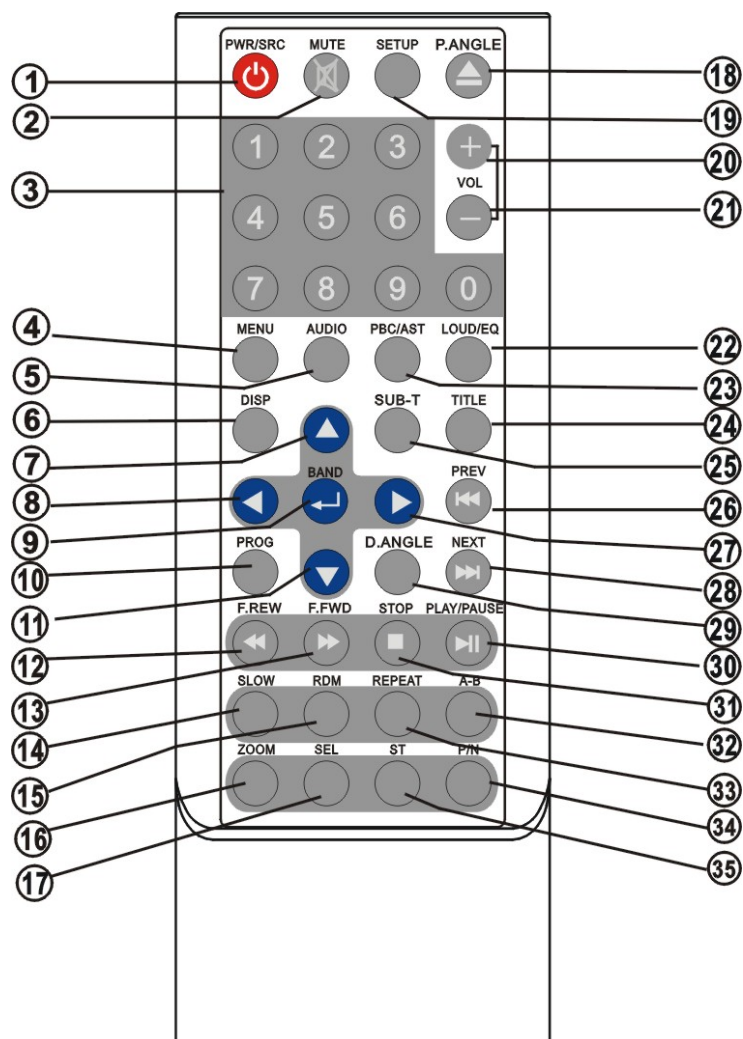

1. POWER/SOURCE
2. MUTE
3. NUMBER BUTTONS
4. MENU
5. AUDIO
6. DISPLAY
7. UP (Tune up)
8. LEFT (Seek Down)
9. ENTER / BAND
10. PROGRAM
11. DOWN(Tune Down)
12. F.REW

13. F.FWD
14. SLOW
15. RANDOM
16. ZOOM
17. SELECT
18. EJECT
19. SETUP
20. VOLUME+
21. VOLUME-
22. LOUD / EQ
23. PBC / AST
24. TITLE

25. SUBTITLE
26. PREVIOUS
27. RIGHT(Seek up)
28. NEXT
29. D.ANGLE
30. PLAY / PAUSE
31. STOP
32. A-B
33. REPEAT
34. PAL / NTSC
35. STEREO


### **NOTE:**

P.ANGLE is not effective for this unit, it is a common remote control for other models.


## Replacing the Batteries

If the remote control has no function or if the operating range is reduced, replace the old battery with new one.


1. Remove the battery cover. Follow the arrow (1) slide the tab to the right while pulling the cover away at the same time.

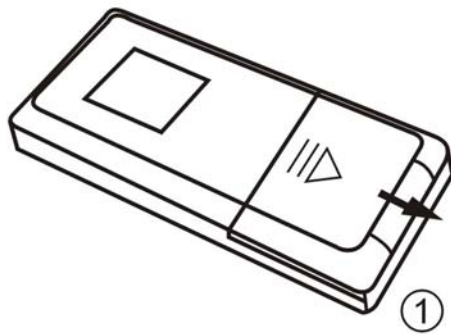

2. Place the new battery in the tray and slide the cover back into place.

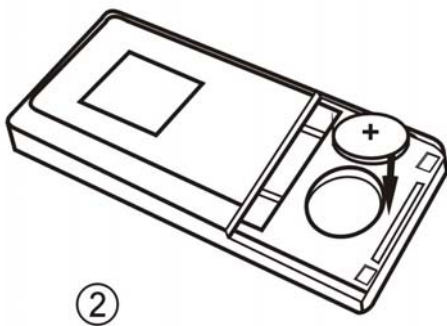


3. Make sure the cover is locked into place.

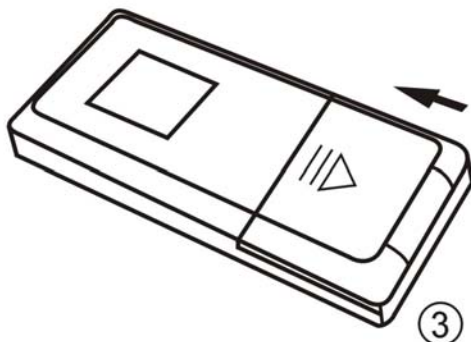




## **UNIT INSTALLATION**

1. Install the mounting sleeve to the unit from rear to front.

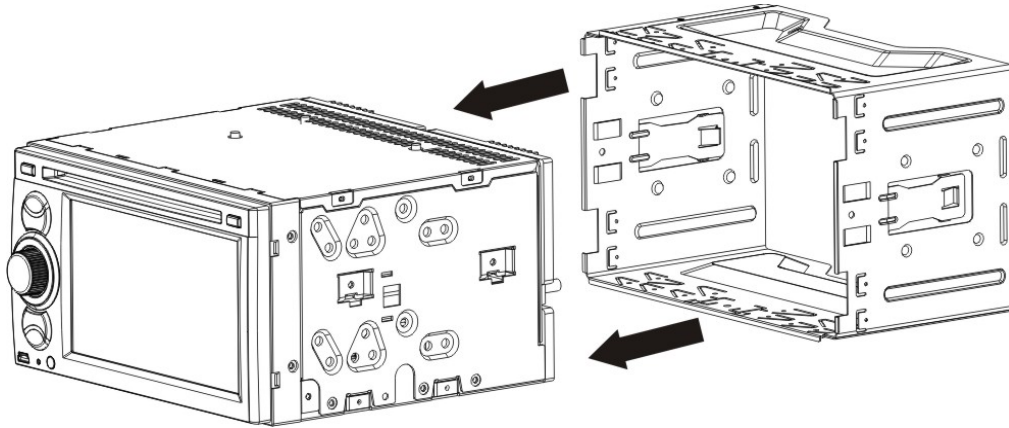


2. Install the trim bezel to the unit. (Arched surface toward the bottom)

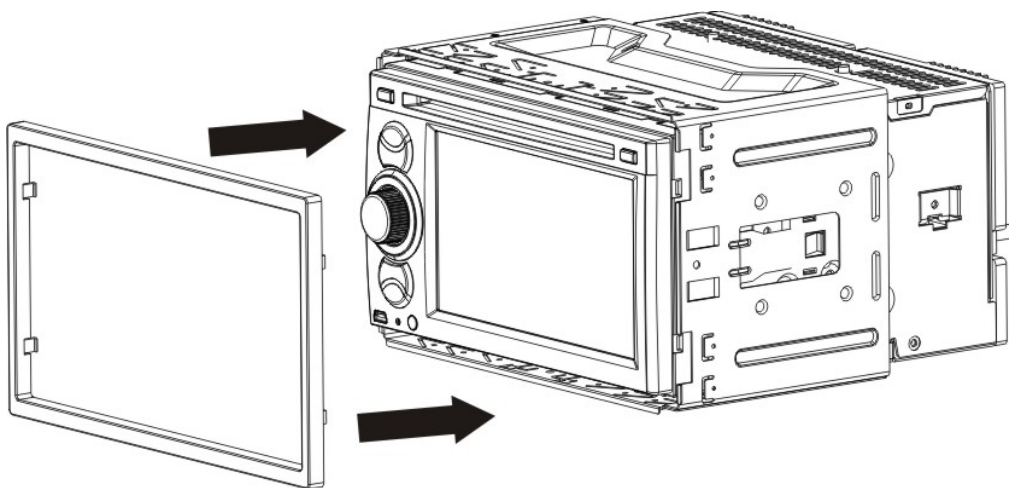


## **UNIT REMOVAL**


1. Remove the trim bezel from the unit.

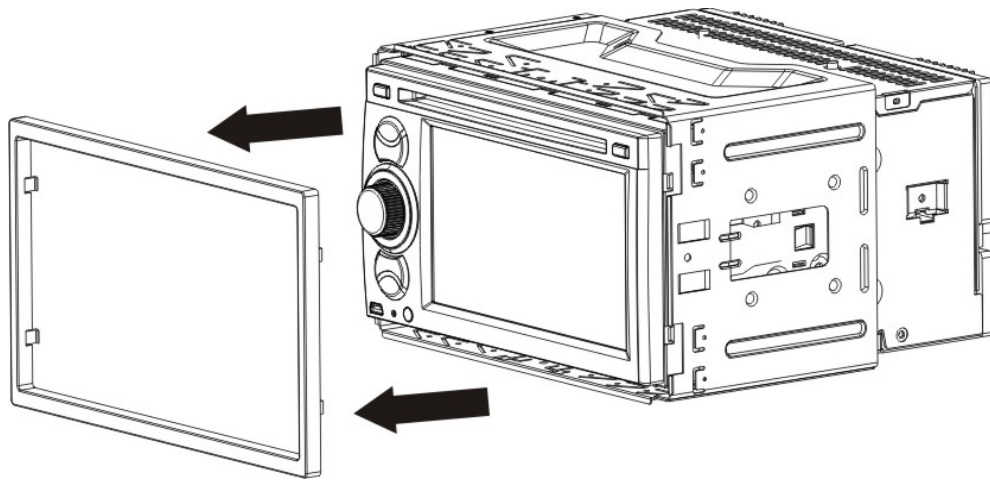

2. Insert the keys supplied with the unit on both sides (as illustrated) as this will release the internal locks so you can slide the unit out.

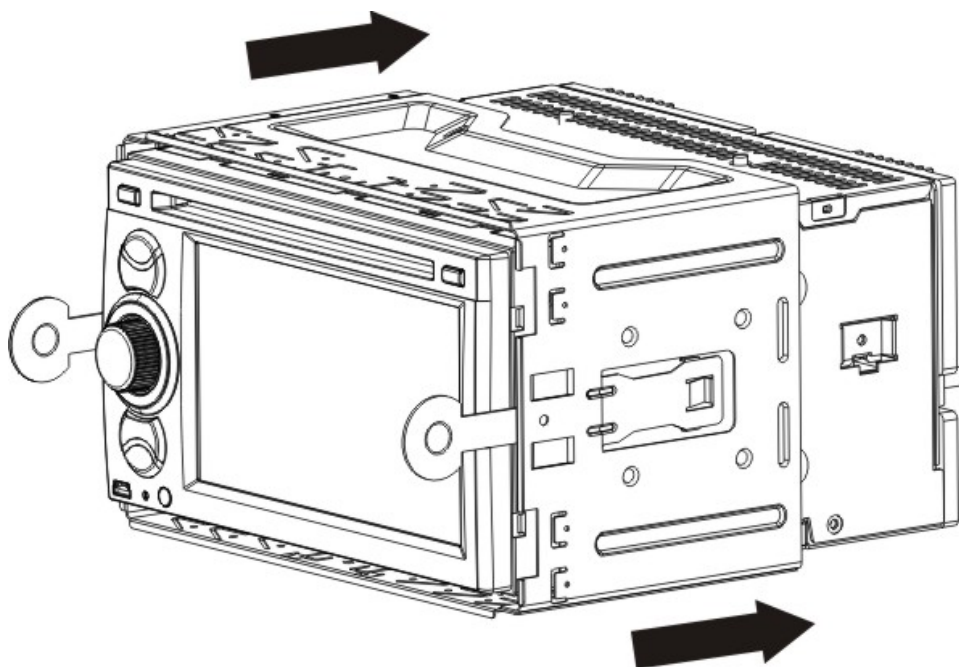

## WIRE CONNECTION

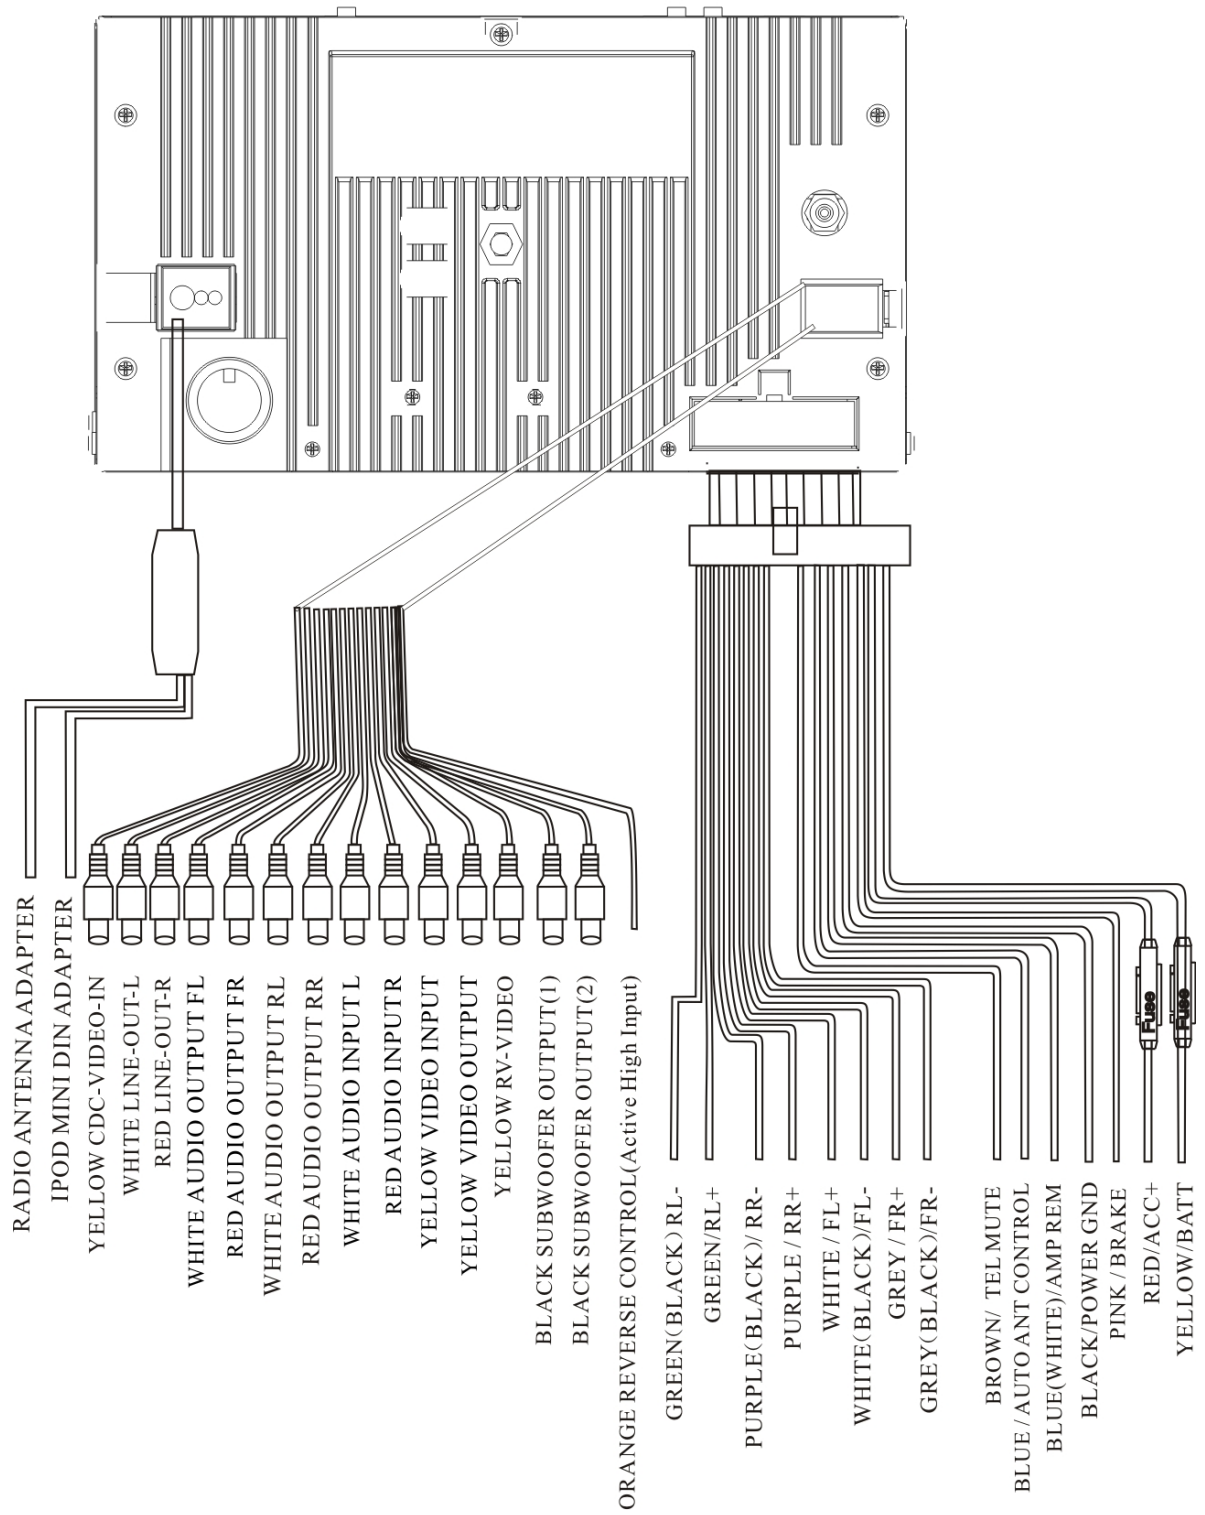

## **DISC NOTES**

### **■ Disc formats supported by this player**



### **Handling and cleaning**

- Dirty, dusty, scratched or warped discs may not play properly.
- Do not place stickers or make scratches on discs
- Do not warp discs.
- Store discs in their cases when not in use.
- Do not place discs in the following places:
  1. Direct sunlight.
  2. Dirty, dusty and damp areas.
  3. High temperature places.
  4. On the sets or dashboard.

### **Disc Cleaning**



Use a dry soft cloth to wipe the surface. If the disc is quite dirty, use a soft cloth slightly moist with isopropyl (rubbing) alcohol.

Never use solvent such as benzene, thinner or conventional record cleaners which may mar the surface of the disc.

### **NOTE:**

*A disc may become somewhat scratched to a point which will skip excessively or not play at all in your player. Have the disc resurfaced or polished to reduce the issue or replace the disc with a new one.*

## **DISC OPERATIONS**

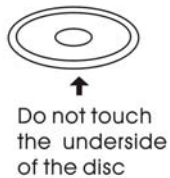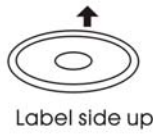

### **Repairing New Discs with Rough Spots**

A new disc may have rough edges on its inside and outside edges. If a disc with rough edges is used, the proper setting will not be performed and the player will not play the disc. Therefore, remove the rough edges in advance by using a ballpoint pen or pencil. To remove the rough edges, press the side of the pen or pencil against the inside and outside edges of the disc.

## **BASIC OPERATIONS**

### **Power**

Press the [POWER/SOURCE] button to turn the unit ON;  
Press and hold the button to turn the unit OFF.

### **Switching Sources**

When the unit is turned ON, press the [POWER/SOURCE] button to toggle between the different modes as following:

**RADIO – DVD – USB – IPOD – CDC – AV IN – RADIO**

### **NOTE**

*The unit could be switched to DVD Mode if disc inside;  
The unit could be switched to USB Mode if Mini USB connected;  
The unit could be switched to IPOD Mode if iPod connected;*

### **Volume Control**

Rotate the [VOL] button clockwise / anticlockwise to increase / decrease the volume.

### **Mute**

Press the [VOL] button vertically to switch off the sound; press it again to resume to the previous volume level.

### **Loud**

Hold on pressing the [LOUD/EQ] button of remote control to switch the Loud settings as following:

**400 HZ – 800 HZ – 2400 HZ – OFF – 400 HZ**


### **EQ**

The user can set to adjust the audio output to your preference. Press the [LOUD/EQ] button of remote control to switch the EQ settings as following:

**USER – POP – CLASSIC – ROCK – JAZZ – USER**

### **Brake Control**

It is necessary to connect the Brake Control wire to the Hand-brake switch of the car. While driving, the TFT monitor will display the alarm picture (see as follows) in order to ensure the safety.

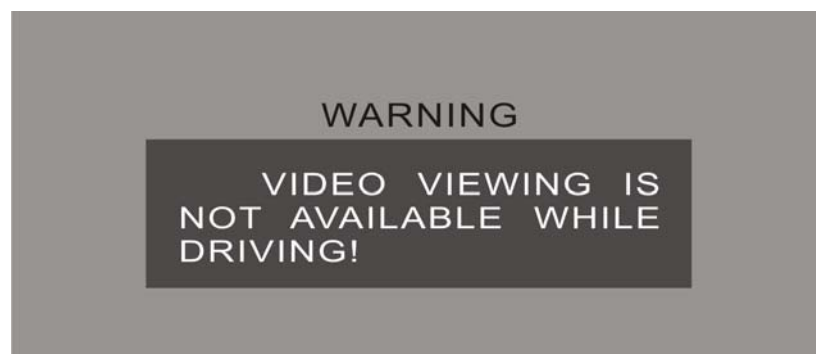

Under the Rear View Mode, the Brake Control function is no effective.

**Telephone Mute Control**

Connect the telephone mute control wire " TEL\_MUTE " (see Wiring Diagram). If there is a vehicle call comes in, the sound volume will mute off automatically, and TFT monitor shows: " PHONE... " ; When call finished, the sound volume will recover to former volume, and the words " PHONE... " disappear.

**Auto Antenna Control**

Connect the auto antenna control wire " AUTO\_ANT " (see Wiring Diagram); The antenna will lift when the unit startup; it will descend when the unit turnoff.


**Reset**

Press the [RESET] button to switch back to all the original factory settings. Keep in mind this will erase all your preset radio stations and any EQ settings you may have made and saved.

## **TOUCH SCREEN OPERATIONS**

### **TOUCH SCREEN CALIBRATE**

When "Power Off", press the buttons 1, 2, 3, 4, 5, [BAND] of panel or remote control to enter the CALIBRATE page:

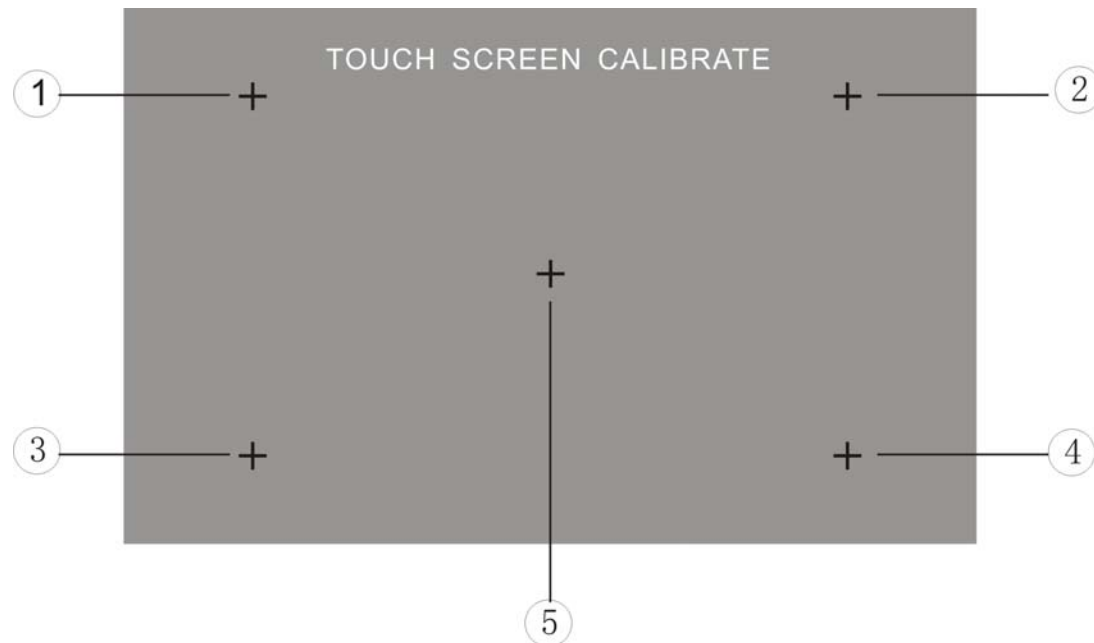

To touch the points from 1 to 5 until the points change to brighter by using a ballpoint pen or pencil.




After all 5 points change to brighter, the unit would finish the CALIBRATE and power off again. Then the Touch Screen is restored to their default positions.



## MAIN MENU



Touch the icon “MORE” to enter the 2<sup>nd</sup> page of main menu.

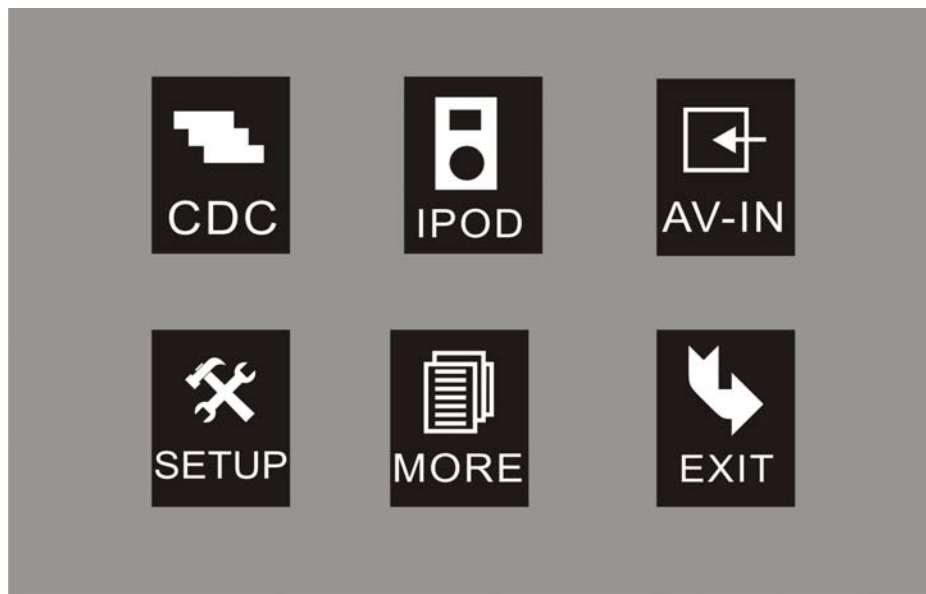


Touch the icon “MORE” to enter the 1<sup>st</sup> page of main menu.  
Touch the icon “EXIT” to return the previous working Mode.

### **NOTE:**

*The unit could be switched to DVD Mode if disc inside;  
The unit could be switched to USB Mode if Mini USB connected;  
The unit could be switched to IPOD Mode if iPod connected;*

## **RADIO OPERATIONS**

Touch the icon "RADIO" to enter the RADIO Mode:

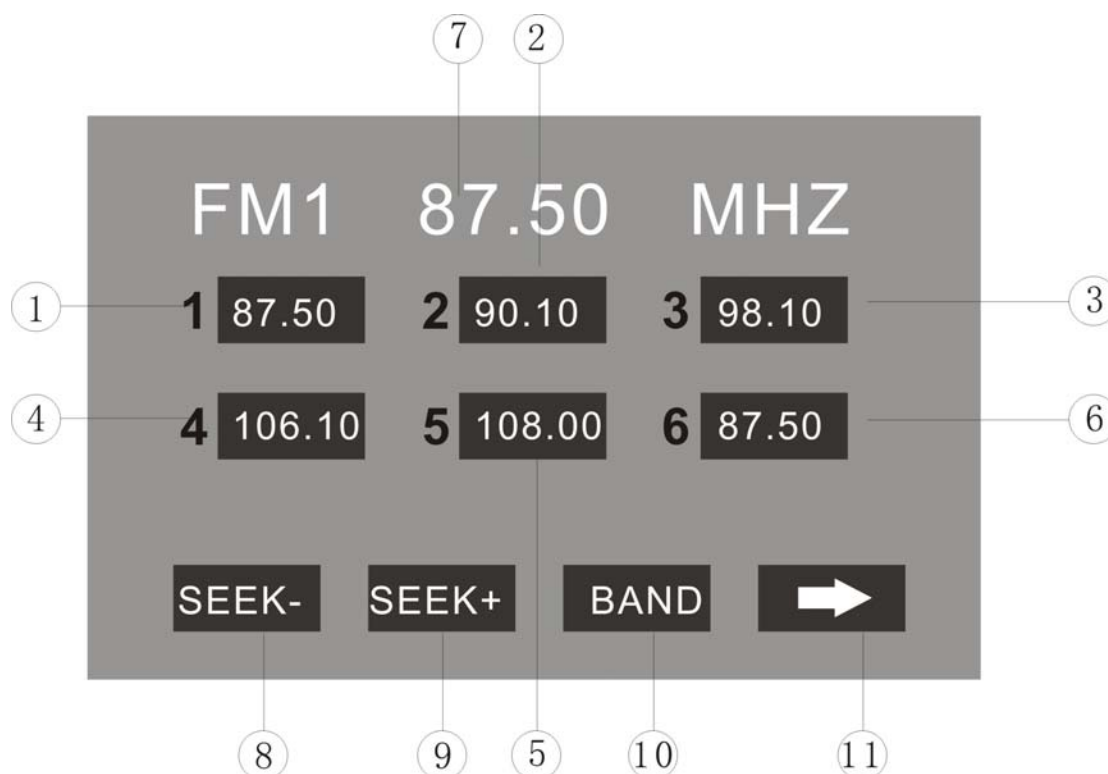

### **1~6. STORED CHANNEL**

#### **Manual Store Radio Station**

Hold on touching the icon, you can store current radio frequency to the stored channel. For example, the current frequency is 98.5MHZ, by hold on touching the icon 1, you can store the radio station of 98.5MHZ to the channel 1.

After manual store radio station, the former stored stations will be instead.

In each wave band, the number icons 1 to 6 represent the stored radio stations.

To hold on pressing the number buttons 1~6 on panel or remote control performs same operation.

#### **Recall a Preset Station**

Touch the icon 1~6 to recall the corresponding stored station in M1~M6 channels.

To press the number buttons 1~6 on panel or remote control performs same operation.

### **7. FREQUENCY**

#### **8. SEEK - / 9. SEEK +**

Touch the icon to seek the next available channel by increasing / decreasing the tuning frequency.

Press any button to stop seeking.

Seeking will stop automatically when seek an available channel then play this station. The unit will stop on the beginning frequency if no available station after seeking one cycle.

To hold on pressing [>] / [<] buttons of panel or remote control performs same operation.

## 10. BAND


Touch the icon to switch the FM/AM wave band as following:

FM1 - FM2 - FM3 - AM1- AM2 - FM1

To press the [BAND/ENTER] button of panel or remote control performs same operation.

## 11. NEXT PAGE

Touch the icon to enter the 2<sup>nd</sup> page of RADIO Mode:

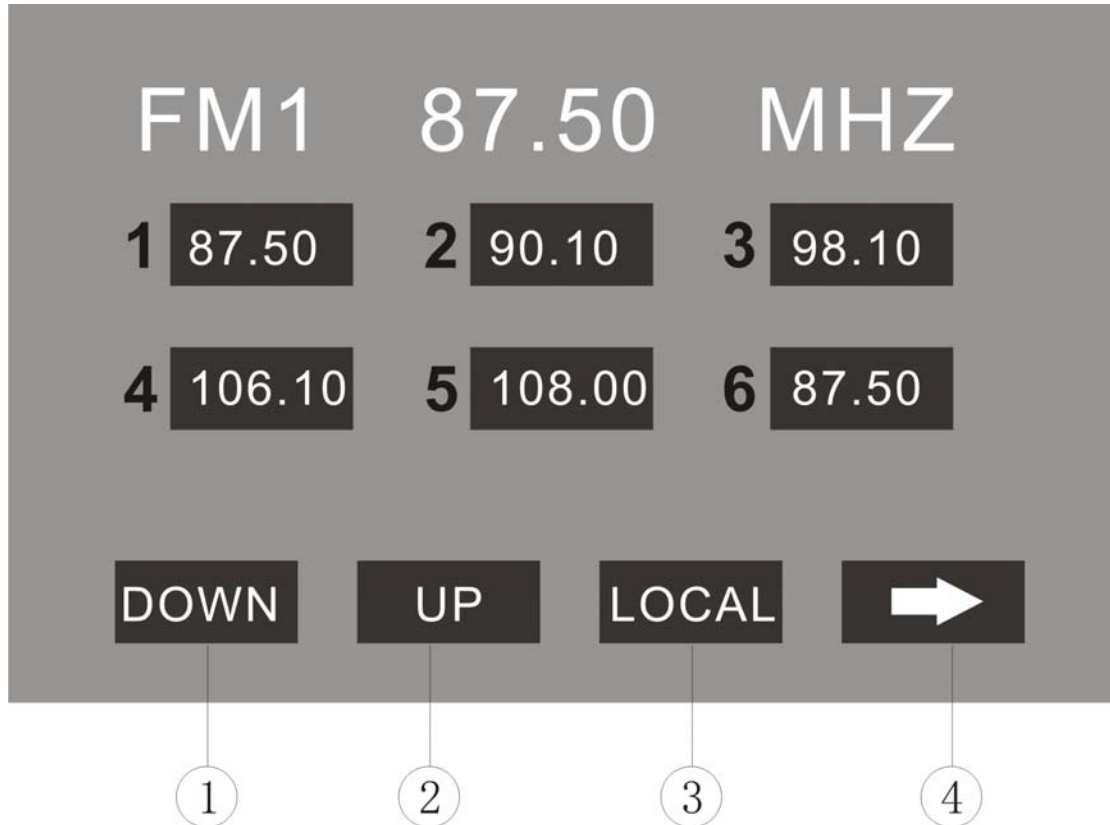

### 1. DOWN / 2. UP

Touch the icons to adjust the frequency downward / upward by step decreasing / increasing.

Hold on touching the icons has same function with [SEEK-] / [SEEK+].


To press the [V] / [^] buttons of the remote control performs same operation.

### 3. LOCAL: ON / OFF

When you are using the local searching function of LOCAL, you can only receive the radio station with strong enough signals and fine state.

### 4. NEXT PAGE

Touch the icon to enter the 3<sup>rd</sup> page of RADIO Mode:

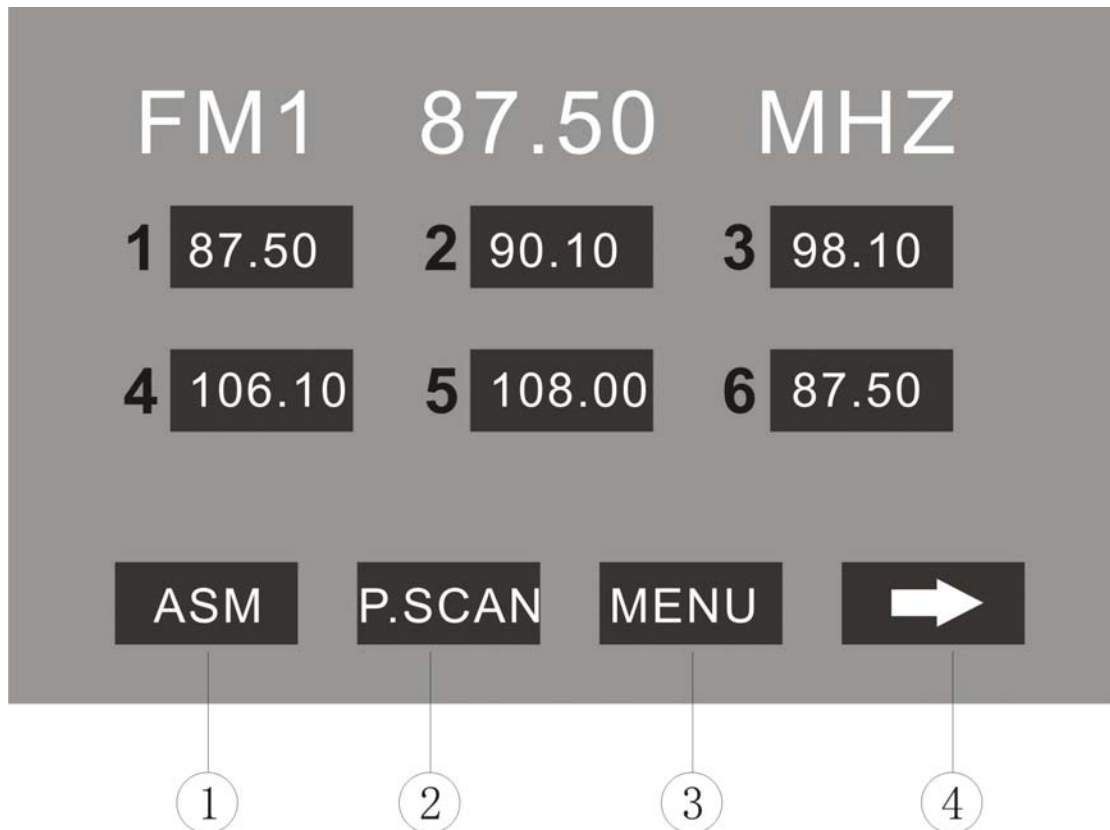

#### 1. ASM

Seeking and store the stations

1. Hold on touching the icon to seek stations with the strongest signal from the lowest frequency point in the entire wave bands; press any button to stop seeking. After seeking, the former stored stations will be instead.
2. Store the received effective radio frequency to the six stored channels M1~M6.
3. The unit will play the stations one by one for few seconds; press any button to stop playing.
4. It is independent for FM & AM frequency. There are 3 wave bands of FM1、FM2、FM3 & 2 wave bands of AM1、AM2, each can store 6 radio stations, totally 30 radio stations.
5. The unit will stop on the beginning frequency if no available station after seeking one cycle.
6. To hold on pressing the [PBC/AST] button of remote control performs same operation.

#### 2. P.SCAN

The unit will play the stored stations one by one for few seconds from FM1, FM2, FM3, AM1, AM2; press any button to stop playing.

#### 3. MENU

Touch the icon to return the main menu.

#### 4. NEXT PAGE


Touch the icon to enter the 1<sup>st</sup> page of RADIO Mode.

## **DVD OPERATIONS**

Touch the icon “DVD” to enter the DVD Mode if disc inside.

The unit will switch to DVD Mode automatically if loading disc.

The unit will switch to RADIO Mode automatically if ejecting disc.

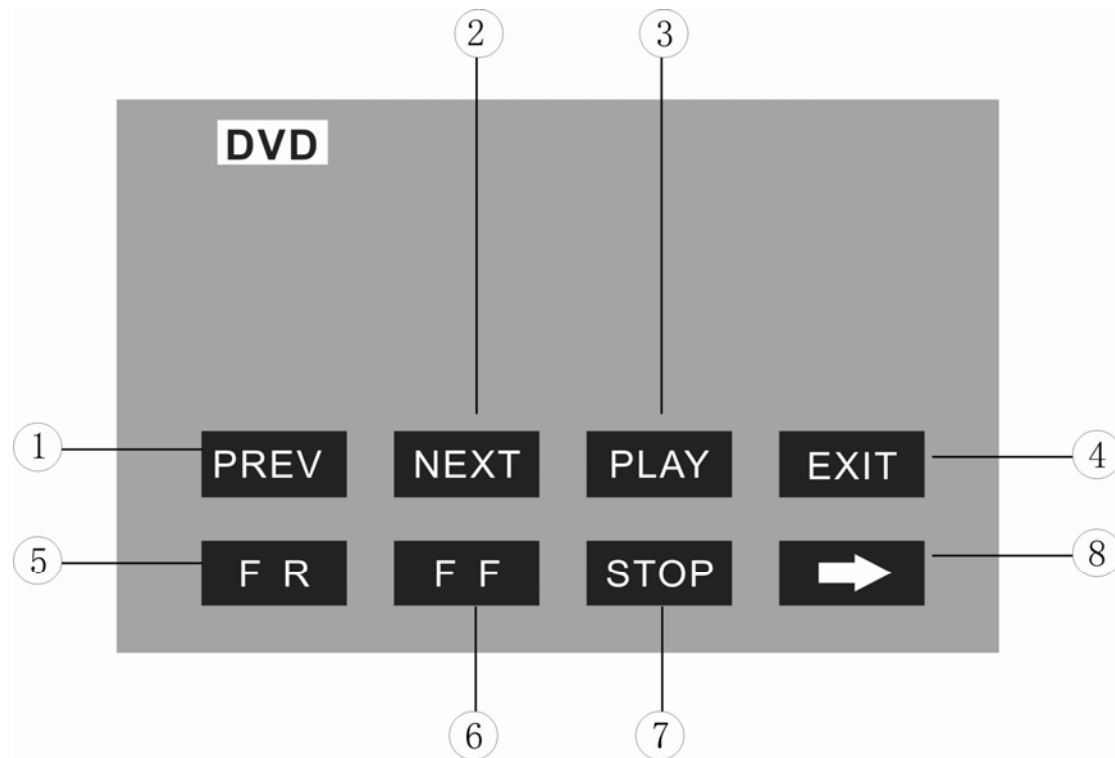

### **1. PREV / 2. NEXT**

Touch the icon to go to the pervious / next chapter, track or song.

To press the [Previous] / [Next] buttons of panel or remote control performs same operation.

### **3. PLAY**

Touch the icon to play or pause the disc.

To press the [PLAY/PAUSE] button of panel or remote control performs the same operation.

### **4. STOP**

During movie playback, touch the icon once; the DVD player memorizes the location where you stopped (touch the [PLAY] icon to resume playing from the memorized location). If you touch the icon twice, the playback will start from the beginning of the disc when you touch the [PLAY] icon.

To press the [STOP] button of panel or remote control performs the same operation.

### **5. F.REV / 6. F.FWD**

Touch the icon to select fast reverse / forward search. Touch the [PLAY] icon to resume to normal playback.


To press the [F.REV] / [F.FWD] buttons of panel or remote control performs the same operation.

### **7. EXIT**

Touch the icon to exit the TOUCH ICONS display.

## 8. NEXT PAGE

Touch the icon to enter the 2<sup>nd</sup> page of DVD Mode.

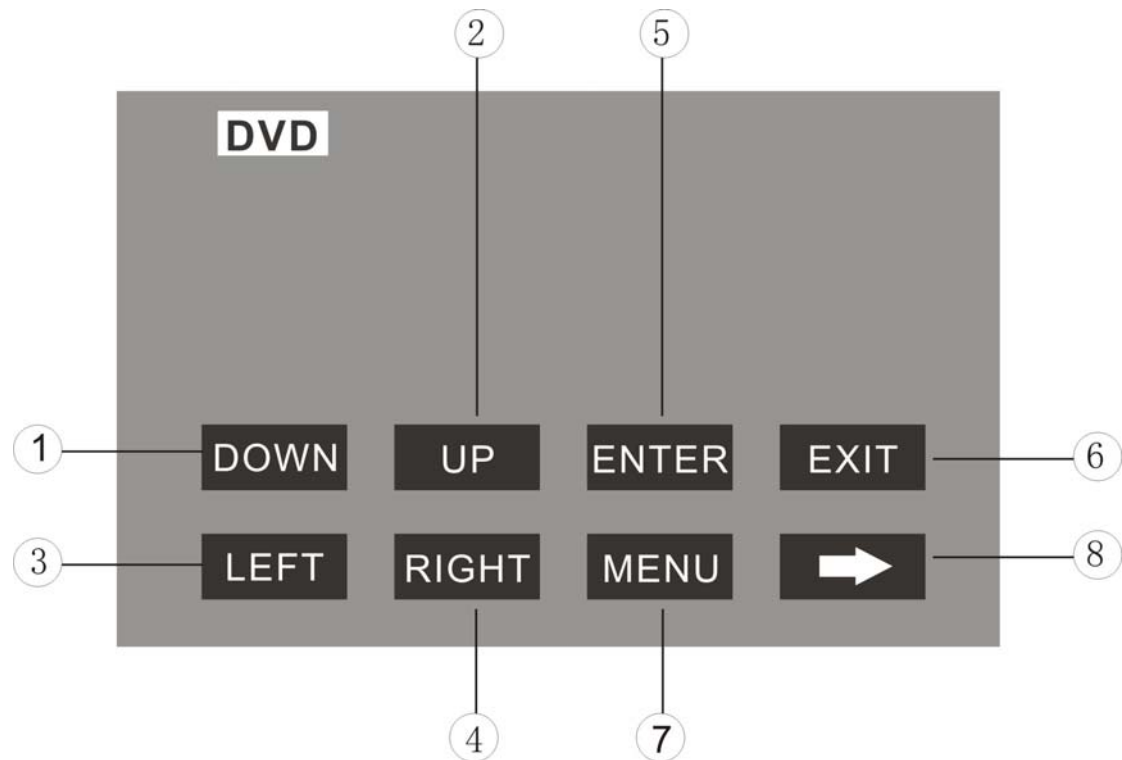

### 1~4. DOWN / UP / LEFT / RIGHT

Touch the direction icons (UP / DOWN / LEFT / RIGHT) to move the cursor to the selected item.

To press the direction buttons (UP / DOWN / LEFT / RIGHT arrow) of remote control performs same operation.

### 5. ENTER

Touch the icon to confirm the selection.

To press the [ENTER] button of remote control performs same operation.

### 6. EXIT

Touch the icon to exit the TOUCH ICONS display.

### 7. MENU

Touch the icon to return the main menu.

## 8. NEXT PAGE

Touch the icon to enter the 1<sup>st</sup> page of DVD Mode.

## **\* DVD Operations on the Panel & Remote Control**

### **Ejecting Disc**

Press the [EJECT] button to eject the disc.

### **Play/Pause**

Press the [PLAY/PAUSE] button to play or pause the disc.

### **Stop**

During movie playback, press the [STOP] button once; the DVD player memorizes the location where you stopped (press PLAY button to resume playing from the memorized location).

If you press the [STOP] button twice, the playback will start from the beginning of the disc when you press again on the [PLAY] button.

### **F.FWD/F.REV**

Press the [F.FWD] / [F.REV] buttons to select fast forward / reverse search. Press the buttons on the remote control performs the same operation. Press the [PLAY/PAUSE] button to resume to normal playback.

### **Previous/Next**

Press the [Previous] / [Next] button to go to the pervious / next chapter, track or song.

### **Setup**

Press the [SETUP] button to enter the setup menu.

### **Enter**

In DVD mode, press the [ENTER] button to confirm the Setup Menu.

### **Direction**

Press the direction buttons (UP / DOWN / LEFT / RIGHT arrow) to move the cursor to the selected item.

### **Display**

Press the [DISPLAY] button to display the current playback information on the screen.

### **Zoom**

Press the [Zoom] button during normal playback to zoom a picture. Press it repeatedly to switch between the zoom levels.

### **Repeat**

Press the [REPEAT] button to repeat the same track, press it twice to repeat all tracks. When playing a DVD movie, pressing once will repeat the same chapter but pressing twice will repeat the entire title.

### **Angle**

Press the [D.ANGLE] button during playback to select different viewing angles with interactive DVD media.

### **PBC**

PBC is available in VCD mode as playback control switch.

### **Menu**

Menu is available in DVD mode as playback control panel.

**Audio**

When playing a DVD disc, press the [AUDIO] button to select one of the available languages.

**Subtitle**

For DVD disc, press the [SUBTITLE] button to select one of the available languages.

**Program**

When playing a VCD disc (PCB off) or CD disc, press the [PROGRAM] button to enter the program status; Press the number buttons to enter the number of the track you want to play. If you want to exit, press the [PROGRAM] button again.

**Slow**

Press the [SLOW] button to activate the playback in slow motion (DVD mode only.)

**P/N**

Press the [P/N] button to select the video output format (PAL/NTSC).

**Number Buttons**

Press the number buttons to play your favourite track. For example: to play track 8, press the button 8. To play track 68, press the buttons 6 and 8 etc.

**Random**

Press the [RDM] button to shuffle all tracks. Press it again to return to the normal playback mode from the first track (CD mode only.)

**USB OPERATIONS**

Touch the icon "USB" to enter the USB Mode if USB connected.

The unit will switch to USB Mode automatically if connecting USB.

When disconnecting USB, the unit will switch to RADIO Mode automatically if there is no disc in the unit; and the unit will switch to DVD Mode automatically if there is a disc inside.

Under USB Mode, all operations are same as DVD operations.




## **IPOD OPERATIONS**

Touch the icon "IPOD" to enter the IPOD Mode if iPod connected.  
The unit will switch to IPOD Mode automatically if connecting iPod.  
The unit will switch to RADIO Mode automatically if disconnecting iPod.

### **NOTE:**

***It is available for iPod operations with an additional iPod cable which is optional accessory.***

### **Music Operation**

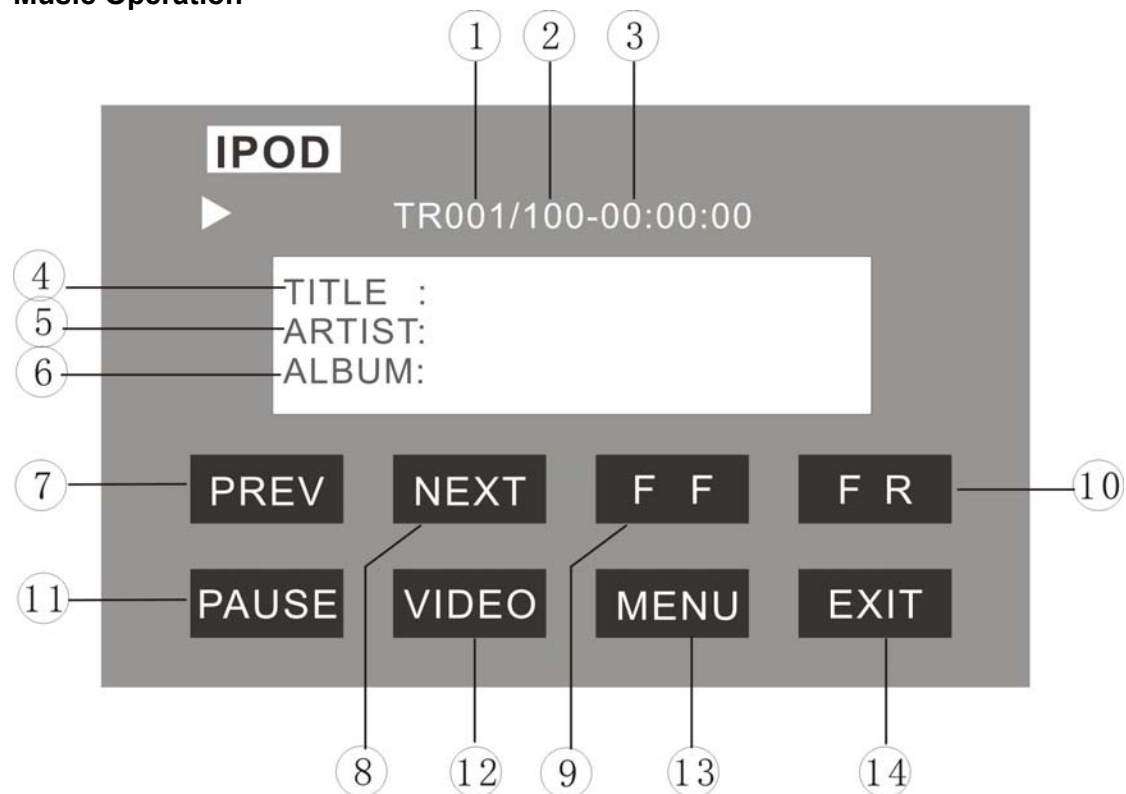

- 1. The Number of Playing Song
- 2. The Total Songs in Play List
- 3. The Playing Time
- 4. The Name of Playing Song
- 5. The Name of Artist
- 6. The Name of Album

### **7. PREV / 8. NEXT**

Touch the icon to go to the pervious / next chapter, track or song.

To press the [PREVIOUS] / [NEXT] buttons of panel or remote control performs same operation.

### **9. F.REV / 10. F.FWD**

Touch the icon to select fast reverse / forward search. Touch the [PLAY] to resume to normal playback.

To press the [F.REV] / [F.FWD] buttons of remote control performs the same operation.

### 11. PLAY / PAUSE

Touch the icon to play or pause the disc.

To press the [PLAY/PAUSE] button of panel or remote control performs the same operation.

### 12. VIDEO

Touch the icon to switch to the VIDEO operation.


### 13. MENU

Touch the icon to return the main menu.

### 14. EXIT

Touch the icon to exit the TOUCH ICONS display.

## Video Operation

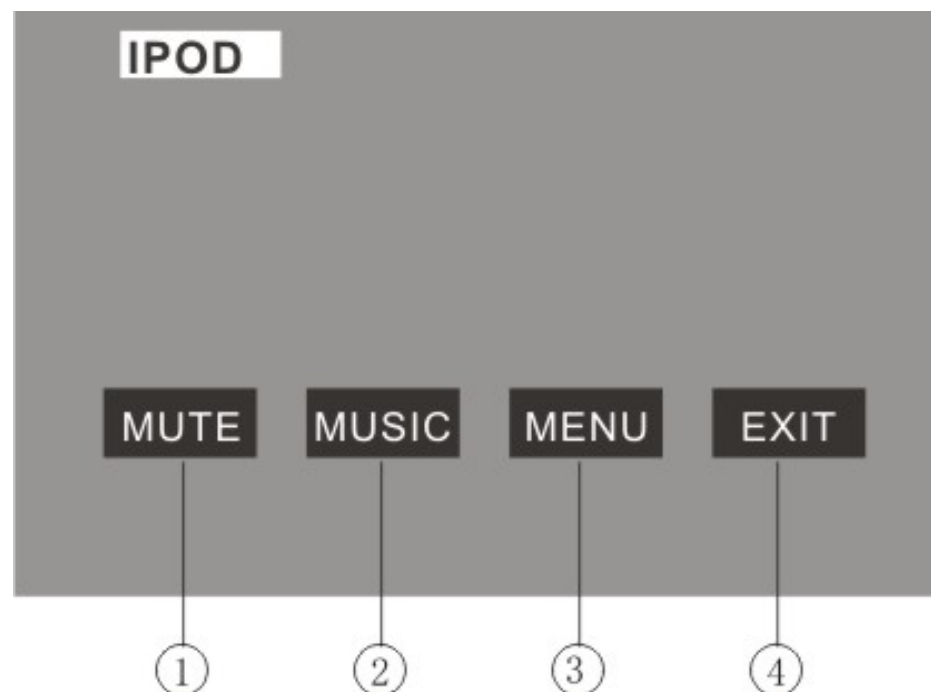

### 1. MUTE

Touch the icon to switch off the sound; touch it again to resume to the previous volume level.

### 2. MUSIC

Touch the icon to switch to the MUSIC operation.

### 3. MENU


Touch the icon to return the main menu.

### 4. EXIT

Touch the icon to exit the TOUCH ICONS display.

## **AV IN OPERATIONS**

Touch the icon “AV IN” to enter the AV IN Mode:

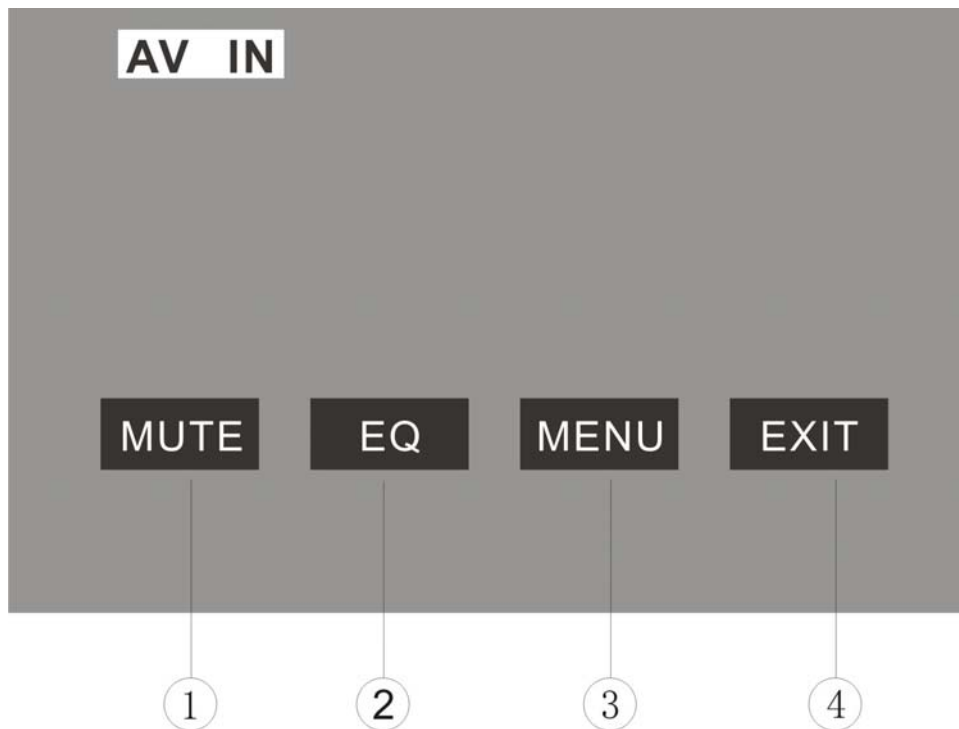

### **1. MUTE**

Touch the icon to switch off the sound; touch it again to resume to the previous volume level.

### **2. EQ**

The user can set to adjust the audio output to your preference:  
USER – POP – CLASSIC – ROCK – JAZZ – USER

### **3. MENU**

Touch the icon to return the main menu.

### **4. EXIT**


Touch the icon to exit the TOUCH ICONS display.

### **NOTE:**

There are 2 RCA Audio Inputs & 1 RCA Video Input for unit.

## **CDC OPERATIONS**

Touch the icon “CDC” to enter the CDC Mode if CD/DVD changer connected:

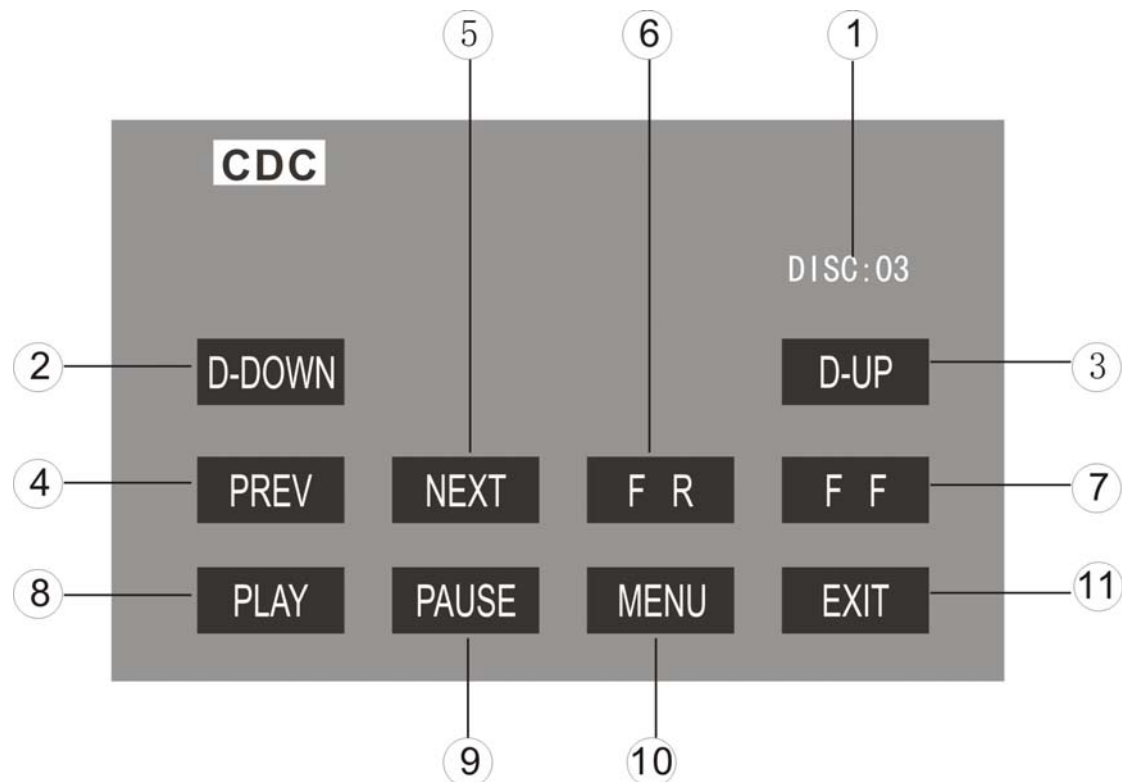

**1.** The playing DISC number

**2.** D-DOWN / **3.** D-UP

Touch the icon to change the next / previous disc to play.

**4.** PREV / **5.** NEXT

Touch the icon to go to the pervious / next chapter, track or song.

To press the [PREVIOUS] / [NEXT] buttons of panel or remote control performs same operation.

**6.** F.REV / **7.** F.FWD

Touch the icon to select fast reverse / forward search. Touch the [PLAY] icon to resume to normal playback.

To press the [F.REV] / [F.FWD] buttons of panel or remote control performs the same operation.

**8.** PLAY / **9.** PAUSE

Touch the icon to play or pause the disc.

To press the [PLAY/PAUSE] button of panel or remote control performs the same operation.

**10.** MENU


Touch the icon to return the main menu.

**11.** EXIT

Touch the icon to exit the TOUCH ICONS display.

**NOTE**

Touch the “CDC” icon to enter the following page if the CD/DVD changer not connected.

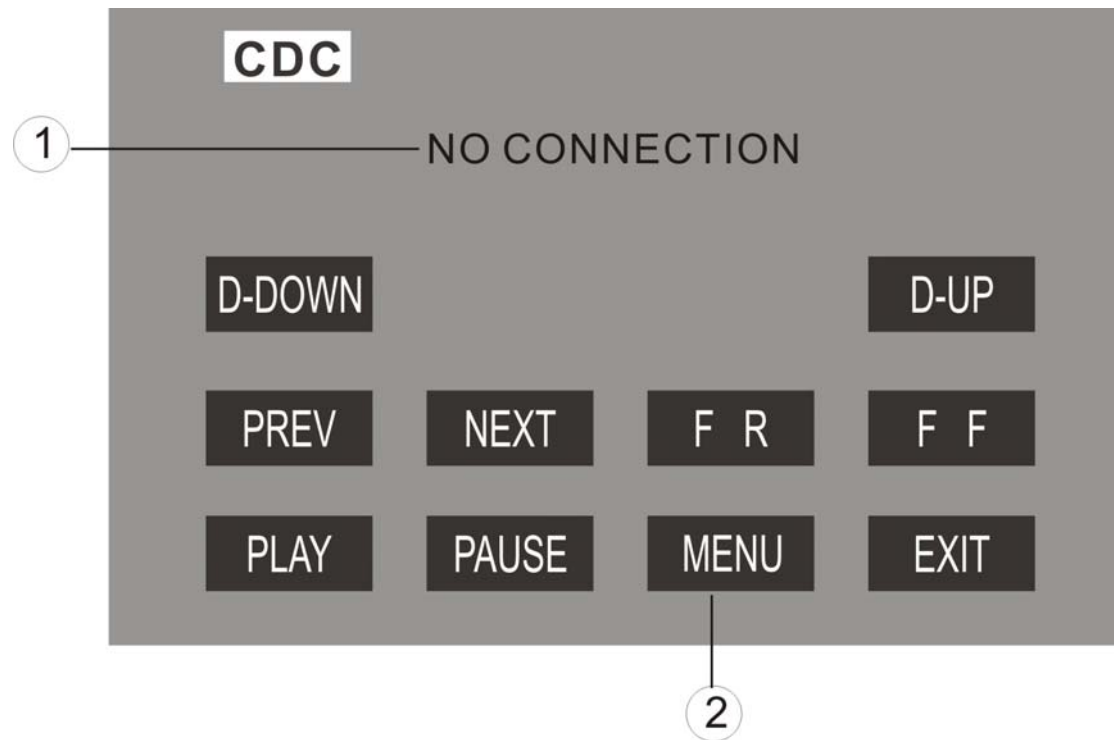**1, INFORMATION**


It indicates that the unit does not connect the CD/DVD changer.

**2, MENU**

Touch the icon to return the main menu.

## **SYSTEM SETUP**

Touch the icon “SETUP” or hold on pressing the [VOL / SEL] button of panel to enter the SETUP of system parameters:

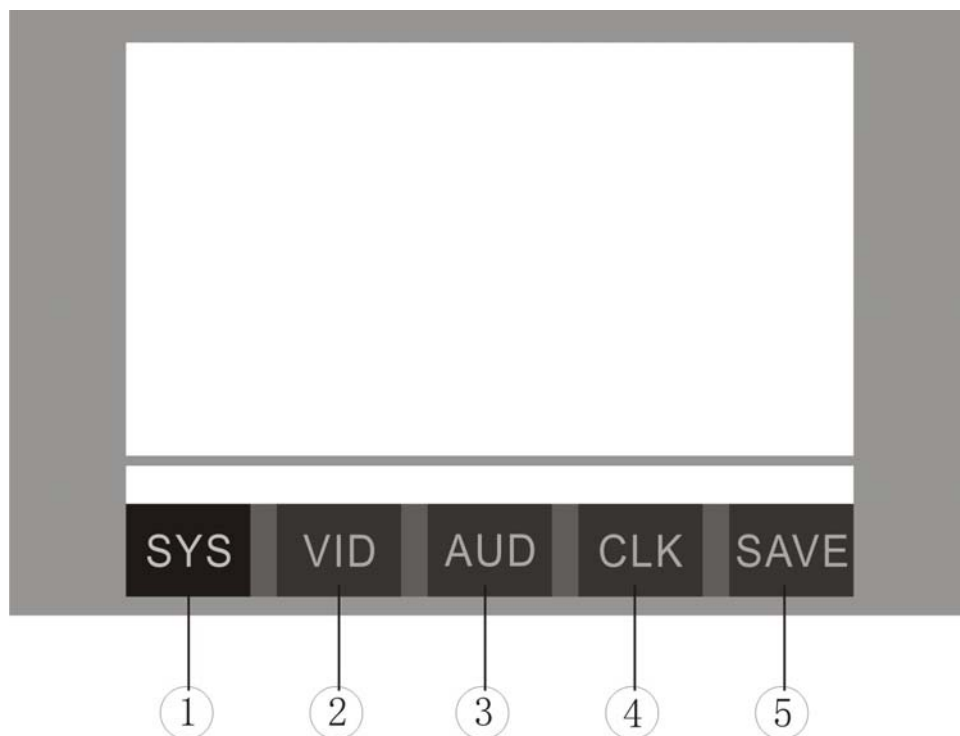

### **1. SYSTEM SETUP**

### **2. VIDEO SETUP**

### **3. AUDIO SETUP**

### **4. CLOCK SETUP**

Touch the icon 1~4 to select the main menus directly.

### **5. SAVE SETTINGS**

Touch the icon 5 to save all settings and exit SETUP.

## **SETUP MENU OPERATION**

Press the [ENTER / BAND] button of panel or remote control to switch the main menus as following:


### **SYSTEM – VIDEO – AUDIO – CLOCK – SYSTEM**

Press the [V] / [^] buttons of remote control or the [VOLUME] button of panel to select the item you want to change.

Press the [<] / [>] buttons or rotate the [VOLUME] button of panel to change the value of item.

Hold on pressing the [VOL / SEL] button of panel to exit the SETUP of system parameters

## SYSTEM SETUP

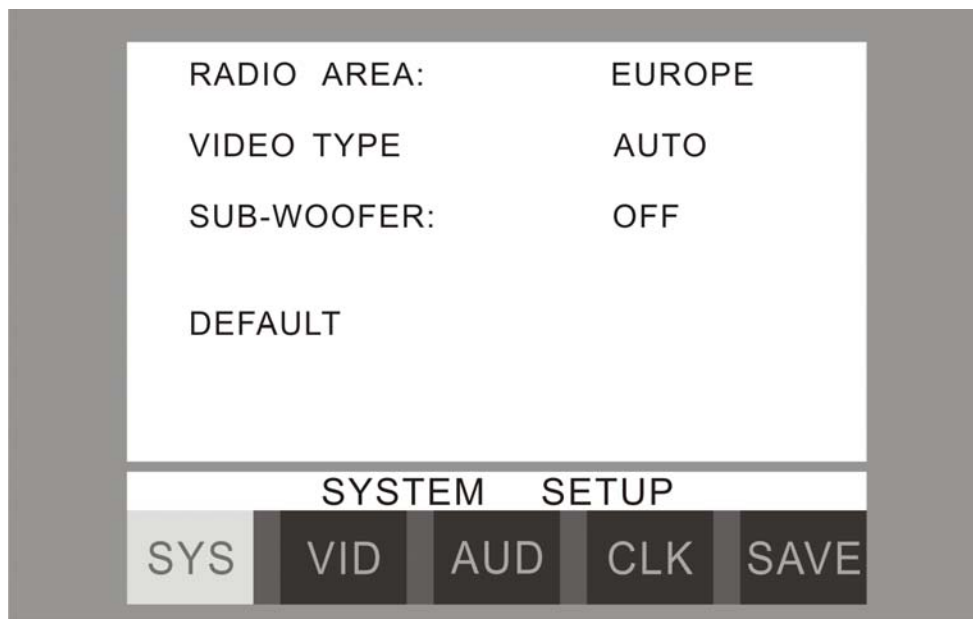

The image shows a 'SYSTEM SETUP' menu on a screen. The menu is displayed in a white box with a black border. It contains the following settings:

RADIO AREA:	EUROPE
VIDEO TYPE	AUTO
SUB-WOOFER:	OFF
DEFAULT	

Below the settings list is a title bar labeled 'SYSTEM SETUP'. At the bottom of the screen is a navigation bar with five buttons: 'SYS', 'VID', 'AUD', 'CLK', and 'SAVE'. The 'SYS' button is highlighted in white, while the others are dark grey.


**RADIO AREA:** EUROPE – ASIA – UAS – JAPAN – OIRT – EUROPE

**VIDEO TYPE:** AUTO – PAL – NTSC – ATUO

**SUB-WOOFER:** OFF – 80 HZ – 120 HZ – 160 HZ

**DEFAULT:** the unit will restore all default settings of Sound Parameter, Picture Parameter & Tuner Parameter.

## VIDEO SETUP

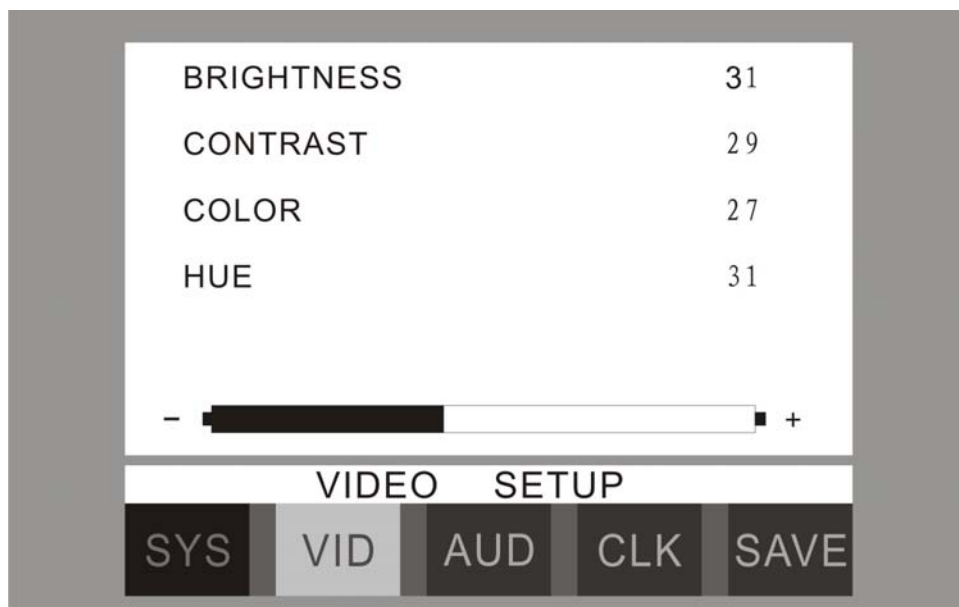

The image shows a 'VIDEO SETUP' menu on a screen. The menu is displayed in a white box with a black border. It contains the following settings:

BRIGHTNESS	31
CONTRAST	29
COLOR	27
HUE	31

Below the settings list is a horizontal slider bar with a black bar in the middle, flanked by minus and plus signs. Below the slider is a title bar labeled 'VIDEO SETUP'. At the bottom of the screen is a navigation bar with five buttons: 'SYS', 'VID', 'AUD', 'CLK', and 'SAVE'. The 'VID' button is highlighted in white, while the others are dark grey.

**BRIGHTNESS:** 0 ~ 64

**CONTRAST:** 0 ~ 64

**COLOR:** 0 ~ 64

**HUE:** 0 ~ 64

## AUDIO SETUP

BASS 00

TREBLE 00

BALANCE 00

FADER 00

SUB-WOOFER 07

- [Slider Bar] +

AUDIO SETUP

SYS VID AUD CLK SAVE

**BASS:** - 15 ~ + 15  
**TREBLE:** - 15 ~ + 15  
**BALANCE:** L 15 ~ R 15  
**FADER:** F 15 ~ R 15  
**SUB-WOOFER:** 0 ~ 15

## CLOCK SETUP

CLOCK: 12H 24H

DISPLAY : ON OFF

- 00:00 +

CLOCK SETUP

SYS VID AUD CLK SAVE

**CLOCK:** 12H / 24H  
**DISPLAY:** ON / OFF  
**HOUR:** 00 ~ 23  
**MINUTE:** 00 ~ 59



## **DVD SETUP MENU**

### **SETUP MENU OPERATION**

Press the [SETUP] button of Remote Control to enter the SETUP MENU.

Press the [<] / [>] buttons to switch the main menus as following:

#### **General – Speaker – Dolby Digital – Preference**

Press the [ENTER] or [V]] buttons to enter the submenus from main menus.

Press the [<] button to exit the submenus to main menus.

Press the [V] / [^] buttons to select the submenus as your need.

Press the [>] button to enter the items of submenus.

Press the [<] button to exit the items of submenus.

Press the [V] / [^] buttons to select the item you want to change.


Press the [ENTER] button to confirm the item you have selected.

Press the [SETUP] button to exit the SETUP MENU and save all settings.

#### **NOTE:**

*Effective only DVD & USB Mode.*

#### **General Setup Page**

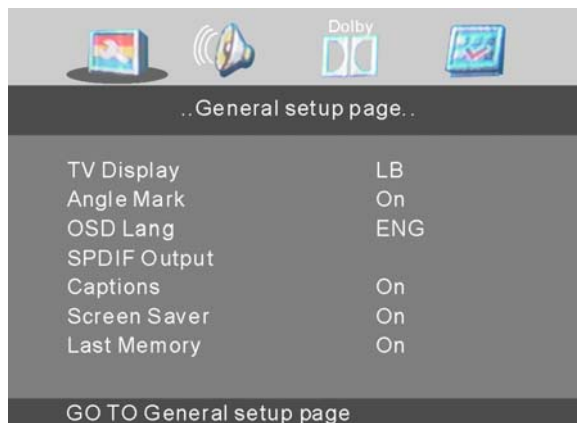

#### **TV Display**

Following options are available for the TV Display:

Normal / PS      Normal / LB      Wide

#### **Angle Mark**

Select ON or OFF.

#### **OSD Language**

Following options are available for the OSD Language:

English	French	German	Russia	
Spanish	Italian	Portuguese	Swedish	
Dutch	Korean	Danish	Norwegian	Hungarian

#### **SPDIF Output**

Following options are available for the SPDIF Output:

SPDIF Off      SPDIF / RAW      SPDIF / PCM

**Captions**

Select ON or OFF.

**Screen Saver**

Select ON or OFF.


**Last Memory**

Select ON or OFF.

**Speaker Setup Page****Downmix**


Following options are available for the Downmix:

LT / RT      Stereo

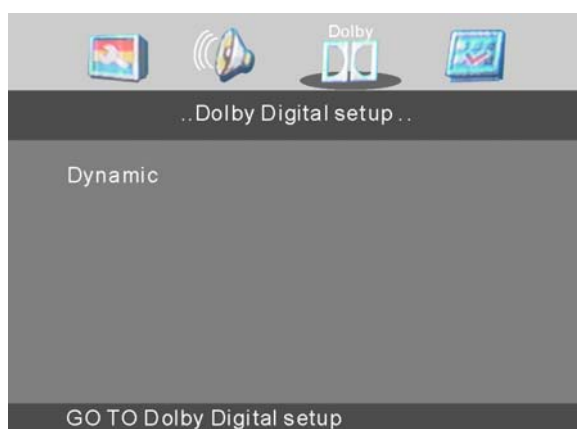**Dolby Digital Setup****Dynamic**

Choose arrangement is from FULL to OFF.

## Preference Page

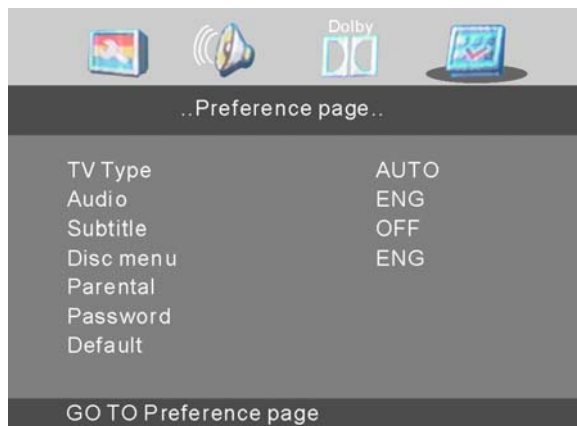

### TV Type

Following options are available for TV Type:

PAL      Auto      NTSC

### Audio

Following options are available for the Audio Language:

English	French	German	Russia	
Spanish	Italian	Portuguese	Swedish	
Dutch	Korean	Danish	Norwegian	Hungarian

### Subtitle

Following options are available for the Subtitle Language:

English	French	German	Russia	
Spanish	Italian	Portuguese	Swedish	
Dutch	Korean	Danish	Norwegian	Hungarian

### Disc Menu

Following options are available for the Disc Menu Language:

English	French	German	Russia	
Spanish	Italian	Portuguese	Swedish	
Dutch	Korean	Danish	Norwegian	Hungarian

### Parental

Following options are available for the Parental Ratings:

1 KID SAF	2 G	3 PG
4 PG 13	5 PGR	6 R
7 NC 17	8 ADULT	9 Off

The Parental Ratings could be changed after the correct password input.

### Password

Setup the password for Parental Ratings change. The default password is 0000.

### Default

The unit will restore all default settings by selecting this option.

## **SPECIFICATIONS**

### **GENERAL**

Supply Voltage	: 14.4V DC (11-16V allowed)
Load Impedance	: 4 $\Omega$ per channel
Max Power Output	: 50W x 4
Bass 100Hz	: $\geq$ 10dB
Treble 10KHz	: $\geq$ 10dB
Dimensions (approx.)	: 181X185X110mm (d/w/h)
Mounting (approx.)	: 160x178x100mm (d/w/h)

### **FM TUNER**

Frequency Range	: 87.5 – 108 MHz (Europe/Asia) 87.5 – 107.9 MHz (USA)
IF	: 10.7 MHz
Usable Sensitivity	: $\leq$ 15dBuV
Stereo Separation	: $\geq$ 26dB (1 KHz)
Frequency Response	: 100-20000Hz

### **AM TUNER**

Frequency Range	: 531 - 1602 KHz (Asia) 522 - 1620 KHz (Europe) 530 - 1710 KHz (USA)
IF	: 450 KHz
Usable Sensitivity	: $\leq$ 40dBuV

### **DVD PLAYER**

Signal-to-noise Ratio	: $\geq$ 85dB (1 KHz)
Distortion	: $\leq$ 0.5%

### **NOTE:**

*Specifications and design are subject to change without notice.*

## **TROUBLE SHOOTING**

<b>SYMPTOM</b>	<b>CAUSE / SOLUTION</b>
No sound	Cancel the mute function. Adjust the volume.
The memory contents are lost	Disconnect the power wire or battery. Press the RESET button.
The disc does not play	The disc might be dirty or damaged.
The disc comes out automatically	The temperature is outside the range of the operating temperature.
The disc can not be inserted	Push the disc while pressing the EJECT button. A disc is loaded in the mechanism. Press the RESET button.
The function buttons do not work	Press the RESET button.
Audio skipping	The disc might be dirty or damaged.
No picture	Open the monitor. Choose the video input on the TV to receive the picture from the unit.
Picture stops (pauses)	The disc might be dirty or damaged.
Poor radio reception	Antenna may not have the proper length, be sure the antenna is fully extended and properly connected. If broken replace the antenna with a new one. The antenna is poorly grounded, check again the antenna connection.

### **NOTE:**

*If any problem persists after checking the above list, please consult your nearest service dealer.*

*Never attempt to disassemble the unit by yourself!*