

# Mounting instructions

ETH Manual - Installation, Commissioning, Maintenance and Repair

---

## ETH - Electro Cylinder Parker High Force Electro Thrust Cylinder



192-550002N6 ETH -  
Mounting Instructions  
November 2015

## Production site:



Parker Hannifin Manufacturing Germany GmbH & Co. KG  
Electromechanical Automation Europe [EME]  
Robert-Bosch-Strasse 22  
77656 Offenburg (Germany)  
Tel.: + 49 (0781) 509-0  
Fax: + 49 (0781) 509-98176  
Internet: [www.parker.com/eme](http://www.parker.com/eme) <http://www.parker.com/eme>  
E-mail: [sales.automation@parker.com](mailto:sales.automation@parker.com) <mailto:EM-Motion@parker.com>

Parker Hannifin GmbH - registered office: Bielefeld HRB 35489  
Management Board: Ellen Raahede Secher, Dr.-Ing. Hans-Jürgen Haas, Günter Schrank, Kees Veraart - Chairman of the board:  
Hansgeorg Greuner

### Italy:

Parker Hannifin Manufacturing Srl  
Electromechanical Automation Europe [EME]  
Via C. Gounod, 1  
20092 Cinisello Balsamo (Milano), Italy  
Tel.: + 39 (0)2 361081  
Fax: + 39 (0)2 36108400  
Internet: [www.parker.com/eme](http://www.parker.com/eme) <http://www.parker.com/eme>  
E-mail: [parker.italy@parker.com](mailto:parker.italy@parker.com) <mailto:parker.italy@parker.com>

## Non-warranty clause

We checked the contents of this publication for compliance with the associated hard and software. We can, however, not exclude discrepancies and do therefore not accept any liability for the exact compliance. The information in this publication is regularly checked, necessary corrections will be part of the subsequent publications.  
German Master created.

## Further information:

**Our product on the internet: <http://www.parker.com/eme/eth>**

## About this manual

This manual contains notes and safety instructions, information about commissioning, service and maintenance.  
For information on project development (technical data, dimensions, accessories, options, dimensioning aids and order code) please refer to ETH catalogue ([www.parker.com/eme/eth](http://www.parker.com/eme/eth) see product support of one ETH side).

# Contents

<b>1. Introduction .....</b>	<b>5</b>
1.1 Device assignment .....	5
1.2 Type specification plate .....	5
1.3 Mounting explanation .....	6
1.4 Intended use.....	7
1.4.1 Applications not in accordance with the intended use .....	7
1.5 Safety instructions.....	7
1.5.1 General hazards .....	7
1.5.2 Identifying Residual Dangers and Hazardous Areas .....	7
1.5.3 Working safely .....	8
1.5.4 Safety Instructions for the Company Using the System .....	8
1.5.5 Safety Instructions for Operating Personnel .....	9
1.6 Packaging, storage, transport .....	10
1.6.1 Special notes on transport .....	10
1.7 Terms of guarantee / warranty .....	14
1.8 Conditions of utilization .....	15
<b>2. Set-up.....</b>	<b>17</b>
2.1 Mounting.....	17
2.1.1 Mounting with mounting threads on the cylinder .....	17
2.1.2 Mounting with mounting accessories .....	17
2.1.2.1 Cylinder mounting with mounting plates or foot mounting brackets .....	18
2.1.2.2 Screw tightening torques for the mounting of the ETH cylinder by the customer .....	18
2.1.2.3 Accessory mounting - bearing block.....	20
2.1.2.4 Mounting of force sensors.....	20
2.1.2.5 Mounting - Fixing of accessories - Rear clevis with force sensor .....	20
2.1.3 Mounting notes .....	21
2.1.3.1 Side Load .....	21
2.1.3.2 Mounting of the payload.....	21
2.2 Electric installation .....	22
2.2.1 Direction of the motor during extension of the cylinder .....	22
2.2.2 Sensors.....	22
2.2.2.1 Sensor mounting.....	23
2.2.3 Setting the end limits .....	23
2.3 Motor and feedback mounting.....	25
2.3.1 Motor / gearbox mounting with inline motor configuration .....	26
2.3.2 Motor / gearbox mounting with parallel motor configuration .....	28
2.3.2.1 Parallel mounting ETH032 ... ETH080 Standard.....	28
2.3.2.2 Parallel mounting ETH032 ... ETH080 with Ex - Motor .....	29
2.3.2.3 Parallel mounting ETH100 & ETH125 .....	31
2.3.2.4 Re-apply toothed belt pre-tension (reinsert the same toothed belt) .....	33
2.3.2.5 Resetting the toothed belt pre-tension (new toothed belt).....	33
2.3.3 IP65 motor mount .....	34
2.3.3.1 Motor mounting for IP65 inline .....	34
2.3.3.2 IP65 motor mount parallel.....	35
<b>3. Maintenance and service .....</b>	<b>36</b>
3.1 Maintenance schedule.....	36

<b>3.2</b>	<b>Lubricating intervals and amount of lubricant .....</b>	<b>37</b>
3.2.1.	Greasing via central lubrication port (standard) .....	38
3.2.2.	Relubrication via central lubrication port (option) .....	38
<b>3.3</b>	<b>Toothed belt .....</b>	<b>39</b>
3.3.1.	Checking the toothed belt.....	39
3.3.2.	Exchanging the toothed belt (ETH032 ... 080).....	40
3.3.3.	Exchanging the toothed belt (ETH100&125).....	41
<b>3.4</b>	<b>Belt / belt tensions .....</b>	<b>42</b>
<b>4.</b>	<b>Repair .....</b>	<b>42</b>
<b>5.</b>	<b>Index.....</b>	<b>43</b>

# 1. Introduction

**In this chapter you can read about:**

Device assignment .....5  
 Type specification plate .....5  
 Mounting explanation.....6  
 Intended use.....7  
 Safety instructions .....7  
 Packaging, storage, transport .....10  
 Terms of guarantee / warranty .....14  
 Conditions of utilization..... 15


## 1.1 Device assignment

**This manual is valid for the following devices:**

Electro cylinder for motors and gearboxes:

- ◆ ETH032
- ◆ ETH050
- ◆ ETH080
- ◆ ETH100
- ◆ ETH125

## 1.2 Type specification plate

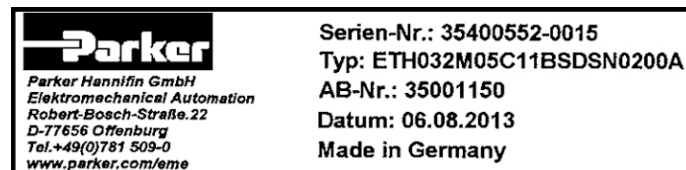

Type specification plate (example)

**Type specification plate explanation**

Left:		Manufacturer address
Right:	Serial number	Unambiguous identification number
	Type:	Order Code
	Order confirmation No.:	Customer Order Number
	Date:	Delivery date

## 1.3 Mounting explanation



Parker Hannifin Manufacturing Germany GmbH & Co KG

Robert-Bosch-Straße 22  
D-77656 Offenburg

Tel.: +49 (0) 781-509-0  
Fax.: +49 (0) 781-509-98176

www.parker.com/eme

### EINBAUERKLÄRUNG DECLARATION OF INCORPORATION

ACCORDING TO EC DIRECTIVE 2006/42/EC (ANNEX II, PART 1, SECTION B) FOR PARTLY COMPLETED MACHINERIES

Dokumenten Nr. <i>Declaration No.:</i>	<b>DoI001-R 3.0</b>
Firma / <i>Manufacturer:</i> Bevollmächtigter / <i>Authorized person:</i>	<b>Parker Hannifin GmbH &amp; Co KG Jürgen Killius</b>
Anschrift <i>Address:</i>	<b>Robert-Bosch-Straße 22 77656 Offenburg Deutschland</b>
Produkt <i>Product:</i>	<b>ETH: Parker High Force Electro Thrust Cylinder</b>
Serien- / Typenbezeichnung <i>Model / Type:</i>	<b>ETH032; ETH050; ETH080; ETH100; ETH125</b>
Seriennummer <i>Serial No.:</i>	ETH032 bis -125: <b>Ab 35410387-0001</b> ETH032 till -125: <b>As of 35410387-0001</b>
Baujahr <i>Year of manufacture:</i>	ETH032 bis -125: <b>Ab Juli 2014</b> ETH032 till -125: <b>As of July 2014</b>

Der oben genannte Hersteller / Bevollmächtigte erklärt, dass das Produkt den folgenden grundlegenden Anforderungen der Richtlinie Maschinen (2006/42/EG) entspricht:

*The above mentioned Manufacturer / authorized person declare that the product is complying with the following essential requirements of the machinery directive 2006/42/EC:*

Anhang I, Artikel / *Annex I, Article:* 1.1.1, 1.1.2, 1.1.3, 1.1.5, 1.3.1, 1.3.2, 1.3.3, 1.3.4, 1.3.7, 1.4.1, 1.5.4, 1.5.8 & 1.6.1.

Norm / <i>Standard</i>	Titel / <i>Title</i>	Ausgabe / <i>Edition</i>
DIN EN ISO 12100:2011	Sicherheit von Maschinen – Allgemeine Gestaltungsleitsätze, Risikobeurteilung und Risikominimierung <i>Safety of Machinery – General principles for design, risk assessment and risk reduction</i>	2011-03

Den im Produkthandbuch beschriebenen Sicherheits-, Installations- und Bedienungshinweisen muss Folge geleistet werden.

*These products must be installed and operated with reference to the instructions in the Product Manual.*

*All instructions, warnings and safety information of the Product Manual must be adhered to.*

Die unvollständige Maschine darf erst dann in Betrieb genommen werden, wenn festgestellt wurde, dass die Maschine, in die die unvollständige Maschine eingebaut werden soll, den Bestimmungen der Richtlinie Maschine 2006/42/EG entspricht.

*The partly completed machinery must not be put into service until the final machinery, into which it is to be incorporated, has been declared in conformity with the provisions of directive 2006/42/EC on machinery.*

Die zur Maschine gehörenden speziellen technischen Unterlagen nach Anhang VII Teil B wurden erstellt.

*The machinery related special technical documentation according annex VII B has been created.*

Der Hersteller verpflichtet sich, die speziellen Unterlagen zur unvollständigen Maschine einzelstaatlichen Stellen auf Verlangen elektronisch zu übermitteln. Die gewerblichen Schutzrechte des Herstellers der unvollständigen Maschine bleiben hiervon unberührt.

*The manufacturer commits to transmit, in response to a reasoned request by the market surveillance authorities, relevant documents on the partly completed machinery electronically by our documentation department.*

*The intellectual rights of the manufacturer of the incomplete machine are not affected.*

Offenburg, 23.5.2014

Jürgen Killius, *Operations Manager*

Parker Hannifin GmbH  
Sitz: Bielefeld HRB 35489  
USt-IdNr.: DE 122 802 922  
Steuernummer: 5349 5747 1543

Commerzbank Offenburg  
BLZ 664 400 84  
Konto-Nr. 45 0 19 12 00  
BIC/Swift-Code: COBADEFF  
IBAN DE95 6644 0084 0450 1912 00

Geschäftsführung:  
Dr. Gerd Scheffel, Günter Schränk, Ellen Raahede, Kees Vernaart  
Vorsitzender des Aufsichtsrates: Hansgeorg Greuner

## 1.4 Intended use

The incomplete machine can only be set in operation if it is sure that the machine in which the incomplete machine shall be mounted is conform to the 2006/42/EG machine directives.

Without further measures the product is not suitable for safety-oriented tasks. The linear motor module must only be used in areas that are not accessible to persons during operation.

If the linear actuator is used in areas accessible to people, it must be installed in such a manner that no one can be endangered during operation.

The described safety, installation and operating instructions must be adhered to.

The general functioning mode consists in converting a rotational movement in a linear movement without slip within the product related load limits according to the information in the catalogue.

Its applications are in industry and trade.

The linear actuator has a number of uses including: Positioning, transporting, feeding, removing, pallet handling, loading, unloading, processing and manipulating as well as testing work pieces or tools. Since the component can be used in a very wide range of applications, the user is responsible for its use in specific applications.

### 1.4.1. Applications not in accordance with the intended use

For risks of applications not in accordance with the intended use the user shall bear the sole responsibility. Parker Hannifin does not accept any liability for damages caused by applications not in accordance with the intended use of the product.

## 1.5 Safety instructions

### 1.5.1. General hazards

#### **General Hazards on Non-Compliance with the Safety Instructions**

The subsystem has been designed in accordance with state-of-the-art technical developments and is operationally reliable. If it is not operated by qualified or at least trained personnel or if it is operated improperly or not in accordance with the operating instructions, however, the unit may bear the risk of hazards.

Electronic, moving and rotating components can

- ◆ represent a danger for life and limb of the operator or third persons
- ◆ and / or cause material damage

If the linear actuator is installed in a machine plant, the safety requirements noted in the operating instructions for that machine must be combined with those described in this manual.

### 1.5.2. Identifying Residual Dangers and Hazardous Areas

If there are still residual dangers present to persons or property from the linear actuator in spite of operating it in a safe manner, the user must make reference to these residual dangers through signs and written rules requiring appropriate procedures.

**The following safety signal words are used:**



Indicates that an imminent hazardous situation may lead to death or serious bodily harm if not prevented using appropriate safety measures.

**⚠ WARNING** Indicates a potentially hazardous situation which, if not avoided using appropriate safety measures, could result in serious or minor injury.

**⚠ CAUTION** Indicates a potentially hazardous situation which, if not avoided using appropriate safety measures, may result in minor injury or material damage.

**NOTICE** Provides important information about the product, how to handle the product or about the part of the manual to which particular attention must be paid.

### 1.5.3. Working safely

**NOTICE** The information (such as instructions and notes) contained in this manual must be heeded for all work involved in installing, commissioning, setting up, operating, changing operating conditions and modes, servicing, inspecting and repairing the unit.

The manual must be available close to the linear module during the performance of all tasks.

It is impermissible to operate the liner module if it is not in perfectly functional condition.

#### Operating personnel

Only qualified expert personnel is permitted to perform works on the linear actuator. All the applicable regulations and provisions must be heeded (IEC, EN, national accident prevention regulations etc.).

Qualified persons as the term is used in this manual are persons who:

- ◆ persons who, by virtue to their training, experience and instruction, and their knowledge of pertinent norms, specifications, accident prevention regulations and operational relationships, have been authorized by the officer responsible for the safety of the system to perform the required task and in the process are capable of recognizing potential hazards and avoiding them (definition of skilled persons in accordance with VDE015 or IEC364)
- ◆ Persons who have a knowledge of first-aid techniques and the local emergency rescue services.
- ◆ Persons who have read and will observe the safety instructions.

**⚠ DANGER** **Instructions for Special Hazards**  
The linear module must be fixed or supported in accordance with the indications in this manual.

The operator must ensure that operation of the linear module does not cause any danger.

If the linear module moves in hazardous areas, these areas must be safeguarded with safety transmitter switches.

### 1.5.4. Safety Instructions for the Company Using the System

**⚠ WARNING** Supervisors must also become familiar with the entire chapter entitled "Safety" and handling required on the linear actuator.

Supervisors must ensure that installation and operating personnel have read and understand the chapter entitled "Safety" and the description of how to work with the machine, and that they observe the instructions.

The manual must be available close to the linear module during the performance of all tasks.

It is impermissible to operate the liner module if it is not in perfectly functional condition.

Depending on the application, the operating company must provide for a suitable separating safety fence. Access to the motion range during operation must be prevented.

The user must make sure that the work area is protected by appropriate safety devices.



### 1.5.5. Safety Instructions for Operating Personnel

#### **WARNING**

Any work step that has a negative effect on the operating safety of the linear motor module must be omitted.

Operating and supervisory personnel are required to check the linear actuator or machine at least once per shift for externally visible damage or defects. Changes that have occurred (including the operating behavior) that could have a negative effect on the operating safety must be reported immediately.

Components and accessories are designed especially for this product. When purchasing spare and wearing parts, use only original Parker parts. We note here explicitly that we are unable to check or release spare parts or accessories that were not provided by us. Installing and/or using such products may cause negative changes in the required design properties in some circumstances, which in turn could negatively effect the active and/or passive operating safety of the product.

Depending on the operating conditions (rotation speed, load, etc.) increased surface temperature in the area of the drive may occur. When touching it during operation slight injuries from burning may occur. Don't touch the product during operation. At maintenance, service and repair always take care that the product is cooled off before starting work.

The manufacturer is unable to accept any liability for damage caused by using non-original parts and accessories.

Safety and protection devices are strictly NOT to be removed or bypassed or set out of order.

Applicable requirements and national accident prevention regulations must always be observed when installing and operating our linear motor module.

## 1.6 Packaging, storage, transport

### First check

- ◆ Check the packaging for damages.
- ◆ Remove the packaging.  
Do not discard the packaging; it is strongly recommended to use the original packaging material for return deliveries.
- ◆ Depending on the storage location, metal surfaces may have a temperature of 0 °C or below. Please provide appropriate worker protection (e.g. protective gloves).
- ◆ Please ensure that the consignment does correspond to your order.
- ◆ Check the product for damages. Do never use a device which seems damaged.
- ◆ Please read the installation manual carefully before installing or commissioning the device.

### Packaging material



The packaging material is inflammable, if it is disposed of improperly by burning, lethal fumes may develop.

### Transport

Make sure to transport the linear module always in a safe manner and with the aid of suitable lifting equipment (Means of transport).

### Storage

The linear module must be stored evenly and without any mechanical load.

The stated storage temperature must be adhered to.

Details: please refer to ETH catalogue ([www.parker.com/eme/eth](http://www.parker.com/eme/eth) see product support of one ETH side).

### Disposal

We recommend to dispose of the respective materials in accordance with the respectively valid environmental laws. The following table states the materials suitable for recycling and the materials which have to be disposed of separately.

Material	suitable for recycling	Disposal
Metal	yes	no
Plastic materials	yes	no

### 1.6.1. Special notes on transport

#### Special notes on transport

Use only transport equipment with sufficient lifting capacity. When using ropes, make certain they are not twisted or knotted. If you are using more than one rope, all the ropes should be equally taut.

When transporting the cylinder with a forklift, establish a condition of equilibrium and secure the load if necessary.



Never step under overhead loads danger of being injured!

Use only transport equipment with sufficient lifting capacity. Take care of structural safety when using lifting equipment!

Moving parts must always be secured against slipping or moving.


**Maximum weight of the ETH Electro Thrust Cylinder with Parker drive**

ETH032	ETH050	ETH080	ETH100	ETH125
20 kg	40 kg	100 kg	220 kg	490 kg


The weights mentioned are max. values. They contain the max. stroke, the heaviest options and the largest drives.

The following threads on the cylinder can be used to fix transport or mounting appliances (e.g. eye bolts):

**Motor inline: ETH032 ... ETH080**

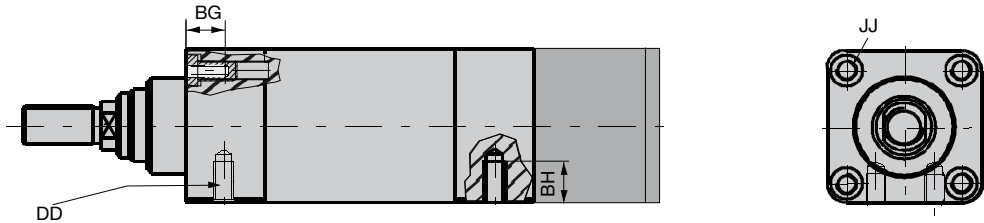

**Motor parallel: ETH032 ... ETH080**

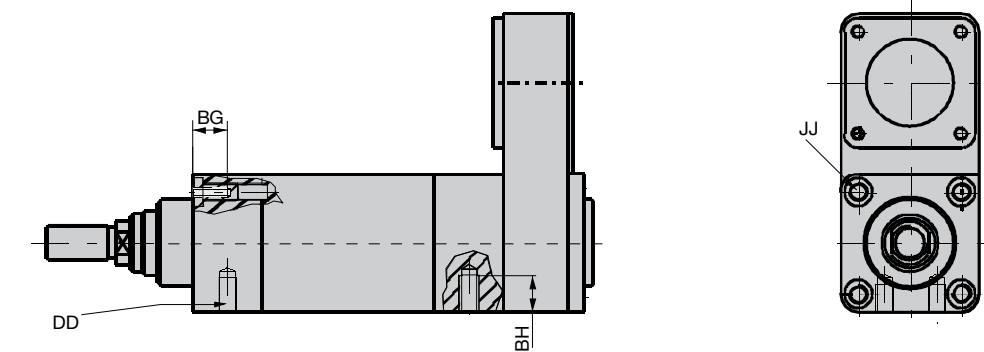

	Unit	ETH032	ETH050	ETH080
DD <sup>(1)</sup>	mm	M6x1.0	M8x1.25	M12x1.75
YY	mm	M6x1.0	M8x1.25	M10x1.5
BH	mm	9	12.7	18.5
BG	mm	16	25	26

<sup>(1)</sup> Thread "DD" available with mounting method "F".

**Note the following points:**

- ◆ Please make sure that at least two eye bolts are used and that the load on all eye bolts is evenly distributed.
- ◆ Full load of the eye bolts in a maximum angle of  $45^\circ$  (see Figure 1).
- ◆ Don't use lateral traction (see Figure 2).
- ◆ Before use the eyes bolts must be checked that they are firmly seated and not damaged.
- ◆ The eye bolts are level and grid with the surface.
- ◆ Deformed eye bolts should not be used and screwed anymore.
- ◆ Supplied eye bolts are not made of stainless material and must therefore be removed after installation of IP65 or VA-option.
- ◆ In case the cylinder is dismantled from the machine at a later time, new eye bolts must be used due to safety reasons!

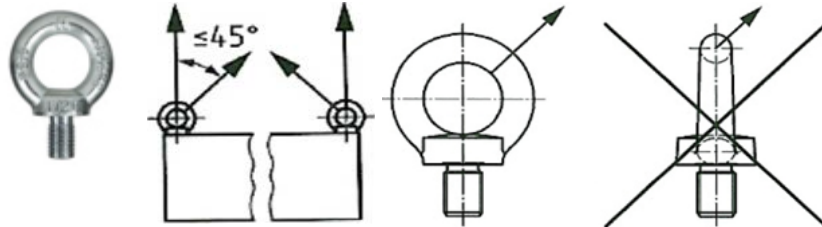


Figure 1

Figure 2

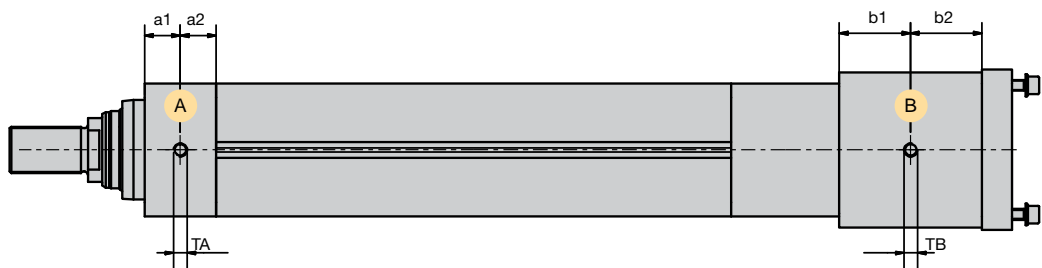
**Motor inline: ETH100&125**

Figure 1 Transport instructions ETH100&amp;125

Area A: Front cap

Area B: Inline coupling housing

Thread TA and TB: on all four sides

**⚠ WARNING**

From frame size ETH 100 on, the provided M12 threads (see Figure 1 und Figure 2 transport instructions ETH100&125) must be used together with M12 external thread eye bolts in accordance with DIN 580.

Motor parallel: ETH100&125

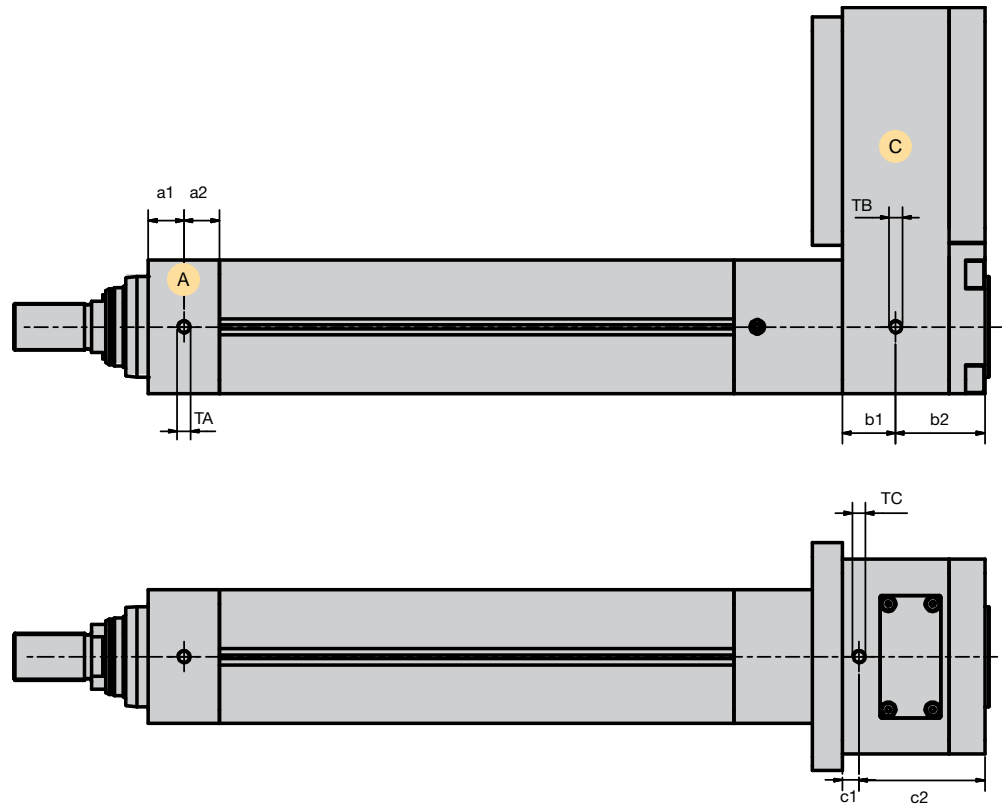


Figure 2 Transport instructions ETH100&125

Area A: Front cap

Area C: Parallel housing

Thread TA: on all four sides

Thread TB: also on the opposite side, but not on the underside

	Unit	ETH100		ETH125	
		inline	parallel	inline	parallel
a1	mm	32	32	55	55
a2	mm	32	32	50	50
b1	mm	64	48	72	61.5
b2	mm	64	80	72.5	101.5
c1	mm	--	15	--	24
c2	mm	--	113	--	139
TA	mm	M12x12	M12x12	M12x18	M12x18
TB	mm	M12x12	M12x15	M12x22	M12x25
TC	mm	--	M12x18	--	M12x25

## 1.7 Terms of guarantee / warranty

These operating instructions are subject to changes including changes in technical details with respect to the information and figures contained herein.

Parker Hannifin Manufacturing Germany GmbH & Co. KG grants no quality or durability guarantees nor any guarantees as to the suitability for specific purposes. Such guarantees must be expressly agreed upon in writing

Public statements, recommendations or advertising do not in any way represent quality specifications.

The operator's warranty rights require that the operator immediately report any defects and precisely describe said defects in the complaint. Parker Hannifin Manufacturing Germany GmbH & Co. KG is not responsible under any circumstances for damage to the product itself or any consequential damage caused by the product resulting from improper handling of the product. If Parker-Hannifin Manufacturing Germany GmbH & Co. KG is responsible for a defect, Parker-Hannifin Manufacturing Germany GmbH & Co. KG shall be authorized, at its discretion, to undertake improvements or deliver replacements. In compliance with ISO 9000, all products are equipped with a type plate that is connected to the device. The type plate must not be removed or damaged under any circumstances.

Parker Hannifin Manufacturing Germany GmbH & Co. KG shall not be held liable, regardless of any legal basis, except for cases of intent or gross negligence; injuries to life, body or health; or defects of malicious nondisclosure or whose absence was expressly guaranteed in writing.

Furthermore, if there is compulsory liability under the Product Liability legislation for personal injury and property damage to privately used objects, in the event of negligent breach of significant contractual obligations, Parker Hannifin Manufacturing Germany GmbH & Co. KG shall also be liable for cases of ordinary negligence; however, this is limited to damages that are contractually typical and foreseeable.

Further claims are hereby excluded.

Failure to adhere to these operating instructions or the relevant statutory provisions as well as any other information from the supplier shall invalidate the warranty.

In particular, we are not responsible for failures caused by modifications made by the customer or other parties. In such cases, the normal repair costs will be calculated. These costs will likewise be calculated for a check of the unit if no fault can be determined on the unit.

This regulation also applies during the warranty period.

No claims exist as to the availability of previous versions or to the retrofitting capacity of the units delivered to adapt them to the respectively current model version.

### **User Conversions and Changes are Not Permitted**

The linear actuator must not be changed in its design or in terms of safety without our approval. Any change as defined here made by the user excludes any liability on our part.

## 1.8 Conditions of utilization

### General introductory notes

With the electro cylinder you bought a product which was manufactured and tested before delivery with the utmost care.

Please take your time to read the following notes which you ought to follow closely during setup and operation.

The operation of the electro cylinder is only permitted within the limit values stated in this manual.

Unless, all claims under the warranty will become void and a reduced service life or even damages must be expected.

**Please compare the operating data with the stated limit values especially with reference to:**

- ◆ Stroke length and setting of the limit switches, those must be set so that there is a sufficient safety travel at both ends of the travel stroke

### NOTICE

Even if the limit switches were already mounted at our premises, they must be adapted according to suitable values before operation!

- ◆ Thrust and traction force in the effective direction
- ◆ Lateral force (e.g. as a component of the effective force, but also due to own weight on horizontal mounting, especially with parallel motor mounting and long travel strokes)
- ◆ Speed
- ◆ Acceleration
- ◆ Environmental conditions (e.g. temperature, contamination)
- ◆ Please do take possible pulses caused by moved masses into consideration for the operating data. (Even small abrupt loads can cause damage, especially if they occur rather often at the same place.)

**The limit values for the thrust and traction force, lateral force, speed and acceleration are partly influenced by several factors and can change depending on:**

- ◆ The size of the electro cylinder
- ◆ Screw lead
- ◆ Direct or parallel drive via toothed belt transmission
- ◆ Mounting method
- ◆ Mounting orientation vertical or horizontal resp. inclined
- ◆ Travel Stroke

### Note on cylinder mounting

### DANGER

Do always use all available mounting possibilities and respect the requirements listed in chapter "**Screw tightening torques for the mounting of the ETH cylinder by the customer**". (see on page 18)

If the motor used with the electro cylinder should be able to exceed individual limit values of the cylinder, the respective values for the motor must be limited in the control by appropriate parameterization. The parameterization should even be reduced down to the values necessary for operation.

This would, for example provide a hint to a possible damage or to preventive maintenance if wear-induced extensive friction of the machine or cylinder would trigger an error message of the controller.

**⚠ CAUTION**

The internal end stops of the electro cylinder may under no circumstances be accessed during operation. The internal end positions may only be accessed by the cylinder in setup mode and only for determining the end positions resp. for relubrication with a low force of a few N (torque limitation if possible below 10 %) and very slowly (max. 2 % of the nominal speed).

The lifetime of the electro cylinder depends strongly on the degree of power exploitation and on impermissible operating states occurring - even if only for a short time.

**⚠ CAUTION**

Depending on the operating conditions (rotation speed, load, etc.) increased surface temperature in the area of the drive may occur. When touching it during operation slight injuries from burning may occur. Don't touch the product during operation. At maintenance, service and repair always take care that the product is cooled off before starting work.



## 2. Set-up

### In this chapter you can read about:

Mounting .....	17
Electric installation .....	22
Motor and feedback mounting .....	25

Read **safety instructions** (see on page 7) before taking into operation!

The product is furnished completely mounted and mechanically ready-to-operate.

If no Parker drive is provided, attach your motor-gearbox combination according to the instructions of the respective supplier.

The technical data must be respected.

Technical data: See in the catalog section (following the mounting instructions).

### **⚠ DANGER**

Depending on the application, the operating company must provide for a suitable separating safety fence. The access to the motion area of the ballscrew and piston rod should be prevented during operation.

### **NOTICE**

Before commissioning **Safety instructions** (see on page 7) must be read!

The sound may vary from cylinder to cylinder. It depends on the motor/gearbox, different drive options or on the production series due to different production lots. Different sounds do not provide any hint as to the lifetime of the cylinder

### **⚠ CAUTION**

Depending on the operating conditions (rotation speed, load, etc.) increased surface temperature in the area of the drive may occur. When touching it during operation slight injuries from burning may occur. Don't touch the product during operation.

## 2.1 Mounting

### **⚠ WARNING**

Do only use the appropriate mounting parts offered in the Parker product catalog for the respective mounting methods. These mounting parts are especially designed for the ETH.

### **⚠ CAUTION**

Please note:

The cylinder housing must be mounted without tension or contortion.

The cylinder housing must be precisely aligned to the load direction of motion.

Occurring lateral forces on the cylinder must be taken into consideration.

### 2.1.1. Mounting with mounting threads on the cylinder

The easiest and most economic method of mounting is using the available mounting threads on the cylinder body. Make sure that the mounting surface is level and that the cylinder is mounted without tension and contortion. This method of mounting is only possible, if the lower side of the mounting surface is accessible.

### **NOTICE**

ETH100&125 does **not have** a mounting thread at the bottom of the cylinder.

Dimensions: see in the catalog section (following the mounting instructions).

### 2.1.2. Mounting with mounting accessories

Mounting methods: see in the catalog section (following the mounting instructions).

Dimensions: see in the catalog section (following the mounting instructions).

Permissible side load: See in the catalog section (following the mounting instructions).

### 2.1.2.1 Cylinder mounting with mounting plates or foot mounting brackets

If the underside of the mounting surface is not accessible, mounting plates or foot mounting brackets are available as accessories.

The rear mounting plate cannot be fixed with inline motor configuration.

If you fix the cylinder only at the rear end (e.g. also with a rear clevis) please respect the effective direction of the known forces. Critical are above all lateral forces in horizontal or vertical direction.

### 2.1.2.2 Screw tightening torques for the mounting of the ETH cylinder by the customer

In order to simplify the calculation of the mounting screws for fixing the cylinder in your application, the following table gives an overview of the required screw quality resp. the required tightening torque (including additional boundary conditions). The data apply under the assumption that 100 % of the permissible axial force are required. Additionally take care that no other loads act on the screws.



If these specifications are not adhered to, the screw joint might fail. The failure of screw joint may lead to severe injuries.

		ETH032			ETH050			ETH080			
		M05	M10	M16	M05	M10	M20	M05	M10	M32	
Option F*		M6 - 12.9			M8 - 12.9			M12 - 12.9			Screw
		15.5 (3)			47 (3)			160 (3)	160 (3)(4)	160 (3)	Screw tightening torque (1) [Nm]
		6			8			12			Minimum screw-in depth [mm]
Option F		M6 - A2-70			M8 - A2-70			M10 - A2-70			Screw
		7.5			16			34			Screw tightening torque (1) [Nm]
		9			9			15			Minimum screw-in depth [mm]
Option F		M6 - 8.8			M8 - 8.8			M10 - 8.8			Screw
		9			19			39			Screw tightening torque (1) [Nm]
		9			9			16			Minimum screw-in depth [mm]
Option E Option C		M6 - A2-70			M8 - A2-70			M10 - A2-70			Screw
		7.5			16			34			Screw tightening torque (1) [Nm]
		8			11			14			Minimum screw-in depth (2) [mm]
Option E Option C		M6 - 8.8			M8 - 8.8			M10 - 8.8			Screw
		8.5			19			37			Screw tightening torque (1) [Nm]
		9			12			15			Minimum screw-in depth (2) [mm]
Option H Option J Option N		M6 - A2-70			M8 - A2-70			M10 - A2-70			Screw
		7			16			31			Screw tightening torque (1) [Nm]
		8			11			14			Minimum screw-in depth (2) [mm]
Option H Option J Option N		M6 - 8.8			M8 - 8.8			M10 - 8.8			Screw
		7.5			18			35			Screw tightening torque (1) [Nm]
		9			12			15			Minimum screw-in depth (2) [mm]
Option B*		M6 - 12.9			M8 - 12.9			M12 - 12.9			Screw
		16.5			47			160 (3)	160 (3)(4)	160 (3)	Screw tightening torque (1) [Nm]
		12			12			25			Minimum screw-in depth (2) [mm]
Option G*		M6 - 12.9			M8 - 12.9			M12 - 12.9			Screw
		16.5			47			160 (3)	160 (3)(4)	160 (3)	Screw tightening torque (1) [Nm]
		12			12			25			Minimum screw-in depth (2) [mm]

		ETH100	ETH125	
		M10/M20	M10/M20	
Option F*		not possible	not possible	Screw
		not possible	not possible	Screw tightening torque (1) [Nm]
		not possible	not possible	Minimum screw-in depth [mm]
Option F		M16 – 8.8	M20 – 8.8	Screw
		80	180	Screw tightening torque (1) [Nm]
		15	25	Minimum screw-in depth [mm]
Option F		M16 – A2-70	M20 – A2-70	Screw
		80	180	Screw tightening torque (1) [Nm]
		15	25	Minimum screw-in depth [mm]
Option E Option C		M16 – 8.8	M20 – 8.8	Screw
		80	180	Screw tightening torque (1) [Nm]
		15	25	Minimum screw-in depth (2) [mm]
Option E Option C		M16 – A2-70	M20 – A2-70	Screw
		80	180	Screw tightening torque (1) [Nm]
		15	25	Minimum screw-in depth (2) [mm]
Option H Option J Option N		M16 – 8.8	M20 – 8.8	Screw
		80	180	Screw tightening torque (1) [Nm]
		15	25	Minimum screw-in depth (2) [mm]
Option H Option J Option N		M16 – A2-70	M20 – A2-70	Screw
		80	180	Screw tightening torque (1) [Nm]
		15	25	Minimum screw-in depth (2) [mm]
Option B*		M16 – 10.9	M20 – 8.8	Screw
		270	330	Screw tightening torque (1) [Nm]
		20	25	Minimum screw-in depth (2) [mm]
Option G*		M16 – 10.9	M20 – 8.8	Screw
		270	330	Screw tightening torque (1) [Nm]
		20	25	Minimum screw-in depth (2) [mm]

\* For protection classes "B" and "C", we recommend for instance a GEOMET® coated screw (thin layer corrosion protection), which must be in strength class 12.9. For the ETH100&125, no GEOMET coated screw is required (as the bracket is not available in stainless steel).

- (1) Torque controlled tightening
- (2) When screwing into S235 JRG1 grade steel
- (3) Provide suitable washer under the screw head
- (4) Safety factor against slipping is 1.6 in this case. Otherwise, at least 1.8

**For all mounting options applies:**

- ◆ Joint area must be dry and free of grease
- ◆ We recommend to secure the screws with a liquid bolt retaining compound (e.g. Loctite 242)

**⚠ WARNING**

With mounting option F, H and J don't mount the cylinder horizontally on one side as in this case the bolted connections are improperly high burdened due to pitching torques and cross forces. In this case always support the cylinder!

With ETH032-080 the mounting thread F\* on the underside of the cylinder can be used as support.

With ETH100&125 the **transporting thread** (see on page 11) can be used as support. For this a screw M12x1.25, quality 8.8 must be used. Furthermore a minimum screw-in depth of 15 mm must be considered. Tighten screw with tightening torque 30 Nm.

### 2.1.2.3 Accessory mounting - bearing block

When mounting the bearing blocks, customers should respect the following tightening torques.

ETH032		ETH050		ETH080	
					
0112.039	0122.039	0132.039	Part number		
M8-12.9	M10-12.9	M12-12.9	Screw		
37	66	83	Screw tightening torque (1) [Nm]		
15	21	27	Minimum screw-in depth (2) [mm]		
ETH100			ETH125		
					
0142.039	0152.039	Part number			
M16 – 8.8	M20 – 8.8	Screw			
200	320	Screw tightening torque (1) [Nm]			
20	25	Minimum screw-in depth (2) [mm]			

(1) torque controlled tightening

(2) when screwing into S235 JRG1 grade steel

#### Boundary conditions:

- ◆ Provide suitable washer under the screw head
- ◆ Joint area must be dry and free of grease
- ◆ We recommend to secure the screws with a liquid bolt retaining compound (e.g. Loctite 242)

### 2.1.2.4 Mounting of force sensors

## NOTICE

For mounting the force sensor please observe the attached operating instructions respective for the force sensors!

### 2.1.2.5 Mounting - Fixing of accessories - Rear clevis with force sensor

Customer's screw tightening torques for the force sensor with rear clevis.

ETH	Pitch	Part number	Screw A2-70	Screw tightening torque (1) [Nm]	Minimum screw-in depth (2) [mm]	Deflection angle $\alpha$ [°]
032	M05	0112.034-01	M6x20	8.1	9	3.5
	M10	0112.034-01				
	M16	0112.034-02				
050	M05	0122.034-01	M8x20	20	12	4
	M10	0122.034-02				
	M20	0112.034-03				
080	M05	0132.034-01	M10x25	38.5	15	4
	M10	0132.034-02				

	M32	0132.034-03				
<b>100</b>	M10/M20	0142.034-01	M16x50	130	14	4
<b>125</b>	M10/M20	0152.034-01	M20x60	270	18	4

(1) torque controlled tightening

(2) when screwing into S235 JRG1 grade steel

#### Boundary conditions:

- ◆ Provide suitable washer under the screw head
- ◆ Joint area must be dry and free of grease
- ◆ We recommend to secure the screws with a liquid bolt retaining compound (e.g. Loctite 242)

## 2.1.3. Mounting notes


### 2.1.3.1 Side Load

Please respect the maximum permissible side loads depending on the vertical or horizontal mounting position.

Permissible side load: See in the catalog section (following the mounting instructions).

### 2.1.3.2 Mounting of the payload

When mounting the payload, please make sure that no torque is applied to the thrust rod. Use the flat on the thrust rod to apply counter pressure, see indication "SW" "Thrust rod version": see in the catalog section (following the mounting instructions).

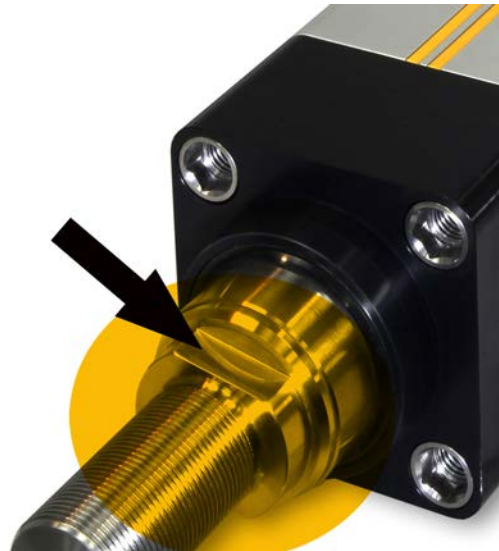

**⚠ CAUTION**

When fixing the load on the thrust rod end, do always apply counter pressure on the respective flat, KV (SW) with an appropriate tool!  
 Otherwise, the internal anti-rotation protection might be damaged.  
 KV (SW) Dimensions: see in the catalog section (following the mounting instructions).

Connect the payload always with the end of the thrust rod so that occurring lateral forces are minimized. If the payload is separately guided, even minimal deviations between this guiding system and the cylinder length axis can generate high lateral forces and reduce the service life of the electro cylinder considerably.

**The possibilities to avoid this problem:**

- ◆ Use a flexible coupling at the thrust rod end.  
This coupling can compensate up to 3 mm axial offset and up to 10° angular offset.
- ◆ Use other thrust rod connection elements (accessories), which are able to compensate certain deviations such as rod clevis or spherical rod eye
- ◆ Use a flexible cylinder fixing device (accessories) such as rear clevis or center trunnion.

**⚠ WARNING**

Do only use the rod ends supplied by Parker.  
 Only use the nut delivered with the rod end option M as counter screw.  
 The connection provided from the customer is always screwed in the thread of option M.

"Thrust rod version": see in the catalog section (following the mounting instructions).

## 2.2 Electric installation

### 2.2.1. Direction of the motor during extension of the cylinder

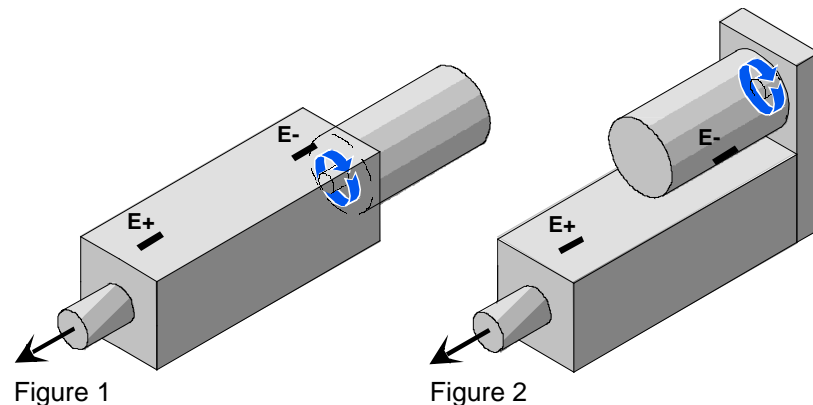


Figure 1

Figure 2

**NOTICE**

With parallel drive (Figure 2), the turning direction of the motor is reversed in comparison with the direct drive configuration!

### 2.2.2. Sensors

All electro cylinders feature a permanent magnet in the spindle nut. It activates the sensors which are mounted in the special mounting grooves on one side of the cylinder.

Sensors and limit switches: see ETH catalogue ([www.parker.com/eme/eth](http://www.parker.com/eme/eth) see product support of one ETH side).

### 2.2.2.1 Sensor mounting

- ◆ Sensors can be inserted into all grooves on the ETH electro cylinder.
- ◆ If no sensors are mounted by the manufacturer (on customer request), please remove the groove protection covers. Use a sharp screwdriver to lever the ends of the covers off the grooves. Pull the entire covers out manually.
- ◆ Install the sensors. The sensors can be inserted into the grooves from above. The cable ends should lead into the motor direction. Push the sensors to their approximate positions in the grooves of the cylinder body. Tighten the fixing screws on the limit switches slightly and lead the cable along the profile groove.
- ◆ If **sensors are used as end limits** (see on page 23), do set them.
- ◆ You can use the formerly removed protective covers in order to fix the sensor cables. Please cut the covers to the desired length. A pair of scissors may be used. Please cut off an additional 5 to 10 mm, where the cables are to be lead out of the profile (see Figure 4).
- ◆ Insert the cables into the grooves of the plastic covers and push the cover into the groove together with the cable.
- ◆ Please observe the Operating Instructions of the manufacturer when commissioning the sensors.
- ◆ Connect the sensors to the controller.  
Sensors and limit switches: see ETH catalogue ([www.parker.com/eme/eth](http://www.parker.com/eme/eth) see product support of one ETH side).

#### Sensor mounting example: 2 end limits with machine zero



Figure 3

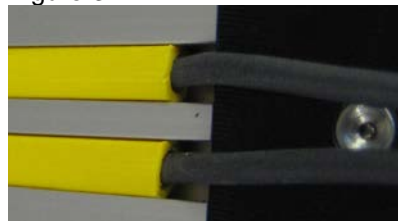


Figure 4

### 2.2.3. Setting the end limits

#### **WARNING**

The steps described below can be best executed with energized drive. Therefore, they may only be performed by trained and authorized personnel.

Do only travel at very low speed (<10 mm/s) and reduce the drive torque to a minimum. Ensure that there are no persons in the hazardous area.


#### The setting of the end limits depends on the application.

#### **NOTICE**

No sensor is to be mounted in the area of the central lubrication port (option).

The following activation positions at the mechanical end limits result from the initiators recommended in the catalog.

The given positions "A" and "B" are estimated recommendations and may vary. We therefore recommend to adjust the final sensor position during the initial start up.

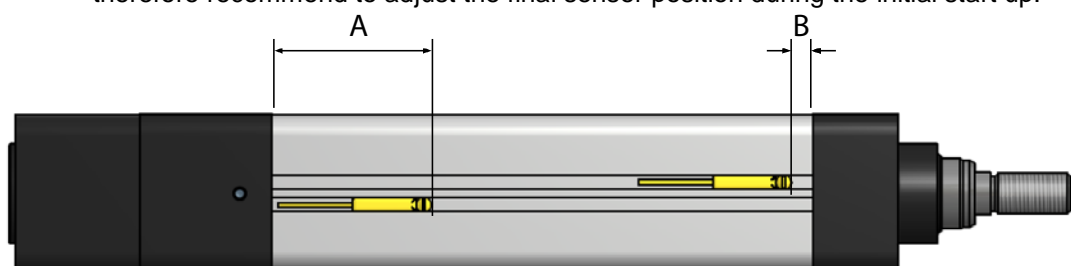

**Position of initiators at the mechanical limits**

ETH	Pitch	A [mm]	B [mm]
032	M05	68	0
	M10	77	0
	M16	81	0
050	M05	71	0
	M10	77	0
	M20	89	0
080	M05	85	0
	M10	103	0
	M32	133	0
100	M10	162	0
	M20	200	0
125	M10	192	0
	M20	280	0

**⚠ CAUTION**

Please add the respective safety travels to the mentioned values!  
Stroke, Usable Stroke and Safety Travel: see ETH catalogue ([www.parker.com/eme/eth](http://www.parker.com/eme/eth) see product support of one ETH side).

Sensors and limit switches: see ETH catalogue ([www.parker.com/eme/eth](http://www.parker.com/eme/eth) see product support of one ETH side).

**Adjusting the machine reference initiator**

The correct position for the home switch (machine zero switch) depends on the application.

It is recommended to set the machine zero at or near the end of the travel. This saves time, as it minimizes the chance that the machine zero is searched for in the wrong direction. In some cases it is possible to use one of the limit switches as machine zero. This method provides however a reduced precision, as the resulting position can normally not be and-linked with the encoder index pulse.



## 2.3 Motor and feedback mounting

### Notes on motor wiring

In order to adhere to the EMC directive, it is necessary to mount the motor if ever possible unchanged. If you require a longer cable, the entire line should be replaced with the same or a similar cable.

 
If you mount a connector on the new cable, please make sure that the 360° motor cable shielding is maintained and that there is no connection to earth via the connector housing.



Improper wiring may lead to severe injuries or death.  
A wiring must always be made from a skilled electrician.

The motor must be grounded with a separate PE protective lead (green/yellow, cross-section at least 2.5 mm<sup>2</sup>).

This cable must be connected to the available motor-ground connector or - if there is non available - with a mounting screw. In the latter case, the coloring under the head of the screw must be removed.



The internal ballscrew is not self-locking!  
Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

In case of non respect severe injuries may occur.

### In this chapter you can read about:

Motor / gearbox mounting with inline motor configuration.....	26
Motor / gearbox mounting with parallel motor configuration .....	28
IP65 motor mount .....	34

### 2.3.1. Motor / gearbox mounting with inline motor configuration

ETH032 ... ETH080

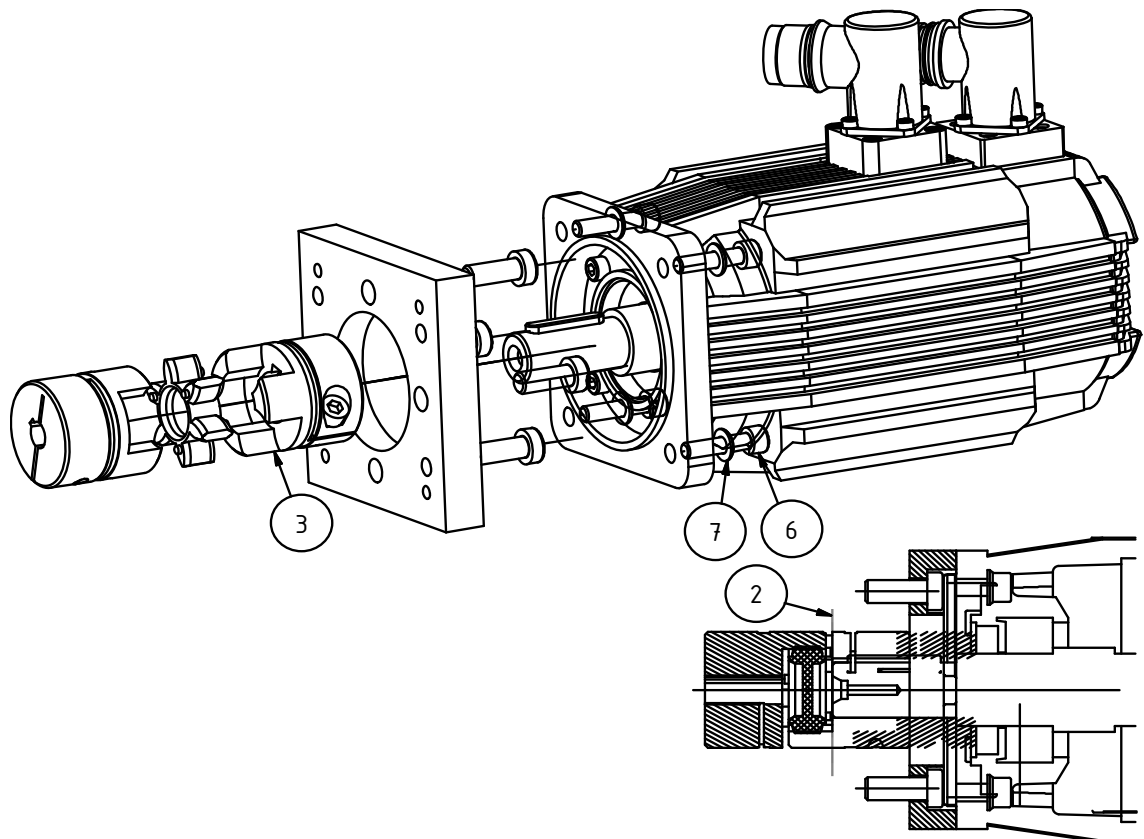


Figure 1

ETH100&125

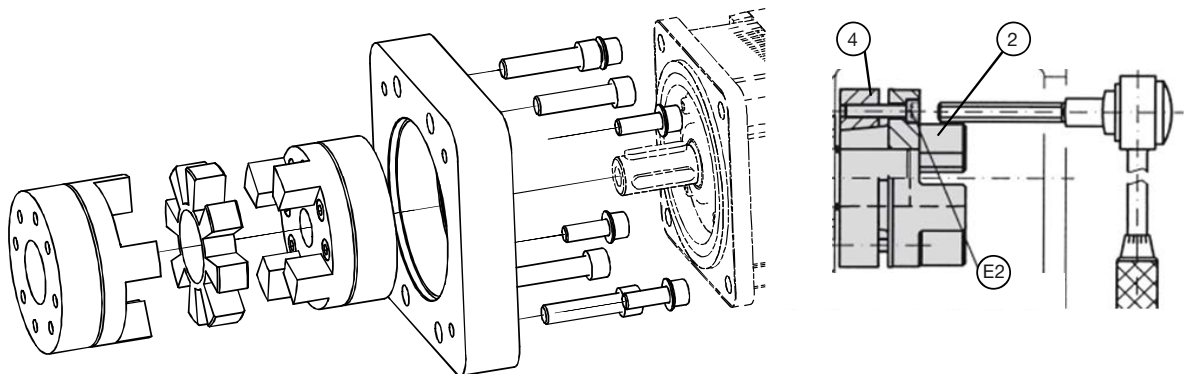


Figure 2

#### Motor / gearbox dismantling

- ◆ Remove motor connector.
- ◆ If you use a gearbox, we recommend to dismount the motor from the gearbox first for reasons of weight.
- ◆ Remove screws (Figure 1 Pos.6).
- ◆ Remove motor / gearbox including mounted coupling half with caution.

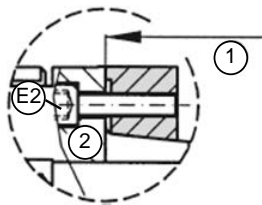


Figure 3

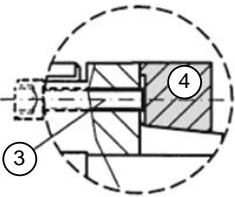


Figure 4

- ◆ Loosen clamping screw(s):
  - ◆ ETH032, ETH050, ETH080: loosen radial clamping screw of the coupling half.
  - ◆ ETH100&125: loosen all clamping screws (Figure 3 Pos.E2) equally (approx. 3 mm) and screw in two of the screws in the open tapped holes. Now tighten screws evenly until the clamp collar (Fig. 4, Pos. 4) is released from the coupling hub (Fig. 3, Pos.2) and can be freely moved.
- ◆ Remove coupling half from the motor / gearbox shaft.

**Motor / gearbox mounting**

- ◆ Please make sure that the clamping screw(s) of the coupling half is/are released and that the clamp collar (Fig. 5, Pos.4) and the coupling hub (Fig. 5 Pos.2) are pulled apart.
- ◆ Slip the coupling half onto the motor / gearbox shaft and align to be flush with the shaft.

**ATTENTION!**

Shafts and bores of the hubs must be free of burrs, dirt and grease.

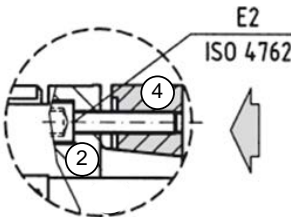


Figure 5

- ◆ ETH032, ETH050, ETH080: tighten radial clamping screw with tightening torque (see table).
- ◆ ETH100&125: Tighten the fixing screws (Figure 5 Pos.E2) crosswise with a torque wrench in 3 turns with 1/3, 2/3 and full tightening torque until the final tightening torque (see table) is attained and the clamp collar touches the coupling half. The dead stop (Figure 6, Pos.1) on the coupling half (Figure 6 Pos.2) prevents too high pretension of the conical clamp collar and ensures high rotational accuracy.

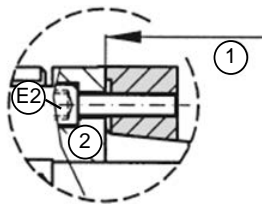


Figure 6

- ◆ Place spider element of the coupling  
Joining with the spider element requires an axial mounting force. This force can be reduced by cleaning and lightly greasing the spider element and the contact surfaces.

**ATTENTION!**

Oils and greases containing molybdenum disulfide or other high pressure additives as well as sliding grease paste.

- ◆ Place motor/gearbox on the mounted flange, so that the coupling halves intermesh.

**CAUTION**

Secure motor / gearbox against dropping. Eye bolts must be used with suitable lifting devices for motors and gearboxes with eyes bolts.

- ◆ Equip screw with washer and tighten (Figure 1 Pos.6, Pos.7).

**Tightening torques for motor/gearbox mounting (ETH)\***

ETH	Coupling size/model	Tightening torque
032	GS12 (outer diameter: 25 mm)	1.4 Nm
050	GS14 (Outer diameter: 30 mm)	1.4 Nm
080	GS19 (Outer diameter: 40 mm)	10.5 Nm
100	EK6-300, screws ISO4762 M6	12 Nm
125	EK6-450, screws ISO4762 M8	35 Nm

\* All clamping screws of the coupling halves must be secured (medium strength) by a screw lock.

## 2.3.2. Motor / gearbox mounting with parallel motor configuration

In this chapter you can read about:

Parallel mounting ETH032 ... ETH080 Standard .....	28
Parallel mounting ETH032 ... ETH080 with Ex - Motor .....	29
Parallel mounting ETH100 & ETH125 .....	31
Re-apply toothed belt pre-tension (reinsert the same toothed belt) .....	33
Resetting the toothed belt pre-tension (new toothed belt) .....	33

### 2.3.2.1 Parallel mounting ETH032 ... ETH080 Standard

#### ETH032 ... ETH080

(valid for all mounting options)

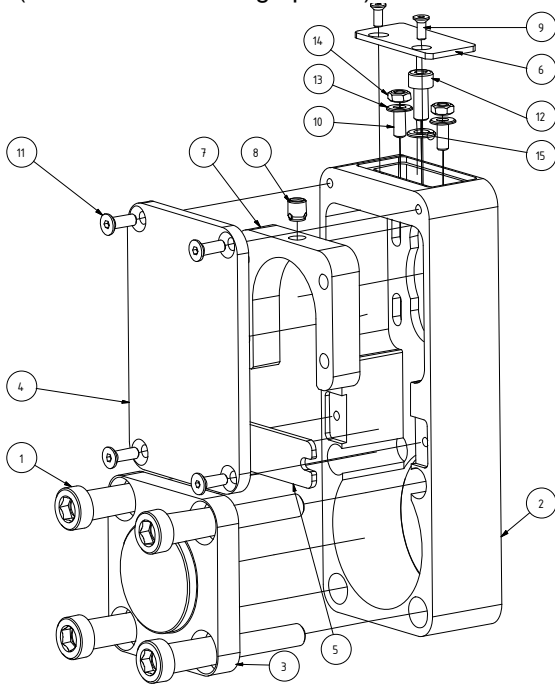


Figure 1 parallel housing

#### ETH032 ... ETH080

(not valid for mounting Parker EX motors)

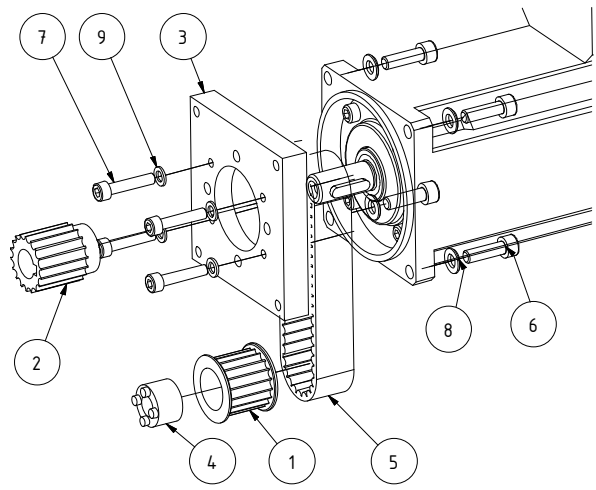


Figure 2 parallel drive

#### Motor / gearbox dismantling (ETH032 ... ETH080) (valid for all mounting options)

- ◆ Remove connectors from motor.
- ◆ Remove lid (Figure 1 Pos.6) and screws (Figure 1 Pos.9).
- ◆ Remove lid (Figure 1 Pos.4) and screws (Figure 1 Pos.11).

**ATTENTION!** Keep all screws and lids for later mounting.

- ◆ Release toothed belt tension:
  - ◆ Slightly loosen 4 screws ((Figure 2 Pos.7) by 1 or 2 turns. see figure 3).
  - ATTENTION!** Do not remove the screws entirely!
  - ◆ Loosen central toothed belt tensioning screw (Figure 1 Pos.12).  
The drive unit must lower slightly when the tensioning screw is loosened.
  - ◆ Loosen tightening screw (Figure 1 Pos.12) until the drive unit is not lowered any further.

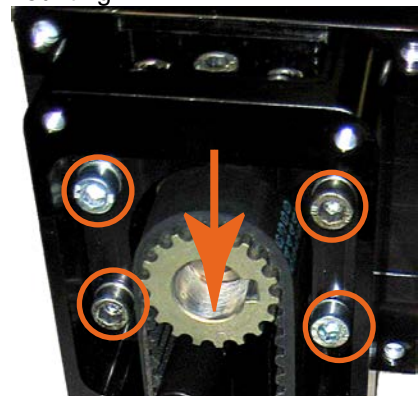


Figure 3

- ◆ 4 screws (Figure 2 Pos. 7) remove screws completely. First at the bottom, then at the top.



**WARNING** The internal ballscrew is not self-locking!

Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

**⚠ CAUTION**

Make sure not to insert your fingers between motor / gearbox and electro cylinder!  
We recommend to place a support pad between motor and cylinder profile.

- ◆ Remove drive unit with mounted toothed pulley from the parallel housing with caution.
- ◆ **ATTENTION!** Make sure that the toothed belt is not stuck in the parallel housing.
- ◆ Dismount motor / gearbox flange (Figure 2 Pos. 3) by loosening the screws (figure 2 Pos.6).
- ◆ Measure and note depth "A" from toothed pulley to motor / gearbox shaft before dismounting the toothed pulley (see Figure 4).
- ◆ Remove threaded pin(s) from the toothed pulley.
- ◆ Pull off toothed pulley with the aid of a pull-off tool.

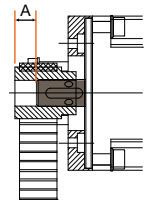


Figure 4

**Motor / gearbox mounting (ETH032 ... ETH080) (not valid for mounting Parker EX motors)**

- ◆ Fit toothed pulley and set dimension "A".  
Dimension "A" is provided by Parker. If the drive was exchanged, please set the dimension "A" noted before.
- ◆ Screw in the toothed pulley threaded pin(s) and secure (medium strength) by screw lock.
- ◆ Mount motor / gearbox flange (Figure 2 Pos.3) with the screws (Figure 2 Pos.6 and Pos.8).
- ◆ Insert drive unit with mounted toothed pulley into the parallel housing with caution. We recommend to place a support pad between motor and cylinder profile.
- ◆ **ATTENTION!** Please make sure that the toothed belt is correctly geared in the pulley toothing.
- ◆ Screw in 4 screws (Figure 2 Pos.7) until the motor flange fits. Do not yet tighten.

**⚠ CAUTION**

Make sure not to insert your fingers between motor / gearbox and electro cylinder!  
We recommend to place a support pad between motor and cylinder profile.

- ◆ Setting the toothed belt pre-tension:
  - ◆ For the same toothed belt (see on page 33).
  - ◆ For a new toothed belt (see on page 33)
- ◆ Mount lid (Figure 1 Pos.6) with screws (Figure 1 Pos.9).
- ◆ Mount lid (Figure 1 Pos.4) with screws (Figure 1 Pos.11).

**2.3.2.2 Parallel mounting ETH032 ... ETH080 with Ex - Motor**

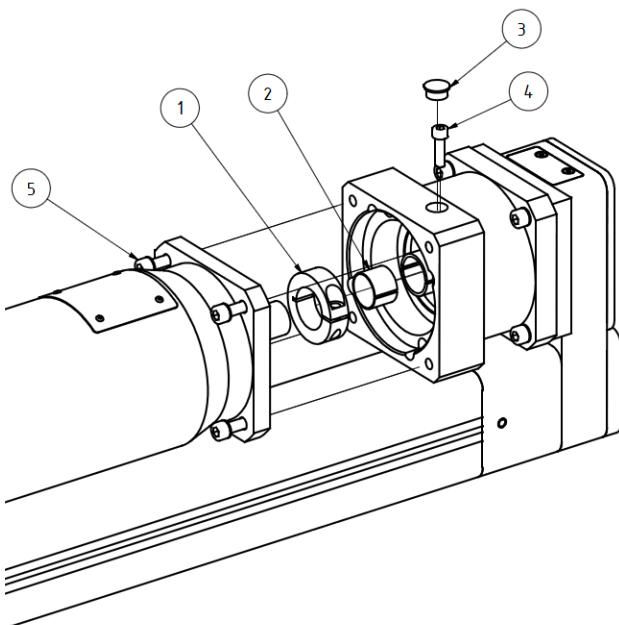


Figure 5

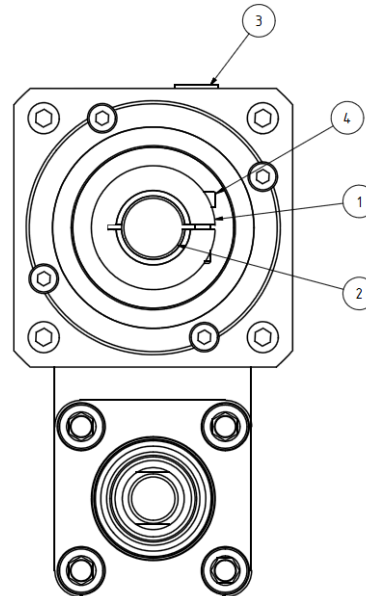


Figure 6

**Dismantle EX-motor (ETH032... ETH080)**

The ETH032, 050 and 080 Electro cylinders for parallel mounting of the EX motor (ETH032 motor flange option K1B, ETH050 motor flange option K1D, ETH080 motor flange option K1J) are furnished with tensioned belt. When dismantling the motor, the belt must NOT be detensioned.

- ◆ Remove connectors from motor
- ◆ Remove lid (figure 5 pos. 3) and loosen screws (figure 5 pos. 4)

**⚠ WARNING**

The internal ballscrew is not self-locking!

Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

Secure motor / gearbox against dropping.

Eye bolts must be used with suitable lifting devices for motors and gearboxes with eyes bolts.

- ◆ Loosen motor fixing screws (figure 5 pos.5)
- ◆ Remove motor from the hollow shaft. ATTENTION! Secure motorx against dropping!

**Dismantle EX-motor (ETH032... ETH080)**

The ETH032, 050 and 080 Electro cylinders for parallel mounting of the EX motor (ETH032 motor flange option K1B, ETH050 motor flange option K1D, ETH080 motor flange option K1J) are furnished with tensioned belt. When dismantling the motor, the belt must NOT be detensioned.

- ◆ Clean contact surfaces of motor, motor shaft, motor flange, hollow shaft bore, clamping ring (figure 5 pos. 1) and spacer sleeve.
- ◆ Shaft, bore, clamping ring (figure 5 pos. 1) and spacer sleeve must be free from burrs, dirt and grease.
- ◆ Push the spacer sleeve (figure 5 pos. 2) in the hollow shaft bore up to its stop.
- ◆ Put the clamping (figure 5 pos. 1) ring onto the hollow shaft and shift it up to the stop.
- ◆ Align the slot of the clamping ring (figure 6 pos. 1) and the spacer sleeve (figure 6 pos. 2) to the slot of the hollow shaft.
- ◆ Align the hollow shaft so that the clamping screw (figure 6 pos. 4) stands over the opening of the flange.
- ◆ Place cylinder upright, with the hollow shaft bore on top.
- ◆ Push the motor vertically, with the motor shaft down, into the hollow shaft up to the stop. Please take care that the motor connectors are on the right side.

**NOTICE**

For the next steps, leave ETH cylinder and motor in this position.

- ◆ Insert and tighten motor fixing screws slightly figure 5 pos.5).
- ◆ Insert and tighten clamping screws slightly figure 5 pos.4).
- ◆ Tighten motor fixing screws.
- ◆ Tighten clamping screw (figure 5 pos. 4) with the respective tightening torque.
- ◆ Close the opening in the motor flange with the lid (figure 5 pos 3)

**Tightening torque of clamping screw:**

	Clamping screw	Tightening torque
<b>ETH032</b>	M4x16	3.5 Nm
<b>ETH050</b>	M5x20	7.2 Nm
<b>ETH080</b>	M6x26	11.8 Nm

## 2.3.2.3 Parallel mounting ETH100 &amp; ETH125

## ETH100&amp;125

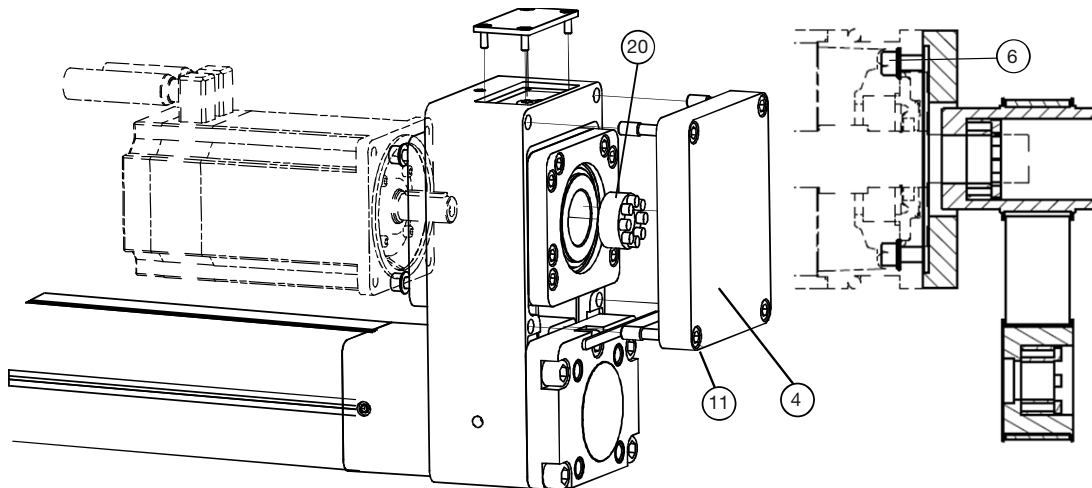


Figure 7 parallel housing

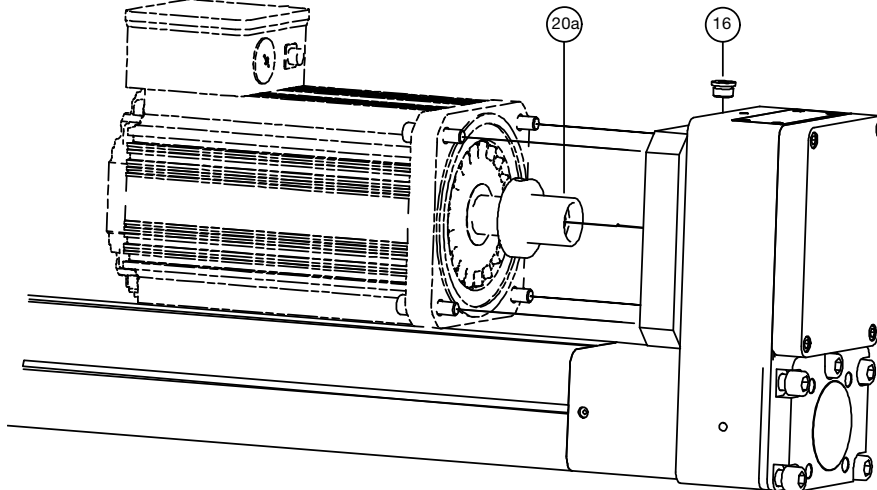


Figure 8 parallel housing

**Motor / gearbox mounting (ETH100&125)**

The ETH100&125 electro cylinder is furnished with tensioned belt.

When dismantling the gearbox / motor, the belt must NOT be detensioned.

- ◆ Remove connectors from motor
- ◆ Remove lid (Figure 7 Pos.4) and screws (Figure 5 Pos.11).
- ◆ Loosen all tensioning screws of the clamping bushing (Figure 10 Pos. 20) (approx. 3 mm).

with K1M drive option: Loosen tensioning element (figure 8 Pos.20a) via flange sided mounting hole. For this, first loosen the lock screw (Figure 8 Pos.16) and then the adjusting screw of the tensioning element.

**⚠ WARNING**

The internal ballscrew is not self-locking!

Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

Secure motor / gearbox against dropping.

Eye bolts must be used with suitable lifting devices for motors and gearboxes with eyes bolts.

- ◆ Loosen motor fixing screws (Figure 7 Pos.6).
- ◆ The clamping unit should (after loosening the tensioning screws) be loose. If not, knock slightly on the loosened screws with a hammer in order to push back the rear taper ring (not with K1M drive option).
- ◆ Remove motor / gearbox from the hollow shaft.

**ATTENTION!** Secure motor/gearbox against dropping!

- ◆ Remove clamping unit (Figure 3 Pos.20, Figure 8 Pos.20a).

### Motor / gearbox mounting (ETH100&125)

The ETH100&125 electro cylinder is furnished with tensioned belt. When mounting the gearbox / motor, the belt must NOT be detensioned or retensioned.

- ◆ Remove lid (Figure 7 Pos.4) and screws (Figure 7 Pos.11).
- ◆ Clean contact surfaces of motor / gearbox shaft and hollow shaft bore. Shaft and bores must be free of burrs, dirt and grease.
- ◆ Insert motor / gearbox into hollow shaft.
  - with K1M drive option: Insert clamping element (Figure 8 Pos.20a) in the hollow shaft on the motor side and push up to the exterior stop. Adjust clamping element thus adjusting screw can be tightened via flange sided mounting holes.

### WARNING

The internal ballscrew is not self-locking! Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

Secure motor / gearbox against dropping.

Eye bolts must be used with suitable lifting devices for motors and gearboxes with eyes bolts.

- ◆ Insert and tighten motor fixing screws slightly.
- ◆ Insert clamping bushing (Figure 10 Pos.20) into hollow shaft and push up to the inner stop (not with K1M drive option).
- ◆ Tighten screws crosswise until the inner ring touches the shaft and the outer ring touches the hub (not with K1M drive option). Secure screws (medium strength) with locking compound.
- ◆ Tighten motor fixing screws.
- ◆ Afterwards tighten tensioning screws of the clamping bushing (Figure 7 Pos.20, Figure 8 Pos.20a) crosswise step by step (in three turns with 1/3, 2/3 and full tightening torque), until the screw tightening torque (see table) is reached. You can apply counter pressure with the aid of a hook wrench, which can be inserted into the bores on the toothed pulley.
- ◆ Mount lid (Figure 7 Pos.4) and screws (Figure 7 Pos.11).

### Tightening torque of motor flange/clamping bushing

	Motor flange option	Screw Tightening torques Clamping bushing (Pos. 20)
<b>ETH100</b>	K1H, K1J, K1K, K1L, P1C, P1D, P1J	Hexagon socket SW: 5 mm M6, 15 Nm
<b>ETH125</b>	K1L, P1C, P1D, P1K	Hexagon socket SW: 5 mm M6, 15 Nm
	K1M	Hexagon socket SW: 8 mm M16, 21 Nm



### 2.3.2.4 Re-apply toothed belt pre-tension (reinsert the same toothed belt)

#### ETH032 ... ETH080

If the motor / gearbox is exchanged and the toothed belt is still in good condition, the pre-tension can be reset without measuring device.

#### ETH100&125

The ETH100&125 electro cylinder is furnished with tensioned belt. When dismantling the gearbox / motor, the belt must **NOT** be detensioned. Therefore, this chapter is usually not valid for the ETH100&125.

- ◆ First check, if the belt tothing is geared into the upper and lower toothed pulley.
- ◆ The screws (Figure 9 Pos.7) must be inserted (but not tightened), so that the drive unit can be lifted.
- ◆ Tighten central toothed belt tensioning screw (Figure 1 Pos.12).  
The drive unit must lift when tightening the screw. Lift the unit until it touches the 2 internal stops (Figure 1 Pos.10). This is made by tightening the central tightening screw.

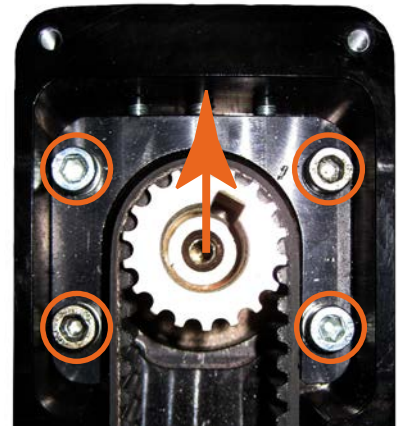


Figure 9

- ◆ Tighten 4 screws (Figure 2 Pos.7) with the given tightening torque.
- ◆ Refix both lids (Fig. 1 Pos. 4 & 6) with the respective screws (Fig. 1 Pos. 11 & 9).

#### Screw tightening torques belt tensioning option

ETH032	ETH050	ETH080	ETH100	ETH125
3 Nm	5 Nm	20 Nm	70 Nm	115 Nm

### 2.3.2.5 Resetting the toothed belt pre-tension (new toothed belt)

For a new toothed belt, we recommend to re-set the toothed belt pretension:

- ◆ Check, if the belt tothing is geared into the upper and lower toothed pulley.
- ◆ The screws (Figure 2 Pos.7) must be inserted (but not tightened), so that the drive unit can be lifted.
- ◆ Loosen both lock nuts (Figure 1 Pos.14) (do not remove entirely).
- ◆ Unscrew both threaded pins (Figure 1 Pos.10) until they are almost level with the inside of the parallel housing.
- ◆ Tighten central toothed belt tensioning screw (Figure 1 Pos.12) until the toothed belt is noticeably pretensioned.
- ◆

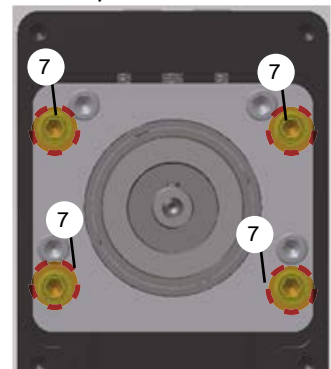


Figure 10 ETH1xx

- ◆ Measure toothed belt tension with a suitable device.  
We recommend: Gates: „Sonic 507c" or Hilger&Kern: „Trummeter"
- ◆ Tighten screw lightly and repeat measurement.  
Repeat this procedure until the required **toothed belt pretension** (see on page 33, see on page 42) is set.

## ⚠ CAUTION

Only a correctly set toothed belt pretension ensures fail-safe operation of the cylinder.

- ◆ Screw in both threaded pins (Figure 1 Pos.10) until they touch the inner bracket.  
Tighten pins slightly.
- ◆ Retighten lock nuts (Figure 1 Pos.14).
- ◆ Tighten 4 screws (Figure 2 Pos.7) with the given tightening torque.
- ◆ Refix both lids (Figure 1 Pos.4 & 6) with the respective screws Figure 1 Pos.11&9).

### Screw tightening torques belt tensioning option

ETH032	ETH050	ETH080	ETH100	ETH125
3 Nm	5 Nm	20 Nm	70 Nm	115 Nm

## 2.3.3. IP65 motor mount

For the IP65 option, we generally recommend to have the motor mounted by Parker. If the motor is not mounted by Parker, please respect the following instructions to achieve the best possible sealing effect.

### 2.3.3.1 Motor mounting for IP65 inline

The cylinder is furnished with mounted coupling housing and motor flange. Before mounting the motor to the flange, it must be sealed as follows.

- ◆ Apply silicone sealing compound to the motor flange pilot (e.g. Sista Silicone F109 Universal).
- ◆ Screw motor to motor flange  
(see chapter “**Motor and gearbox mounting**”  
(see on page 25)).
- ◆ Note the additional mounting steps  
(see chapter “**Motor and gearbox mounting**”  
(see on page 25)).


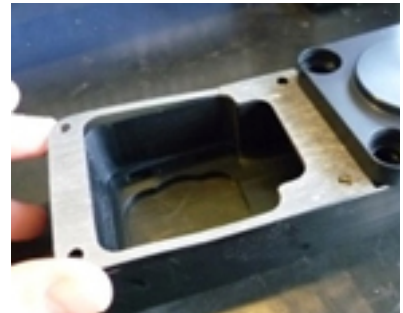


Figure 1 IP-flange

### 2.3.3.2 IP65 motor mount parallel

The cylinder is furnished with mounted parallel housing. The housing as well as the motor flange which is fixed to the housing, must be sealed.

- ◆ Apply silicone sealing compound to the motor flange pilot (e.g. Sista Silicone F109 Universal).
- ◆ Screw motor to motor flange (delivered with the cylinder),  
(see chapter “**Motor and gearbox mounting**”  
(see on page 25)).
- ◆ Apply silicone sealing compound around bores of the parallel housing
- ◆ Mount motor with motor flange to parallel housing  
(see chapter “**Motor and gearbox mounting**”  
(see on page 25)).
- ◆ Tension toothed belt  
(see “**Exchange or tension toothed belt**”  
(see on page 33, see on page 42)).
- ◆ Place seal (furnished with the cylinder).
- ◆ Place lid (furnished with the cylinder).
- ◆ Fix lid and seal to parallel housing
- ◆ Note the additional mounting steps  
(see chapter “**Motor and gearbox mounting**”  
(see on page 25)).

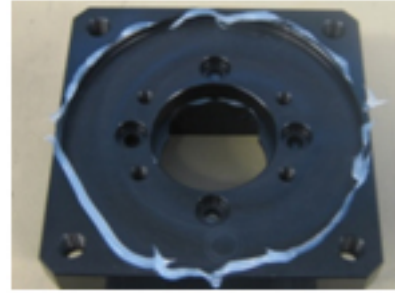

# 3. Maintenance and service

**In this chapter you can read about:**

Maintenance schedule.....36  
 Lubricating intervals and amount of lubricant .....37  
 Toothed belt .....39  
 Belt / belt tensions .....42

**NOTICE**

Read **safety instructions** (see on page 7) before taking into operation!

Before performing any maintenance work, turn the power switch to the '0' setting and secure it with a padlock against manipulation. If the unit needs to be operable for specific repair works, you have to be especially cautious. Please make sure that there are no persons in the hazardous area - if needs be, secure this area by additional enclosures or barriers against access.

**DANGER**

If set-up, repair or maintenance works require that safety installations be dismantled, these must be reinstalled immediately after the respective works have been completed. The unit must be shut down before any of the safety installations are dismantled.

**CAUTION**

Depending on the operating conditions (rotation speed, load, etc.) increased surface temperature in the area of the drive may occur. When touching it during operation slight injuries from burning may occur. Don't touch the product during operation. At maintenance, service and repair always take care that the product is cooled off before starting work.

## 3.1 Maintenance schedule

WHEN	WHAT	ACTION
After commissioning	Lead screw	The cylinder is furnished completely lubricated. If the cylinder was held on stock at your premises for more than 1 year, it must be relubricated before commissioning. see <b>lubricating intervals and amount of lubricant</b> (see on page 37)
Depending on the mileage, see table Lubricating intervals and amount of lubricant (see on page 37)	Leas screw	Relubricating the screw.  see <b>lubricating intervals and amount of lubricant</b> (see on page 37)
Annually	Electro Cylinder	Visual inspection for external damages of the actuator. If externally caused damages are visible on the thrust rod or on the profile, please contact Parker.
Annually	Fixings provided by the customer	Check screw tightening torque. see <b>mounting tightening torques ETH</b> (see on page 18)
Annually, or every 6000 hours of operation	Toothed belt (with parallel configuration)	In general, the high performance toothed belts used in the ETH are maintenance free. Visual inspection of the timing belt is however required. Please check the toothed belt for the following aspects: <ul style="list-style-type: none"> <li>◆Wear at the teeth</li> <li>◆Cracks in the tooth root surface</li> <li>◆Fractures in the belt back</li> </ul> If you find signs of wear, the <b>toothed belt must be exchanged</b> (see on page 40).

## 3.2 Lubricating intervals and amount of lubricant

The lubrication intervals depend on the operating conditions (series, pitch, speed, acceleration, loads, etc.) and the ambient conditions (e.g. temperature). Ambient influences such as high loads, impacts and vibrations shorten the lubrication intervals. In short-stroke applications, a lubrication run must be performed after max. 10 000 movement cycles. In the event of small loads and if the application is impact and vibration free, the lubrication intervals can be increased.

Under normal operating conditions, the given lubrication intervals apply. If the total travel per year is shorter than the given intervals, the cylinder must be relubricated at least once per year. Lubrication is always required if the cylinder will not be used for a longer period of time or when operation is interrupted! The lubricant used is supplied by Klüber, it is available worldwide.

### Normal operating conditions:

- ◆ Medium Speed:  $0.5 \times v_{\max}$
- ◆ Application factor  $f_w=1.0$
- ◆ No impacts and vibrations
- ◆ Load ration  $F_m/F_{\max}$ : 20 %

The given lubrication intervals apply.

	Lead screw	Interval	Amount of lubricant
<b>ETH032</b>	M05	240 km	1.3 cm <sup>3</sup>
	M10	480 km	1.6 cm <sup>3</sup>
	M16	760 km	2.1 cm <sup>3</sup>
<b>ETH050</b>	M05	240 km	1.6 cm <sup>3</sup>
	M10	480 km	1.9 cm <sup>3</sup>
	M20	960 km	2.7 cm <sup>3</sup>
<b>ETH080</b>	M05	240 km	3.1 cm <sup>3</sup>
	M10	480 km	4.4 cm <sup>3</sup>
	M32	1530 km	7.8 cm <sup>3</sup>
<b>ETH100</b>	M10	280 km	14 cm <sup>3</sup>
	M20	570 km	17 cm <sup>3</sup>
<b>ETH125</b>	M10	280 km	20 cm <sup>3</sup>
	M20	570 km	48 cm <sup>3</sup>

Different operating conditions will shorten the lubrication intervals.

You will find information about short stroke applications in the catalogue. Please contact Parker for details.

### Lubricant

## NOTICE

Do only use "Klüber NBU15" lubricating grease for standard cylinders!


For applications in food related areas, "Klübersynth UH1 64-62" grease is used (customized version).

After relubrication, a lubricating run must be performed to ensure even distribution of the lubricating agent.

Please make sure that the entire length is traveled in both directions at a speed of approx. 20 mm/s.

After this, the cylinder is ready for put back into operation.

### 3.2.1. Greasing via central lubrication port (standard)

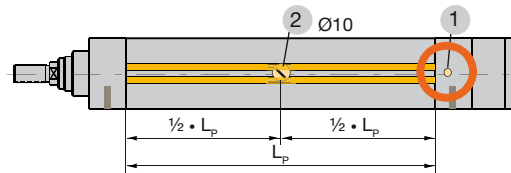

- 1: Central lubrication (standard)
- 2: Central lubrication (Option)

Make sure that all external stops are removed.


- ◆ Retreat Electro Cylinder completely so that it touches the rear stop.
- ◆ Pass internal buffer by 0.5 mm.

#### ⚠ CAUTION

Ensure by means of control, that the internal buffer is not passed by more than 0.5 mm!

- ◆ This is the lubricating position.
- ◆ Use a suitable pipe for the funnel type lubricating nipple, Type D1a4 DIN3405: Beaked nozzle.
- ◆ Place the pipe orthogonally onto the lubricating nipple and press.
- ◆ Use the **defined amount of lubricant** (see on page 37).
- ◆ The amount of lubricant applied can be defined by the number of pump strokes. Pump the stated amount of grease onto a balance, while counting the pump strokes.

### 3.2.2. Relubrication via central lubrication port (option)

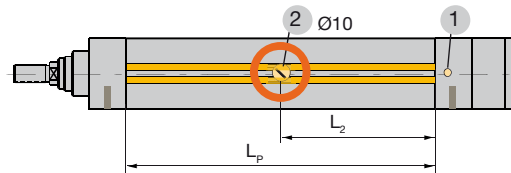

- 1: Central lubrication (standard)
- 2: Central lubrication (Option)

#### Location of lubrication port

Depending on the cylinder size and the selected stroke, the relubrication hole is located in the mid of the profile or in the mid of the stroke.

Stroke ≥ Stroke limit:  $L_2 = L_p / 2$

Stroke < Stroke limit:  $L_2 = \text{stroke} / 2 + \text{Offset}$

	Pitch	Stroke limit [mm]	Offset [mm]
ETH032	M05	50	15
	M10		
	M16		
ETH050	M05	60	15
	M10		
	M20		
ETH080	M05	100	20
	M10		
	M32		
ETH100	M10	160	22
	M20		
ETH125	M10	240	25
	M20		

The distances of the rear stop (on the motor side), mentioned in the following table, to the central lubrication port in the profile are only approximate values.

### Start-up position of relubrication port

Assumption: Position = 0 at the rear buffer (lead screw completely retracted)

	Pitch	Position center lubrication option [mm]	
		Stroke $\geq$ stroke limit [mm]	Stroke $<$ Stroke limit
ETH032	M05	$\frac{1}{2}$ x stroke + 18	1/2 x stroke
	M10	$\frac{1}{2}$ x stroke + 22.5	
	M16	$\frac{1}{2}$ x stroke + 24.5	
ETH050	M05	$\frac{1}{2}$ x stroke + 18.5	
	M10	$\frac{1}{2}$ x stroke + 21.5	
	M20	$\frac{1}{2}$ x stroke + 27.5	
ETH080	M05	$\frac{1}{2}$ x stroke + 24.5	
	M10	$\frac{1}{2}$ x stroke + 33.5	
	M32	$\frac{1}{2}$ x stroke + 48.5	
ETH100	M10	$\frac{1}{2}$ x stroke + 59	
	M20	$\frac{1}{2}$ x stroke + 78	
ETH125	M10	$\frac{1}{2}$ x stroke + 71	
	M20	$\frac{1}{2}$ x stroke + 115	

- ◆ Loosen lubrication port screw.
- ◆ Move the cylinder slowly to the lubricating position until the lubricating port becomes visible.
- ◆ With frame sizes ETH032, ETH050 and ETH080 the lubrication ports have a diameter of 2.5 mm.  
With frame sizes ETH100 and ETH125 the lubrication nipple is integrated.  
For all sizes you need a beaked nozzle for your grease gun.
- ◆ Use a stable pipe (no hose).
- ◆ Insert the nozzle into the hole in the cylinder profile and place it orthogonally onto the lubricating port.
- ◆ Use the **defined amount of lubricant** (see on page 37).
- ◆ The amount of lubricant applied can be defined by the number of pump strokes.  
Pump the stated amount of grease onto a balance, while counting the pump strokes.

## 3.3 Toothed belt

### 3.3.1. Checking the toothed belt

In general, the high performance toothed belts used in the ETH are maintenance free.

Visual inspection of the timing belt is however required. Please check the toothed belt for the following aspects:

- ◆ Wear at the teeth
- ◆ Cracks in the tooth root surface
- ◆ Fractures in the belt back

If you find signs of wear, the **toothed belt must be exchanged** (see on page 40).

For visual inspection, you must only remove the (upper) lid with the four screws (Figure 1, Pos.4+11).

**ATTENTION!** Do not remove the screws of Pos.11 entirely.



Do not forget to refix the lid after the inspection!

### 3.3.2. Exchanging the toothed belt (ETH032 ... 080)

#### ETH032 ... ETH080

(valid for all mounting options)

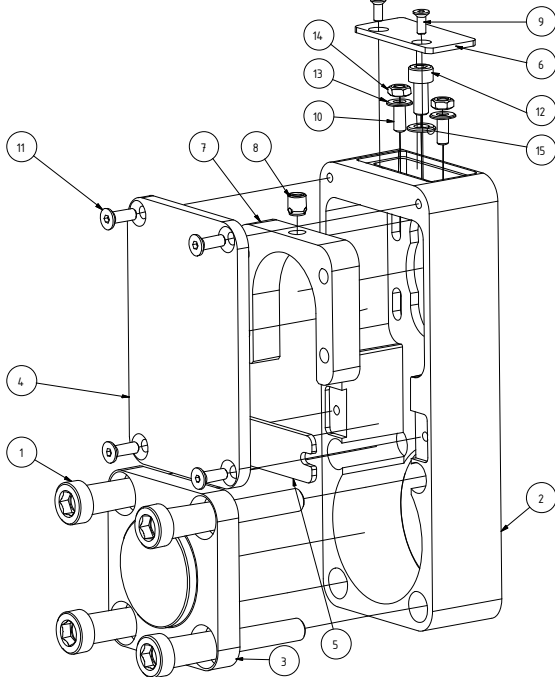


Figure 1 parallel housing

#### ETH032 ... ETH080

(not valid for mounting Parker EX motors)

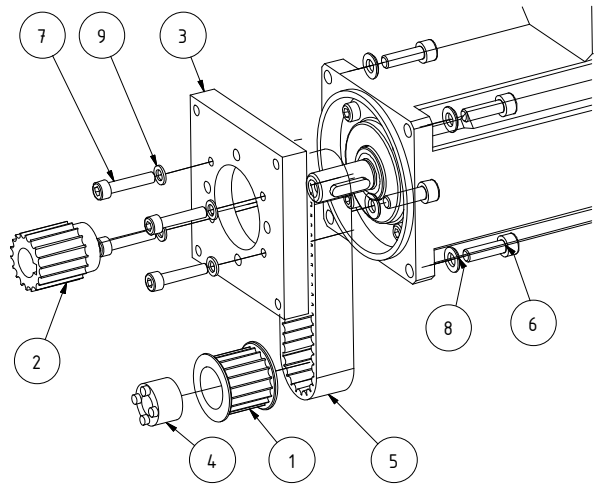


Figure 2 parallel drive

- ◆ **Dismantling the motor** (see on page 25)
- ◆ Loosen and remove 4 screws (Figure 1 Pos.1).
- ◆ Remove lid (Figure 1 Pos.3).
- ◆ Remove bar (Figure 1 Pos.5).
- ◆ Remove old toothed belt and insert new belt.
- ◆ **ATTENTION!** Please make sure that the toothed belt is correctly geared in the pulley tothing.
- ◆ Insert bar (Figure 1 Pos.5).
- ◆ Fit lid (Figure 1 Pos.3).
- ◆ Apply screw adhesive "Wiko 02K43 medium" to 4 screws (Figure 1 Pos.1) and tighten slightly.
- ◆ Align housing (Figure 1 Pos.2) with the electro cylinder.
- ◆ Tighten 4 screws (Figure 1 Pos.1) with the given tightening torque.

ETH032	ETH050	ETH080
9 Nm	20 Nm	40 Nm

- ◆ **Mounting the motor** (see on page 25)
- ◆ Setting the toothed belt pre-tension:
  - ◆ For the **same toothed belt** (see on page 33).
  - ◆ For a **new toothed belt** (see on page 33)
- ◆ Mount lid (Figure 1 Pos.6) with screws (Figure 1 Pos.9).
- ◆ Mount lid (Figure 1 Pos.4) with screws (Figure 1 Pos.11).



### 3.3.3. Exchanging the toothed belt (ETH100&125)

ETH100&125

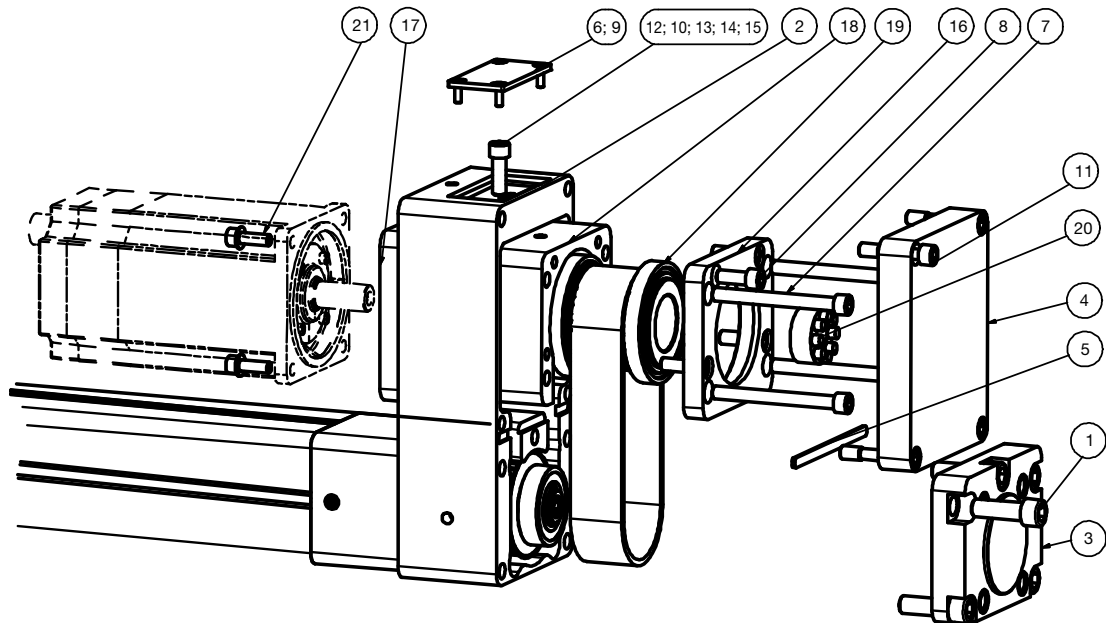


Figure 3 Exchanging the toothed belt (ETH100&125)

◆ **Dismantling the motor** (see on page 25)



The internal ballscrew is not self-locking!

Always take care, especially in vertical position of the ETH cylinder that the piston rod must be safeguarded!

◆ **Toothed belt detensioning**

- ◆ Slightly loosen 4 screws ((Figure 3 Pos.7) by 1 or 2 turns.  
**ATTENTION!** Do not remove the screws entirely!
- ◆ Loosen central toothed belt tensing screw (Figure 3 Pos.12). The drive unit must lower slightly when the tensing screw is loosened.
- ◆ Loosen tightening screw (Figure 3 Pos.12) until the drive unit is not lowered any further.
- ◆ Loosen 5 screws (Figure 3 Pos.1) and remove lid (Figure 3 Pos.3). If the lid cannot be removed easily, try to remove it with a slightly pivoting movement.
- ◆ Remove middle bar (Figure 3 Pos.5) with seal.
- ◆ Loosen 4 screws (Figure 3 Pos.8) of the upper bearing flange (Figure 3 Pos.16) (don't remove them completely).
- ◆ Loosen 4 screws (Figure 3 Pos.7) and remove motor flange (Figure 3 Pos.17).



Make sure not to insert your fingers between motor / gearbox and electro cylinder! We recommend to place a support pad between motor and cylinder profile.

- ◆ Loosen and remove completely central toothed belt tensing screw (Figure 3 Pos.12)
- ◆ **ATTENTION!** Secure upper bearing unit (Figure 3 Pos.18) against falling.
- ◆ **CAUTION!** Danger of crushing: Do not place your hands or fingers between upper bearing unit and parallel housing.
- ◆ Remove upper bearing unit (Figure 3 Pos.18) with toothed belt.
- ◆ Loosen four screws (Figure 3 Pos.8) of the upper bearing flange (Figure 3 Pos.16) and remove bearing flange from bearing (Figure 3 Pos.19).
- ◆ Remove hollow shaft with the two bearings (Figure 3 Pos.19) from the bearing housing (Figure 3 Pos.18).
- ◆ Now, the toothed belt can be removed and the new belt can be inserted.



Please make sure that the toothed belt is correctly geared in the pulley tothing.



Do only use the toothed belt specified by Parker.  
Do only use the toothed belts with mentioned part number.

- ◆ Mounting in reverse order.
- ◆ (Figure 3 Pos.2,3 and 4) must be sealed with Atomsit.
- ◆ Re-seal middle bar (Figure 3 Pos.5) with the seal or with Atomsit.

## ⚠ WARNING

Please respect the screw tightening torques.

- ◆ **Setting the toothed belt pre-tension** (see on page 33)

### **Tightening torques: Toothed belt change ETH100&125**

	Position	Screw Tightening torques	Screw locking compound
ETH100	Pos.1	110 Nm	Loctite 242 / Wiko02K43
	Pos.7	70 Nm	Loctite 242 / Wiko02K43
	Pos.8	70 Nm	Loctite 242 / Wiko02K43
ETH125	Pos.1	250 Nm	Loctite 242 / Wiko02K43
	Pos.7	115 Nm	Loctite 242 / Wiko02K43
	Pos.8	115 Nm	Loctite 242 / Wiko02K43

## 3.4 Belt / belt tensions

	ETH032	ETH050	ETH080	ETH100	ETH125 <sup>1)</sup>	ETH125 <sup>2)</sup>
<b>Part No.</b>	0111.913	0121.913	0131.913	0141.913-02	0151.913	
<b>Belt pre-tension</b>	210 N ± 7 N	230 N ± 7 N	450 N ± 14 N	3500 N ± 19 N	4900 N ± 36 N	4400 N ± 130 N
<b>Trum Frequency</b>	438 Hz ± 14 Hz	306 Hz ± 10 Hz	236 Hz ± 8 Hz	370 Hz ± 2 Hz	272 Hz ± 2 Hz	284 Hz ± 9 Hz
<b>Belt mass</b>	0.060 kg/m	0.080 kg/m	0.120 kg/m	0.2065 kg/m	0.33 kg/m	0.2725 kg/m
<b>Belt width</b>	15 mm	20 mm	30 mm	50 mm	62 mm	60 mm
<b>Center distance</b>	67.5 mm	87.5 mm	130 mm	176 mm	224mm	224 mm

<sup>1)</sup> Belt inside black

<sup>2)</sup> Belt inside yellow (Installed by the beginning of 2016)

# 4. Repair

In the event of a damage or a mechanical defect, the entire unit must be returned for repair (**Parker Hannifin** (see on page 2)). The repair must be made by trained Parker personnel.

### **User Conversions and Changes are Not Permitted**

The linear actuator must not be changed in its design or in terms of safety without our approval. Any change as defined here made by the user excludes any liability on our part.

# 5. Index

## A

Allgemeine Gefahren • 7  
Applications not in accordance with the intended use • 7

## B

Befestigung Zubehör - Lagerblock • 20

## C

Conditions of utilization • 15

## D

Drehrichtung des Motors beim Ausfahren des Zylinders • 22

## E

Einbauerklärung • 6  
Einleitung • 5  
Electric installation • 22  
Endgrenzen einrichten • 23  
Exchanging the toothed belt (ETH032 ... 080) • 40  
Exchanging the toothed belt (ETH100&125) • 41

## G

Gerätezuordnung • 5

## I

Identifying Residual Dangers and Hazardous Areas • 7  
Initiatoren • 22  
Intended use • 7  
IP65 motor mount • 34

## M

Maintenance and service • 36  
Montage • 17  
Montage - Befestigung Zubehör - Schwenkflansch mit Kraftmessbolzen • 20  
Montage der Initiatoren • 23  
Montage der Nutzlast • 21  
Montage Kraftsensoren • 20  
Montage über Montagezubehör • 17  
Montage über zylindereigene Montagegewinde • 17  
Motor- und Getriebemontage • 25  
Motor-/ Getriebemontage Motoranbau inline • 26  
Motor-/ Getriebemontage Motoranbau parallel • 28  
Motoranbau bei IP65 - inline • 34  
Motoranbau bei IP65 - parallel • 35  
Mounting notes • 21

## N

Nachschmieren über mittige Nachschmierbohrung (Option) • 38  
Nachschmieren über zentrale Nachschmierung (Standard) • 38

## P

Parallel mounting ETH032 ... ETH080 Standard • 28  
Parallel mounting ETH032 ... ETH080 with Ex - Motor • 29  
Parallel mounting ETH100 & ETH125 • 31

## R

Repair • 42  
Riemen / Riemenspannungen • 42

## S

Safety instructions • 7  
Schmierintervalle und Nachschmiermenge • 37  
Screw tightening torques for the mounting of the ETH cylinder by the customer • 18  
Set-up • 17  
Sicherheitshinweise für das Bedienpersonal • 9  
Sicherheitshinweise für das Verwenderunternehmen • 8  
Side Load • 21  
Special notes on transport • 10

## T

Terms of guarantee / warranty • 14  
Toothed belt • 39  
Typenschild • 5

## V

Verpackung, Lagerung, Transport • 10

## W

Wartungsplan • 36  
Working safely • 8

## Z

Zahnriemen prüfen • 39  
Zahnriemenvorspannung neu einstellen (neuer Zahnriemen) • 33  
Zahnriemenvorspannung wieder aufbringen (gleicher Zahnriemen wieder einbauen) • 33  
Zylindermontage über Montageplatten oder Fußmontagewinkel • 18

# Parker Worldwide

## Europe, Middle East, Africa

**AE – United Arab Emirates**, Dubai  
Tel: +971 4 8127100  
parker.me@parker.com

**AT – Austria**, Wiener Neustadt  
Tel: +43 (0)2622 23501-0  
parker.austria@parker.com

**AT – Eastern Europe**,  
Wiener Neustadt  
Tel: +43 (0)2622 23501 900  
parker.easteurope@parker.com

**AZ – Azerbaijan**, Baku  
Tel: +994 50 2233 458  
parker.azerbaijan@parker.com

**BE/LU – Belgium**, Nivelles  
Tel: +32 (0)67 280 900  
parker.belgium@parker.com

**BG – Bulgaria**, Sofia  
Tel: +359 2 980 1344  
parker.bulgaria@parker.com

**BY – Belarus**, Minsk  
Tel: +48 (0)22 573 24 00  
parker.poland@parker.com

**CH – Switzerland**, Etoy  
Tel: +41 (0)21 821 87 00  
parker.switzerland@parker.com

**CZ – Czech Republic**, Klecany  
Tel: +420 284 083 111  
parker.czechrepublic@parker.com

**DE – Germany**, Kaarst  
Tel: +49 (0)2131 4016 0  
parker.germany@parker.com

**DK – Denmark**, Ballerup  
Tel: +45 43 56 04 00  
parker.denmark@parker.com

**ES – Spain**, Madrid  
Tel: +34 902 330 001  
parker.spain@parker.com

**FI – Finland**, Vantaa  
Tel: +358 (0)20 753 2500  
parker.finland@parker.com

**FR – France**, Contamine s/Arve  
Tel: +33 (0)4 50 25 80 25  
parker.france@parker.com

**GR – Greece**, Athens  
Tel: +30 210 933 6450  
parker.greece@parker.com

**HU – Hungary**, Budaörs  
Tel: +36 23 885 470  
parker.hungary@parker.com

**IE – Ireland**, Dublin  
Tel: +353 (0)1 466 6370  
parker.ireland@parker.com

**IT – Italy**, Corsico (MI)  
Tel: +39 02 45 19 21  
parker.italy@parker.com

**KZ – Kazakhstan**, Almaty  
Tel: +7 7273 561 000  
parker.easteurope@parker.com

**NL – The Netherlands**, Oldenzaal  
Tel: +31 (0)541 585 000  
parker.nl@parker.com

**NO – Norway**, Asker  
Tel: +47 66 75 34 00  
parker.norway@parker.com

**PL – Poland**, Warsaw  
Tel: +48 (0)22 573 24 00  
parker.poland@parker.com

**PT – Portugal**, Leca da Palmeira  
Tel: +351 22 999 7360  
parker.portugal@parker.com

**RO – Romania**, Bucharest  
Tel: +40 21 252 1382  
parker.romania@parker.com

**RU – Russia**, Moscow  
Tel: +7 495 645-2156  
parker.russia@parker.com

**SE – Sweden**, Spånga  
Tel: +46 (0)8 59 79 50 00  
parker.sweden@parker.com

**SK – Slovakia**, Banská Bystrica  
Tel: +421 484 162 252  
parker.slovakia@parker.com

**SL – Slovenia**, Novo Mesto  
Tel: +386 7 337 6650  
parker.slovenia@parker.com

**TR – Turkey**, Istanbul  
Tel: +90 216 4997081  
parker.turkey@parker.com

**UA – Ukraine**, Kiev  
Tel: +48 (0)22 573 24 00  
parker.poland@parker.com

**UK – United Kingdom**, Warwick  
Tel: +44 (0)1926 317 878  
parker.uk@parker.com

**ZA – South Africa**, Kempton Park  
Tel: +27 (0)11 961 0700  
parker.southafrica@parker.com

## North America

**CA – Canada**, Milton, Ontario  
Tel: +1 905 693 3000

**US – USA**, Cleveland  
Tel: +1 216 896 3000

## Asia Pacific

**AU – Australia**, Castle Hill  
Tel: +61 (0)2-9634 7777

**CN – China**, Shanghai  
Tel: +86 21 2899 5000

**HK – Hong Kong**  
Tel: +852 2428 8008

**IN – India**, Mumbai  
Tel: +91 22 6513 7081-85

**JP – Japan**, Tokyo  
Tel: +81 (0)3 6408 3901

**KR – South Korea**, Seoul  
Tel: +82 2 559 0400

**MY – Malaysia**, Shah Alam  
Tel: +60 3 7849 0800

**NZ – New Zealand**, Mt Wellington  
Tel: +64 9 574 1744

**SG – Singapore**  
Tel: +65 6887 6300

**TH – Thailand**, Bangkok  
Tel: +662 186 7000

**TW – Taiwan**, Taipei  
Tel: +886 2 2298 8987

## South America

**AR – Argentina**, Buenos Aires  
Tel: +54 3327 44 4129

**BR – Brazil**, Sao Jose dos Campos  
Tel: +55 800 727 5374

**CL – Chile**, Santiago  
Tel: +56 2 623 1216

**MX – Mexico**, Toluca  
Tel: +52 72 2275 4200

We reserve the right to make technical changes. The data correspond to the technical state at the time of printing.  
© 2015 Parker Hannifin Corporation.  
All rights reserved.



### EMEA Product Information Centre

Free phone: 00 800 27 27 5374

(from AT, BE, CH, CZ, DE, DK, EE, ES, FI, FR, IE, IL, IS, IT, LU, MT, NL, NO, PL, PT, RU, SE, SK, UK, ZA)

### US Product Information Centre

Toll-free number: 1-800-27 27 537

www.parker.com

Your local authorized Parker distributor