



music . anywhere . everywhere



# Doubleblaster User Manual

# Introduction:

Before using your BOOMPODS™ speaker for the first time, please take a few moments to read through the user manual.



1 - Power on/off

2 - Micro USB

3 - LED

4 - Speaker

# **Bluetooth Operation:**

When using with Bluetooth for the first time, please pair the speaker with your mobile phone as follows:

- 1. Activate your phone's Bluetooth function and then enter Bluetooth device's searching mode.
- 2. Switch the ON/OFF button On to activate Bluetooth function.
- 3. The LED will flash alternately red and blue and a beep will indicate that the Bluetooth function has been successfully activated.
- 4. Your mobile phone will find a new Bluetooth device named "DOUBLEBLASTER" Please connect this device to finish the pairing and a beep will indicate that the Bluetooth speaker has been connected successfully.
- 5. Please adjust the sound to a moderate volume and enjoy the music.



# Wired Operation:

1. Connect the the \$3.5mm line-in cable to your audio source and the micro USB to your BOOMPODS speaker. 2. Turn ON and Play your music.

To charge, connect the USB <sup>™</sup>cable directly to a PC, Laptop or mains USB charger. The LED on your BOOMPODS speaker will turn red whilst charging. The LED will turn turn off when fully charged. The BOOMPODS speaker can be used while being charged.

### Package Contents:

- 1 x BOOMPODS speaker. 1 x Micro USB, 3.5mm audio and standard USB cable.
- 1 x User manual.

### **Technical Details:**

- Power supply: DC 5V
  Output power: 2W (1 kHz, THD10%)
  Frequency: 120HZ-15000HZ
  Speaker: X2 OD40mm 4 OHM 2W
- Bluetooth range: open air 10mLi-ion: 3.7V 35mm\*18mm\*5.8mm (400mA)
- SNR: 65dB
- Bluetooth version: Bluetooth 2.1

### General Guidelines:

Keep away from high temperature or prolonged exposure to direct sunlight. Avoid contact with liquids.

Do not insert any conductive objects into the sound box.

Do not disassemble.

Do not drop the product.

Keep out of reach of children.

Your BOOMPODS™ product is guaranteed against any defects in material or workmanship for one full year from the date of original purchase providing it has not been disassembled and it has not suffered accidental damage such as a knock or immersion in water, etc.

The device must be used in accordance with the user manual. The warranty is subject to presentation of the original invoice or receipt from the retailer and does not apply to normal wear and tear or to any device that has been misused or tampered with. It should be returned to the local service centre, the service centre will not bear any shipping cost of the returned item.

Please check www.boompods.com for your local service centre.







