

security labs

SLM446 System Quick Start Guide

Prior to connecting and operating the SLM446 Surveillance System, please read this quick start guide carefully. Refer to the individual user's manual included with the DVR for detailed operation.

Camera Setup and Connection

- 1) Remove all individual components and accessories from their packaging.
- 2) Using the included mounting hardware, install each of the cameras as desired. The (8) cameras supplied are weatherproof and may be used indoor or out. Do NOT submerge these cameras. Be aware of any existing utilities lines (electric, gas, water, etc) in the camera mounting area. Placed the cameras under an eave or other protective area when mounting outdoors.
- 3) To connect the cameras to the DVR:
 - Connect the video/power cable (supplied) to each camera. The BNC connection will supply video to the DVR, the DC plug will supply power to the camera.
 - Connect the BNC plug on the other end of the video/power cable to one of the video inputs on the DVR.
 - Connect the 2.1mm power jack and power supply as shown in the diagram. Do not attempt to power other accessories or equipment not included in this system. If accessory items are added to the system, use the power adapters that came with the accessory.
 - Repeat for all cameras.
- 4) Connect the VIDEO OUT or the VGA video terminal on the DVR to the appropriate video in connection on your monitor or TV.
- 5) Connect power to the DVR with the power supply as shown in the diagram.
- 6) Set up the DVR operation menu according to desired recording requirements.

THE MANUFACTURER DOES NOT ASSUME LIABILITY FOR ANY VIOLATION OF PRIVACY FROM ILLEGAL RECORDINGS OR MONITORING MADE ON OR FROM THIS UNIT. THE USER/OWNER ASSUMES FULL LIABILITY FOR ANY AND ALL RECORDINGS MADE FROM THIS UNIT IN A SECURITY OR SURVEILLANCE OPERATION OR IN ANY OTHER USE. THE MANUFACTURER IS NOT RESPONSIBLE FOR RECORDINGS THAT VIOLATE LAWS OR THAT MAY PROVE OFFENSIVE OR TEND TO INCRIMINATE ANOTHER INDIVIDUAL. LOCAL, STATE, AND FEDERAL LAWS MUST BE OBSERVED REGARDING ALL RECORDINGS.

Security Labs Customer Support Hotline 1-800-774-0284




15540 Herriman Blvd. Noblesville, IN 46060 www.security-labs.com

SLM446 System Connection Diagram

SLC-1056 Cameras




SLC-1054 Cameras

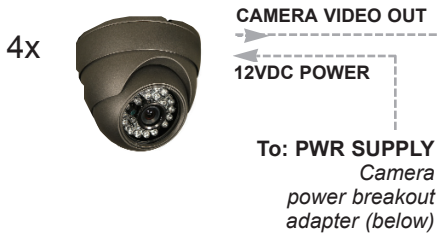


Monitor or TV (not included)

NOTE: Use the DVR VIDEO OUT -or- the VGA VIDEO OUT for a connection to the monitor. Do not use them simultaneously

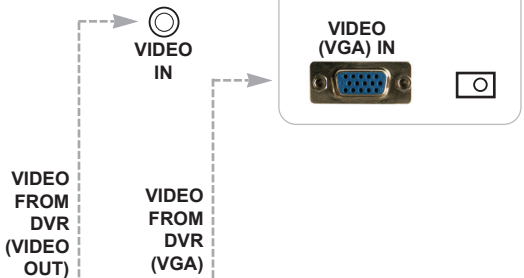


NOTE:
Cameras can connect to any open video input on the DVR

TO BROAD BAND ROUTER CONNECTION

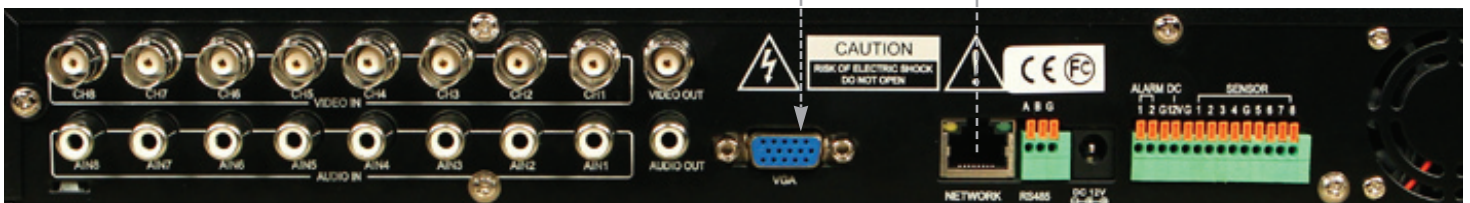

DVR BACK PANEL

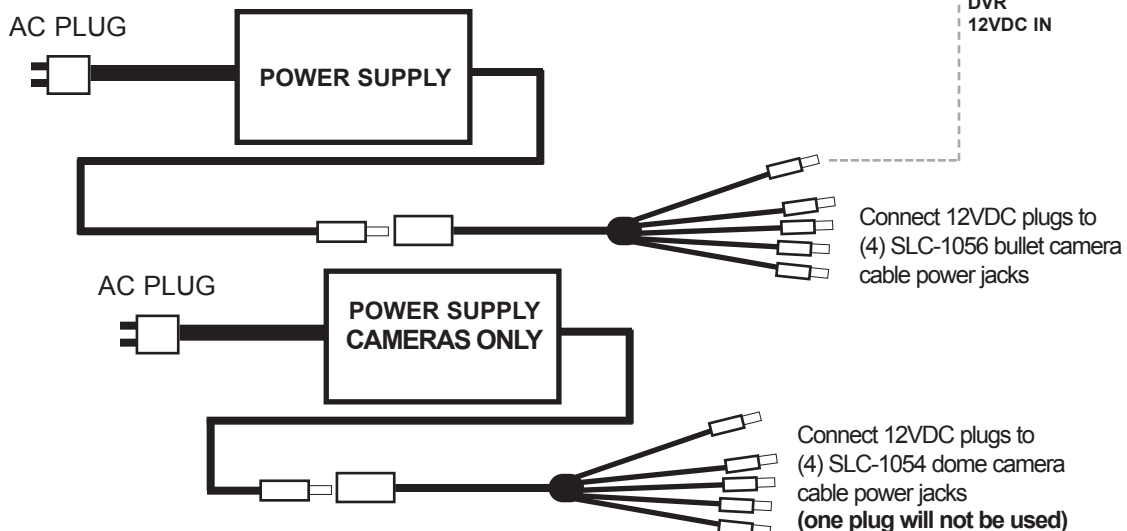

DO NOT USE THE POWER SUPPLY TO POWER EQUIPMENT NOT INCLUDED IN SYSTEM