

### Manufacturer's Limited Warranty

Manufacturer warrants all Covert Video and Sleuth Gear Hidden Video Products (Product) assembled and sold by Manufacturer to be free of defects in material and workmanship, subject to the following conditions. The duration of Manufacturer's warranty with respect to the Product is limited to one (1) year from the date of sale to the original consumer purchaser only for Products delivered within the fifty (50) states of the United States, District of Columbia, or the possessions and territories of the United States

**No other express warranties are made with respect to any Product. All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited to the warranty period set forth above. This warranty is not transferable and applies only to the original consumer purchaser of the Product.**

Manufacturer will, as its sole obligation under this warranty, replace or repair, at its option, any Product that does not conform to this warranty. Under no circumstances will the Manufacturer issue credit or give a refund for Product covered by this warranty. Furthermore, under no circumstances will Manufacturer be liable for any incidental or consequential damages under this warranty or any implied warranties.

**What Is Not Covered.** This limited warranty does not cover Products that in Manufacturer's judgment have damage resulting from any (i) deviation from Manufacturer's operating instructions as printed in Manufacturer's catalog or on any packaging, labels or other literature provided with a Product, (ii) installation of a Product in a manner which is inconsistent with Manufacturer's written instructions, (iii) alteration, modification of or tempering with a Product, (iv) misuse, (v) neglect, (vi) abuse, (vii) accident, (viii) power surge, static electricity or other electrical discharge, (ix) normal wear and tear, (x) commercial use, (xi) service by anyone other than a Manufacturer authorized repair facility, or (xii) other improper application, installation or operation of the Product. Or, (xiii) have been purchased from inventory clearance or liquidation sales or other sales in which Manufacturer expressly disclaims its warranty obligation pertaining to the Product.

**How you (the Customer) can get service:** To obtain warranty service during the warranty period, you must return the defective Product with the original receipt to the original place of purchase. Contact them for return instructions.

If warranty service is needed at any time during the warranty period, the purchaser will be required to furnish a sales receipt/proof of purchase indicating the date of purchase, amount paid and place of purchase. Customers who fail to provide such proof of purchase will be charged for the repair of any Product.

**How state law relates to the warranty:** Some states do not allow limitations on how long implied warranties last, or the exclusion or the limitation of incidental or consequential damages. So the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights that may vary from state to state.

**NO PERSON IS AUTHORIZED BY MANUFACTURER TO MODIFY OR ADD TO THIS LIMITED WARRANTY.**

For warranty information on Products delivered outside the United States please contact the original place of purchase.

IT IS THE USER'S RESPONSIBILITY TO ENSURE THAT THIS EQUIPMENT IS USED IN ACCORDANCE WITH THE LAW(S) OF THE JURISDICTION IN WHICH THIS EQUIPMENT IS UTILIZED.

DO NOT ATTEMPT TO RETURN PRODUCT TO ORIGINAL MANUFACTURER, AS THIS PRODUCT HAS BEEN MODIFIED AND IS NO LONGER SUBJECT TO ORIGINAL MANUFACTURER'S WARRANTY. IN THE CASE OF A DEFECTIVE PRODUCT, CONTACT PLACE OF PURCHASE FOR RETURN PROCEDURE.

THIS EQUIPMENT HAS BEEN TESTED AND HAS BEEN FOUND TO BE IN COMPLIANCE WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTIONS AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT USES, GENERATES AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

Part 15 Low Power:

ANY CHANGES OR MODIFICATIONS TO THIS EQUIPMENT WITHOUT THE EXPRESS AUTHORIZATION OF THE MANUFACTURER COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT. (RULE 15.21 OF THE FCC)

DIGITAL WIRELESS  
OSCILATING FAN  
COLOR CAMERA  
QUAD VIEW  
REMOTE VIEW  
WIN 7 COMPATIBLE



This Digital Hidden Camera includes a receiver with Remote View, which allows you to stream your wireless signal over the internet, so you can remotely view your video feed anywhere in the world!

**Please follow the set up guide to ensure software is properly installed and your new Digital Hidden Camera works correctly.**

**Easy 3 steps to see the Live View remotely:**

**Step 1.** Install the bundled enclosed software ASP4 on PC, and change the Log in User Name / Password in " Setting ", otherwise the User Name & Password will remain as default.



\*\* Click OK, the User Name & Password information will upload to server.

System Setup	
OSD MENU	Description
- AV Output (CW1106 only)	Press   to select item, and press  to change the option. Press  to confirm and exit the menu.
- Video Out	
- LCD	
- TV-out NTSC	
- TV-out PAL	
- Audio Out	
- Speaker Out (Default setting)	
- Line Out	
- Channel Sequence Time:	
- 05 ~ 30 sec.	
- Factory Default:	Default setting: 5 seconds.
- Yes	
- Cancel	
- Firmware Version	
- Vxxxx.xx	

Brightness Setup (CW1106 Only)	
OSD MENU	Description
Level 6	To adjust the Brightness for LCD monitor, Level 6 is the brightest. Press   to select, and press  to confirm.
Level 5	
Level 4	
Level 3	
Level 2	
Level 1	

Peripheral Setup	
OSD MENU	Description
- Buzzer Setup - Video Loss - ON - OFF - Motion Detect - ON - OFF - Buzzer Duration - 02 ~ 10 sec  - Display Setup (TV-out only) - Left Pos - Right Pos - Up Pos - Down Pos	Press  or  to change Buzzer ON / OFF. Default setting is ON.  To setup the Buzzer beep duration time. Default setting: 2 seconds.  To adjust the display position for TV Out; press  to move.

 
System Setup	
OSD MENU	Description
- Date/Time Setup - Display Format - YYYY-MM-DD - MM-DD-YYYY - DD-MM-YYYY - Time Format - 24 H - 12 H - YEAR - MONTH - DAY - HOUR - MINUTE - SECOND	Press   to select item, and press  to change the format.  Press Number keys to setup the Date/Time directly.

**Step 2.** Plug-in receiver USB, Remote view web link will display on ASP4 when live view.



- \*\* This remote view web link will also show on the setting page when un-plug USB.
- \*\* <http://www.ez-see.net/12345678> Unique ID code (8 digit), each Rx device has its own ID code. User needs to key in www.ez-see.net/ and this ID code on IE browser to enter Remote View Log-in page!

**Step 3.** Key in the remote view web link on remote PC IE browser (e.g. <http://www.ez-see.net/12345678>), log in your account on remote PC IE browser, sees the Live View! (\*Remark: currently IE is the only PC web browser supported for remote viewing.)  
PC log-in page:

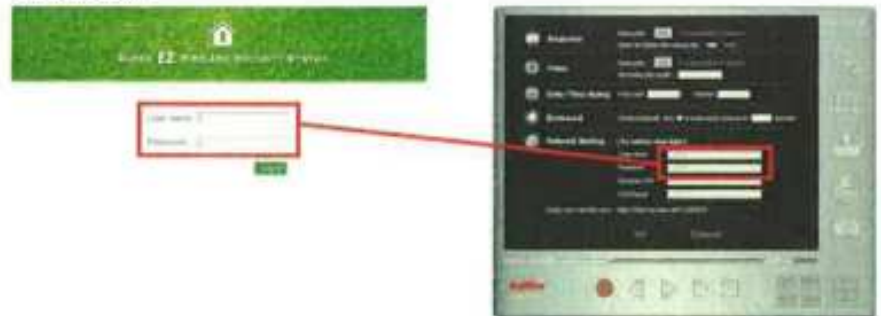

## ASP4 (PC Player) User's Interface



Player Function Button

Software Version

Playback Control Bar

Display Mode

	System Setting		Recording Mode
	Open file, to search the recording files		Network ON / OFF (for remote view)
	Snapshot, to save JPG picture		CH1 Full screen display
	CH2 Full screen display		CH3 Full screen display
	CH4 Full screen display		Quad-View display
	Manual recording during live view & backup files during playback		Backwards
	Pause		Forwards
	Stop		Play

## OSD Introduction



1. Press to enter MAIN MENU
2. Press to select item
3. Press to enter the selected item
4. Press to get back to live view
5. Press to get back to last page

- Recording Setup
- Peripheral Setup
- System Setup
- Brightness (monitor unit only)

### - Schedule Setup

- Setup Continuous recording or Motion Detection recording Mode in a week.
- (Default Setting: Motion Detection recording)



Press to change the recording mode; exit this option to save the schedule.

### - Audio Record from

- CH 1 (Default setting)
- CH 2
- CH 3
- CH 4

To choose the audio source in Quad View during Recording / Live view. To adjust the speaker volume, press or on the remote controller.

### - SD Information

 
 
- Total: GB
- Remain: GB
- Full stop or Overwrite (Default setting: Overwrite)

To choose SD method with Full stop or Overwrite, press or on the remote controller.

### Format SD Card

- OK
- Close

# IR Remote Control Instruction

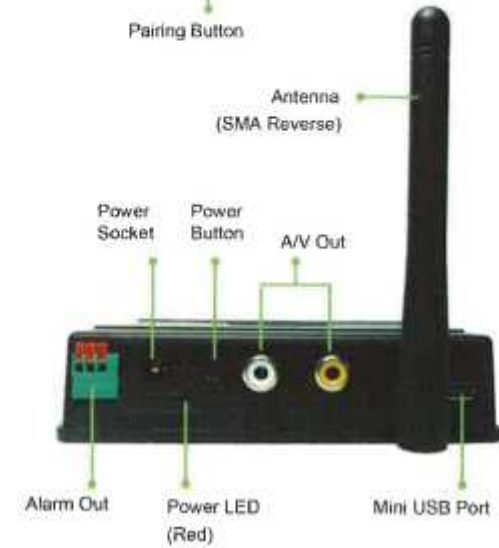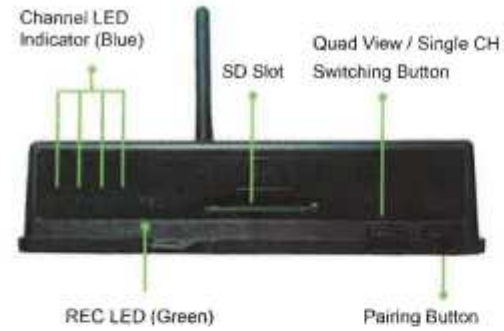

Button	Function	Description
	Power	
	Playback	Press the button to get to the playback menu. During playback, press the button to pause, press again to continue.
	Panic Record	Start to record manually. Press again to cancel recording mode.
	QUAD	Quad display mode, only on available models
	SEQUENCE	Auto sequence display mode
	MENU	Menu
	CH1	Channel 1 & Number 1 & punctuation marks * , . *
	CH2	Channel 2 & Number 2 & "A B C"
	CH3	Channel 3 & Number 3 & "D E F"
	CH4	Channel 4 & Number 4 & "G H I"

Button	Function	Description
	Numbers	Numbers 5 to 0, English characters, and punctuation marks * , . *
	Clear	
	Return	Return to last page
	Confirm	Enter
	Up / Down / Right / Left	
	Mute	Key sound off
	Lock	Key Lock

 


## 1. How to Pair:



 
Select a channel on the Receiver (use remote control), press the pairing button until the channel LED (blue) is flashing.

Press the pairing button on the transmitter. As shown in diagram

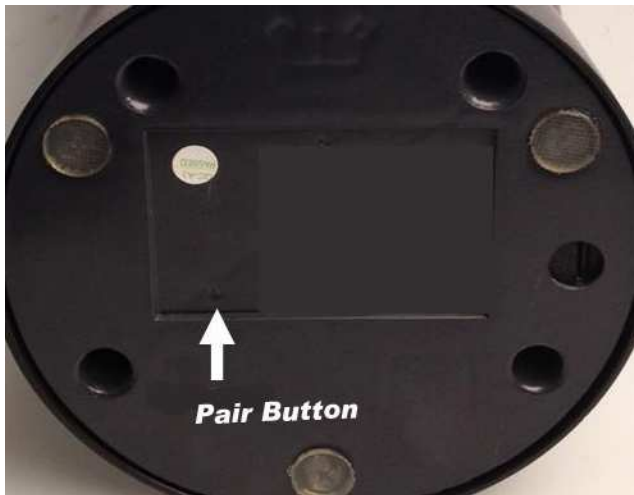





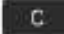


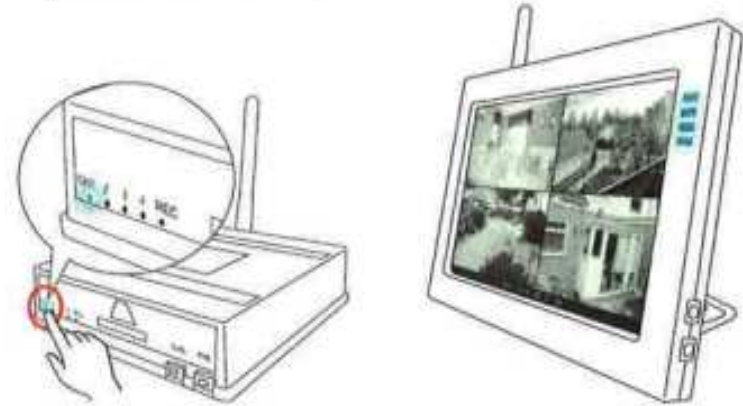
NOTE: To pair the receiver and transmitter, press and hold the pairing buttons on the item and receiver simultaneously. Once paired, the LCD screen will move to the next camera for pairing. If you only have one camera to pair, use the toggle button to move through the cameras on the LCD screen to get back to the camera just paired for viewing.

After pairing is completed and successful, the Channel LED (blue) on Receiver will flash rapidly, and the image will show on the Monitor.

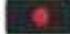

- A Receiver is able to be paired up to 4 different Transmitters, and to receive image from 4 Transmitters simultaneously.

1. Once the unit is powered on with SD card inserted, recording is factory preset to motion detection.
  - It can be reset as continuous recording, set through OSD menu.
  - For panic recording, please press  on the remote control.
2. Press  on the remote control to go to playback menu.
3. For QUAD units, press key  +  on remote control to turn off the LED indication; press  +  to turn on.
4. Press  +  on remote controller to turn off the LCD monitor, press any key to turn on.
5. There is 10 seconds timer countdown to start recording, during count down, the remote control will not be functional
6. Plug the receiver USB into the video will stream to PC and can be viewed / recorded with bundled ASP4 software on PC directly. After streaming the video to PC, the recording setup on receiver will not function.
  - The PC Operation System required Windows XP(SP3) or above.
  - Hardware Environment: CPU P4 2.0G / RAM 2GB or above.
7. The settings on ASP4 can not be applied on Receiver DVR and vice versa.
8. Remote View function is supported by bundled ASP4 software.