



HX40B Series Laser Carving Machine

User's Manual

1. Technical Parameters

- a) Power
AC220V/50HZ
- b) Operation Area (mm)
HX40B: 210*205
- c) Resolution
0.0254mm

2. Installation Instruction

- a) Lay the laser carving machine horizontally on a table;
- b) Install the exhausting fan and pipes;
- c) Install the cooling water pump, and then connect the water pipe. The water within the system should be pure water which has no impurity;
- d) Remove the fixture of laser head and beam track. After pushing the small dolly and large dolly gently with hand, they should move smoothly without any disturbance;
- e) Connect the exhausting fan, cooling pump, power of laser carving machine, and install the ground wire;
- f) Start the pump. After the cooling water could properly circulate, start the exhausting fan, and then turn on the switch of laser carving machine, and the laser head should reset automatically;
- g) Turn off the power of laser carving machine, and connect one end of the printing wire to the DB jack of laser carving machine, the other end to the parallel interface of the computer (install encryption dongle first if needed by software);
- h) Install software (refer to software instructions for detailed procedure).

3. Operation Instruction

- a) Instruction for control panel
 - Power Switch: used for turn on or off the laser carving machine;
 - Electric current indicator: used for indicating the value of carving current;
 - Current adjustment: the potentiometer used for adjusting the carving current;
 - Lighting switch: used for switching on or off the light inside the laser carving machine;
 - Laser Switch: used for controlling the radiating status of laser, and it should be pushed when carving;
 - Laser test: used generally for adjusting light path; the laser should radiate after pushing down the switch, and then adjust the potentiometer to modify the value of carving current.
- b) The proper start-up sequence should be: first start the cooling pump, and then

turn on the laser carving machine, and at last turn on the exhausting fan when carving the designed pattern.

- c) Start the layout software of carving system, and design the needed picture, set the carving location (refer to software instruction for detailed procedure), fix the carving stuff to the clamping device, and then everything is ready for carving.
- d) The carving current should be adjusted according to the technical requirements for different carving stuff.

4. Notice

- a) Laser carving machine should be placed on a table horizontally. Tilting is prohibited..
- b) Loosen the screws below the crossbeam before turning on the machine, then push the fixed ring to a suitable position to avoid hitting the beam.
- c) When moving laser carving machine, fix large dolly and small dolly first to avoid intensive shaking for the equipment;
- d) Exhausting pipe should be installed to outdoor place where it has the minimum influence to environment.
- e) If the machine is used for the first time or it has just been moved, make sure to check if the high voltage wire has fallen off to avoid electric shock to the operator.
- f) Since high voltage exists inside the laser carving machine, to avoid electric shock, no one other than professional technical staff should open the cover for repairing.
- g) The AC 220V/50Hz power source should be used for laser carving machine, exhausting fan and cooling pump;
- h) The cover of carving machine should be well connected to ground, and the ground resistance should be less than 4 Ω ;
- i) When the laser is radiating, be sure to avoid laser damage to people, especially to eyes.
- j) Prevent water from entering the machine or operation environment too moist;
- k) Disassembling components when the machine is power on is strictly prohibited.
- l) The internal lens should be cleaned in time using anhydrous alcohol or acetone, and it should be cleaned and handled gently;
- m) Make sure to keep the cooling water circulate properly and the water should be clean to avoid broke of laser tube because of bad cooling;
- n) Pay attention to avoid broke of laser tube because of icing of cooling water, over-heat, incrustation or jam caused by junk, bumping etc.
- o) Pay attention to avoid corrosion and damage of components inside the machine cabinet caused by smog, too much moisture etc.

5. Troubleshooting

- a) The laser head does not function after the carving output order is sent
 - i. Make sure if the laser carving machine is online;
 - ii. Check if the printing wire has fell off;
 - iii. The printing interface has been locked, and it could be resolved by shutting down both laser carving machine and the PC, and then restart the computer;
 - iv. Check if the software needs encryption dongle to be installed.
 - v. Check if the 24VDC indicator of the carving main board is lighted up; if not, the power of main board has not provided 24VDC power.
- b) No laser when carving
 - i. Check if the laser switch on the operation panel has been pushed down;
 - ii. Check if the current adjustment knob on the is operation panel in the minimum position;
 - iii. Check if the cooling water is circulating properly;
 - iv. Check if the light path is proper;
 - v. Check if the laser tube is damaged or exceeds its service life;
 - vi. Laser power board malfunction, please replace;
 - vii. Check if flyback transformer line has fallen off.
- c) When carving, the picture is normal, but the quality is not good
 - i. Check if the carving plane coincides with focus;
 - ii. Check if the light path is proper;
 - iii. Check if the laser tube is aging;
 - iv. Check if the service life of the plotter is reaching its end.
- d) When small dolly and large dolly reach the end, abnormal sound appears
 - i. Wrong connection of stepping motor;
 - ii. Bad contact of inserting parts on the optic-control switch or optic board;
 - iii. Tilting or dropping of optic-control switch countercheck;
 - iv. Bad contact of inserting parts on the carving main board or the driving circuit of motor could not function properly.
- e) The machine could not reset after it has been started or it could not operate properly when carving
 - i. The wire of motor has fallen off;
 - ii. The flat wire has broken or inserting part is failure;
 - iii. The main board has not provided 24VDC or 5VDC power;
 - iv. The main board of carving machine malfunctions, replace it with a new one;
 - v. The printing interface has been locked, and it could be resolved by shutting down both laser carving machine and the PC, and then restart the computer.

一. Installation of USB driver

After installation of the mainboard, connecting computer with USB cable; when you turn on the machine for the first time, the computer will examine USB interface automatically, and then indicate installation process, now you can insert the USB driver to CD-ROM, and operate following indication until finishing it; one computer only needs to be installed once, and later needn't to be installed any more.

After equipment installation and computer connection, turning on the machine, enter "control panel"—"system"—"hardware"—"device management"—"USB", if there is "PHILPS LPC214X USB" showing under the "USB", then it indicates that the driver is finished installation, and now you can use it.

二. Explain of documents memory

Nine files can be stored on SD card in all which is divided into nine storage roomage. "Export files" can be chosen from file1~9, for example, every memory for 128MSD is $128\text{M}/9 \approx 14\text{M}$, when it is more than 14M, the previous file will occupy the storage roomage of the latter file automatically. Memory for File1 is 128M, for File2 is $128\text{M} \times 8/9$, for File3 is $128\text{M} \times 7/9$, and the rest may be deduced by analogy.

If memory of 128M is not enough, then you can change another SD card with more memory.

Note: The actual SD memory is a little less than standard memory.

三. Explain of usual troubles

1. the machine doesn't reset after it is turned on:
 - (1) whether the mainboard is turned on, 5V has LED indicator on the mainboard.
 - (2)V8.0: whether power cables of 5V and 24V are connected well, they should be connected to the same port.
 - (3) when you turn on the machine, it initializes USB interface, SD card first, then reset, and now you can check whether SD card is inserted well, you can pull it off and then insert again.
 - (4) whether JP2 is in the correct position.
 - (5) whether connection of J6 is correct.
 - (6) others
2. resetting is normal, open NewlyDraw software, press up and down, right and left keys, USB interface connection is wrong, it shows "logic port 1 fails to send data":
 - (1) troubles with USB connection
 - (2) failure of USB driver installation.
3. files can't be stored: attention that whether write-protect on SD card is under LOCK list.