

IMPORTANT: Pack carefully in original package if possible. We are not responsible for damage incurred in returning items for repair. A letter stating your exact street address, daytime phone number, and the problem you are experiencing should be included. You must also enclose a copy of the original receipt a proof of date of purchase




www.pyleaudio.com

User's Manual



 PSB901

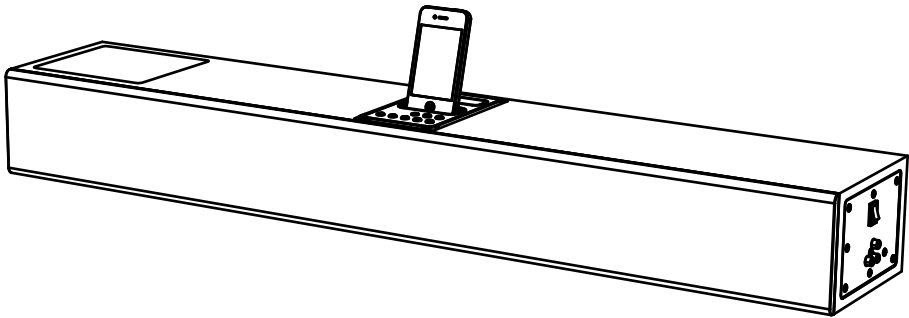


**300W iPod/iPhone 2.1 Soundbar Docking System
with Aux-In and Video Output**

iPhone Docking System

www.pyleaudio.com

 IMPORTANT SAFETY INSTRUCTIONS

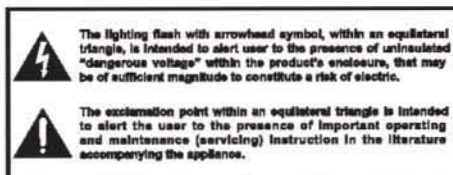

WARNING

USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD

This unit has a long AC cord or other long cord that can easily be tripped on or pulled on, causing injury. Please make sure it is arranged so it will not drape over a tabletop, etc. Where it can be pulled on by children or tripped over accidentally.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide residential protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC NOTICE:

To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. Read these instructions
2. Keep these instructions
3. Heed all warnings
4. Follow all instructions
5. Do not use this apparatus near water
6. Clean only with dry cloth
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

GENERAL SPECIFICATIONS

Power Source of Remote Control:DC --- 3V, 2 x AAA size batteries (Included)

Power Consumption: 300 W

Audio Power:

Woofer 150W

Loud Speaker 75 W x 2

Accessories:

- 1 x Instruction Manual
- 1 x Remote Control
- 2 x "AAA" size batteries for remote control
- 1 x 3.5mm mini plug audio connection cable

TROUBLESHOOTING GUIDE

Check the follows before requesting service

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	AC Plug not plugged into wall outlet	Plug it to the wall outlet properly
	POWER Switch in OFF position	Press the POWER Switch on the rear of unit to ON position
	The unit in standby mode (STANDBY Indicator is light)	Press the STANDBY Button on the unit or Remote Control to turn on the unit from standby mode. One of AUX 1; AUX 2; iPod/iPhone Indicator will light
No Sound	Volume in minimum position	Rise volume level by press the VOL (Volume) + Button
	The connected device is not in playback mode	Plays the music/movie in the connected device
	Sound output of the connected device weak	Rise the volume level of the connected device
	Input source incorrect	Set the Input source to AUX 1, AUX 2 or iPod/iPhone as the connecting
Sound distortion	Volume level too high	Reduce the volume level by press the VOL (Volume) - Button
	Bass level too high	Reduce the bass level by press the BASS - Button
	Volume level of the connected device too high	Reduce the volume level of the connected device
	EQ of the connected device was set to super bass or others mode	Set the EQ of the connected device to normal
No video output	The connected iPod/iPhone is not set to TV Out mode	Set the connected iPod/iPhone to TV OUT Mode (For details, please refer to the iPod/iPhone's User's Manual)
Remote not functioning		Point the remote control to the remote sensor on the unit within 16 feet, +/- 30 degree
	The batteries in the remote control are used up	Replace by new batteries

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

15. The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

16. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

17. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

18. Power Source
The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

 
19. Power Lines
An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

20. Overloading
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

21. Object and liquid entry
Never push objects of any kind into this product through as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

22. Outdoor antenna grounding
If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.

Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antennadischARGE product, connection to grounding electrodes and requirements for the grounding electrodes.

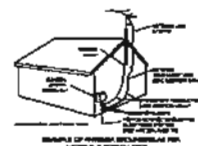

23. Service
Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

24. Replacement parts
When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire or electric shock or other hazards.

 
 
25. Safety check
Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

26. Damage requiring service
Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
a. When the power-supply cord or plug is damaged.
b. If liquid has been spilled or objects have fallen into the product.
c. If the product has been exposed to rain or water.
d. If the product does not operate normally by following the operating instructions.
Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will and require extensive work by a qualified technician to restore the product to its normal operation.
e. If the product has been dropped or the cabinet has been damaged.
f. When the product exhibits a distinct change in performance - this indicates a need for service.

27. Note to CATV system installer
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

LOCATION OF CONTROLS

1. VIDEO OUT Jack
2. AUX 1 Input Jacks
3. POWER ON/OFF Switch
4. AUX 2 (Input) Jack
5. VOL (Volume) – Button
6. VOL (Volume) + Button
7. iPod / iPhone Indicator
8. AUX 2 Indicator
9. AUX 1 Indicator
10. STANDBY Indicator
11. ⏻ Standby ON/OFF Button
12. ⏮ (Skip/Fast Search Backward) Button
13. ⏸ (Play/Pause) Button
14. ⏭ (Skip/Fast Search Forward) Button
15. SOURCE Button

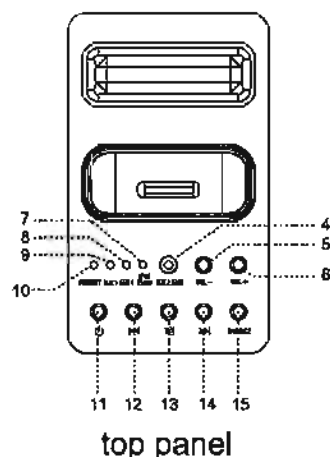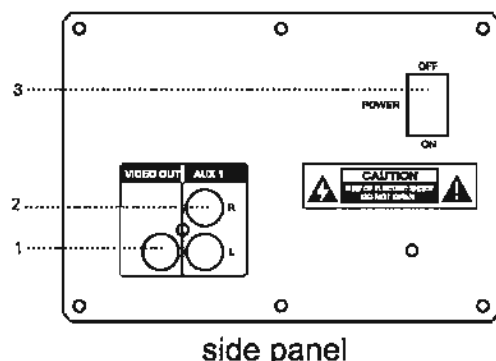

OPERATION

 
1. Press the POWER Switch on the rear of unit to ON position to power on the unit. The STANDBY Indicator will turn on.
2. Press the STANDBY Button on the unit or Remote Control to turn the unit on from standby mode. The STANDBY Indicator will turn off but the selected input source's indicator will turn on.
3. Presses the SOURCE Button on the unit or Remote Control repeatedly to select the input source as the connections to AUX 1 (AUX 1 Indicator will turn on); AUX 2 (AUX 2 Indicator will turn on) or iPod/iPhone (iPod/iPhone Indicator will turn on).
4. Press the VOL (Volume) +/- Buttons to adjust volume level.
5. Press the BASS +/- Buttons on the Remote Control to increase/decrease the bass level.
6. Press the MUTE Button on the Remote Control to turn off the sound temporary, press again to turn it back.
7. When finished, press the STANDBY Button on the unit or Remote Control to turn the unit off (standby mode).
8. If the unit is not used for a long period of time, turn off unit using rear master power switch. All top ready lights will go off.

NOTES

1. When iPod or iPhone connected, it will recharge automatically.
2. During playback the music/video files from iPod or iPhone:
 - A. Presses the Skip/Fast Search ⏭ or ⏮ Buttons repeatedly to skip the tracks forward/backward.
 - B. Press and hold the Skip/Fast Search ⏭ or ⏮ to fast searching the specific section of the track forward/backward.
 - C. Presses the REPEAT Button on the Remote Control to set repeat modes, correspond Icons will occur on the connected iPod/iPhone's display.
 - D. Press the RANDOM Button on the Remote Control to turn the random playback mode on or off , correspond Icons will occur on the connected iPod/iPhone's display.
 - E. Press the MENU Button on the Remote Control, the setting menu will appear on the connected iPod/iPhone's display. Using the Direction ▲ / ▼; Skip/Fast Search ⏭, ⏮ Buttons to move the cursor within the display, press the ENTER Button to confirmed the selections.


To watching the video files in the connected iPod/iPhone:

1. Connected the external TV to the Video Out Jack on the rear of unit as the figure below (connection cable not included).
2. Set the TV to AV 1 or AV 2 modes as connection.
3. Plug the iPod/iPhone to the iPod/iPhone docking on the top of unit.
4. Press the source button repeatedly until the iPod/iPhone indicator is lighted.
5. Plays the video files in the connected iPod/iPhone as usual (Make sure it is set to TV out. For details, please refer to the iPod/iPhone's User's Manual).

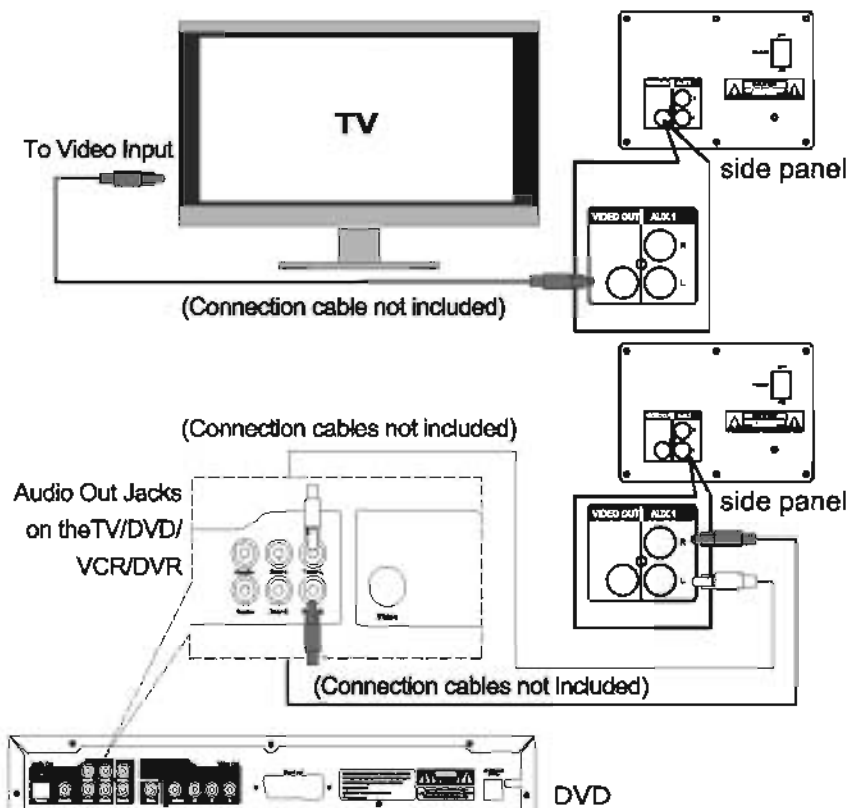

To listening the music from TV; DVD Player; VCR or DVR .

 1. Connected the external TV/DVD/VCR/DVR to the AUX 1 Jack on the rear of unit as the figure above (connection cable not included).
2. Power on the connected external device and plays video/music as usual.
3. Power on the unit, presses the SOURCE Button repeatedly until AUX 1 Indicator is light.

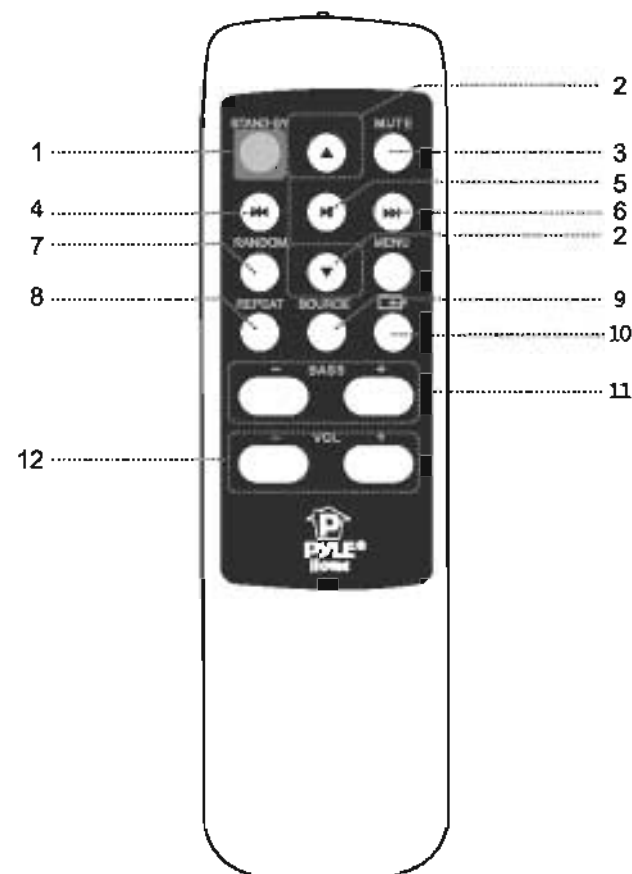


1. STANDBY Button
2. Direction ▲/▼ (Up/Down) Button
3. MUTE Button
4. ⏮ (Skip/Fast Search Backward) Button
5. ⏸ (Play/Pause) Button
6. ⏭ (Skip/Fast Search Forward) Button

7. RANDOM Button
8. REPEAT Button
9. SOURCE Button
10. ⏏ (Enter) Button
11. BASS +/- Button
12. VOL (Volume) +/- Button

BATTERIES INSTALLATION

 1. Slide and lifting the battery door as figure 1 below.
2. Installed 2 (two) AAA size batteries (included) into the battery compartment as the polarity markings inside as figure 2 below.
3. Replace the battery door as figure 3 below.

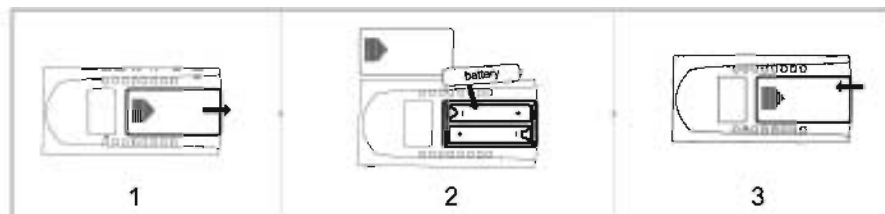

BATTERY PRECAUTIONS:

 
Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
6. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
7. Clean the battery contacts and also those of the device prior to battery installation

EFFECTIVE DISTANCE OF REMOTE TRANSMITTER

NOTES:

- When there is an obstacle between the unit and the transmitter, the transmitter may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote operation may be unstable.

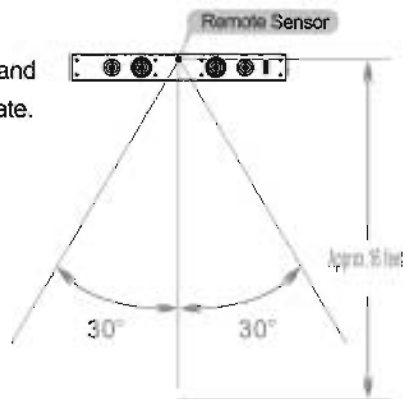

SYSTEM CONNECTIONS

Listening the music from external audio device or iPod/iPhone:

1. Plug the iPod/iPhone to the iPod/iPhone docking. Or, Connect the external audio device such like MP3 Player to the AUX 2 Jack on the top of unit as the figure below:
2. Power on the unit, press the SOURCE Button repeatedly to set to AUX 2 or iPod/iPhone as the connection.
3. Plays the music in the connected audio device or iPod/iPhone as usual.

