

# PTAB750: User Manual

02/07/2013

### In the Box

Tablet, User Manual & Quick Start Guide, USB Cable, AC Adapter, Tablet Stand

### Location of Controls

1. Power Button, 2. Home Button, 3. Back Button, 4. Volume Up, 5. Volume Down, 6. Speaker, 7. Camera, 8. Headset Jack, 9. Display Lock, 10. SD Card Slot, 11. USB Port

### Display Lock

Use the Display Lock to prevent little ones from interrupting videos or interactive books. Slide the switch to the "ON" position as shown below, the tablet's display and buttons (except for volume) will be disabled.

### Basic Operation

#### Charging the battery:

The adapter is not a toy and should be connected to the wall outlet by an adult. Connect the tablet to a wall outlet using the included AC adapter.

#### Power ON/OFF:

Press and hold the **Q** button until the startup screen appears, press and hold the **Q** button until the shutdown screen appears.

#### Unlock (enter) the tablet:

Slide the "Lock icon" to the right.

#### Lock (standby) the tablet:

To lock or unlock the tablet, briefly press the **Q** button. Lock the device to conserve the battery.

### Apps Screen

Access the Apps screen by selecting **Apps** on the top right of the Home screen display, or on the media widget (Home screen 3).

### Home Screens

There are five Home screens that can be accessed by sliding left or right. Home screen 1: Empty Screen for App shortcuts. Home screen 2: Game widget (Main Home screen). Home screen 3: Media widget. Home screen 4: Creativity widget. Home screen 5: Settings widget.

### Placing apps on the Home screen (Creating Shortcuts)

Press & hold an app to place it on Home screen 1.

### Removing shortcuts

Press and hold the app and slide it as shown below.

### Parental Controls

To control the apps that your children have access to, use the tablet's built-in **Parental Controls**. Select "Parental Controls" and create a password.

### Setup the Password

The password can be 4-8 letters/numbers or both and is not case sensitive.

### Restricting Apps

1. Select "Parental Controls Settings". 2. Select "Restricted Apps". 3. Select the apps you'd like to restrict, and select "Save".

### Safe Mode

Safe Mode is a quick way to override your Parental Controls settings. When Safe Mode is "ON" all the apps that have been restricted will not appear on the Apps screen, and the tablet will default to the Safe Browser.

### Wi-Fi Setup

1. To set up Wi-Fi select "Parental Control". 2. Enter the password. 3. Select "Wi-Fi Setup". 4. Turn Wi-Fi on and select a network. 5. If required, enter the correct password and select "Connect".

### Safe Browser

Completely control your child's web environment using the Safe Browser. 1. Select Home screen 4 Creativity Widget. 2. Select the **W** icon on the bottom right of the screen, and select "Safe Browser".

### App Shop for Kids

The App Shop is a place where children can safely browse & download carefully curated, kid-safe content. Select **App Shop** on the Apps screen, and create an account.

### Free Play

A unique way to display all the free games available for download on the App Shop using beautiful large icons. Select **Free Play** and follow the instructions to download free apps to the tablet.

### Other App Stores

1. Make sure Safe Mode is OFF, and select "Parental Controls". 2. Enter the password. 3. Select "Download App Stores". 4. Select an app store, and follow the instructions to download and install it on the tablet. 5. Select "Downloads" on the app screen, and select the app you want to install. 6. Select "Install" to install the app. 7. The app store appears on the Apps screen.

### Transferring & Managing Files

#### Conserving Internal Memory!

It is strongly recommended to purchase and install an SD card before transferring or downloading media files.

#### Inserting an SD card (not included):

1. Insert the card face up into the card slot until it clicks and locks into place. 2. To access the SD card, select "File Manager" from the Apps screen.

#### Unmount & remove the SD card:

1. Open "Settings". 2. Select "Storage". 3. Select "Unmount SD card". 4. It is now safe to remove the card from the tablet. 5. To remove the card, gently push it until it pops out.

#### Connecting the tablet to a PC or Mac:

1. Connect the included USB cable to the "USB port" of the tablet and the USB port of the computer. 2. The "USB connected" screen appears, select "Turn on USB storage". 3. The "Autoplay" window appears on your computer's display. Select "INTERNAL". 4. Copy media files from your computer to the SD card.

### Browsing Files

1. Select "Turn off USB storage" on the tablet to disconnect it from the computer. 2. Select a file or folder. 3. If you select "Copy" or "Move", press and hold on a folder and select "Paste into folder" to copy the file.

### Settings

1. Select "Settings". 2. Select "Settings app". 3. Select "Online Help".

### Online Help

Select "Online Help" to access technical support and product information.

### Reset & Restore

In the event that the tablet freezes or does not function properly, try correcting the problem by resetting. Hold the Power button down for ten screen shuts off. Wait 10 seconds and Power ON the tablet.

### Specifications, Care & Safety Precautions

**CAUTION:** Not recommended for children under 3 years of age. Do not use household cleaners, solvents, alcohol or abrasives to clean the device. Do not use the tablet for prolonged periods in direct sunlight. Do not use the tablet for prolonged periods in direct sunlight. Do not use the tablet for prolonged periods in direct sunlight.

### Legal Information

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits. This product is not intended for use in the United States. This product is not intended for use in the United States.

### Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER. This product (including any accessories included in the original packaging) is warranted by the manufacturer for a limited period of time. This warranty is void if the product is used for any purpose other than that intended by the manufacturer.

FRONT

BACK