

REMINGTON®
style therapy



WET2
straight!
slim

S7902





120 - 240V
MULTI VOLTAGE



5yr

REMINGTON®

WET2 straight! slim

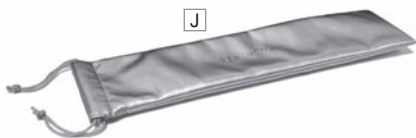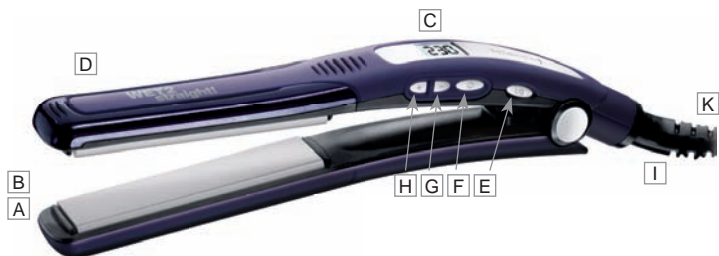



ENGLISH

Thank you for buying your new Remington® product. Before use, please read the instructions carefully, and keep them in a safe place for future reference.



PRODUCT FEATURES

- A. Slim plates (110mm longer length plates)
- B. Ceramic plates infused with frizz resistant conditioners specially engineered to last the life of the product.
- C. Digital LCD display 150 – 230°C
- D. Special vents to channel excess water away and allow water to evaporate quickly
- E. On/Off switch
- F. Wet/Dry button
- G. Switch lock function – Set the desired temperature by pressing +/- buttons and lock the switch settings by pressing the ‘-’ button for 2 seconds. A ‘padlock’ symbol will appear on your LCD screen. This will prevent accidentally changing the temperature settings while using the straightener. To unlock the switch settings, press and hold the ‘-’ switch again.
- H. Heat Boost function – automatically sets to the highest temperature.
- I. Automatic safety shut off – Unit will automatically switch itself off if left on after 60 minutes.
- J. Heat proof pouch
- K. 2.5 swivel cord

5 year guarantee



INSTRUCTIONS FOR USE

- ▶ Wash and condition your hair as normal.
- ▶ Towel-dry hair thoroughly, removing all excess water.
- ▶ Comb carefully through your hair, making sure it is free from snags or tangles.
- ▶ Plug in your wet2straight™ and switch it on. The LCD display will light up.
- ▶ Adjust the temperature buttons to suit your preference. When the desired temperature is reached, the LCD will stop flashing and the unit will beep.
- ▶ Divide hair into manageable sections and prepare to straighten the lowest sections of your hair first.
- ▶ Starting at the base of the neck, place a section of hair between the plates, ensuring that the vents top of the straightener are directed away from the face/scalp. Remember: the smaller the sections, better the results.
- ▶ Close the plates and immediately glide the straightener down the section of hair - gently moving from roots to tip.
- ▶ Continue to run the section of hair between the plates until the preferred straightening and drying is achieved. For thicker hair, you may need to go over sections more than once.
- ▶ When styling is complete hold the on/off button too turn the unit off, unplug and allow to cool before storing.



Wet/Dry Setting

- ▶ This straightener can be used on wet or dry hair.

Wet Mode

- ▶ When you turn the straightener on, it will automatically be set to wet mode and default to 200°C – The LCD will be blue.
- ▶ Adjust the temperature using the +/- switches to suit your hair.
- ▶ For best results on wet hair – use straightener on 230°C and be sure to heat up the unit for 10 minutes so that it reaches its optimum temperature.

NOTE: When straightening wet hair you will hear a hissing sound and the unit will steam. This a good thing – it's the sound of excess water in your hair evaporating and it is not harmful to the condition of your hair.

Dry Mode

- ▶ When you want to use straightener on dry hair, press the wet/dry button and the LCD will turn green, the temperature will drop to 180°C
- ▶ Adjust the temperature using the +/- switches to suit your hair.

Recommendation –

150°C-200°C – best to use on fine, damaged or fragile hair

200°C-230°C – best to use on thick, wavy or difficult to manage hair

BETTER RESULTS

Results with wet2straight™ are better than with a normal straightener because the cuticle is not being roughened up by the hairdryer. Instead, it lies flat from wet to dry, leaving hair shiny, smooth and protected.

ENGLISH

DO'S

- ▶ Do ensure vent holes are directed away from face, head or hair.
- ▶ Do make sure hands are dry before using wet2straight™ and don't hold them over the vent holes.
- ▶ Do use wet2straight™ on dry hair if required.
- ▶ Do use wet2straight™ on wet hair - just ensure hair is towel-dried before use.

DON'TS

- ▶ Don't allow dripping wet hair to come in contact with this straightener.
- ▶ Don't use a normal 'dry' straightener on wet hair.
- ▶ Don't be alarmed when you hear a hissing sound and see steam - it's the sound of the excess water. When wet2straight's plates come in contact with towel-dried hair, this is perfectly normal.



IMPORTANT INSTRUCTIONS

- ▶ Due to the extreme heat capabilities of this styler, extra care should be taken when using.
- ▶ Before use, make sure hair is towel-dry and tangle-free. This straightener can also be used on dry hair.
- ▶ The unit has adjustable +/- temperature buttons. Choose lower temperature settings for fragile, bleached or dry/damaged hair. Choose higher temperature settings for thick or difficult to straighten hair.
- ▶ It is very important that the holes in the plates are held away from the face and hair, as the water from the hair will escape through the holes as steam, which is very hot.
- ▶ For shorter hair, place a plastic comb between scalp and styler to avoid touching scalp.
- ▶ Do not leave switched on for more than 30 minutes.
- ▶ Before use, make sure hair is clean, dry and tangle-free.
- ▶ While heating, during use and cooling, place on flat, smooth, heat-resistant surface.
- ▶ Only hold unit at the end of the handle. Ensure the heat protection pad is used in all cases.
- ▶ Do not style too close to scalp, face, ears, neck and skin.
- ▶ Please note regular use of styling products may deteriorate the coating. Wipe clean regularly to maintain performance.
- ▶ Do not use an abrasive cleaning fluid to clean the plates, as damage will occur. Use a soft damp cloth on the unit while unplugged.
- ▶ Do not scratch the surface of the plates as this will deteriorate the effectiveness of the coating.
- ▶ For extra protection and best results, section hair prior to straightening and spray with heat protection spray. Always straighten the lower layers first.



CLEANING AND MAINTENANCE

Ensure the unit is unplugged and cool. Wipe clean any build up of styling products with a damp cloth. Do not use an abrasive cleaning fluid to clean, as damage will occur.

ENGLISH



SAFETY CAUTIONS

WARNING – FOR ADDITIONAL PROTECTION THE INSTALLATION OF A RESIDUAL CURRENT DEVICE (RCD) WITH A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30mA IS ADVISABLE. ASK AN ELECTRICIAN FOR ADVICE.

WARNING – THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM, IT SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.



This product is not suitable for use in bath or shower.

THE STYLER SHOULD BE UNPLUGGED FROM MAINS SUPPLY WHEN NOT IN USE.

- ▶ Do not leave the styler unattended when switched on.
- ▶ Allow the styler to cool down before storage.
- ▶ Do not immerse in water or other liquids.
- ▶ Do not place styler on soft material e.g. carpet, bedding, towels, rugs etc.
- ▶ Always ensure the voltage to be used corresponds to the voltage stated on the unit.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
- ▶ Do not use any attachments with this styler, other than those supplied by Remington®.
- ▶ Avoid allowing any part of the hot plates to contact the face, neck or scalp.
- ▶ Do not wrap the cord around the unit. Check cord regularly for any sign of damage.
- ▶ This product is not intended for commercial or salon use.
- ▶ Damaged cords can be dangerous. If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- ▶ Special tools are required for any examination, adjustment or repair. Unqualified repair work could lead to hazardous conditions for the user.
- ▶ We do not accept responsibility for damage to the product, persons or other items(s), caused by misuse, abuse or non-compliance with these instructions.

ENGLISH



 
WIRING INSTRUCTIONS UK Plugs Only

This product is fitted with a BS1363 plug fused at 13A. If the plug is unsuitable, it should be disconnected and an appropriate plug fitted as detailed below. If it is necessary to replace the plug fuse, use only fuses that are approved to BS1362, rated at 13A. If in doubt consult a qualified electrician.

The wires in the mains lead are coloured in accordance with following code:

BLUE - NEUTRAL

BROWN - LIVE



As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked 'N' or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked 'L' or coloured RED. Never connect either of the wires to the big EARTH terminal marked 'E' or coloured GREEN or GREEN AND YELLOW.



SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase.

This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Center in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.



For further information on recycling see www.remington-europe.com



REMINGTON® SERVICE HOTLINE

United Kingdom

 **+44 0800 212 438 (free call)**

Rayovac Europe Ltd,
Watermans House, Kingsbury Crescent,
The Causeway, Staines, Middlesex,
TW18 3BA, UNITED KINGDOM

www.remington.co.uk



Model No. S7902

09/UK/S7902 Version 03/09 Part No. T22-27898

REMINGTON® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries

VARTA Consumer Batteries GmbH & Co. KGaA

Alfred-Krupp-Str.9

Germany

Germany

www.remington-europe.com

© 2009 SBI

This product is not suitable for use in bath or shower.

