Service Manual



CONTENTS

Technical specification	1-1
Main board	
Circuit diagram2 - 1	2-4
Layout diagram2-5	2 - 6
Panel board	
Circuit diagram	. 3-1
Layout diagram 3 - 2	3-3
Exploded view diagram	4-1
Instruction Manual ····· page	13-23

General

Power Supply: 12V DC (10.5-14.4V), negative ground

Fuse: 15A

Suitable Speaker Impedance: $4-8\Omega$

Aux-In level: 800mV

Audio Section

Maximum Power Output: Mosfet 40W x 4 Channels

Continous Power Output: 22W x 4 RMS

Pre-AMP Output Voltage: 2V Subwoofer Output Voltage: 2V

FM tuner section

Frequency Range: 87.5 - 108MHz

Usable Sensitivity: Better than 15dB at S/N 30dB

AM tuner section

Frequency Range: 522 - 1620KHz

Usable Sensitivity: Better than 45dB at S/N 26dB

USB devices

USB Flash Memory: USB 1.1 & 2.0 Compatible

Memory Card

Support type of memory card: SD/SDHC

About Audio file

USB or memory file system: FAT16, FAT32

MP3/WMA bit rate: 32-320kbps and varible bit rate

MP3 sampling frequencies: 8-48kHz


WMA sampling frequencies: 32kHz, 44.1kHz, 48kHz


ID3 tag v1.0 or later


USB Smart Phone 1A charging


Output Voltage: 5 V DC


Output Current: 1000 mA (1A)

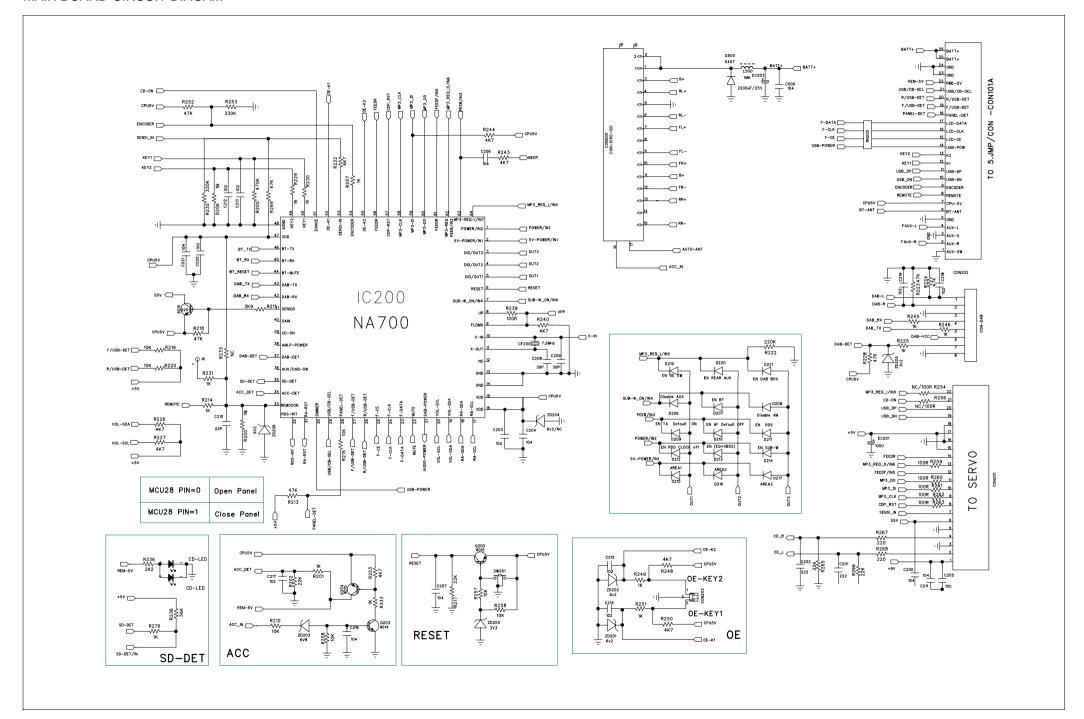


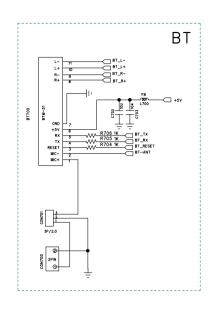


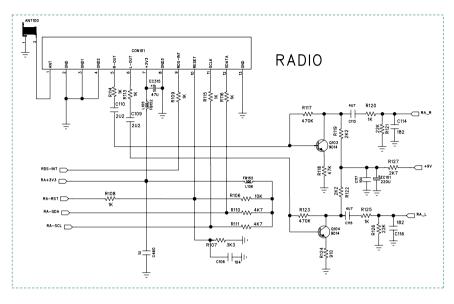


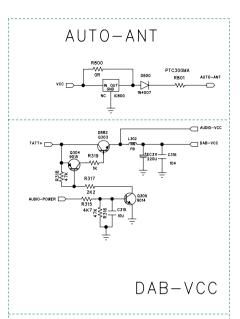


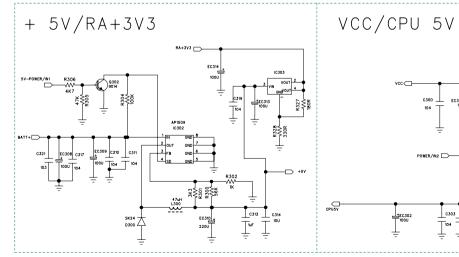


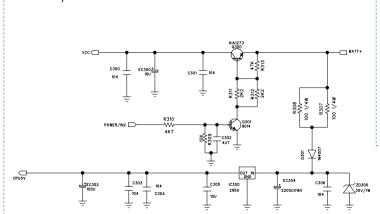


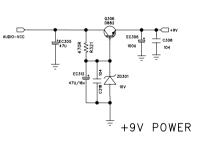


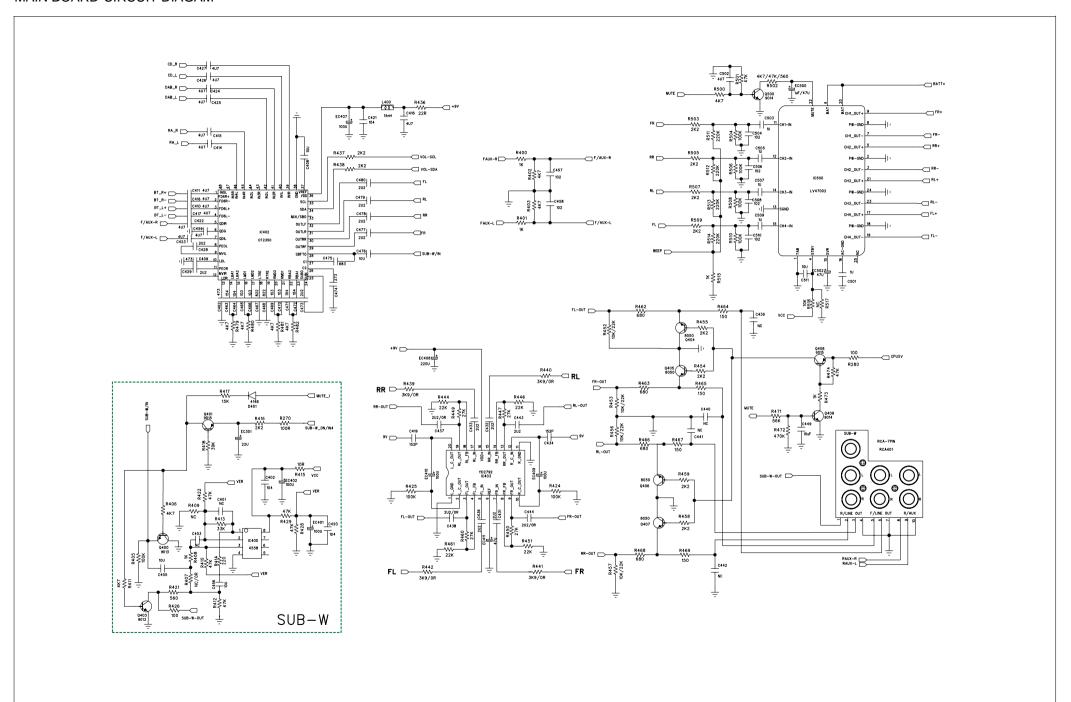


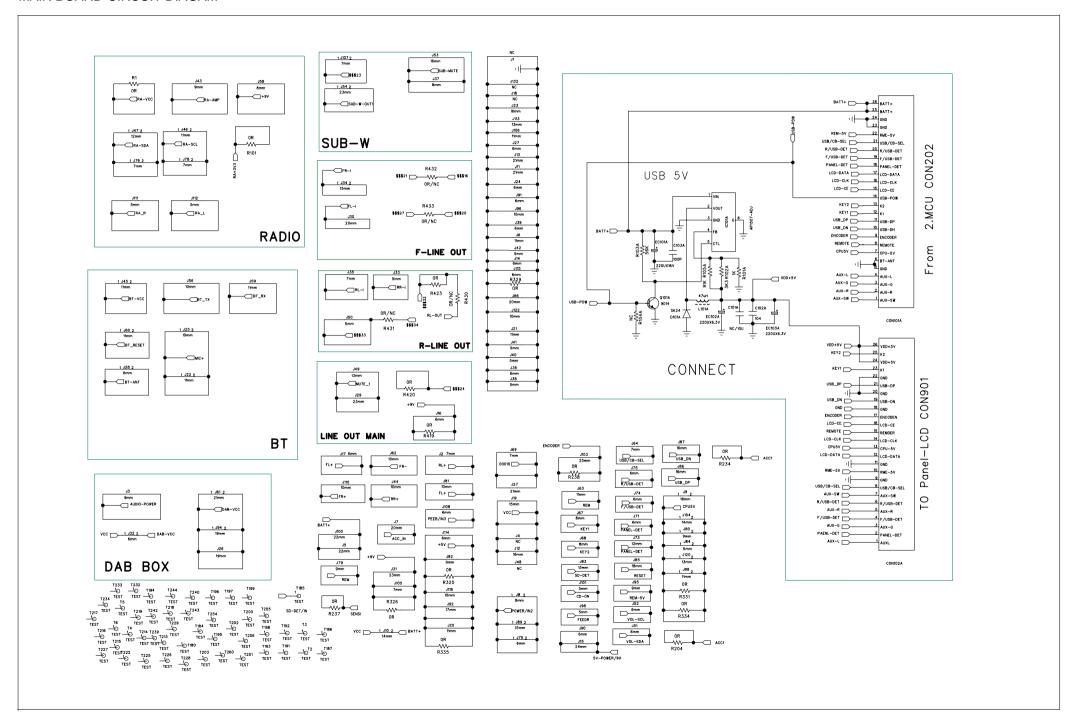


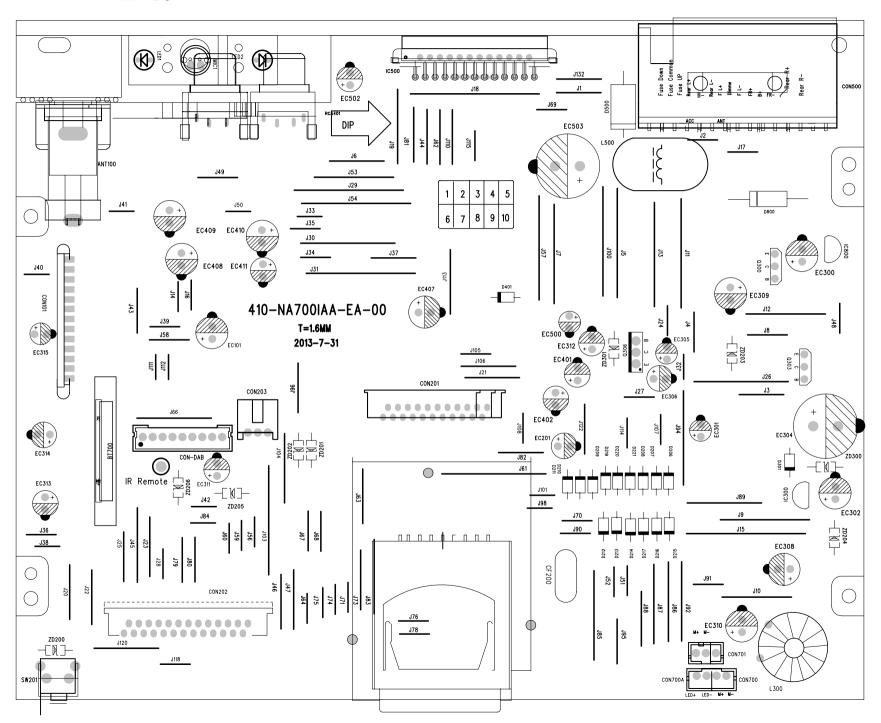


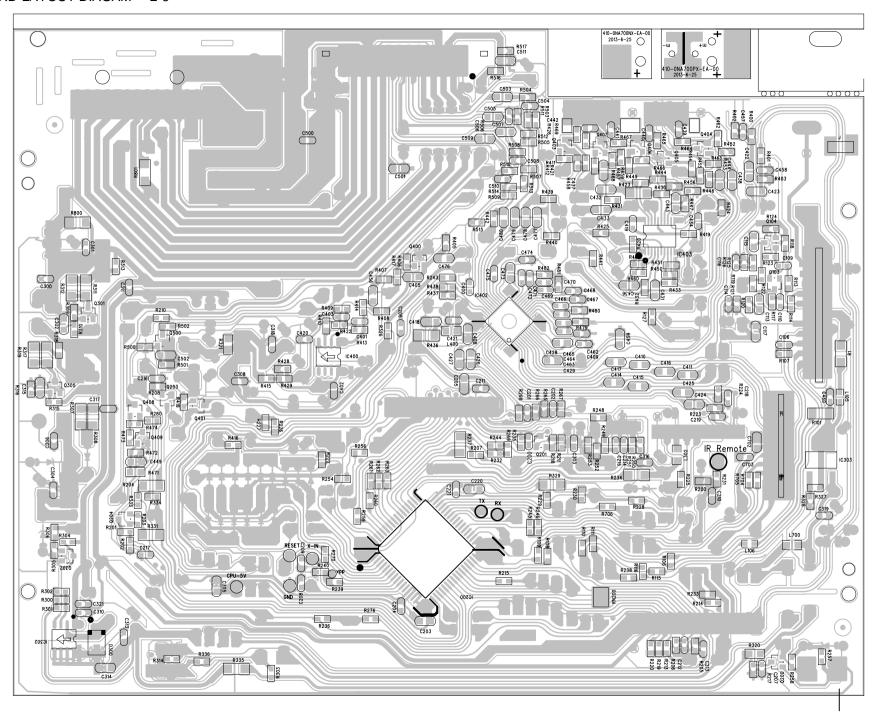

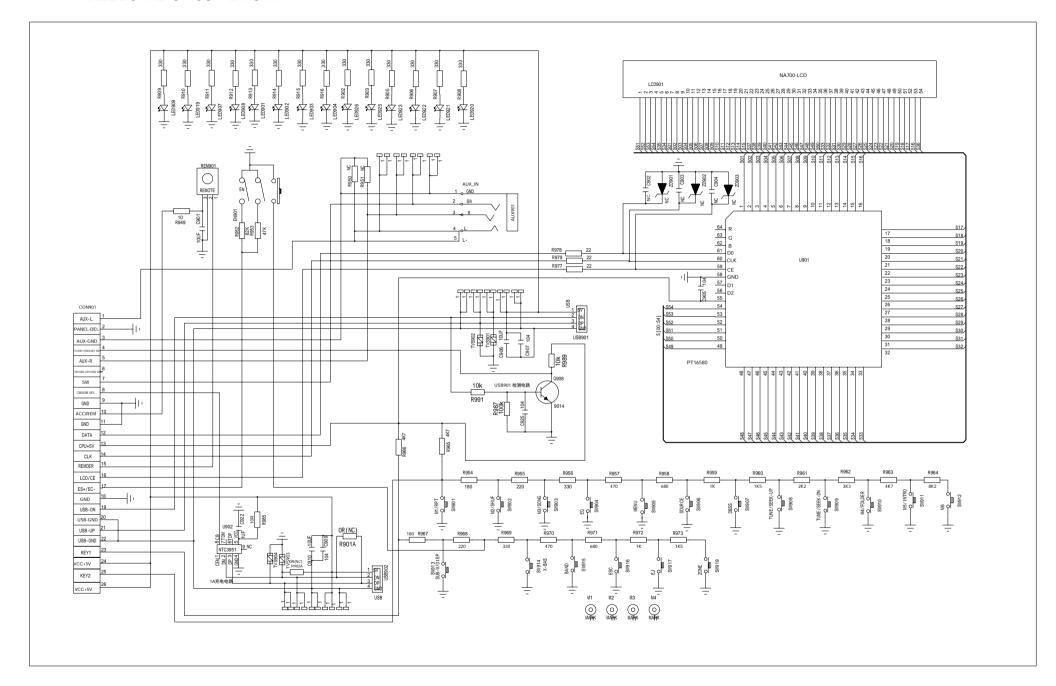

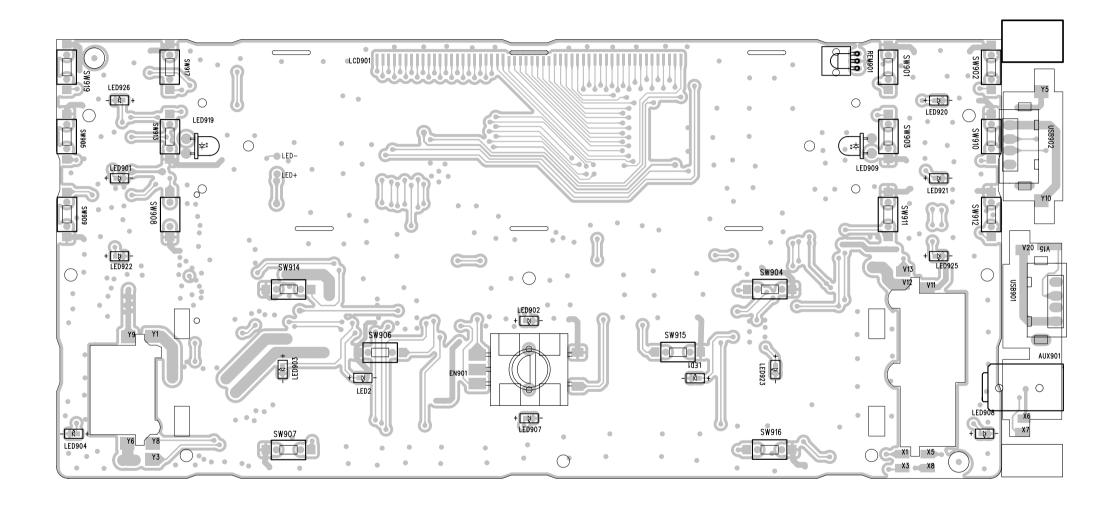

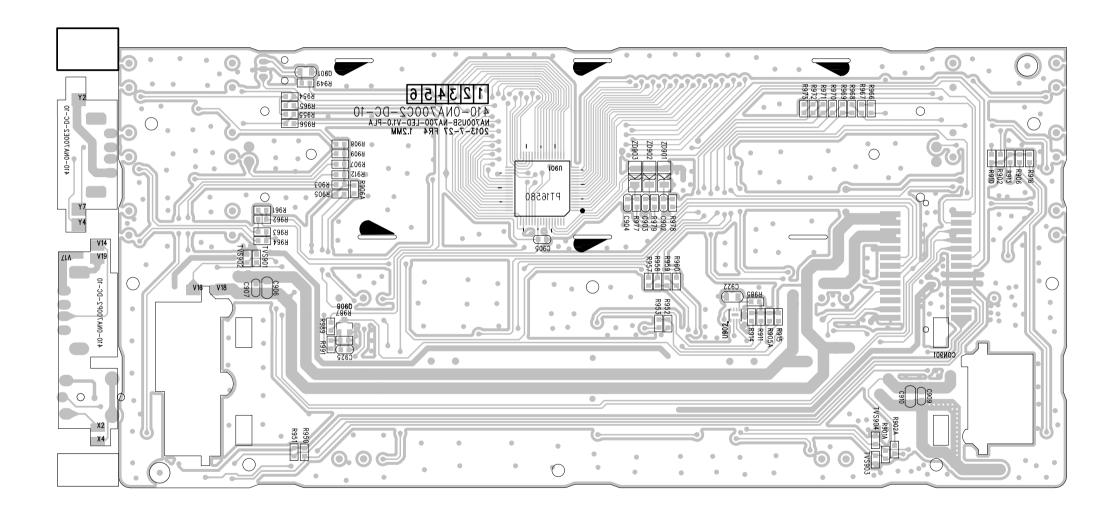

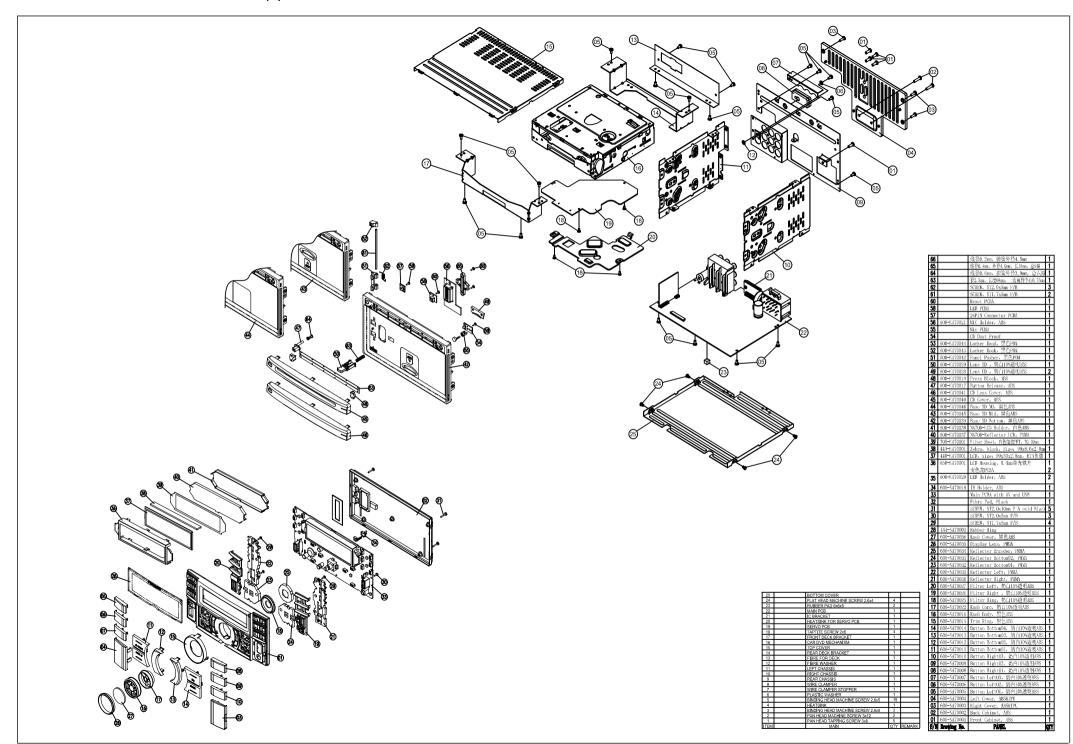



NA780

Car Audio System Player

INSTRUCTION MANUAL

CD MP3 WMA USB SD AUX-IN
USB 1A Smart Phone Battery Charge

Safety

WARNING

Stop the car before operating the unit.

Important to know...

- ★ To prevent a short circuit, never put or leave any metallic objects (such as coins or metal tools) inside the unit.
- ★ Caution: Adjust the volume so that you can hear sounds outside the car. Driving with the volume too high may cause an accident
- ★ Condensation: When the car is air-conditioned, moisture may collect on the laser lens. This may cause disc read errors. In this case, remove the disc and wait for the moisture to evaporate.
- ★ The illustrations in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the illustrations may differ from what appears on the actual equipment.
- ★ If you experience problems during installation, consult your Nakamichi dealer.
- ★ When you purchase external components, check with your Nakamichi dealer to make sure that they work with your model and in your area.

Maintenance

Cleaning the unit: Wipe off the dirt on the panel with a dry silicon or soft cloth. Failure to observe this precaution may result in damage to the monitor or unit.

Cleaning the connector: Wipe off dirt on the connector of the unit and faceplate. Use a cotton swab or cloth.

 
Preparation

How to attach/detach the faceplate

Attach








- ★ Do not expose the faceplate to direct sunlight, excessive heat, or humidity. Also avoid places with too much dust or the possibility of water splashing.
- ★ Keep the faceplate in its casing while detached.
- ★ The faceplate is a precision piece of equipment and can be damaged by shocks or jolts.

★ To prevent deterioration, do not touch the terminals of the unit and faceplate with your fingers.

 How to reset your unit





- ★ If this unit fails to operate properly, press the reset button.
- \star The unit returns to factory settings when the reset button is pressed.

What's in the box

Check and identify the contents of your package:



Main unit Front panel



Trim plate



Remote control



ISO male connector



Screw x 4pcs



Hexagon head screw



Rubber cushion



User manual

2 EN

Installation/Connection

Basic Procedure

- 2 Make proper input and output wire connections.
- 3 Install the unit to your car.
- **4** Reconnect the \bigcirc terminal of the car battery.
- 5 Reset the unit.


Warning

- ★ The unit can only be installed in a car with a 12 V DC power supply, negative ground.
- ★ If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.
- ★ Disconnect the battery's negative terminal and make all electrical connections before installing the unit.
- ★ Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- \bigstar Be sure to ground this unit to the car's chassis again after installation.
- ★ If the power is not turned ON, the speaker wire may have a short-circuit or touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked.

Caution

- ★ If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wire to a power source with a constant voltage supply, as with battery wires, the battery may die.
- ★ Install this unit in the console of your vehicle. Make sure the faceplate will not hit the lid of the console (if any) when closing and opening.
- ★ After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car areworking properly.
- ★ Mount the unit so that the mounting angle is 30° or less.
- ★ If the fuse blows, first make sure the wires are not touching to cause a short circuit, then replace the old fuse with one that has the same rating.
- ★ Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the wires or ground them to any metal part in the car.
- ★ When only two speakers are being connected to the system, connect the connectors either to both the front output terminals or to both the rear output terminals (do not mix front and rear).
- ★ Mounting and wiring this product requires skills and experience. For safety's sake, leave this work to professionals.
 - If you experience problems during installation, consult your Nakamichi

Wiring Connection

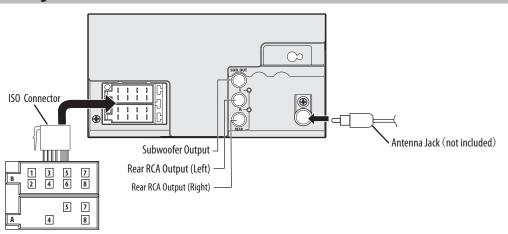


ISO Connector Wiring Chart

Pin		Color and function	Pin	Color and fur	nction
A4	Yellow	Battery(+)	B1/B2	Violet ⊕ / Violet/Black ⊝	Right rear speaker
A5	Blue	Connect to system control terminal of the power AMP or auto antenna relaycontrol terminal(Max 150MA 12VDC)	,- :	Grey ⊕ / Grey/Black ⊝	Right front speaker
A7	Red	Ignition(ACC)	B5/B6	White ⊕ / White/Black ⊝	Left front speaker
A8	Black	Ground	B7/B8	Green ⊕ / Green/Black ⊝	Left rear speaker


Installing the unit

Installation with the half sleeve

After inserting the half sleeve into the dashboard, select the appropriate tab according to the thickness of the dashboard material and bend them inwards to secure the holder in place.

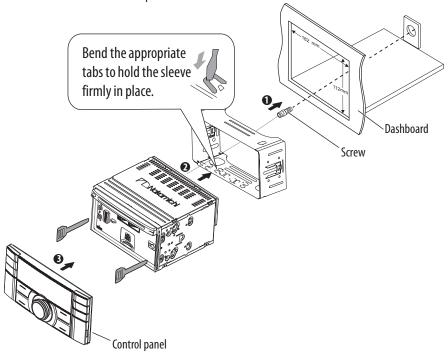


Installation using the screw holes on the side of the unitSelect a position where the screw holes of the bracket and the screw holes of the main unit become aligned (are fitted) and tighten the screws at 2 places on each side.

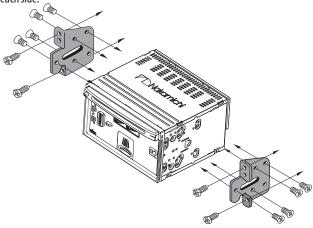

All the mounting sleeve & screw are not included in this packing.

Basic Operation

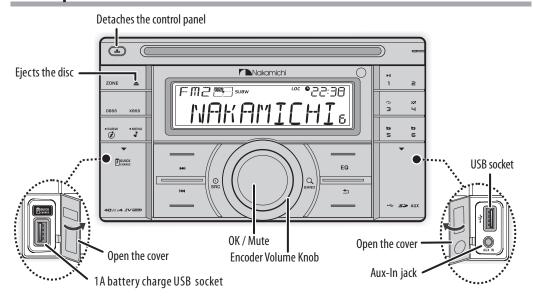

When you press or hold the following button(s)...

Main unit	General operation
ZONE	Switch music listening zone for the best speaker sound. (FRONT ALL / FRONT LEFT/ FRONT RIGHT / ZONE OFF).
XBSS	Turn On or Off the X bass bosster function.
DBSS	To turn On or Off dynamic bass boost sound.
• MENU	 To access into the Audio Menu mode. press and hold to enter into the System Menu mode.
• SUBW	 Under Media playback mode to view play informations. Under RDS mode to view RDS received information. Press and hold turn On or Off the subwoofer function.
 44/ ▶ 	 Under Radio mode to enter into the Auto Seek mode, press and hold to enter into the Manual Seek mode. Under Media playback mode to skip track / file, press and hold to fast forward / backward.
① SRC	 Turn the unit on. Press and hold again to turn the unit off. Select the available sources (Radio, Disc, USB, SD or Aux-In), if the power is turned on.
OK / Mute	Turn mute or restore volume.Confirms selection.
Rotatory Volume knob	Rotate it to increase or decrease the volume.Select items.
BAND	 Select the FM bands (FM1/ FM2/ FM3) or AM1 (MW1) / AM2 (MW2). Under media playback to access into search mode.
EQ	To adjust the EQ (Preset Equalizer) setting.
	Returns to the previous item.
1 ▶Ⅱ	Pause/resume playback of a Disc, USB / SD devicee.

Remote Control Operation



When you press or hold the following button(s)...

Main unit	General operation
*	Turn mute or restore volume.
0	Press turn the unit on or off.
VOL +	Press increase the volume.
VOL	Press decrease the volume.
 44/ ▶ ▶	 Under Radio mode to enter into the Auto Seek mode, press and hold to enter into the Manual Seek mode. Under Media playback mode to skip track / file, press and hold to fast forward / backward.
SRC	Selects the available sources (Radio, Disc, USB, SD or Aux-In), if the power is turned on.
AUDIO	Press to access into the Audio Menu mode.

Function Settings

- $\textbf{1 Press} \quad \textbf{^{^{\bullet}MENU}} \quad \text{to access into the } \textbf{[AUDIO MENU]} \\ \text{mode, press and hold to enterinto } \quad \text{the } \textbf{[MENU]} \\ \text{mode.}$
- 2 Press 【◀◀/▶▶】 repeatedly to select the item to be adjusted.
- 3 Turn the encoder volume knob to select a value / option.

[AUDIO MENU]...

Item	Selectable Setting
BASS ADJUST	
BASS LEVEL	Adjust the level -7 to +7.
MIDDLE ADJUST	
MIDDLE LEVEL	Adjust the level -7 to +7.
TREBLE ADJUST	
TREBLE LEVEL	Adjust the level -7 to +7.
BALANCE	Adjust the balance between the right and left speakers from 12R (full right) to 12L (full left).
FADER	Adjust the fader between the front and rear speakers from 12R (full rear) to 12F (full front).
SUBWOOFER ADJUST	
SUBWOOFER LEVEL	Adjust the level 0 to 12.
SUBWOOFER LPF	Subwoofer low pass filter range: 80 / 120 / 160.
RESUME	Resume the preset EQ value to factory default value.

[MENU]...


Item	Selectable Setting
CLOCK	
CLOCK SET	Adjust the Hours and Minutes
CLOCK FORMAT	Select the time format 12H or 24H
BEEP TONE	Turn On or Off this beep sound

[ZONE]...

This innovative Zone technology enables driver or passengers to enjoy music with the best speakers balance and experience a more vivid spacial effect as the artist is intended to create. User can switch the music listening zone from driver to passengers for the best speaker sound settings in car.

- 1 Press the **ZONE** button, The current setting is displayed.
- 2 Press the **ZONE** repeatedly to select one of the below setting:
 - FRONT ALL (All)
 - FRONT LEFT (Left)
 - FRONT RIGHT (Right)
 - ZONE OFF (Off)

Listening to the Radio

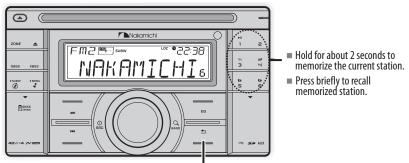

In receive tracffic, press to cancel receive the current traffic.

- 1 Press on repeatedly to a band (FM1, FM2, FM3, Signal Press repeatedly to view RDS received information. AM1(MW1) or AM2 (MW2)).
- **2** Press **I**◀**◀**/**▶▶I** to search for a station.

Adjust [MENU] mode settings

- While listening to the radio...

 1 Press and hold **MENU to enter into the [MENU] mode.
- 2 Press | < | > | repeatedly to select the item to be adjusted.
- 3 Turn the encoder volume knob to select a value / option.

Item	Selectable Setting	
AUTO STORE ←	Press the "OK / Mute" to access into Auto Store mode, the six strongest stations of the selected ban are saved in preset channel automatically: FM1, FM2, FM3(1-6), AM1, AM2.	
PTY↓↓ (Program Type)	Once into the PTY mode, press the "OK / Mute" get into program type item, and rotating encoder volume knob to selected category.	
	■ Available Program Type: POP M; ROCK M; EASY M; LIGHT M; CLASSICS; OTHER M; JAZZ M; COUNTRY; NATION M; OLDIES M; FOLK M; A-TEST; ALARM; NEWS; AFFAIRS; INFO; SPORT; EDUCATE; DRAMA; CULTURE; SCIENCE; VARIED; WEATHER; FINANCE; CHILDREN; SOCIAL; RELIGION; PHONE IN; TRAVEL; LEISURE; DOCUMENT	
AF (Alternate Frequencies)	Identification as the current station automatically	
TA (Traffic Announcement)	 ON: When there is traffic announcement, the unit switches to the tuner mode (regardless of the current mode) and begins to broadcast the announcemet on traffic conditions. When the trafficannouncement is over, it returns to the previous mode. OFF: Traffic announcement does not cut in. 	
RDS On/Off	Turn On or Off the RDS function.	
AREA	Select suitable country region of the radio: USA; LATIN; EUROPE; RUSSIA(Oirt); M-EAST; ASIA; JAPAN; AUST (Australia)	
LOCAL SEEK	To receive more radio stations or only stations with strong signal, you can adjust the radio sensitivity.	

8 EN

Listening to a Disc/ USB/SD device



- Press to pause. Press again to resume playback.
- Press to repeat one track, press again to repeat all tracks.
- Press and hold repeat a folder.
- Press to start random play, press again to cancel random play.
- Press and hold random a folder.

Press to move next/previous folder.

 
- Press to select a track / file.
- Press into search mode
- Press and hold for fast forward / backward.

Playing a disc

Insert the disc into the Disc Slot with label side facing up, Press the "SRC" button to select the Disc mode to start playing.

Playing a USB device

- 1 Open the cover marked on the front panel.
- 2 Insert the USB device into the USB socket.
- 3 Press the "SRC" button to select the USB mode to start playing.




Remark:

This USB is compatible with iPhone / iPod, USB stick, and play the songs in some Hand phone & recharge them. (Subject to the brand & model of the Hand phone)


Playing a SD memory card

- 1 Press the Panel (Release) button.
- 2 Push the left side of the panel rightward
- 3 Insert the card into the card slot.
- 4 Close the front panel.
- **5** Press the "SRC" button to select the SD mode to start playing.

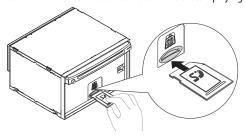

USB Smart Phone 1A charging


- 2 Insert the iPhone/Smart Phone device into the USB socket.
- 3 Once the iPhone/Smart Phone is connected and recognized, the iPhone/Smart Phone begins to charge.

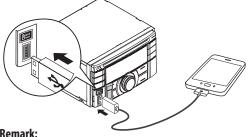

Remark:

This USB only can charge Phones, but cannot play or decode music files.

Listening to the other external components

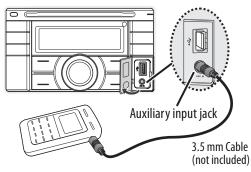

- 1 Press the **SRC** to select AUX-IN mode.
- 2 Turn on the external component and start playing.

EN 9

Product Information

General

Power Supply: 12V DC (10.5-14.4V), negative ground

Fuse: 15A

Suitable Speaker Impedance: $4-8\Omega$

Aux-In level: 800mV

Audio Section

Maximum Power Output: Mosfet 40W x 4 Channels

Continous Power Output: 22W x 4 RMS

Pre-AMP Output Voltage: 2 V Subwoofer Output Voltage: 2 V

FM tuner section

Frequency Range: 87.5 - 108MHz

Usable Sensitivity: Better than 15dB at S/N 30dB

AM tuner section

Frequency Range: 522 - 1620KHz

Usable Sensitivity: Better than 45dB at S/N 26dB

USB devices

USB Flash Memory: USB 1.1 & 2.0 Compatible

Memory Card

Support type of memory card: SD/SDHC

About Audio file

■ USB or memory file system: FAT16, FAT32

■ MP3/WMA bit rate: 32-320kbps and varible bit rate

■ MP3 sampling frequencies: 8-48kHz

■ WMA sampling frequencies: 32kHz, 44.1kHz, 48kHz

■ ID3 tag v1.0 or later

USB Smart Phone 1A charging

Output Voltage: 5 V DC
Output Current: 1000 mA (1A)





www.nakamichicaraudio.com