# **True FLAT P-CAP LCD Monitor**

**User Manual** 

**Installation Guide** 



15" True FLAT P-CAP Touch LCD Monitor

**MODEL: KKF1500-PCAP** 



i-Tech Company LLC TOLL FREE: (888) 483-2418 EMAIL: info@itechlcd.com WEB: www.iTechLCD.com

# User Manual / Installation Guide 15" True Flat P-CAP Touch Monitor

**Warning!** It will cause malfunction if the monitor is operating with unspecified power supply unit or incorrect power voltage. Do not exposure this unit in the rain or moisture environment to reduce the risk of fire or electric shock.

### **Content:**

I.	FCC Warning Statement	
II.		
	Features	2
	Unpacking the monitor	
III.	Installation	4
	I/O placement	
	To PC	
	Touch Driver installation	5
	MSR installation (optional)	
	Second Display (optional)	8
	Control Buttons	10
	Structure of OSD settings	11
IV.	For your safety	
	Support timing chart:	
	Mechanical Dimension	
	. Product General Specification	



### I. FCC Warning Statement

### **WARNING**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

#### **Notice:**

- (1) A Unshielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord by used.
- (2) Use only shielded cables to connect I/O devices to this equipment.
- (3) Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### II. Introduction

15" True Flat Touch Monitor is color TFT LCD monitor, integrate with projected capacitive touch, suitable for many types of application. Optional MSR and 2<sup>nd</sup> display, please contact our regional distributor for further information.

#### Features

- Optimal display resolution 1024 \* 768
- VESA 75 \* 75 mm wall mount standard
- Durable and sturdy base design
- Optional 3 tracks Magnetic Strip Reader (MSR)
- Optional variety of 2<sup>nd</sup> display (8.4")
- Adjustable viewing angel freely up to 90 degrees horizontally
- Low power consumption only 20W with CCFL backlight

### Unpacking the monitor

- Put the monitor on a clean surface, make sure the box in upright position.
- Remove packing materials from inside of box.

### **Check accessory**

Please make sure all the accessory are included:

#### **Standard Items**

a.



b.



c.



d.



e.



f.



- a. LCD Monitor
- c. Touch driver / User Manual CD
- e. Power adaptor

- b. VGA cable
- d. USB Touch cable
- f. Power cable

### **Optional Items**

a.



. MSR


b.



b. 2<sup>nd</sup> display (8.4")

### III. Installation

### I/O placement

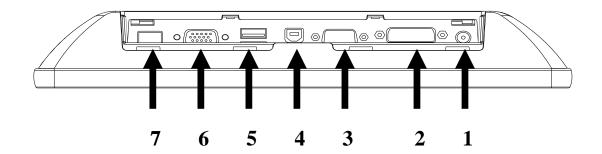

- 1 DC JACK
- 3 VGA
- 5 Dual USB A Type
- 7 RJ45(RS232)

- 2 DVI
- 4 USB B Type
- 6 RS232


### > To PC



- 1. Connect VGA cable from monitor to PC
- 2. Connect USB touch cable to PC
- 3. Connect DC plug to monitor and the other side to wall outlet

#### Touch Driver installation


#### P\_CAP\_Touch:

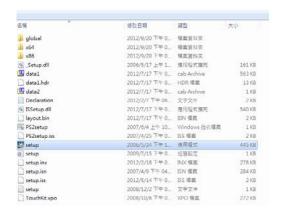


1. Double click "setup.exe" from driver menu



Select "I accept the terms of the license agreement" and click "Next" from License Agreement

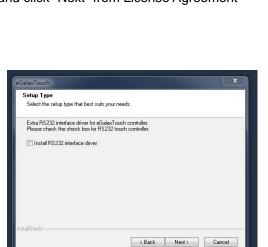


5. Click "Next" from Setup Type

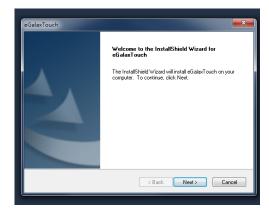


2. Click "Next" to start the setup program of eGalax Touch




4. Click "Next" from Setup Type

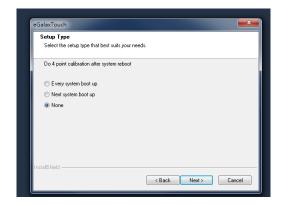


6. Click "Next" from Setup Type

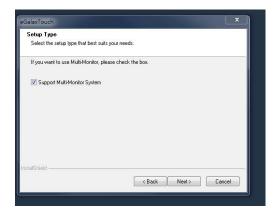

7. Select "Support Multi-Monitor System" and Click "Next"

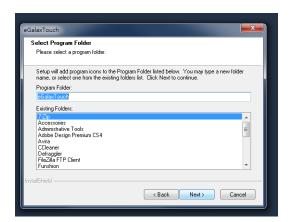

9. "Select Program Folder" and click "Next"

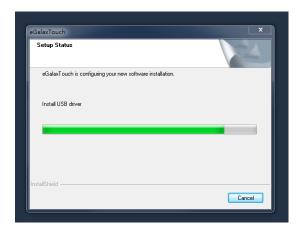

11. eGalax Touch Setup is running



8. "Choose Destination Location" and click "Next"



10.Click "Next" to start the eGalax Touch Setup




12. Finish and create a eGalax Touch Utility shortcut on desktop

# MSR installation (optional)

# **Components of MSR Kit:**



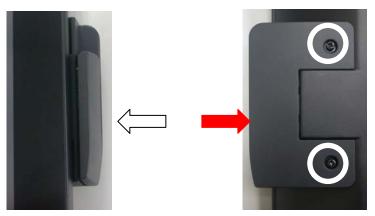

- 1. Slide the MSR into the right position of the System.
- 2. Fasten the screws (x2).

### Second Display (optional)

#### **Components of Second Display Kit:**





Metal Bracket

**Second Display** 








**USB** Cable

Screws

Screws

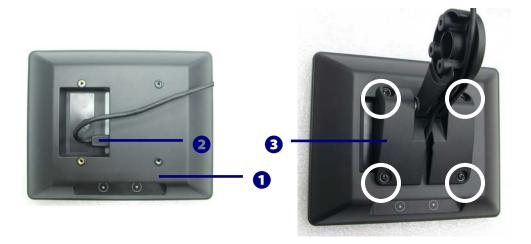

Fix the parts of Second Display modules as steps  $\mathbf{0} \rightarrow \mathbf{2} \rightarrow \mathbf{5}$ 

- 1. as above picture shows. (detail steps as below)
  - 1 Put the second display upside down.
  - 2 Connect the USB cable to the Second Display Module
  - 3 Fasten the screws (x4) to fix metal bracket with the system.

Version, 1.0 8





- 2. Fasten the scrws (x3) to fix the Second Display moudle with the System.
- 3. Connect the USB cable to the System.
- 4. Finish.

### Control Buttons



Auto Adinatina	a.) Pressing to execute AUTO-Adjusting function. This function will set the monitor display area to the optimal position.
Auto Adjusting	b.) Sometimes this function can't achieve the optimal effects. Please follow the
	manual adjusting procedure.
	When the light bar move other item, the key are used to select it, and read to adjust.
Menu	Press the MENU key to activate the On Screen Display (OSD). Press twice to turn
	off the OSD. After 30 sec idle times, the OSD screen will automatically turn off.
Power	Use the power switch to turn the power ON or OFF. We recommend to turn your
rowei	system power on first, then the LCD monitor.
Up	a.) When OSD mode is activated (When "MENU" key is pressed). The two keys
Ор	are used to select the adjustment items.
Down	b.) When adjustment item is selected, the two keys are defined to decrease or
Down	increase the value of each selected item.

# Structure of OSD settings

	First Level	Second Level	Third Level	Operating Procedure
	Auto Adjust			Press "UP" or "DOWN" to adjust H-phase & H-position & V-position clock automatically.
	Luminance	Brightness Contrast Exit		Press "UP" key to increase brightness, "DOWN" key to decrease brightness. Press "UP" key to increase contrast, "DOWN" key to decrease contrast.
	Geometry	H. Position V. Position Clock Phase Exit		Press "UP" key to shift screen right, "DOWN" key to shift screen left.  Press "UP" key to shift picture upward, "DOWN" key to shift picture downward.  Adjust sampling clock of analog to digital converter until clock is equal to pixel frequency of video input.  By varying this "UP" "DOWN" control the exact sampling time within the pixel can be adjusted.
	Color	9300K 6500K 5800K User Preset	Red Green Blue Exit	Press "UP" or "DOWN" to choose three types of color temperature 9300°k, 6500°k and user define.
Main Menu		Exit		
11010	OSD	H. Position V. Position OSD Timeout Exit		Adjust OSD frame horizontal location, press "UP" key to shift frame right, "DOWN" key to shift frame left, timeout and preset OSD.  Adjust OSD frame vertical location, press "UP" key to shift frame upward, "UP" key to shift frame downward, timeout and preset OSD.
	Language	English French German Italian Spanish Japanese T. Chinese S. Chinese		Press "UP" or "DOWN" to choose any one of the following language, English, French, Germany, Italy, Spain, Japanese, Traditional Chinese and Simplified Chinese.
	Recall	Color Recall Recall All Exit		Recall the default value.
	Miscellaneous	Sharpness Display Information Exit		Press "UP" key to increase sharpness, "DOWN" key to decrease sharpness.
	Exit			


# IV. For your safety

- 1. When move the monitor, always switch off power and disconnect all cables to avoid any danger.
- 2. Please use the power and signal cables correctly when install or bend it.
- 3. In case of notice any abnormal smell or noise, please stop operation and call the nearest dealer or service center.

# V. Support timing chart:

Timing	Reference	Dagalutian	Pixel FILKII FXI	EV II-	II- I	Н	V	
Mode	Standard	Resolution	MHz	FH KHz	z FV Hz	Interlace	Polarity	Polarity
Mode 1	VESA	1024×768	65.000	48.363	60.004	NO	-	-
Mode 2	VESA	1024×768	75.000	56.476	70.069	NO	-	-
Mode 3	VESA	1024×768	75.011	57.524	72.000	NO		
Mode 4	VESA	1024×768	78.750	60.023	75.029	NO		

## VI. Mechanical Dimension

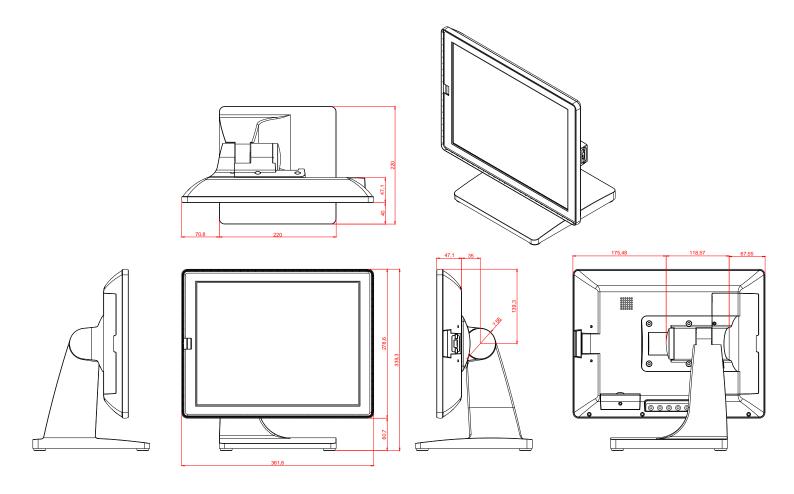

# **VII. Product General Specification**

Model	Monitor	Monitor with stand		
Cabinet color	Black			
Display size	15.0"			
Active Area	304 * 228 mm			
Optimal Resolution	1024 * 768			
Color Arrangement	RGB-stripe			
Brightness	250 cd/1	m² (typ)		
Contrast Ratio	600:1			
Response Time	8 ms (typ)			
Viewing Angle	160 degrees (H)			
Viewing Angle	160 degrees (V)			
Input Video Format	VGA/DVI			
Input Video signal connector	D-Sub 15 pins+DVI-D			
Touch Panel	Projected capacitive			
Touch Interface	USB			
Power consumption	20W			
Input Fraguancy	Horizontal : 31.5 kHz~60.2 kHz			
Input Frequency	Vertical: 56.3Hz~75Hz			
Power supply	DC 12V +/- 10%			
Townsestives	Operating : 0°C ~40°C			
Temperature	Storage : -10°C ~50°C			
TTi dia	Operating : 20%~80%			
Humidity	Storage: 10%~90%			
Weight	3.3kg(net)	4.7kg(net)		
Approvals	CE, FCC			
Wall Mount	VESA 75 * 75 mm			