

USER MANUAL of W83

Dear Customer!

We are glad that you chose our product W83 smartphone!


Please read this Quick Guide before use the smartphone,

Started to use your phone:

Power on: Press and hold the power key button for 3 seconds

Power off: Press and hold the power key button for 3 seconds, select 'switch off' in the menu option.

picture:

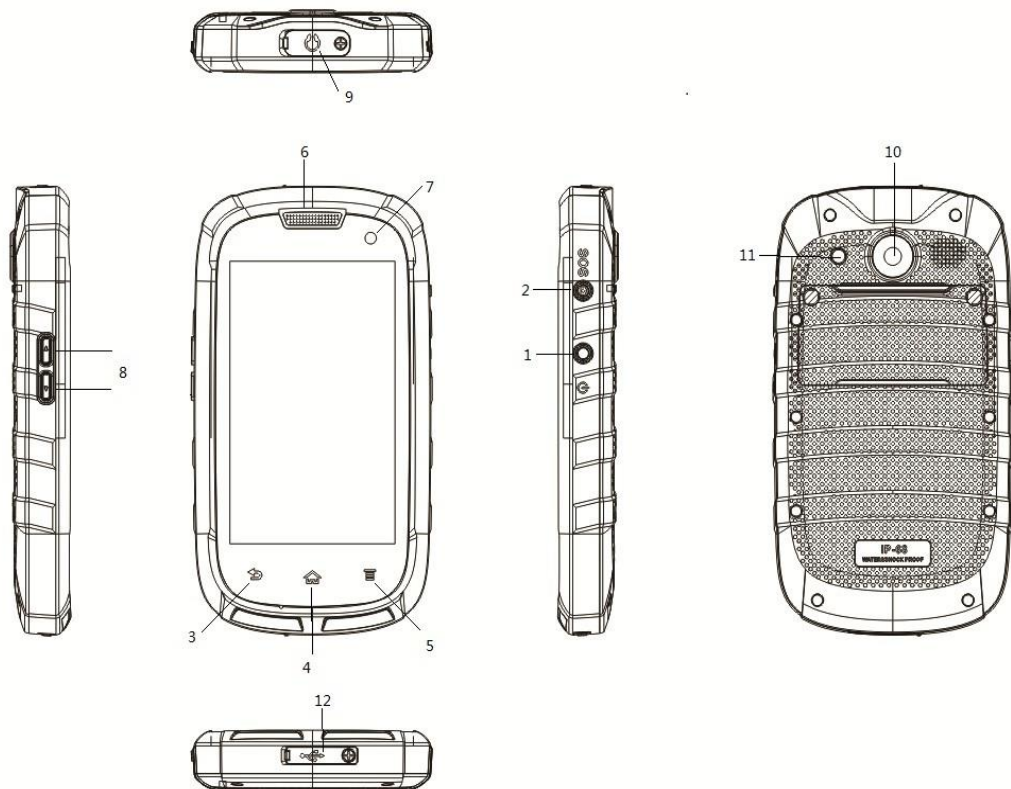

1) Power button

2) Reset button

3) Menu key

4) Home key

5) Back key

6) Earpiece

7) Front camera

8) Volume key

9) Earphone jack

10) Rear camera

11) Flash light

12) USB port

Menu Key: Select to show the available menu in current screen.

Home Key: Return to home screen. To view recent application, press and hold the home key.

Back Key: Return to previous screen.

Volume Key: Adjust the volume of ringtone.

Reset Key: press reset button than press power on key to restart the phone

Insert the SIM Card and T-Flash card:


1. Remove the battery cover: Loosen the screws on the back side – to rotate both the screws anti-clockwise until open the bake cover as shown in IMAGE 1





Attn.: your phone's battery is fixed and non-removable battery inside.

2. Put the SIM Card in the SIM holder: Put the SIM card into the slot touching the SIM contacts of the phone as shown in IMAGE-3:

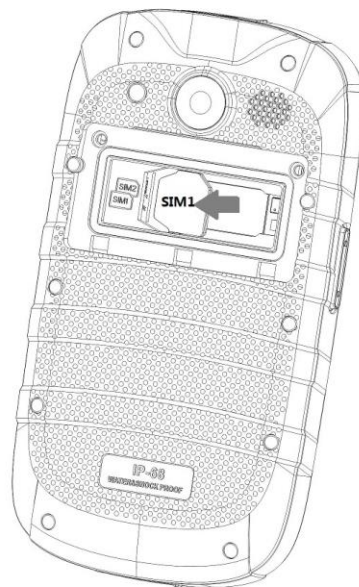



ATTN: YOUR PHONE SUPPORT DUAL SIM cards:

UPPER SIM SLOT FOR WCDMA 3G, DOWN SLOT FOR WCDMA 3G too.

3. Insert T-Flash card: insert T-Flash card into the slotas shown in iMAGE4.



5. Insert the battery cover: Insert the back cover and rotate two screws clockwise to lock the back cover.



⚠ **ATTN: Please power off the phone before plug in or pull out the SIM card and T-Flash card.**

Charging the Battery

Before charging the battery, ensure that it has been properly inserted into your phone.



T-Flash card:

Please setup T-flash card before using your phone, otherwise the applications cannot be installed and some functions are not available, for example, camera, recorder, etc.

1. Use the T-Flash card in the phone as USB storage.

Connect the phone with computer by using USB cable. The computer will pop up the windows to let you install the phone USB driver.

If you only wish to use the the T-Flash card in the phone as a USB storage, you can ignore those windows and click Cancel always. Slide Message Board as shown in the screen below. And then click USB connected->Turn on USB storage to use the T-Flash as USB storage.

You must setup the phone USB driver in your computer if you wish to use the PC Suite to synchronize phonebook, Message, Calendar and others with your computer. The phone USB driver can be downloaded from SD-card.



2. Remove the T-Flash card safely

Please enter Settings -> SD card & phone storage ->unmount SD card to remove the T-Flash card safely.

Using of touch screen:

Single Click: To select an icon. For example, click dial to open the keypad which will be displayed on the screen.

Double Click: To zoom-in or zoom-out. For example, to zoom-in or out of a photo, click twice when viewing a photo or browsing on the internet.

Hold: Click and hold the screen, Icon or input box to get more operation options.

- 1) When clicking on a contact from the contact list for a long time, an operation menu will appear according to the contact list.
- 2) To rearrange/move an icon to the home screen, click and hold an icon within the menu list.
- 3) Long-Time Click the blanks of home screen to add home screen shortcut.

Drag the screen: You can drag the screen to view more applications which is not be displayed in one screen.

Home screen:

You can use all the functions by touch screen. Click the icons to open the applications. Check all the applications so it is functioning properly.


In total, there are 5 home screens in the phone, when you slide to the left or to the right this will move the screen from one to another. To create shortcuts and widgets, tap and hold at blank area on any of the screens. You can return to the home screen by pressing the Home key in any screen you are on.

Create shortcuts and widgets:

Press and hold the APPS, and drag on the desk.

Select create shortcuts or widgets.

Delete the shortcuts and widgets

To delete an object, tap and hold the object, then drag it towards the bottom of the screen . When the object turns red let go of it and the selected object will be deleted.

Lock the screen

Lock the phone in order to avoid useless operation and to save the battery by press the power key.

The phone will automatically lock when it is not being used for some time.

Unlock the phone

Press either the power key, menu key, home screen key or back key to enter the unlock interface ,and then slide any direction to unlock.

Message board

Slide Message board bar in any screen to open message board where you are able to check for unread notifications

Manage applications

Install applications: You can install .apk application among File Manager and set it up step by step

Uninstall application: Enter Settings->Applications->Manage applications, then will be able manage and remove installed applications.

Recently used applications

Press and hold the home key, the screen will display a window which shows your recently used applications. Click the icon to open the application.

Extend the battery life:

Some functions may use up more power, which eventually shorten the

battery life. You could:

Close all the wireless connection when not in use i.e. bluetooth, Wi-Fi or GPS
Reduce the brightness and shorten the screen timeout to save battery, or
press power key to shut down the screen when the phone is not in use. Close
any automatically synchronized applications such as Email, calendar, contacts
and other.

Some applications which are downloaded could also shorten the battery life.

Technical Support

This product is designed as shockproof phone, however, please don't hit the
phone intentionally. The brutal manipulation may bring damages to the
performance of your phone, and it will be no longer under warranty.

Locked the back cover after put the T-flash card and SIM cards to guarantee
the waterproof function better.