

To our customers,

Old Company Name in Catalogs and Other Documents

On April 1st, 2010, NEC Electronics Corporation merged with Renesas Technology Corporation, and Renesas Electronics Corporation took over all the business of both companies. Therefore, although the old company name remains in this document, it is a valid Renesas Electronics document. We appreciate your understanding.

Renesas Electronics website: <http://www.renesas.com>

April 1st, 2010
Renesas Electronics Corporation

Issued by: Renesas Electronics Corporation (<http://www.renesas.com>)

Send any inquiries to <http://www.renesas.com/inquiry>.

Notice

1. All information included in this document is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas Electronics products listed herein, please confirm the latest product information with a Renesas Electronics sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas Electronics such as that disclosed through our website.
2. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
3. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part.
4. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
5. When exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. You should not use Renesas Electronics products or the technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
7. Renesas Electronics products are classified according to the following three quality grades: "Standard", "High Quality", and "Specific". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below. You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application categorized as "Specific" without the prior written consent of Renesas Electronics. Further, you may not use any Renesas Electronics product for any application for which it is not intended without the prior written consent of Renesas Electronics. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for an application categorized as "Specific" or for which the product is not intended where you have failed to obtain the prior written consent of Renesas Electronics. The quality grade of each Renesas Electronics product is "Standard" unless otherwise expressly specified in a Renesas Electronics data sheets or data books, etc.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; safety equipment; and medical equipment not specifically designed for life support.

"Specific": Aircraft; aerospace equipment; submersible repeaters; nuclear reactor control systems; medical equipment or systems for life support (e.g. artificial life support devices or systems), surgical implantations, or healthcare intervention (e.g. excision, etc.), and any other applications or purposes that pose a direct threat to human life.

8. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

F-ZTAT™ Microcomputer
On-Board Programming Adapter
Board

HS0008EAUF1H User's Manual

HS0008EAUF1HE

Renesas Microcomputer
Development Environment
System

Cautions

Keep safety first in your circuit designs!

1. Renesas Technology Corporation puts the maximum effort into making semiconductor products better and more reliable, but there is always the possibility that trouble may occur with them. Trouble with semiconductors may lead to personal injury, fire or property damage. Remember to give due consideration to safety when making your circuit designs, with appropriate measures such as (i) placement of substitutive, auxiliary circuits, (ii) use of nonflammable material or (iii) prevention against any malfunction or mishap.

Notes regarding these materials

1. These materials are intended as a reference to assist our customers in the selection of the Renesas Technology Corporation product best suited to the customer's application; they do not convey any license under any intellectual property rights, or any other rights, belonging to Renesas Technology Corporation or a third party.
2. Renesas Technology Corporation assumes no responsibility for any damage, or infringement of any third-party's rights, originating in the use of any product data, diagrams, charts, programs, algorithms, or circuit application examples contained in these materials.
3. All information contained in these materials, including product data, diagrams, charts, programs and algorithms represents information on products at the time of publication of these materials, and are subject to change by Renesas Technology Corporation without notice due to product improvements or other reasons. It is therefore recommended that customers contact Renesas Technology Corporation or an authorized Renesas Technology Corporation product distributor for the latest product information before purchasing a product listed herein. The information described here may contain technical inaccuracies or typographical errors. Renesas Technology Corporation assumes no responsibility for any damage, liability, or other loss rising from these inaccuracies or errors. Please also pay attention to information published by Renesas Technology Corporation by various means, including the Renesas Technology Corporation Semiconductor home page (<http://www.renesas.com>).
4. When using any or all of the information contained in these materials, including product data, diagrams, charts, programs, and algorithms, please be sure to evaluate all information as a total system before making a final decision on the applicability of the information and products. Renesas Technology Corporation assumes no responsibility for any damage, liability or other loss resulting from the information contained herein.
5. Renesas Technology Corporation semiconductors are not designed or manufactured for use in a device or system that is used under circumstances in which human life is potentially at stake. Please contact Renesas Technology Corporation or an authorized Renesas Technology Corporation product distributor when considering the use of a product contained herein for any specific purposes, such as apparatus or systems for transportation, vehicular, medical, aerospace, nuclear, or undersea repeater use.
6. The prior written approval of Renesas Technology Corporation is necessary to reprint or reproduce in whole or in part these materials.
7. If these products or technologies are subject to the Japanese export control restrictions, they must be exported under a license from the Japanese government and cannot be imported into a country other than the approved destination. Any diversion or reexport contrary to the export control laws and regulations of Japan and/or the country of destination is prohibited.
8. Please contact Renesas Technology Corporation for further details on these materials or the products contained therein.

IMPORTANT INFORMATION

READ FIRST

- **READ** this user's manual before using this adapter board.
- **KEEP the user's manual handy for future reference.**

Do not attempt to use the adapter board until you fully understand its mechanism.

Adapter Board:

Throughout this document, the term "adapter board" shall be defined as the adapter board main unit and attached cables manufactured by Renesas Technology Corp.

The user system or a host computer is not included in this definition.

Purpose of the Adapter Board:

The adapter board, which is connected between a host computer and the user system, has a function that can write/erase user application programs on the flash memory incorporated in the F-ZTAT microcomputer on the user system (on-board) when it is used with the FLASH Development Toolkit (PC interface software; hereinafter referred to as the FDT).

Therefore, the burden on the peripheral circuit required during on-board programming can be minimized. This board can be used for all F-ZTAT microcomputers incorporating a flash memory and cannot be used for those in which 12 V is applied to Vcc and PVcc.

This adapter board must only be used for the above purpose.

Limited Applications:

This adapter board is not authorized for use in MEDICAL, atomic energy, aeronautical or space technology applications without consent of the appropriate officer of a Renesas sales company. Such use includes, but is not limited to, use in life support systems. Buyers of this adapter board must notify the relevant Renesas sales offices before planning to use the product in such applications.

Improvement Policy:

Renesas Technology Corp. (including its subsidiaries, hereafter collectively referred to as Renesas) pursues a policy of continuing improvement in design, performance, and safety of the adapter board. Renesas reserves the right to change, wholly or partially, the specifications, design, user's manual, and other documentation at any time without notice.

Target User of the Adapter board:

This adapter board should only be used by those who have carefully read and thoroughly understood the information and restrictions contained in the user's manual. Do not attempt to use the adapter board until you fully understand its mechanism.

It is highly recommended that first-time users be instructed by users that are well versed in the operation of the adapter board.

LIMITED WARRANTY

Renesas warrants its adapter boards to be manufactured in accordance with published specifications and free from defects in material and/or workmanship. Renesas, at its option, will repair or replace any adapter boards returned intact to the factory, transportation charges prepaid, which Renesas, upon inspection, determine to be defective in material and/or workmanship. The foregoing shall constitute the sole remedy for any breach of Renesas' warranty. See the Renesas warranty booklet for details on the warranty period. This warranty extends only to you, the original Purchaser. It is not transferable to anyone who subsequently purchases the adapter board from you. Renesas is not liable for any claim made by a third party or made by you for a third party.

DISCLAIMER

RENESAS MAKES NO WARRANTIES, EITHER EXPRESS OR IMPLIED, ORAL OR WRITTEN, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR USE, OR AGAINST INFRINGEMENT OF ANY PATENT. IN NO EVENT SHALL RENESAS BE LIABLE FOR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM ANY DEFECTIVE ADAPTER BOARD, THE USE OF ANY ADAPTER BOARD, OR ITS DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS EXPRESSLY STATED OTHERWISE IN THIS WARRANTY, THIS ADAPTER BOARD IS SOLD "AS IS", AND YOU MUST ASSUME ALL RISK FOR THE USE AND RESULTS OBTAINED FROM THE ADAPTER BOARD.

State Law:

Some states do not allow the exclusion or limitation of implied warranties or liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which may vary from state to state.

The Warranty is Void in the Following Cases:

Renesas shall have no liability or legal responsibility for any problems caused by misuse, abuse, misapplication, neglect, improper handling, installation, repair or modifications of the adapter board without Renesas' prior written consent or any problems caused by the user system.

All Rights Reserved:

This user's manual and adapter board are copyrighted and all rights are reserved by Renesas. No part of this user's manual, all or part, may be reproduced or duplicated in any form, in hard-copy or machine-readable form, by any means available without Renesas' prior written consent.

Other Important Things to Keep in Mind:

1. Circuitry and other examples described herein are meant merely to indicate the characteristics and performance of Renesas' semiconductor products. Renesas assumes no responsibility for any intellectual property claims or other problems that may result from applications based on the examples described herein.
2. No license is granted by implication or otherwise under any patents or other rights of any third party or Renesas.

Figures:

Some figures in this user's manual may show items different from your actual system.

Limited Anticipation of Danger:

Renesas cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this user's manual and on the adapter board are therefore not all inclusive. Therefore, you must use the adapter board safely at your own risk.

SAFETY PAGE

READ FIRST

- **READ** this user's manual before using this adapter board.
- **KEEP the user's manual handy for future reference.**

Do not attempt to use the adapter board until you fully understand its mechanism.

DEFINITION OF SIGNAL WORDS



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

NOTE emphasizes essential information.

WARNING

Observe the precautions listed below. Failure to do so will result in a FIRE HAZARD and will damage the user system and the adapter board or will result in PERSONAL INJURY. The USER PROGRAM will be LOST.

- 1. Always switch OFF the adapter board and user system before connecting or disconnecting any CABLES, cable heads, or PARTS.**
- 2. Always before connecting any CABLES, make sure that pin 1 on both sides are correctly aligned.**
- 3. Use this adapter board only for the F-ZTAT microcomputer that is used for programming under the conditions $V_{cc} = 2.7\text{ V}$ to 5.25 V and $PV_{cc} = 2.7\text{ V}$ to 5.25 V . Programming cannot be performed for F-ZTAT microcomputers in which 12 V is applied to V_{cc} and PV_{cc} . Values of V_{cc} and PV_{cc} must be within the guaranteed operation range.**

Contents

Section 1	Overview	1
1.1	Environmental Conditions	2
1.2	Specifications	3
Section 2	Configuration	4
Section 3	Connectors and LEDs.....	6
3.1	Connectors	6
3.1.1	User Interface Connector (USER INTERFACE).....	6
3.1.2	USB Port Connector	8
3.2	LEDs	9
3.2.1	POWER: Red	9
3.2.2	ACTION: Green.....	9
Section 4	Notes on Using the Adapter Board	10

Section 1 Overview

The F-ZTAT* microcomputer on-board programming adapter board HS0008EAUF1H (hereinafter referred to as the adapter board), connected between a host computer and the user system, can write and erase user application programs on the flash memory incorporated in the F-ZTAT microcomputer on the user system (on-board) when it uses FLASH Development Toolkit (hereinafter referred to as the FDT). Therefore, the burden on the peripheral circuit required during on-board programming can be reduced.

A system configuration using the adapter board is shown in figure 1.1.

Note: F-ZTAT (Flexible-Zero Turn Around Time) is a registered trademark of Renesas Technology Corp.

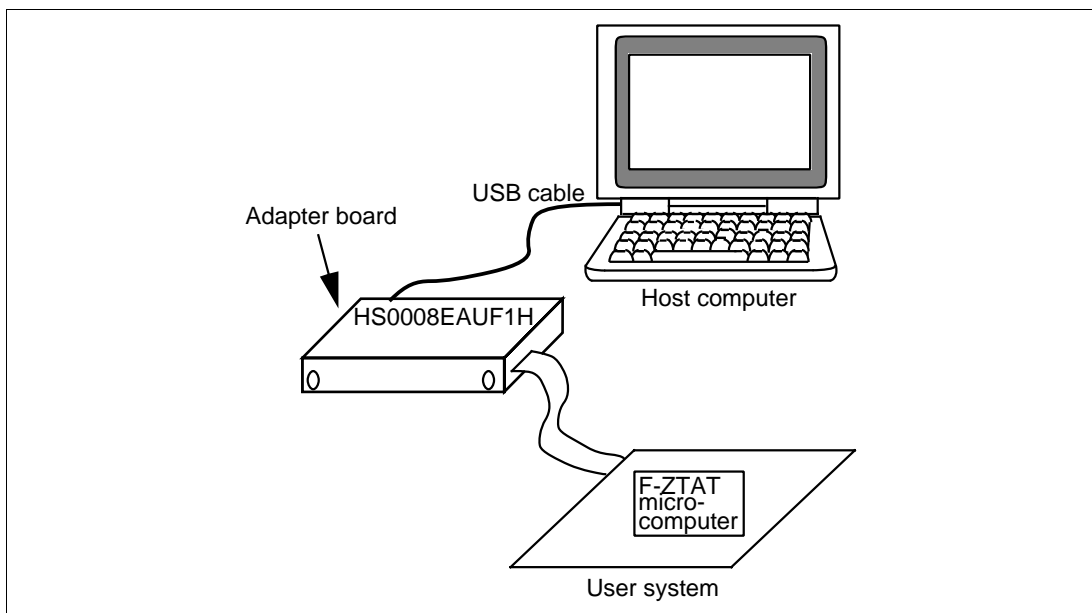


Figure 1.1 System Configuration Using Adapter Board

1.1 Environmental Conditions

Table 1.1 Environmental Conditions for HS0008EAUF1H

Item Name	Description
Temperature	Operating: +10 to +35°C Storage: -10 to +50°C
Humidity	Operating: 35 to 80% RH, no condensation Storage: 35 to 80% RH, no condensation
Vibration	Operating: 2.45 m/s ² max. Storage: 4.9 m/s ² max. Transportation: 14.7 m/s ² max.
Ambient gases	There must be no corrosive gases present.

1.2 Specifications

Table 1.2 Operating Environments

Item	Operating Environment
Host computer	IBM PCs and compatible machines that contain Pentium® III processors (500 MHz or faster is recommended)
USB interface	Complied with USB Specification Rev. 1.1
Operating system	Windows® 98SE, Windows® Me, Windows® 2000, or Windows® XP
Minimum memory capacity for operation	32 Mbytes (more than twice the size of the load module is recommended)
Empty space in a hard disk	Disk capacity required for installation: 10 Mbytes or more Take the swap area into account when ensuring that there is enough space on your system (more than twice (four times recommended) the size of the memory).
Pointing device such as a mouse	A pointing device such as a mouse, which can be connected to the host computer and is supported by Windows® 98SE, Windows® Me, Windows® 2000, and Windows® XP
CD-ROM drive	Required for installing the FDT or referring to the user's manual
Target F-ZTAT microcomputer	Supports all types of F-ZTAT microcomputer incorporating the flash memory (including products that have both Vcc and PVcc except for the 12-V programming specifications), excluding the F-ZTAT microcomputer that is not supported by the FDT
Input power	Supplied from the USB interface (operating with the bus power of the host computer) Voltage: 4.75 to 5.25 V Current: 500 mA max.
User Vcc, PVcc	Follows the power specification of each MCU within the range of 2.0 to 5.5 V

Section 2 Configuration

The configuration and components of the adapter board are shown in figure 2.1 and table 2.1, respectively.

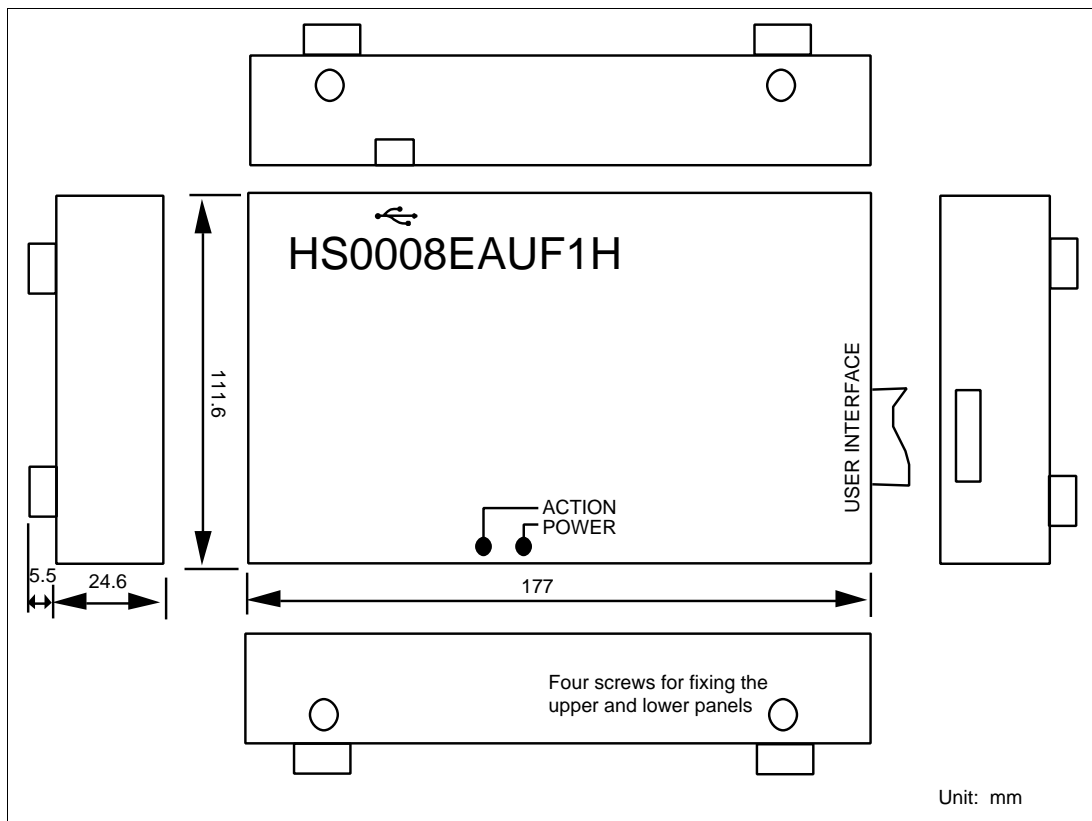


Figure 2.1 Adapter Board

Table 2.1 Components

Item Name	Description	Quantity
Adapter board	Main unit	1
User system interface cable*	Connection between main unit and user system (290 mm)	1
User system interface cable connector	Connection between main unit and user system	1
USB cable	Connection between main unit and host computer (2000 mm)	1
FDT setup program and user's manual (provided on a CD-R)	HS6400FDIW2SR	1
Adapter board user's manual	HS0008EAUF1HE (this manual)	1
Description Notes on Handling Control Pins with the Adapter Board Connected	HS0008EAUF1HE-N	1

Note: At shipment, the user system cable is connected to the main unit.

Section 3 Connectors and LEDs

3.1 Connectors

This adapter board has two connectors; user interface connector and USB port connector.

3.1.1 User Interface Connector (USER INTERFACE)


WARNING

Observe the precautions listed below. Failure to do so will result in a FIRE HAZARD and will damage the user system and the adapter board or will result in PERSONAL INJURY.


- 1. Always switch OFF the adapter board and the user system before connecting or disconnecting ANY CABLES or PARTS.**
- 2. Before connecting, always make sure that the polarity of pin 1 (indicated on the USER INTERFACE connector part) and the signal name on both sides are correct.**
- 3. When disconnecting cables, take care not to put excessive stress on the cables.**

The signals required for writing to flash memory are shown in figure 3.1. Connect the adapter board and the user system using the user system interface cable provided (with a 20-pole connector on each end) and a user system interface cable connector (used for connecting the cable to the user system). The user system interface cable provided straight-matches the pins in the adapter board to those in the user system, as shown in figure 3.1.


3428-6002LCSC (manufactured by Sumitomo 3M Ltd.) is used as a user system interface cable connector.

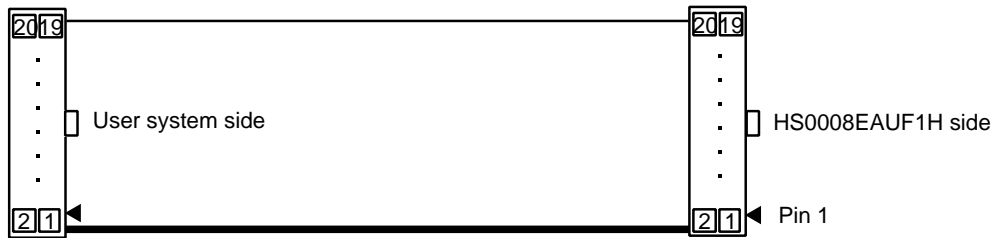

Top view

 

Side view

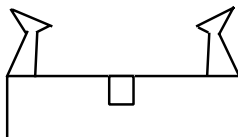

Connector: 3428-6002LCSC (Sumitomo 3M, Ltd.)

Figure 3.1 User System Interface Cable for HS0008EAUF1H

Table 3.1 Correspondence between Signals and Numbers Indicated on the User System Interface Cable

Number on Cable	Signal Name
1	$\overline{\text{RES}}$
2	GND
3	FWx
4	GND
5	MD0
6	GND
7	MD1
8	GND
9	MD2
10	GND
11	MD3
12	GND
13	MD4
14	GND
15	RXD (TXD for the user system)
16	GND ¹
17	TXD (RXD for the user system)
18	VIN (Vcc or PVcc) ²
19	NC
20	VIN (PVcc) ²

- Notes: 1. This pin must be connected to GND to recognize whether the user system is correctly connected to.
2. For the device that has Vcc and PVcc, be sure to provide Vcc or PVcc (pin 18) and PVcc (pin 20) to the VIN pin of the user interface connector. Furthermore, when the user system interface cable is used under the condition of Vcc = PVcc and when the device only has either of Vcc or PVcc, be sure to provide Vcc to both Vcc or PVcc (pin 18) and PVcc (pin 20) of the VIN pin.

When the target microcomputer requires port control during on-board programming, connect necessary port signals. For details, refer to the Description Notes on Handling Control Pins with the Adapter Board Connected.

3.1.2 USB Port Connector

Connect the USB port connector of the adapter board and the USB connector on the host computer using the USB cable provided.

3.2 LEDs

3.2.1 POWER: Red

This LED is turned on when it recognizes that the power is supplied after the adapter board and the host computer have been connected using the USB cable.

3.2.2 ACTION: Green

This LED is blinked when the USB interface has been correctly connected to and the driver software has been found. The blinking interval is described below:

- (1) When the USB cable is connected to the adapter board and the host computer (the user system is not connected):

Repetition of '—△—△—△' (—: turned on, △: turned off)

- (2) When the user system is connected in addition to the configuration of (1) above (the power supply of the user system is not input):

Repetition of '—△—△—△—△' (—: turned on, △: turned off)

- (3) When the power supply of the user system is input in addition to the configuration of (2) above:

Repetition of '—△—△—△—△—△—△—△—△' (—: turned on, △: turned off)

If the communication states other than above are displayed (e.g., the LED is not turned on), turn off the power supply of the user system. Then, the USB cable must be removed from and connected to again the adapter board.

Section 4 Notes on Using the Adapter Board

1. When exiting the FDT, be sure to select [Disconnect from Device] from the FDT's device menu [Connect to Device/Disconnect from Device]. If the FDT exits when selecting [Connect to Device], the next USB connection may not be correctly recognized. In this case, remove the USB cable from the adapter board, restart the FDT, and connect the USB cable again to the adapter board.
2. For details on the FDT, refer to the FLASH Development Toolkit User's Manual, and the Description Notes on Handling Control Pins with the Adapter Board Connected.
3. This adapter board cannot be connected to the host computer via the USB hub.
4. When control signals FWx, RES, MD4, MD3, MD2, MD1, and MD0 are connected to the F-ZTAT microcomputer on the user system, do not connect them directly to Vcc, PVcc, or GND; pull them up or down by a resistance of 4.7 k Ω or more. For the control signals that are not used for reprogramming, do not connect any pins. Figure 4.1 shows the specifications of the user system interface of this adapter board. The initial state of each pin is input. This also applies to the unused pins that are not connected.

In table 3.1, Correspondence between Signals and Numbers Indicated on the User System Interface Cable, the voltage supplied to the VIN pin (Vcc or PVcc) (pin 18) is used to pull up the programming-control signals (FWx, RES, and MD0 to MD4). The voltage supplied to the VIN pin (PVcc) (pin 20) is used to pull up the serial signals (TXD and RXD). For example, when using the H8S/2643F, H8S/2633F, H8S/2626F, and H8S/2623F series of the H8S/2600 group, supply PVcc for pins 18 and 20 because both of programming-control and serial signals use PVcc. For details, refer to the DC characteristics described in the hardware manual for each device.

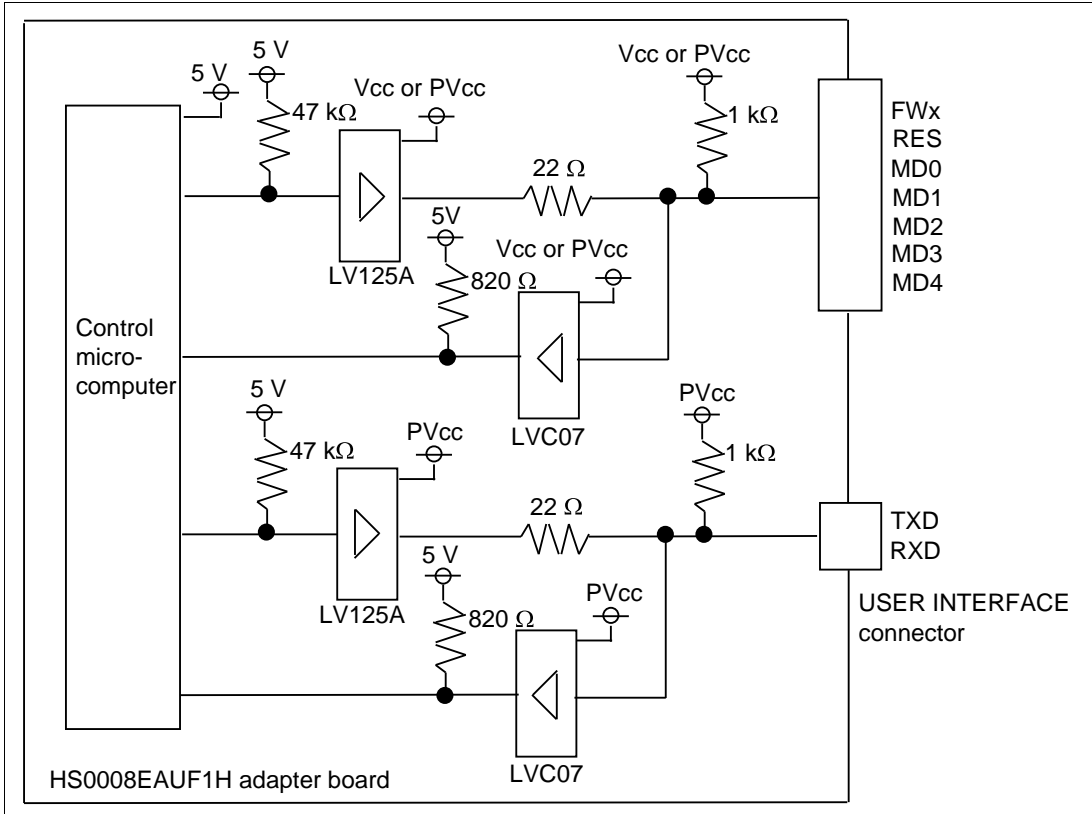


Figure 4.1 Control-Signal Circuit Example

F-ZTAT™ Microcomputer
On-Board Programming Adapter Board
HS0008EAUF1H User's Manual

Publication Date: Rev.2.00, July 9, 2003

Published by: Sales Strategic Planning Div.
Renesas Technology Corp.

Edited by: Technical Documentation & Information Department
Renesas Kodaira Semiconductor Co., Ltd.

F-ZTAT™ Microcomputer
On-Board Programming Adapter Board
HS0008EAUF1H User's Manual



Renesas Electronics Corporation

1753, Shimonumabe, Nakahara-ku, Kawasaki-shi, Kanagawa 211-8668 Japan

REJ10B0009-0200H