

**WayteQ GPS Navigation
X960BT
User Manual
English Version**

Thanks for using WAYTEQ products !

- WAYTEQ reserves the rights of final interpretation of the manual.
- The product is subject to change without any further notice. Please accept our apology for your inconvenience.
- Please back up your information in the GPS navigator. WAYTEQ assumes no responsibility for any loss caused by material loss.
- The manual might contain a few mistakes though it has been checked. If mistakes are found, please contact the WAYTEQ customer service center.
- Please read carefully the instructions in this manual and use only accessories of WAYTEQ to avoid unpredicted damage. Failure to follow the instructions will invalidate warranty and might endanger personnel safety, for which WAYTEQ assumes no responsibility.
- Data of navigation electronic maps might be inconsistent with actual traffic signals due to transportation development. Please follow traffic regulations and signs and drive according to road situation.
- Operating the GPS navigator device while driving might cause serious accidents. Please shorten your time in viewing the navigator and use the voice prompt function. While driving, try to shorten your time in operating the navigator, for example, inputting addresses, changing settings or using other functions. WAYTEQ assumes no responsibility for accidents and loss due to improper use.
- For safe driving, please pay attention to road and weather conditions as well.
- The pictures in the manual are subject to the material object.

Welcome!

Thanks for using the WAYTEQ GPS featured with navigation as the major function as well as other amusement functions like audio play, video play, photo browsing, e-book reading, and games, etc.

- ✓ SiRF Atlas-V, dual-core CPU with high performance and low power consumption
- ✓ Friendly user interfaces for simple operation
- ✓ Power management for longer and more stable operation
- ✓ Data transmission with computers via Mini USB
- ✓ Quality reception for accurate positioning and satisfactory navigation service
- ✓ Leisure partner with audio/video/amusement functions

You may use the GPS navigator anytime anywhere, for example while driving, walking or cycling. Its navigation and amusement functions will enrich your life and work!

To fully exert the functions of WAYTEQ GPS and to understand the operation details, please read the manual carefully.

This manual is applicable only to the WAYTEQ GPS.

Basic Introduction

1. Overview



- | | |
|--------------------------|--------------------|
| A. Charging Indication | F. Mini USB |
| B. Speaker | G. Stylus Pen Slot |
| C. Power | H. Reset |
| D. 3.5mm Earphone Socket | I. MIC |
| E. Memory Card Slot | J. Light Sensor |

2. Charging by AC Adapter

Caution: The charging indicator light is red during charging. Do not unplug the charge until the battery is fully charged and the indicator light turns green. Please charge the GPS navigator when the battery is low or used up in succeeding use.

3. Charging by Car Charger

Caution: To protect your device against suddenness, please connect the car charger only after the car engine has been started.

4. Battery

The navigator has a working temperature of 0~50°C and storage temperature -10~60°C. Do not expose the device in excessive heat or hot areas, for example in the car under strong sunlight. To avoid damaging the device, keep it away from direct sunlight.

Follow local regulations while disposing the battery.

5. Install the Car Cradle and Bracket

Caution: Do not place the GPS navigator in positions obstructing the driver's vision, for example at the steering wheel, pedal or gear lever. Do not place it without fixing it, or in the place of air bag or the area after the air bag is inflated. While using the mounting kit, follow local regulations. WAYTEQ will have no responsibility for any penalty or damage resulting from traffic violation.

6. Using T-Flash Card

Caution: Do not take out the T-Flash card while an navigation program is being run or a media file is being played.

To avoid drop or crash of the T-Flash card, do not exert heavy pressure on it or bend it.

Mind the direction while inserting the T-Flash card to avoid damaging the slot or the card.

7. Restarting the system

When the system does not response, press the reset key on the right side of the GPS navigator to restart the system.

Caution: Restarting the system by pressing the reset key will result in loss of unsaved data. Please backup your data regularly.

Main Functions Introduction

 
1. Starting Up and Power Off

Long press the "Power" button to power the equipment on and you can see the main interface as below :



Tap the "15:38" to Set the system date and time.

Long press the "Power" button again to enter into the below interface :

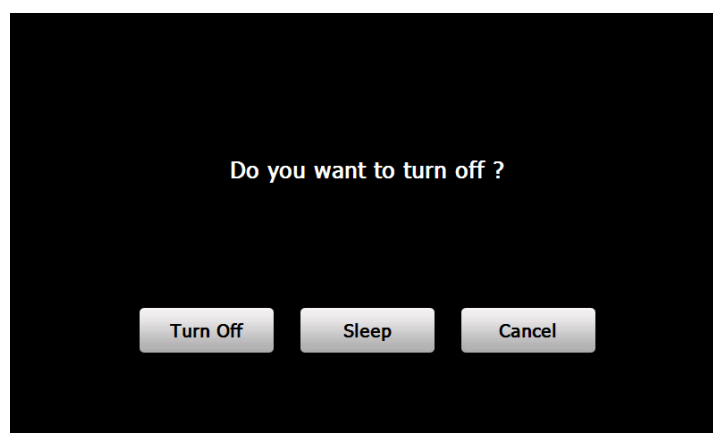

Tap the "Turn off" button to turn the unit off.

Tap the "Sleep" button to enter a suspend state and the system stops operation.

 
Tap the "Cancel" button to turn back to the screen.

2. GPS Navigation

Double tap the "GPS" icon to start navigation program.

Caution: Please refer to navigation software instructions for details.


3. Music

Tap the icon "  " to enter into the following interface :





- | | |
|------------------------------|-----------------|
| A. Return to main menu | F. Pause / Play |
| B. Volume control | G. Previous |
| C. Select desired music file | H. Speed bar |
| D. Stop | I. Play modes |
| E. Next | J. Equalizer |

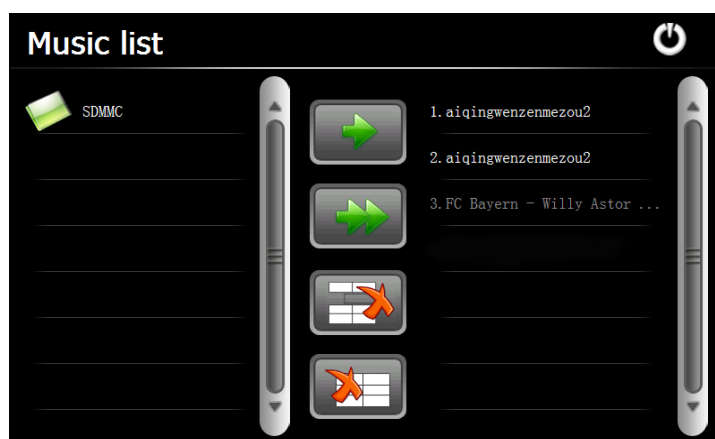 Double tap icon "  " to choose music file .



Tap the icon "  " for single selection , tap the icon "  " to select all , tap the icon "  " for single delete , tap the icon "  " to delete all.

4. Photo

Tap the "  " icon, then tap the icon "  " to select photo files , double tap the photo file to see the following interface .





H G F E D C B A

- | | |
|------------------------|-------------|
| A. Return to main menu | E. Zoom in |
| B. Select photo file | F. Zoom out |
| C. Slide mode | G. Next |
| D. Rotate | H. Previous |

5. Video



Tap the icon "  " icon, then tap the "  " icon to choose video files , and double tap the file and enter into following interface .




- | | |
|------------------------|-----------------|
| A. Return to main menu | E. Next |
| B. Volume | F. Pause / Play |
| C. Select video file | G. Previous |
| D. Stop | H. Speed bar |

Tips:

Double tap the screen, it will display in full screen, double tap the screen again, it will return to original playing size.

6. Flash





Tap the icon "  " and enter into the following interface .




- | | |
|------------------------|-----------------|
| A. Volume | D. Stop |
| B. Return to main menu | E. Pause / Play |
| C. Select flash file | F. Speed bar |

7. Ebook



 
Tap the "  " icon , then tap the "  " icon to choose Ebook files , double tap the file and enter into the following interface .

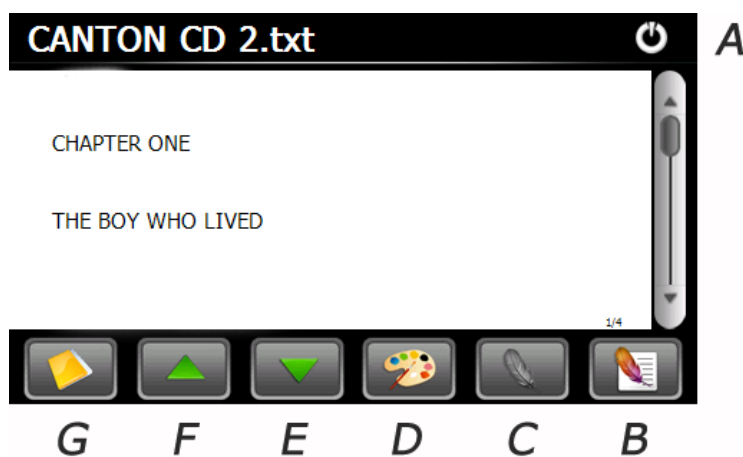


- | | |
|--------------------------------|----------------------|
| A. Return to main menu | E. Next page |
| B. Bookmark list | F. Previous page |
| C. Bookmark | G. Select Ebook file |
| D. Setting to set theme & font | |


8. Bluetooth


Before using this function, make sure that Bluetooth function of the cell phone has been enabled.

 Tap the Bluetooth icon  to enter the **Bluetooth Interface** as follows.

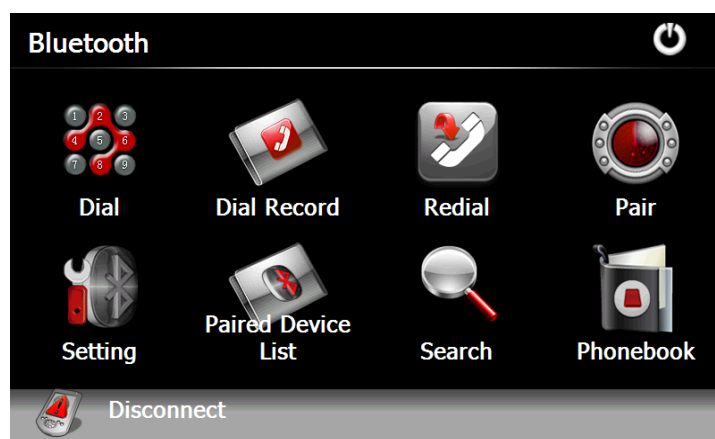


8.1 Pair

 
Pair the navigator and a mobile phone while setting up connection between them for the first time. Tap  in the Bluetooth interface to enter the following interface.

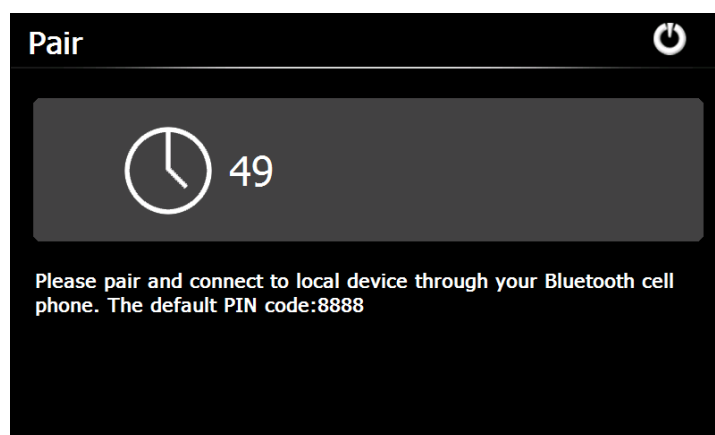


 Meanwhile, press the icon "Search audio device" or similar one on the mobile phone. After the mobile phone finds and display the name of the navigator (i.e. PND), tap "Connect" and input the default PIN code: 8888. After pairing, the following interface will be displayed with connection situation and mobile phone name on the bottom.

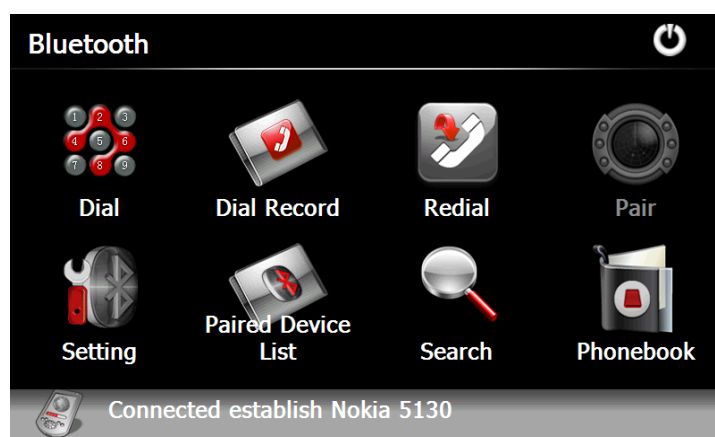

8.2 Make Calls

 Tap  on the Bluetooth interface to enter the keypad interface as follows.

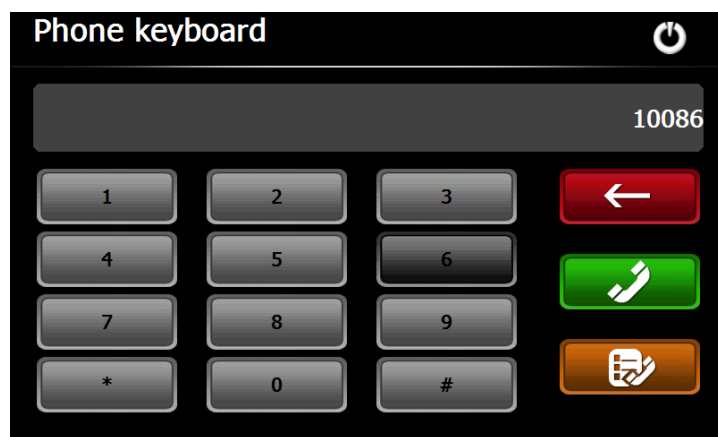


Delete the last input number or character

 


Dial the input number




Check the call records


To make a call, input the number to call and tap  as shown below.

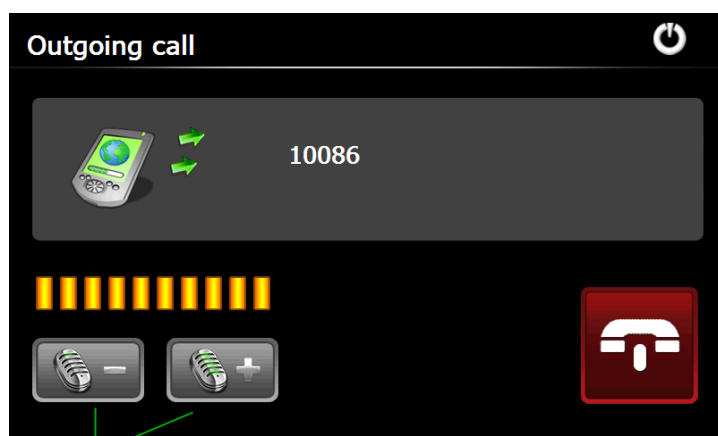


Adjust volume

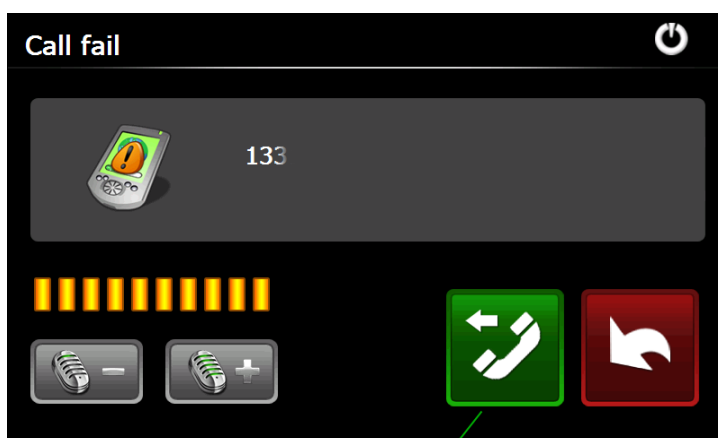 

Re-Dial last number


Tap  to hang off the call.

  After the call is put through, the following interface will be displayed.

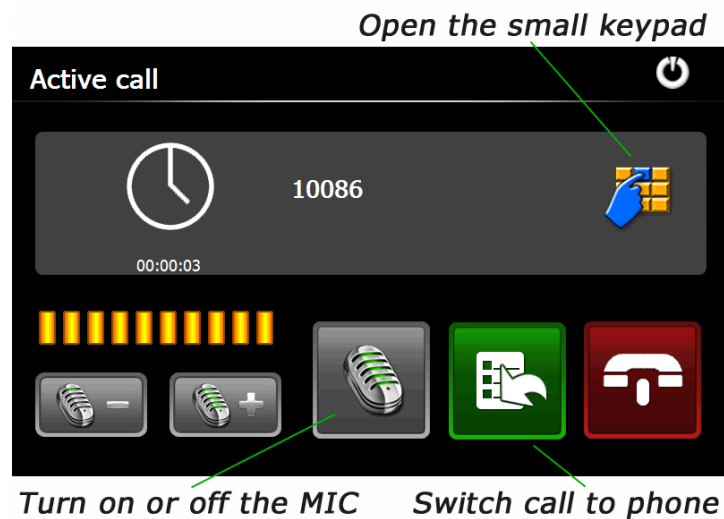


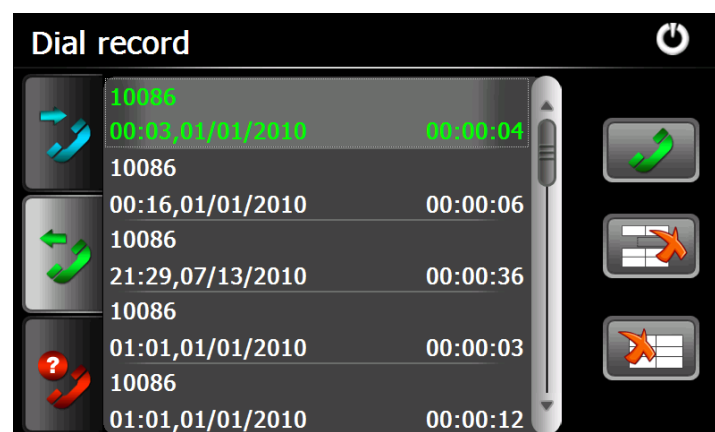 
8.3 Answer Calls

When there is an incoming call, the following interface will be displayed.

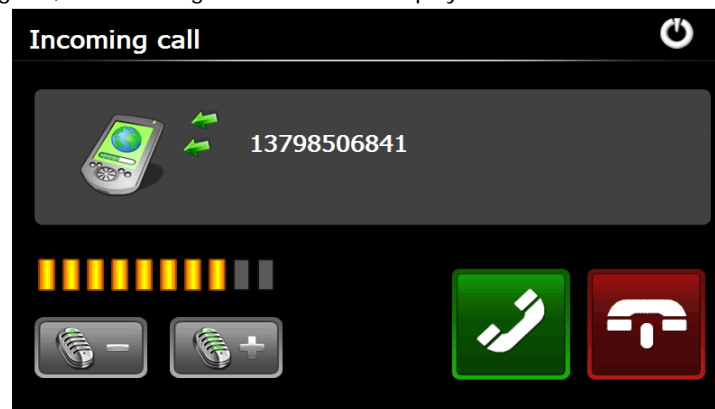

8.4 Dial Record

Tap  in the Bluetooth interface to enter the call records interface as shown below.



Incoming call records



Outgoing call records



Failed call records



Select a number in the list and generate a call




Delete one record


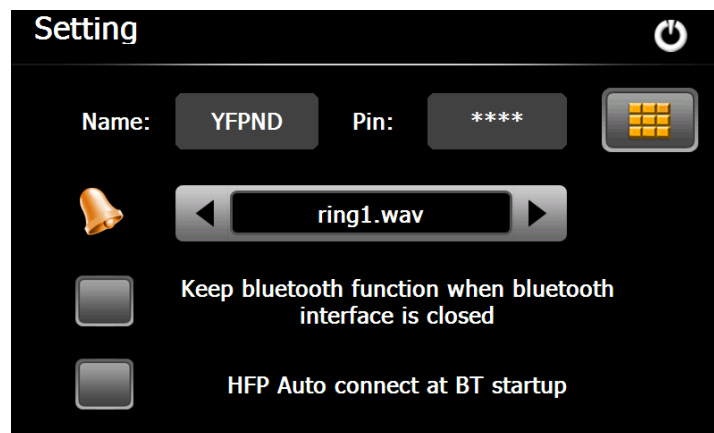 


Delete all records

8.5 Redial

Tap  icon to redial the latest dialed number.

 


8.6 Setting

Tap  icon to enter into the setting interface as shown below.

Name:


The device's display name in the Bluetooth transmission process


Pin:



Tap keyboard icon  to set a pin code for the connectionTap  /  to select a ring tone

You may choose to keep Bluetooth function when the Bluetooth interface is closed by ticking in the box. Otherwise, the Bluetooth function will be disabled.

 
You may also choose automatic HFP connection when Bluetooth is started up by ticking in the box.

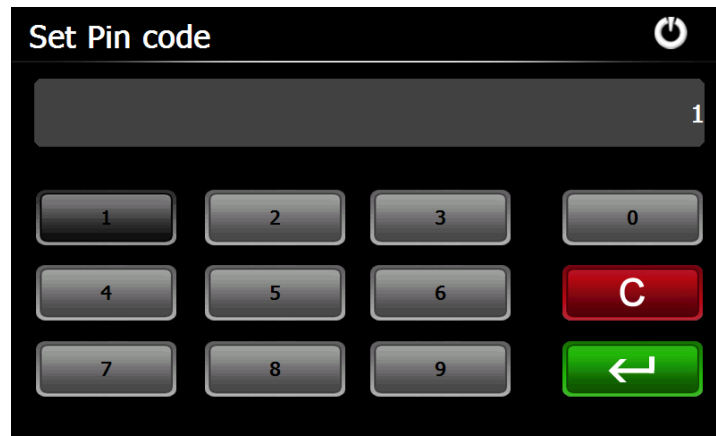To modify the Bluetooth PIN code, tap  in the above interface to enter the following interface.



Input a new PIN code, then tap  to return to the setting interface to finish. To cancel the modification, tap  to return to the setting interface and tap it again to quit.

8.7 Paired Device List

Tap the icon  to enter into the Paired Device List interface as follows.



Profile list

Select a paired device on the left and tap this icon to view the profile list



 
Delete one

Select a paired device and tap this icon to delete the device



Disconnect

Select a paired device and tap this icon to disconnect

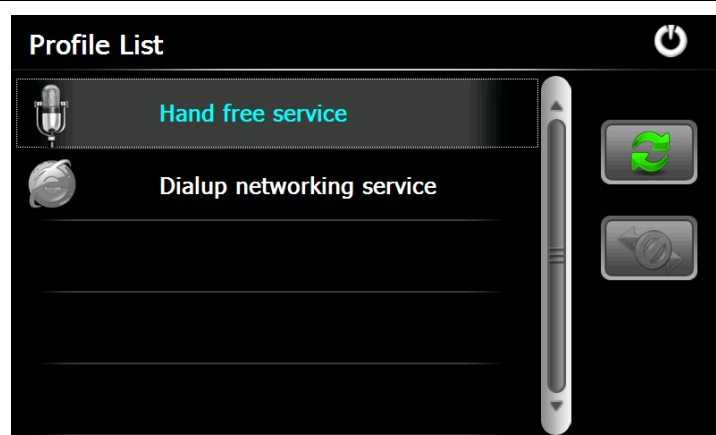

Select a profile from the list, and then:




Connect

 
Tap the icon to reconnect the PND with the mobile phone




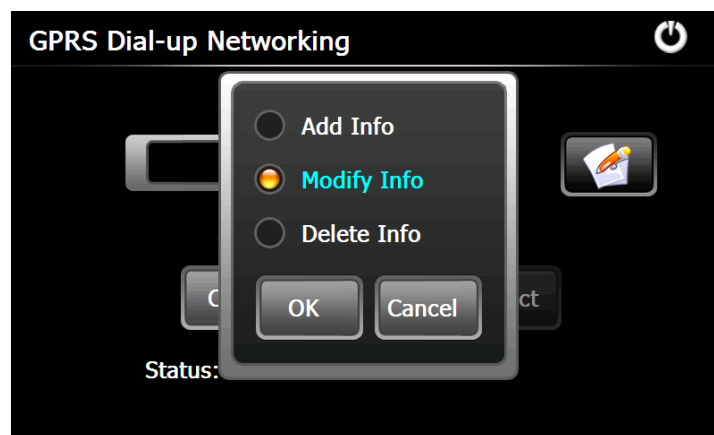 
Disconnect

Tap the icon to disconnect the PND from the mobile phone

Tap  to prompt the GPRS Dial-Up Networking interface as shown below.

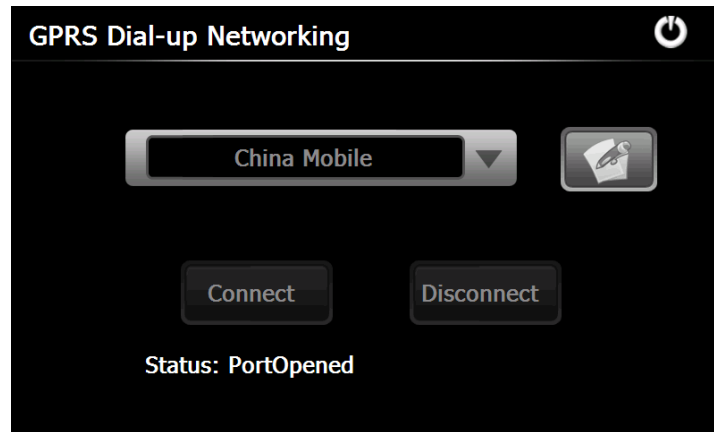

You may add, modify or delete the operator information. Tap  to prompt the following interface.



For example, select "Modify Info", and tap "OK" to go to the interface as shown below.



Tap in a column, enter information with the prompted input panel . Tap "OK" to save the input information or tap "Cancel" to quit.


Tap  to connect the navigator to the network. After connection is established, the Opera interface will prompt

 
as shown below.



8.8 Search Bluetooth Device



Tap  icon to enter into the Search Bluetooth Device interface for auto Bluetooth device searching and display as shown below.

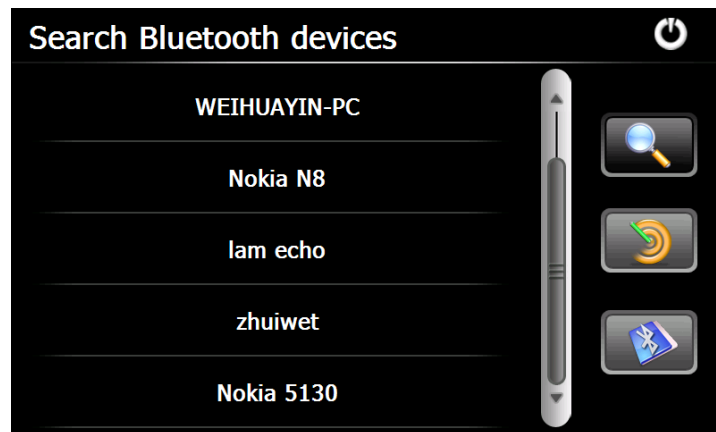

Search / Stop

Search for Bluetooth devices; tap it again to stop search



Pair

Select a Bluetooth device, tap this icon to pair the navigator and the mobile phone. The default PIN code "8888" Shall be input




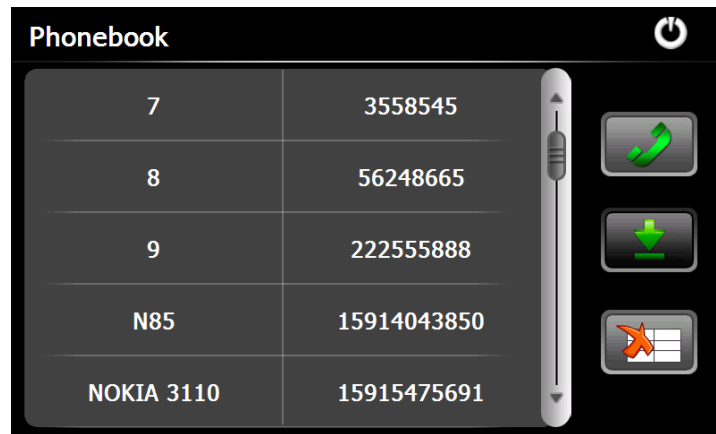 
Pair device list

Tap to enter the Pair device list. Refer to **8.7 Paired Device List**

8.9 Phonebooks



Tap the icon  to enter into the Phonebook interface as follows:



Download Download the phonebook of the mobile phone to the PND




Dial Select a number from the phonebook and tap this icon to make a call

 


Delete Select a number from the phonebook and tap this icon to delete it

9. FM Setting



Tap the "  " icon and enter into the following display interface.

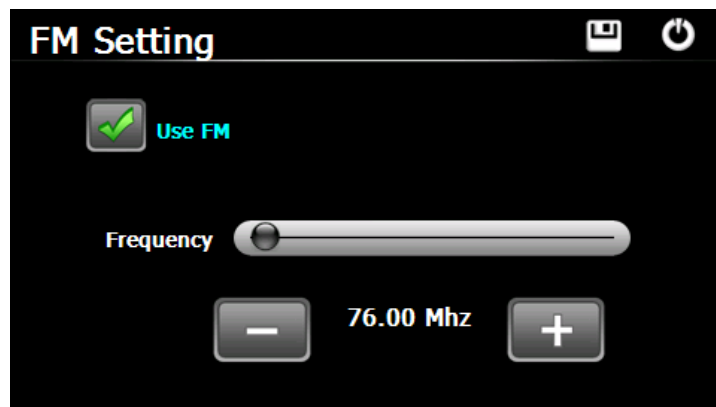

Tap "+" or "-" icon to increase or decrease the emissive frequency of FM.

Tips: after make any changes of setting, tap "  " to save the change.

10. Default



Tap the "  " icon and enter into the following interface . Tap the icon " OK " to load factory default setting .



11. Explorer



Tap " " icon, there will be one prompt as below to ask if go into WINCE mode, choose "OK" to enter and "Cancel" to exit.



12. Theme



Tap " " icon to enter the **Theme** interface as below to set a style and theme for the system interfaces.

 


To rearrange icons at will, tap on an icon and stay until a four-way arrow appears at the upper left of it, drag the icon to a wanted place.

13. Wallpaper




Tap " " icon to enter into the **Wallpaper** interface as below.

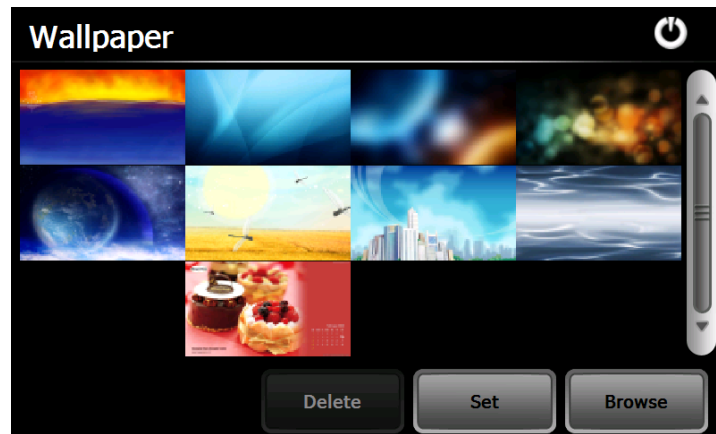



You may choose an pre-installed wallpaper, you may also set an external image as the wallpaper. The pre-installed wallpapers cannot be deleted, while the added images can be deleted. To delete images, select an added image from the "Wallpaper " interface and then tap " **Delete** ".

14. GPS Info



 
Tap the "  " icon and the unit will show the detail information of GPS satellites.

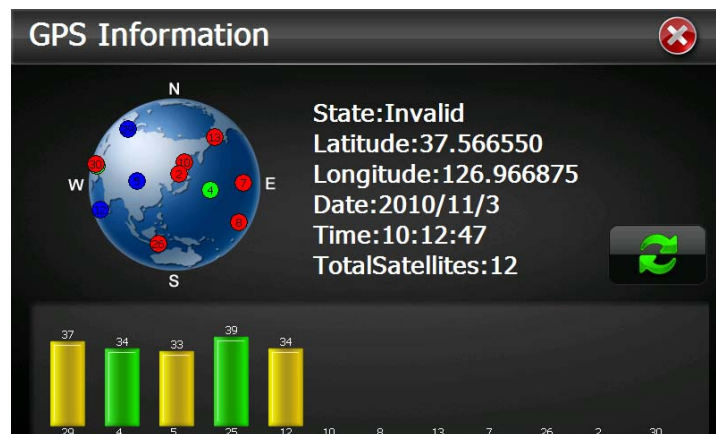


Tap "  " and will have a prompt to ask if reset GPS receiver, tap "OK" to reset signal or tap "Cancel" to exit.

15. Resource



 
Tap "  " icon to enter **System Resource** interface as shown below. You may check the capacity of the memory, SD card and flash.

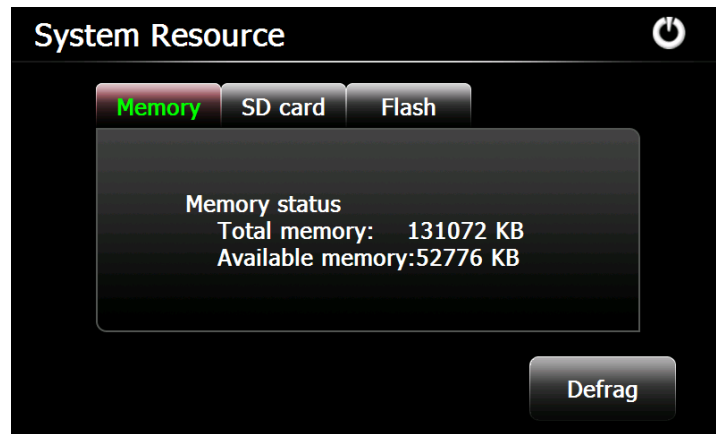

16. Volume



 Tap the icon " " on the menu and enter into the following interface .

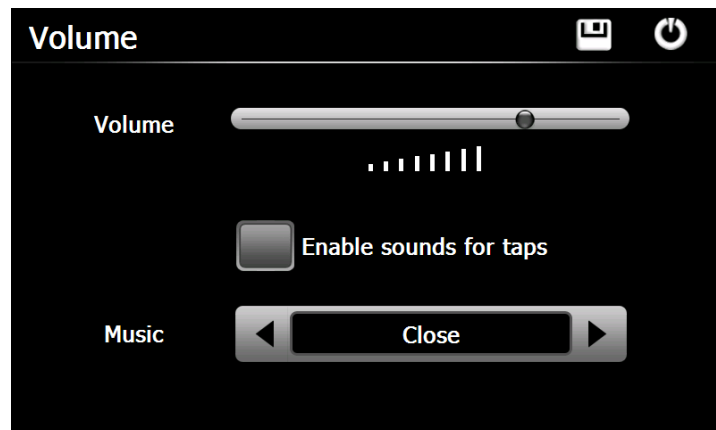


Choose " Music " files to be background sound when unit is power on .

17. Backlight



 Tap the " " icon and enter into the following interface to make the backlight settings.

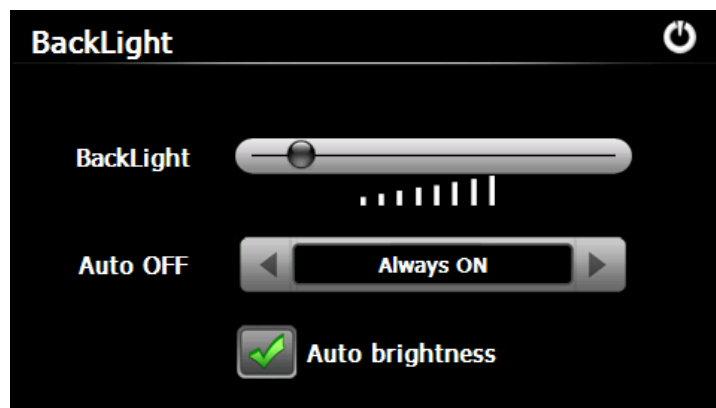

18. Language



 
Tap the " " icon and choose the language .



19. Date and Time




Tap the icon " " and enter into the following interface to set date, time and time zone .

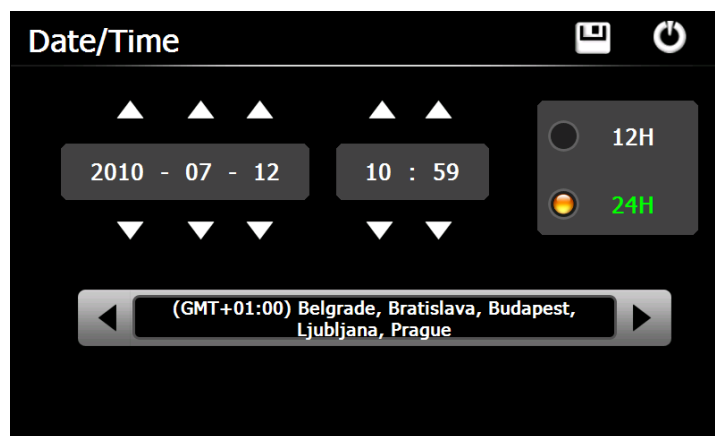

20. Calibration



 Tap the " " icon and enter into the following interface.

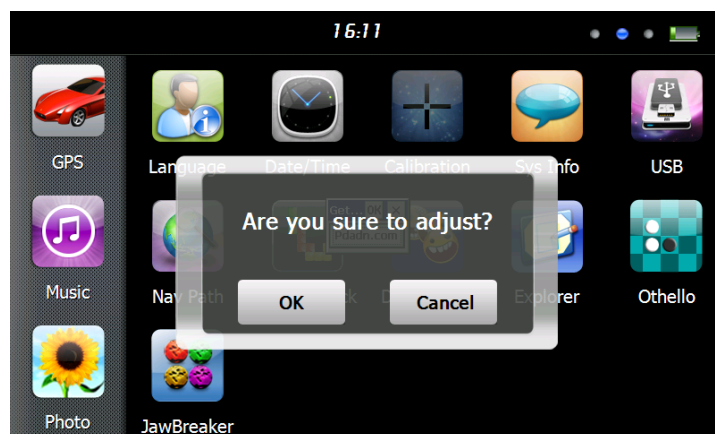

Tap the icon "OK" to adjust the touch screen.

21. Sys Info



 
Tap the " " icon and the system information will be shown.



22. USB



Tap the icon " " to set the USB working mode .

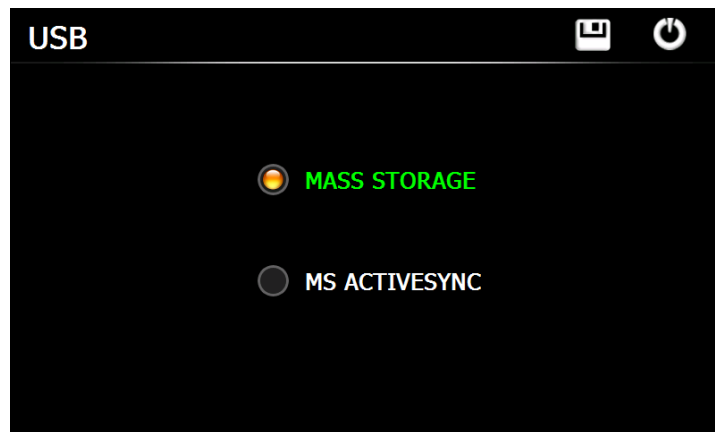

23. Nav Path



Tap the " " icon and enter into the following display interface .



When you have several Navigation maps in the device, you can set up one of Navigation maps (navigation program files) by choosing the "Navigation" icon and selecting the Auto Run Navigation , next time when tapping the "GPS" icon in the main menu, the device will run the selected Navigation software automatically .

24. Calculator



Tap " " icon to enter into the **Calculator** interface.

25. Unit



Tap " " icon to enter into the **Unit Converter** interface.

26. Jaw Breaker



Tap " " icon to enter into the game interface. Tap "New Game" to start.

27. Russia Block



Tap " " icon to enter into the game interface. Tap "Start" to start.

28. Dui Dui Peng



Tap " " icon to enter into the game interface. Tap "New Game" to start.

29. Snake



Tap " " icon to enter into the game interface and start playing.

30. Othello



Tap " " icon to enter into the game interface. Tap "Start" to start.

This document is for guidance only and does not form part of any contract, and may be subject to change without notice.